
760PU–01

REPLACEMENT

HINT:


The installation is in the reverse order of the removal. However, when there is a special point concerning the illustration, it is indicated.

1. **REMOVE REAR NO. 2 SEAT ASSY LH** (See page 72–46)
2. **REMOVE REAR NO. 2 SEAT ASSY RH** (See page 72–46)
3. **REMOVE FRONT DOOR SCUFF PLATE LH** (See page 76–58)
4. **REMOVE FRONT DOOR SCUFF PLATE RH** (See page 76–58)
5. **REMOVE COWL SIDE TRIM BOARD LH** (See page 76–58)
6. **REMOVE COWL SIDE TRIM BOARD RH** (See page 76–58)
7. **REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP LH** (See page 76–58)
8. **REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP RH** (See page 76–58)
9. **REMOVE BACK DOOR WEATHERSTRIP** (See page 76–58)
10. **REMOVE REAR FLOOR MAT SUPPORT PLATE REAR** (See page 76–58)
11. **REMOVE PACKAGE TRAY TRIM PANEL ASSY** (See page 76–58)

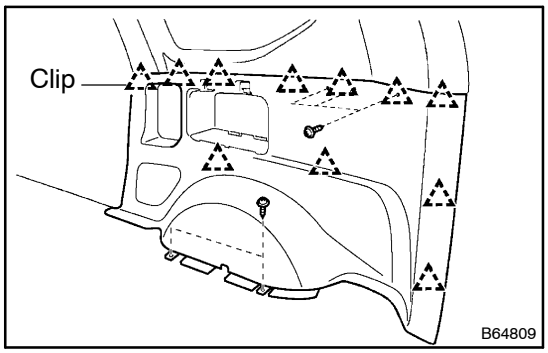

12. **REMOVE QUARTER INSIDE TRIM BOARD LH**
(a) Remove the rear No. 1 seat belt assy anchor bolt.
(b) Remove the 3 screws.
(c) Disengage the 9 clips and remove the inside trim board.

13. **REMOVE QUARTER INSIDE TRIM BOARD RH**

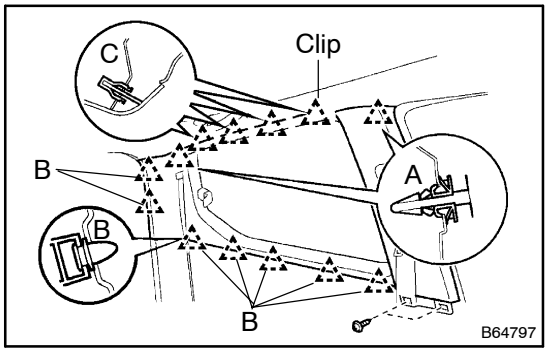

14. **REMOVE ROOF SIDE GARNISH INNER LH**
(a) Remove the floor anchor part of the seat No. 1 belt assy out.
(b) Using a screwdriver, firmly push the pin to disengage the the 2 clips (A).

HINT:

Tape the screwdriver tip before use.


(c) Using a screwdriver, disengage the 11 clips (B and C) remove the garnish.

HINT:

Tape the screwdriver tip before use.

15. **REMOVE ROOF SIDE GARNISH INNER RH**
16. **REMOVE FRONT PILLAR GARNISH LH** (See page 76–58)
17. **REMOVE FRONT PILLAR GARNISH RH** (See page 76–58)
18. **REMOVE ASSIST GRIP ASSY** (See page 76–58)

19. REMOVE ROOF CONSOLE BOX ASSY (See page 76–58)
20. REMOVE ROOM LAMP ASSY NO.1 (See page 76–58)
21. REMOVE ROOM LAMP ASSY NO.2 (See page 76–58)
22. REMOVE VISOR BRACKET COVER (See page 76–58)
23. REMOVE LH VISOR ASSY (See page 76–58)
24. REMOVE RH VISOR ASSY (See page 76–58)
25. REMOVE VISOR HOLDER (See page 76–58)
26. REMOVE ROOF HEADLINING ASSY

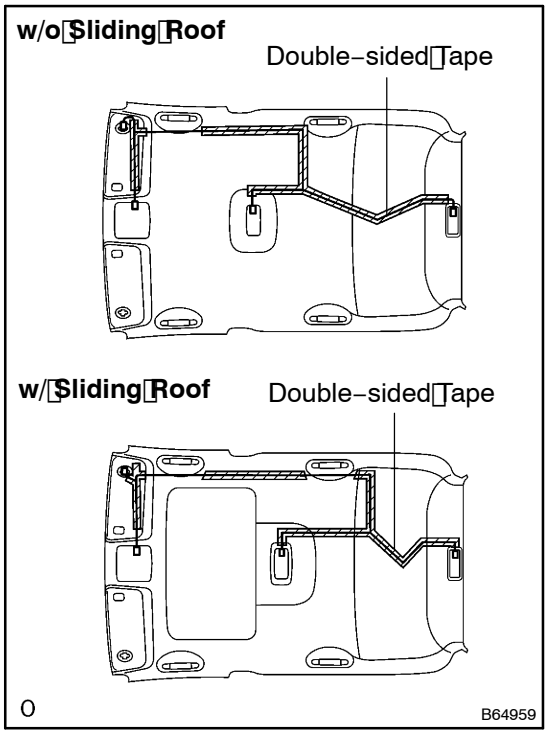

27. INSTALL ROOF HEADLINING ASSY
(a) Attach double–sided tape along the markings on the roof panel, as shown in the illustration.


HINT:

Be careful for dirt or foreign objects not to stick to the adhered part when removing the peeling paper from the double–sided tape.

(b) Attach the roof wire harness along the adhered part.

NOTICE:

The roof wire harness should be attached securely.

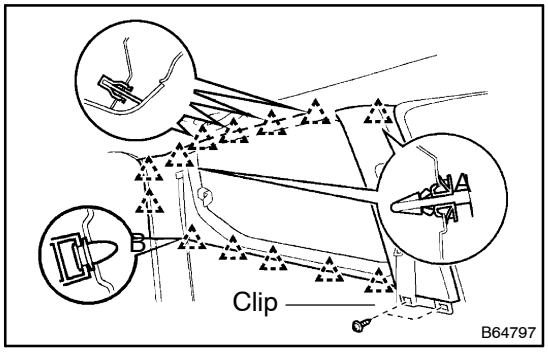

28. INSTALL ROOF SIDE GARNISH INNER LH
(a) Install the 2 clips (A) in the pin on the garnish side.
(b) Engage the claws and install the 11 clips (B and C).
(c) Install the floor anchor part of the seat No. 1 belt assy out.
Torque: 42 N·m (428 kgf·cm, 31 ft·lbf)

29. INSTALL ROOF SIDE GARNISH INNER RH
30. INSTALL REAR NO. 2 SEAT ASSY LH (See page 72–46)
31. INSTALL REAR NO. 2 SEAT ASSY RH (See page 72–46)