
760PW–01

REPLACEMENT

HINT:

Installation is in the reverse order of the removal. However, when there is a special point concerning the illustration, it is indicated.

1. **REMOVE REAR NO. 2 SEAT ASSY LH** (See page 72–46)
2. **REMOVE REAR NO. 2 SEAT ASSY RH** (See page 72–46)

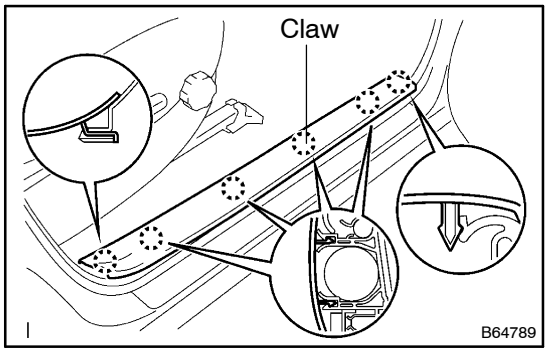

3. REMOVE FRONT DOOR SCUFF PLATE LH

(a) Using a screwdriver, disengage the 6 claws and remove the scuff plate.


HINT:

Tape the screwdriver tip before use.

4. REMOVE FRONT DOOR SCUFF PLATE RH

HINT:

Use the same procedures described above for the LH side.

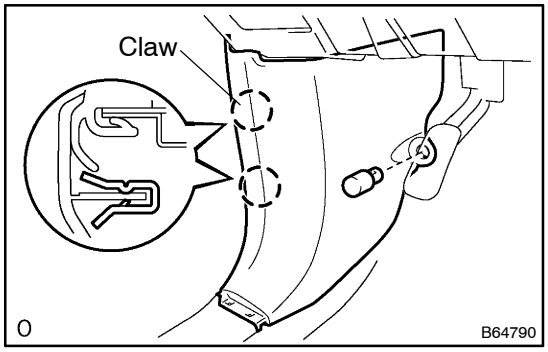

5. REMOVE COWL SIDE TRIM BOARD LH

(a) Remove the cap nut.

(b) Using a screwdriver, disengage the 2 claws and remove the trim board.


HINT:

Tape the screwdriver tip before use.

6. REMOVE COWL SIDE TRIM BOARD RH

HINT:

Use the same procedures described above for the LH side.

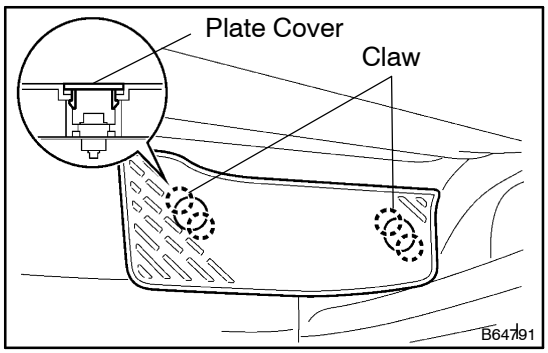

7. REMOVE QUARTER SCUFF PLATE INSIDE LH

(a) Remove the 2 quarter scuff plate inner cover.

(b) Using a screwdriver, disengage the 4 claws and remove the scuff plate.


HINT:

Tape the screwdriver tip before use.

8. REMOVE QUARTER SCUFF PLATE INNER RH

HINT:

Use the same procedures described above for the LH side.

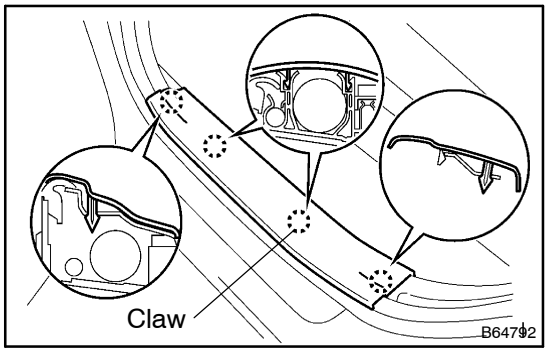

9. REMOVE REAR DOOR SCUFF PLATE LH

(a) Using a screwdriver, disengage the 4 claws and remove the scuff plate.

10. REMOVE REAR DOOR SCUFF PLATE RH

HINT:


Use the same procedures described above for the LH side.

11. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP LH

12. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP RH

13. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP RH

14. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP RH

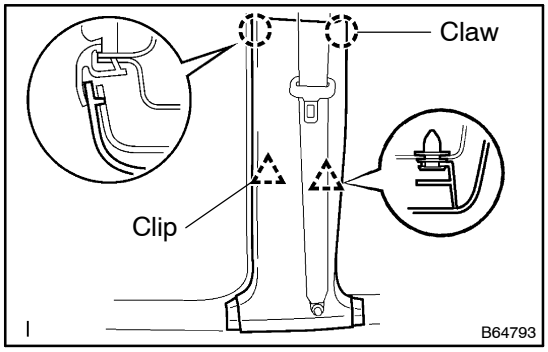

15. REMOVE CENTER PILLAR GARNISH LOWER LH


(a) Remove the front seat belt anchor bolt and front seat belt.

(b) Disengage the 2 claws and 2 clips, and remove the pillar garnish.

16. REMOVE CENTER PILLAR GARNISH LOWER RH

HINT:

Use the same procedures described above for the LH side.

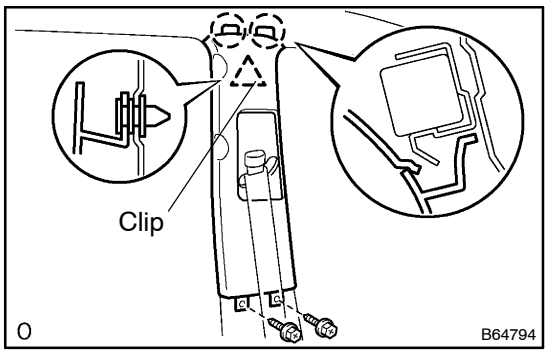

17. REMOVE CENTER PILLAR GARNISH LH

(a) Remove the 2 screws.


(b) Disengage the 2 claws and clip and remove the pillar garnish.

18. REMOVE CENTER PILLAR GARNISH RH

HINT:

Use the same procedures described above for the LH side.

19. REMOVE BACK DOOR WEATHERSTRIP

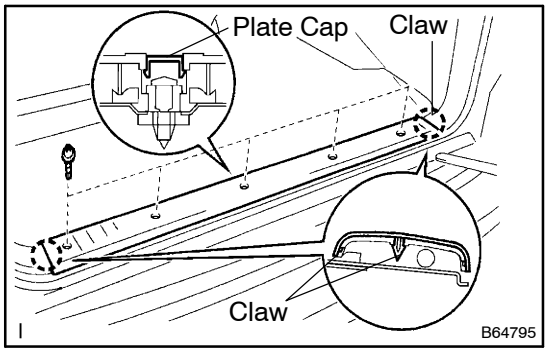


20. REMOVE REAR FLOOR MAT SUPPORT PLATE REAR

(a) Remove the 5 plate caps and 5 screws.

(b) Using a screwdriver, disengage the claws and remove the mat support plate.

HINT:

Tape the screwdriver tip before use.

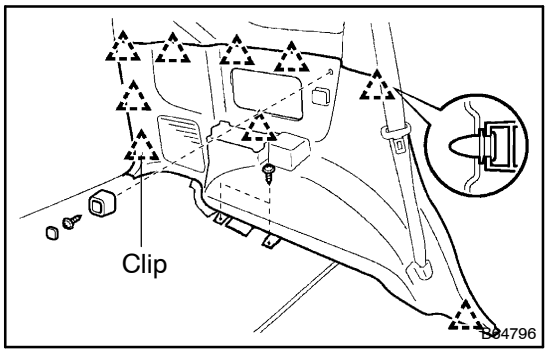

21. REMOVE QUARTER INSIDE TRIM BOARD LH

(a) Remove the bolt and the floor anchor part of the rear No. 1 seat belt assy.

(b) w/ Package tray trim:
Remove the 2 screws (package tray trim part).

(c) Remove the 2 screws.

(d) Using a screwdriver, disengage the 9 clips and remove the trim board.


HINT:

Tape the screwdriver tip before use.

22. REMOVE QUARTER INSIDE TRIM BOARD RH

HINT:

Use the same procedures described above for the LH side.

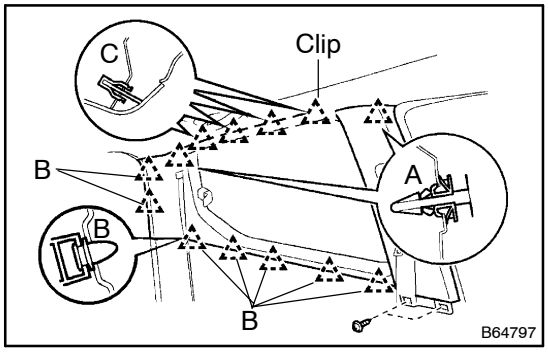

23. REMOVE ROOF SIDE GARNISH INNER LH

(a) Remove the floor anchor part of the seat No. 2 belt assy.

(b) Using a screwdriver, firmly push the pin to disengage the 2 clips A.

HINT:

Tape the screwdriver tip before use.

(c) Using a screwdriver, disengage the 11 clips (B and C) remove the garnish.


HINT:

Tape the screwdriver tip before use.

24. REMOVE ROOF SIDE GARNISH INNER RH

HINT:

Use the same procedures described above for the LH side.

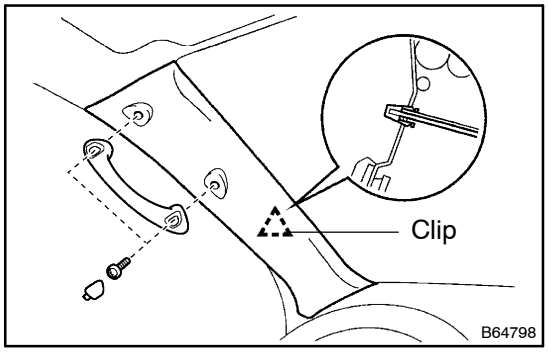


25. REMOVE FRONT PILLAR GARNISH LH

(a) Using a screwdriver, disengage the clip and remove the garnish.

HINT:

Tape the screwdriver tip before use.

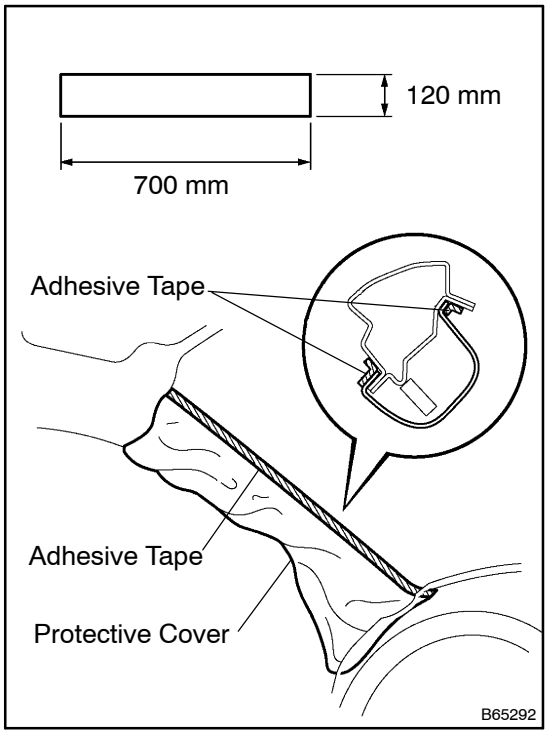

(b) Pull the garnish upward, and remove the pillar garnish from the instrument panel.

(c) w/ Curtain shield airbag:

Protect the curtain shield airbag.

(1) Thoroughly cover the airbag with cloth or nylon of 700 mm (27.56 in.) x 120 mm (4.72 in.) and fix the ends of the cover with adhesive tape, as shown in the illustration.


NOTICE:

Cover the curtain shield airbag with the protection cover as soon as the front pillar garnish is removed.

26. REMOVE FRONT PILLAR GARNISH RH

HINT:

Use the same procedures described above for the LH side.

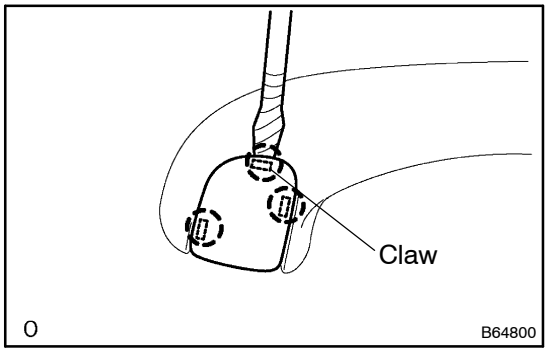


27. REMOVE ASSIST GRIP ASSY

(a) Using a screwdriver, disengage the 6 claws and remove the 2 assist grip plugs.

HINT:

Tape the screwdriver tip before use.

(b) Remove the 2 screws and assist grip.

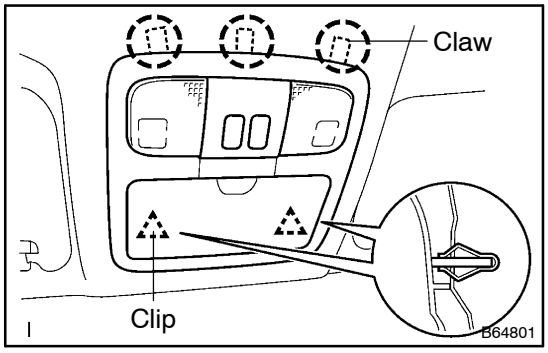


28. REMOVE ROOF CONSOLE BOX ASSY

(a) Using a screwdriver, disengage the 3 claws and 2 clips, remove the console box assy.

HINT:

Tape the screwdriver tip before use.

(b) Disconnect the map lamp switch connector and sliding roof switch connector.

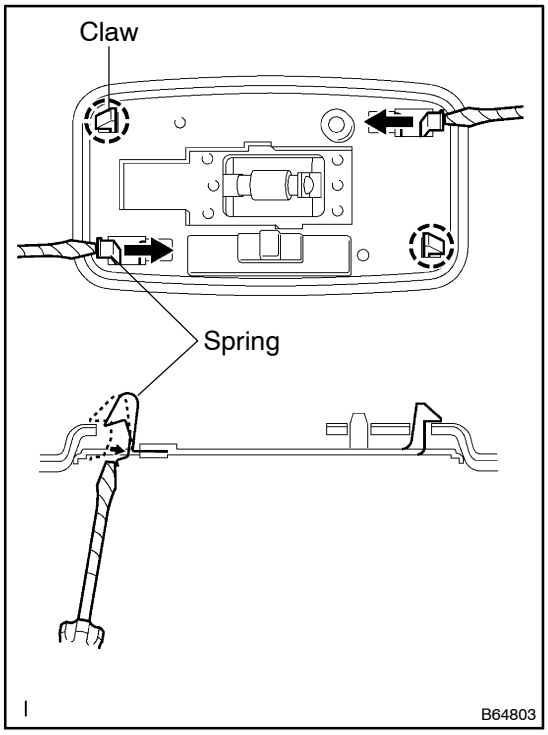

29. REMOVE ROOM LAMP ASSY NO.1


(a) Using a screwdriver, remove the lens cover.

(b) Using a screwdriver, disengage the 4 claws and remove the room lamp assy, as show in the illustration.

HINT:

Tape the screwdriver tip before use.

(c) Disconnect the room lamp connector.

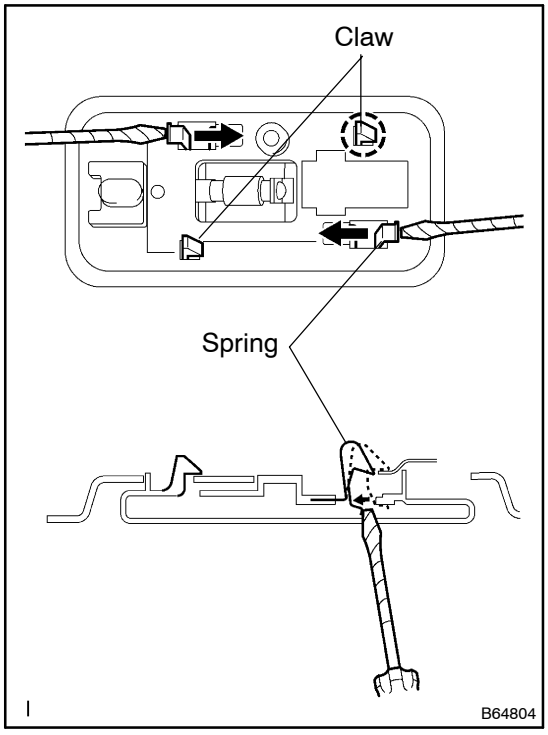

30. REMOVE ROOM LAMP ASSY NO.2


(a) Using a screwdriver, remove the lens cover.

(b) Using a screwdriver, disengage the 4 claws and remove the room lamp assy, as show in the illustration.

HINT:

Tape the screwdriver tip before use.


(c) Disconnect the room lamp connector.

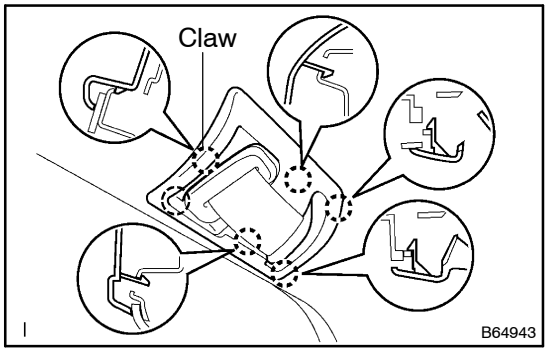

31. REMOVE ROOF HEADLINING REAR TRIM COVER LH

(a) Pull out the seat belt buckle from the roof headlining trim cover.

(b) Using a roof moulding remover, disengage the 5 claws and remove the roof headlining trim cover.

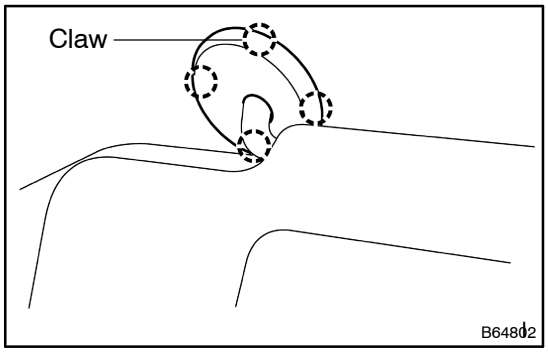

32. REMOVE VISOR BRACKET COVER

(a) Using a screwdriver, disengage the 4 claws and remove the visor bracket cover.

HINT:

Tape the screwdriver tip before use.

33. REMOVE LH VISOR ASSY

(a) Remove the 2 screws and visor assy.

34. REMOVE RH VISOR ASSY

(a) Remove the 2 screws and visor assy.


35. REMOVE VISOR HOLDER

(a) Remove the screws and visor holders.

36. REMOVE ROOF HEADLINING ASSY

37. REMOVE ROOF SIDE AIR OUTLET REGISTER

(a) Remove the screw and register.

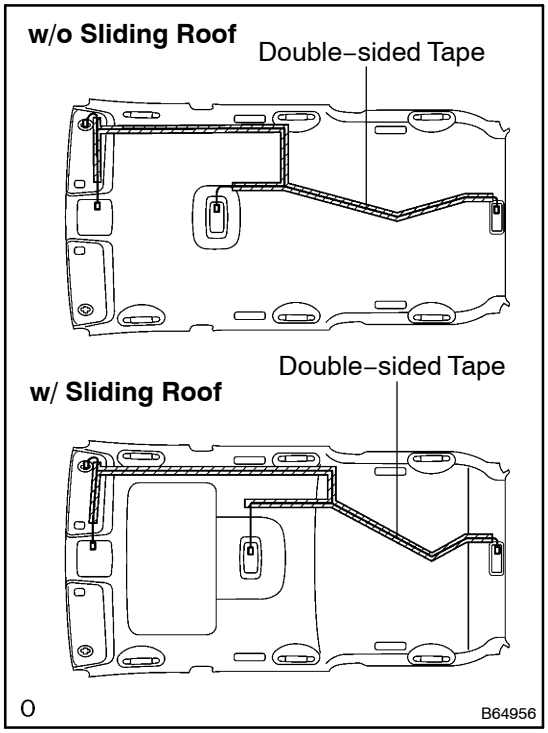

38. INSTALL ROOF HEADLINING ASSY

(a) Attach douuble–sided tape along the markings on the roof panel, as shown in the illustration.


HINT:

Be careful for dirt or foreign objects not to stick to the adhered part when removing the peeling paper from the double–sided tape.

(b) Attach the roof wire harness across the adhered part.

NOTICE:

Roof wire harness be attached securely.

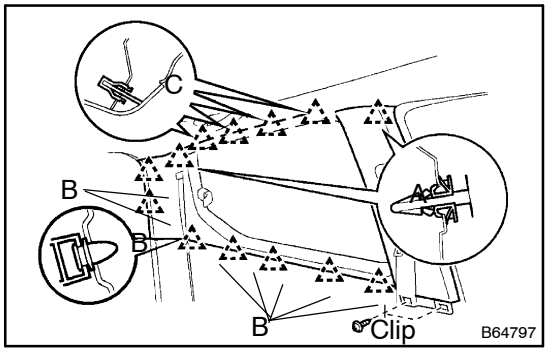

39. INSTALL ROOF SIDE GARNISH INNER LH

(a) Install the 2 clips (A) in the pin on the garnish side.

(b) Engage the claws and install the 11 clips.

(c) Install the floor anchor part of the rear seat No. 2 belt assy.
Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)

40. INSTALL ROOF SIDE GARNISH INNER RH

HINT:

(a) Use the same procedures described above for the LH side.

41. INSTALL FRONT SEAT OUTER BELT ASSY LH

42. INSTALL FRONT SEAT OUTER BELT ASSY RH

43. INSTALL REAR SEAT BELT ASSY OUTER

44. INSTALL REAR SEAT BELT ASSY OUTER

45. INSTALL REAR NO. 2 SEAT ASSY LH

46. INSTALL REAR NO. 2 SEAT ASSY RH