IGNITION OR STARTER SWITCH ASSY

80027–02


REPLACEMENT

HINT:

The installation is in the reverse order of the removal. However, when there is a special point concerning the installation, it is indicated.

1. REMOVE STEERING COLUMN COVER LWR (See page 50–6)

2. REMOVE STEERING COLUMN COVER UPR (See page 50–6)

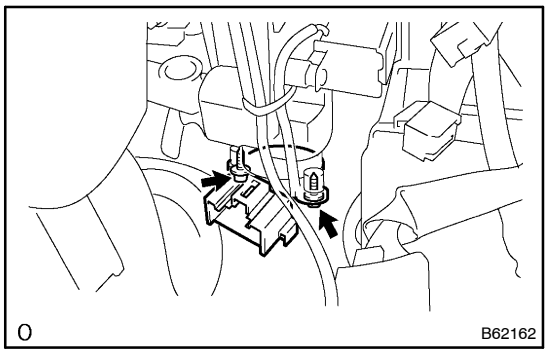

3. REMOVE IGNITION OR STARTER SWITCH ASSY

(a) Disconnect the ignition switch connector and un–lock warning switch connector.

(b) Remove the clamp.

(c) Remove the 2 screws and ignition switch assy.