
80028–02

INSPECTION

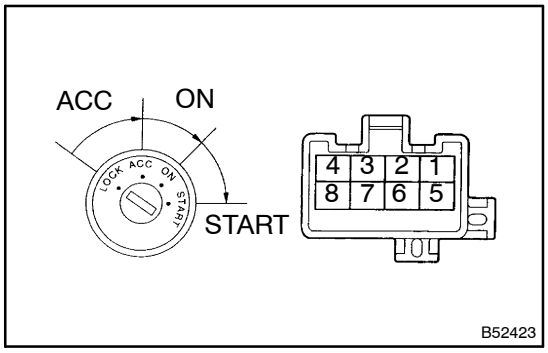

1. INSPECT IGNITION OR STARTER SWITCH ASSY

(a) Inspect the switch continuity.

Standard:

Terminal No	Switch Position	Specified Condition
–	LOCK	No continuity
2 ⇔ 3	ACC	Continuity
2 ⇔ 3 ⇔ 4 6 ⇔ 7	ON	Continuity
1 ⇔ 2 ⇔ 4 6 ⇔ 7 ⇔ 8	START	Continuity

If the result is not as specified, replace the switch.