

160H3–01

OVERHAUL

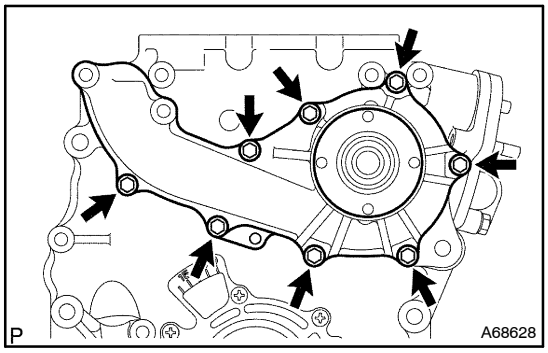

1. REMOVE WATER PUMP ASSY

(a) Remove the 8 bolts, water pump and gasket.

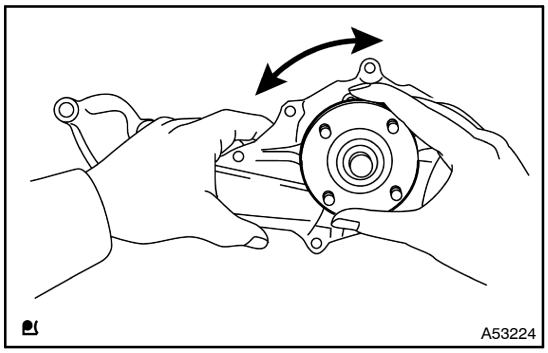

2. INSPECT WATER PUMP ASSY

(a) Turn the pulley, and check that the water pump bearing moves smoothly and quietly.

If necessary, replace the water pump.

3. INSTALL WATER PUMP ASSY

(a) Install a new gasket and the water pump with 8 bolts.
Torque: 8.9 N·m (90 kgf·cm, 78 in.·lbf)