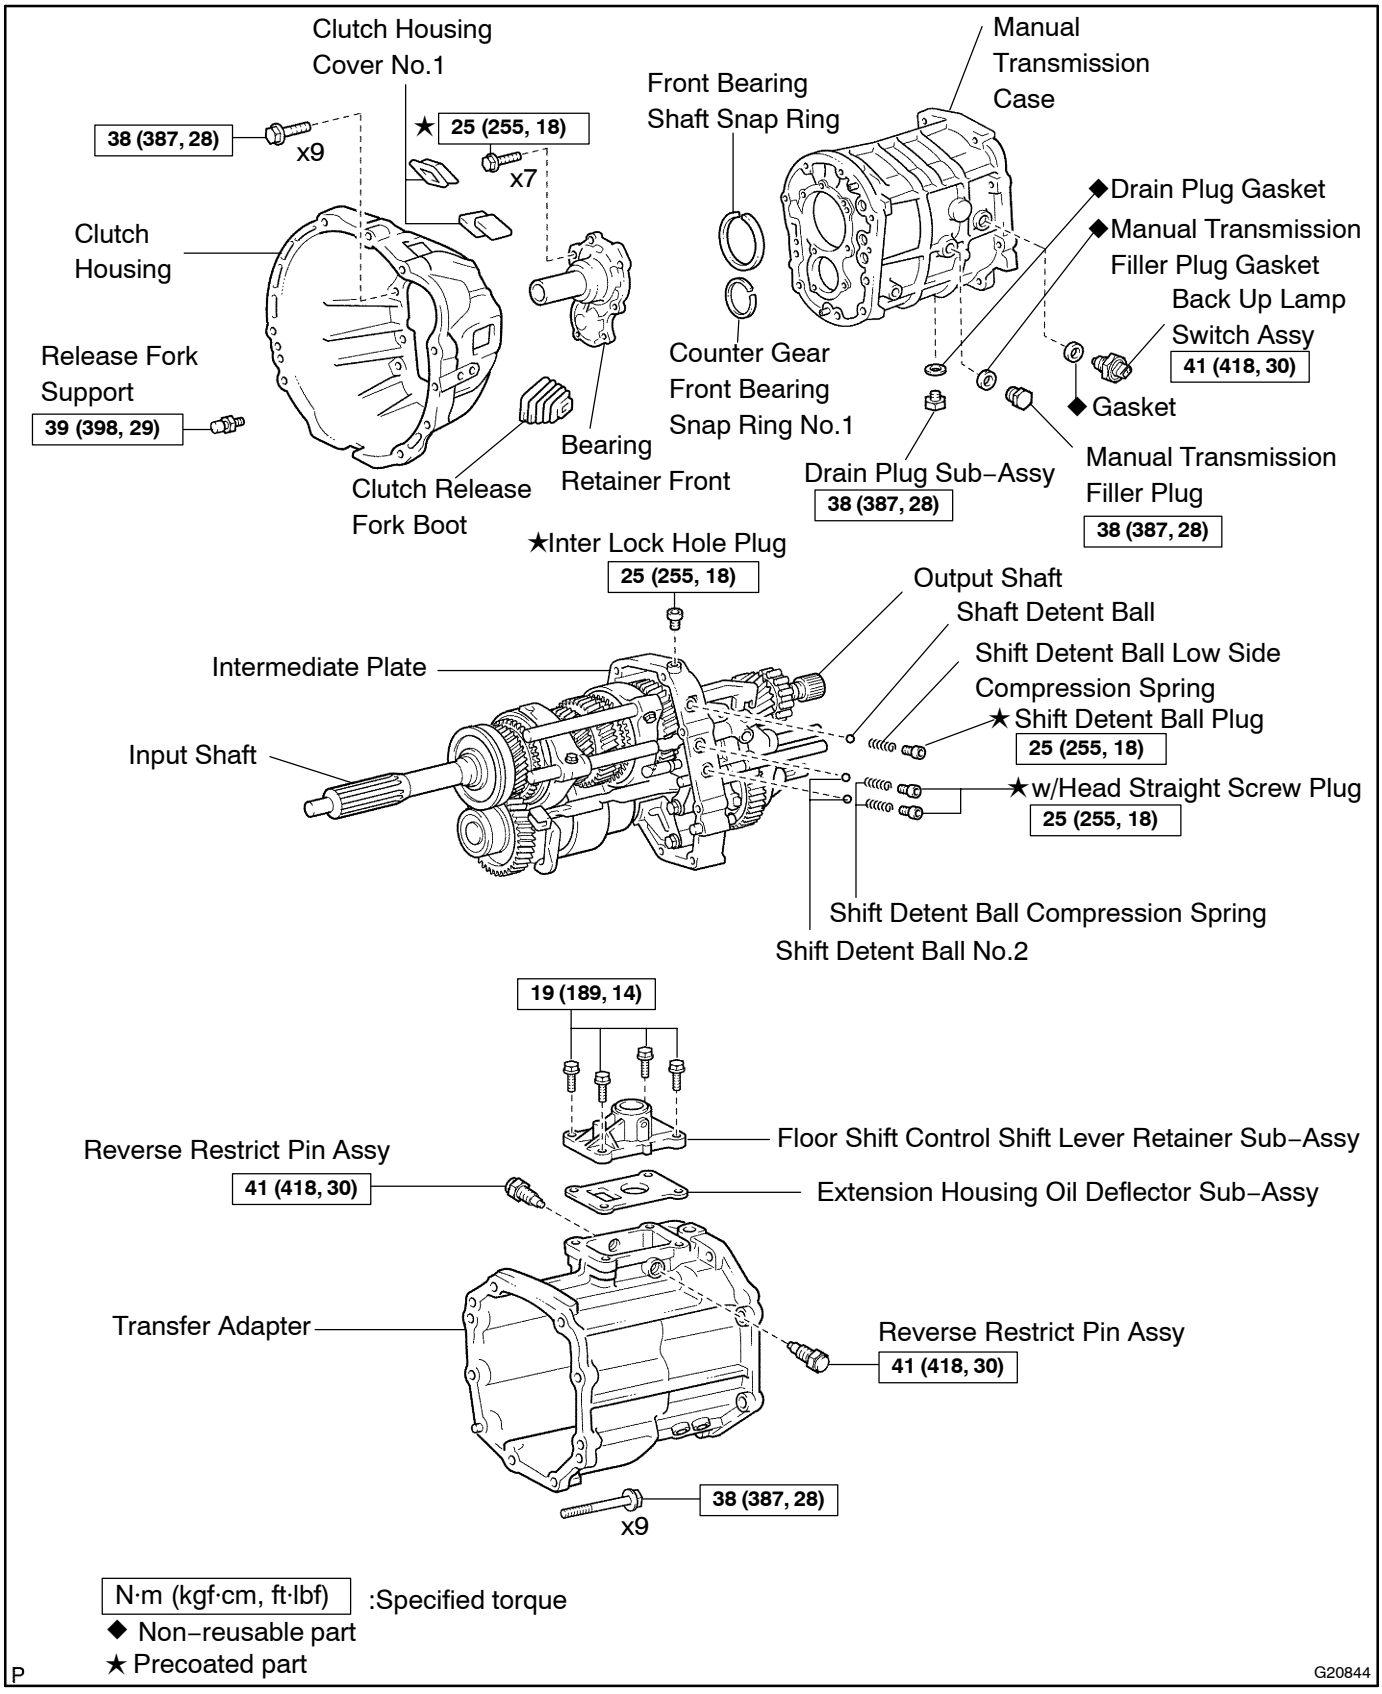
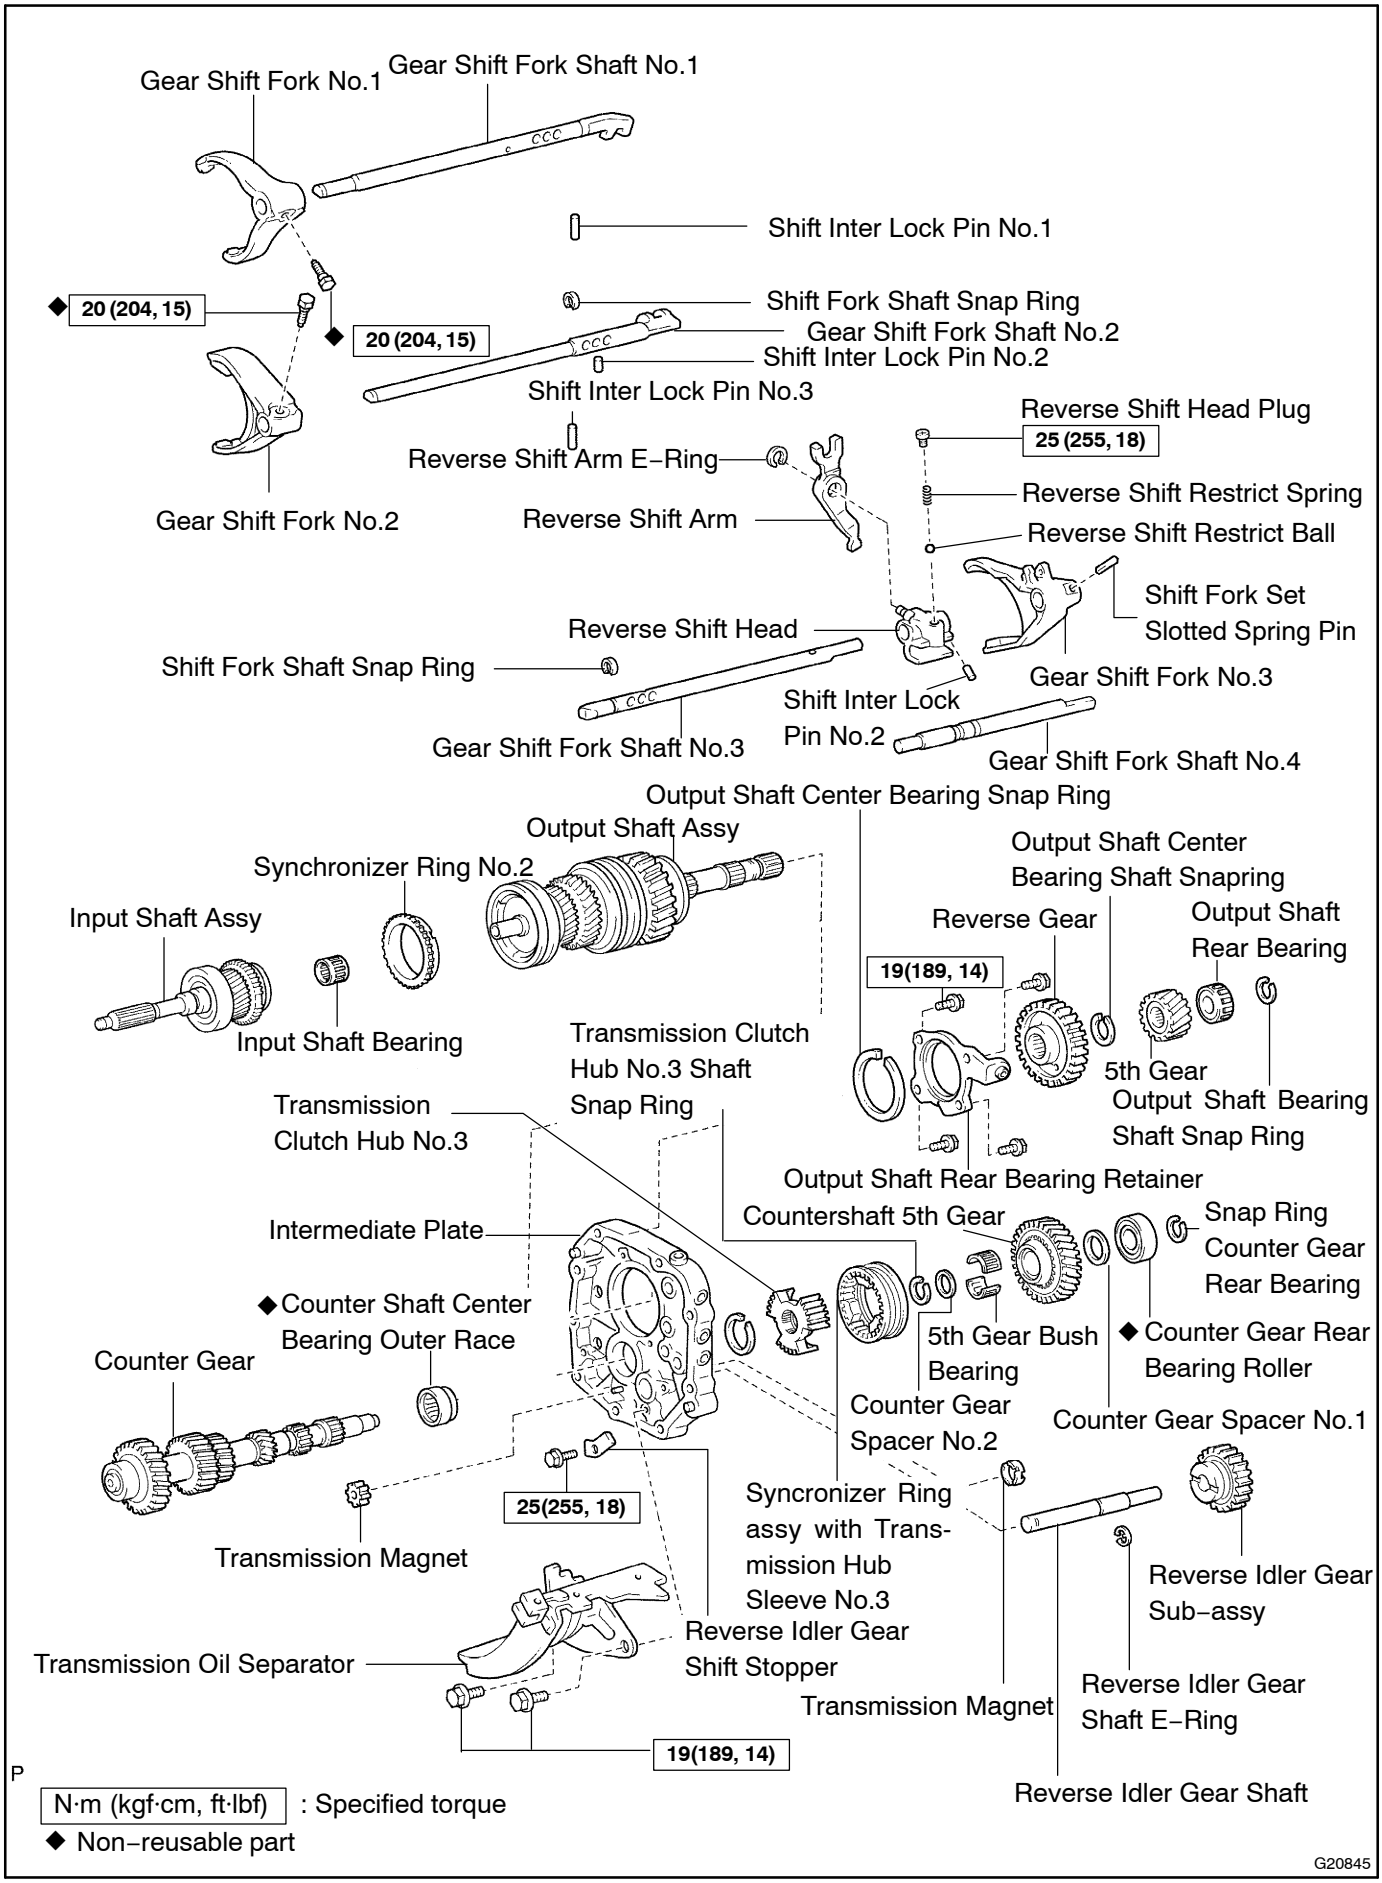
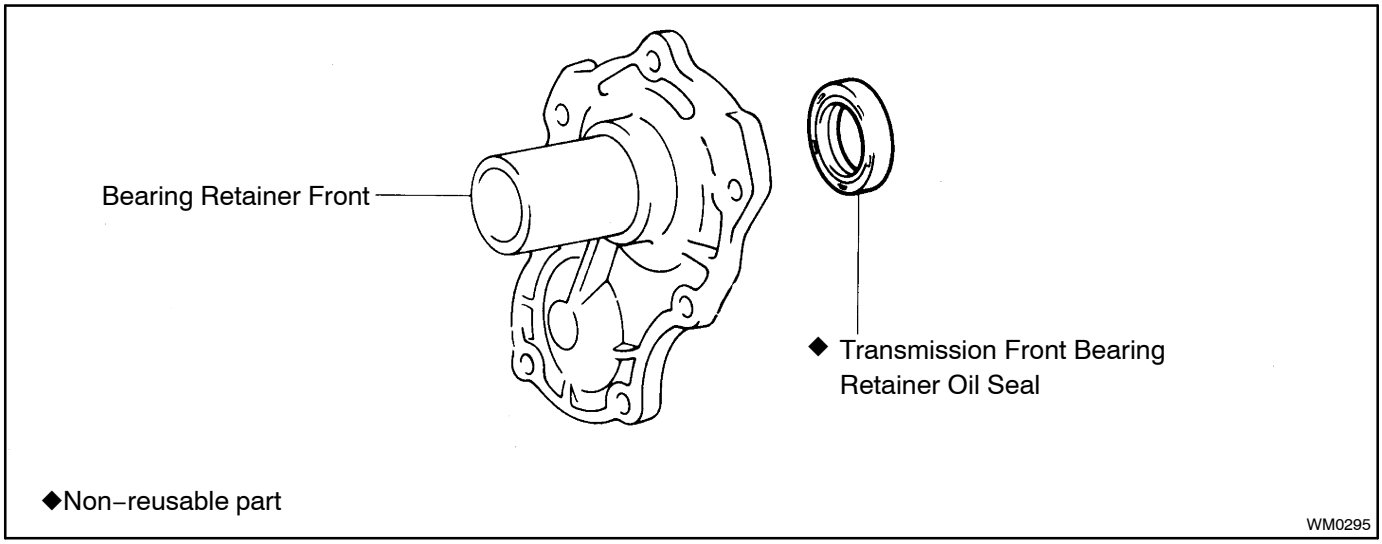
MANUAL TRANSMISSION / TRANSAXLE (W56)

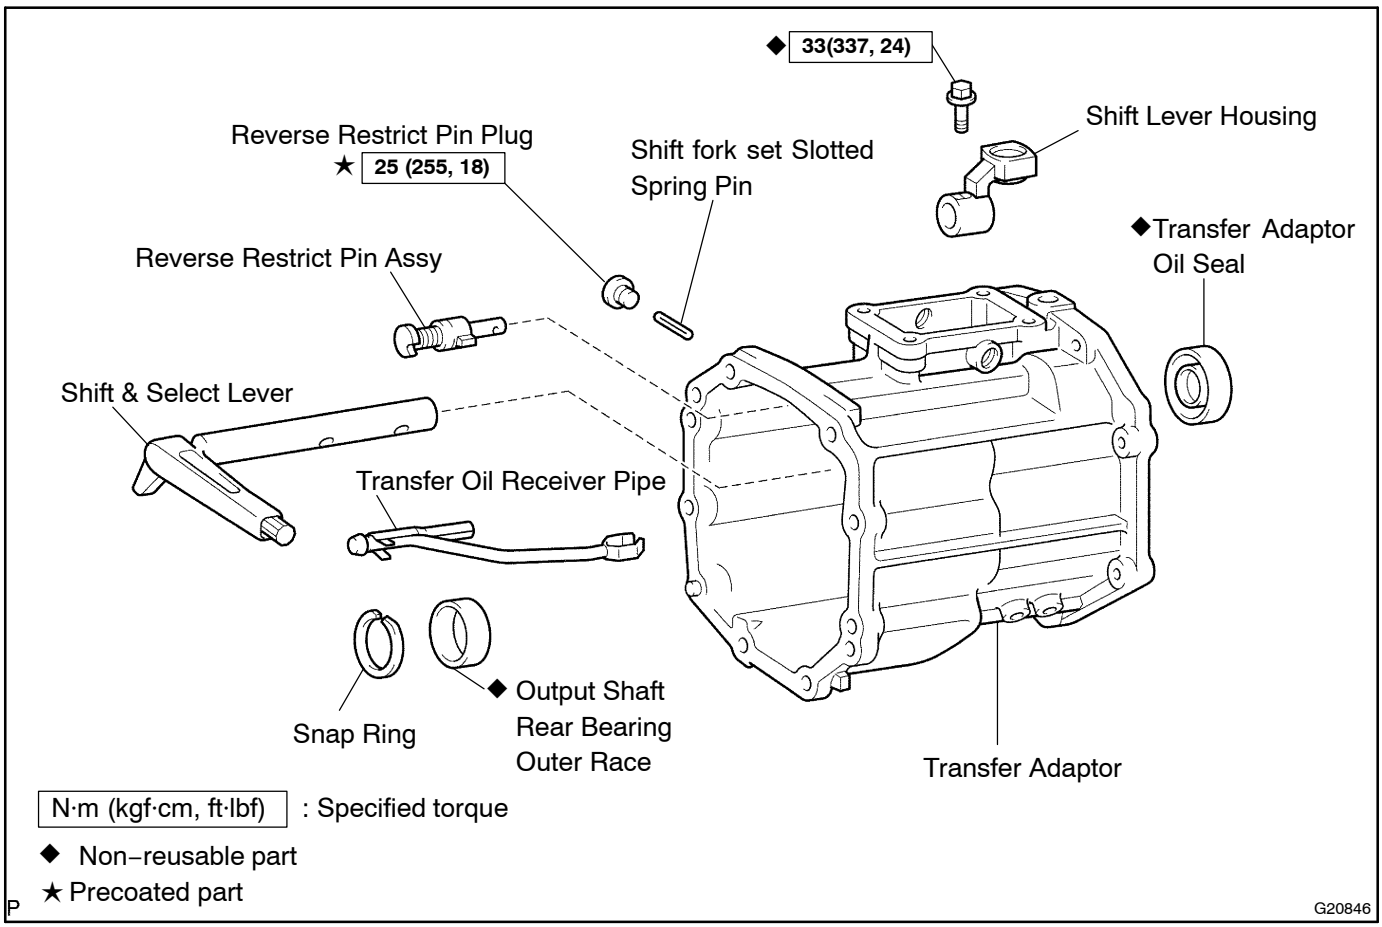
COMPONENTS

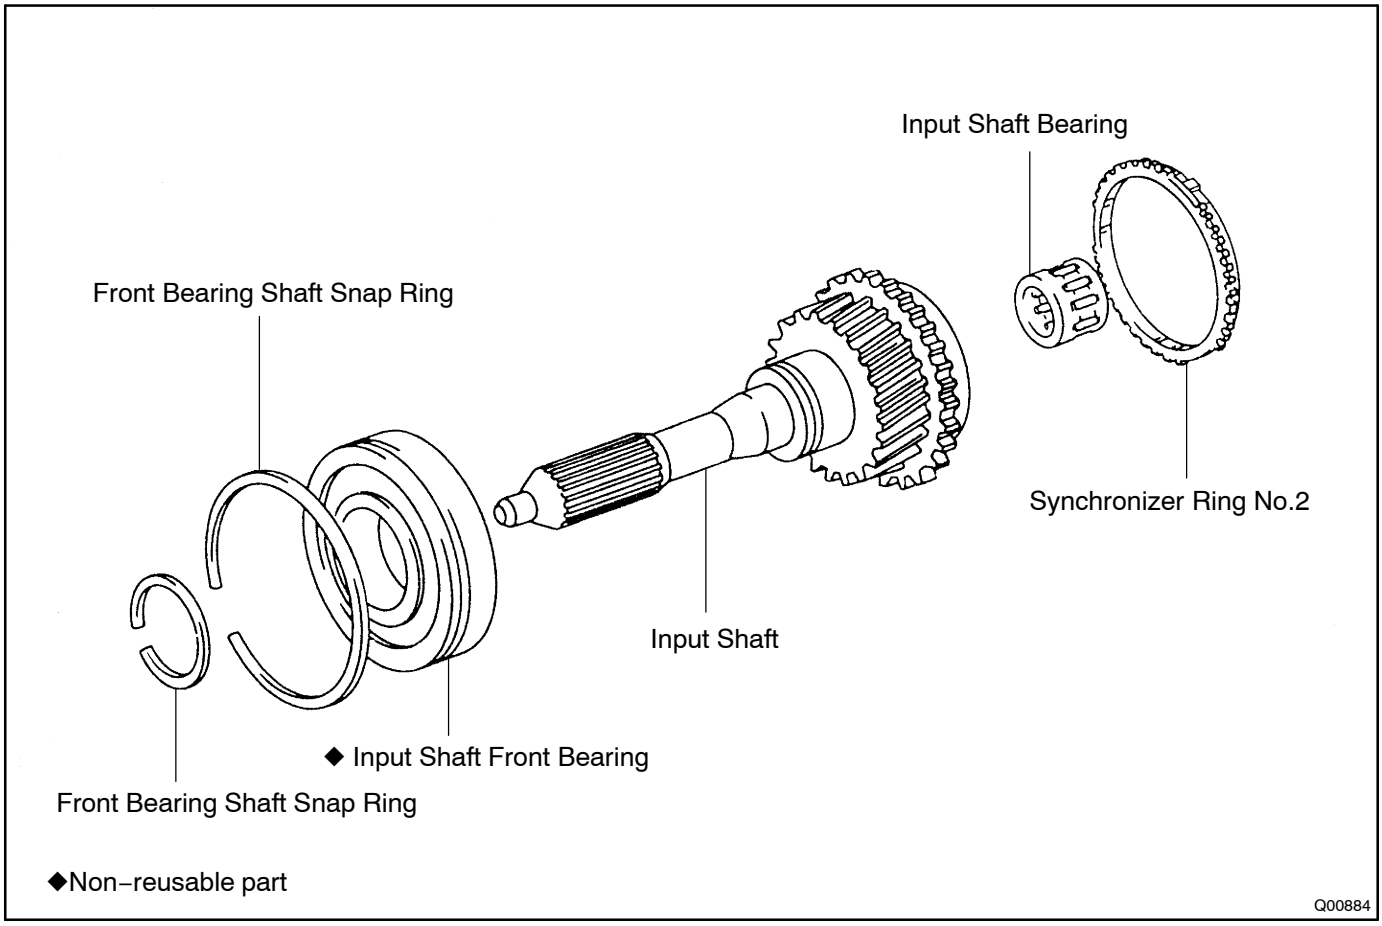
410BQ–01

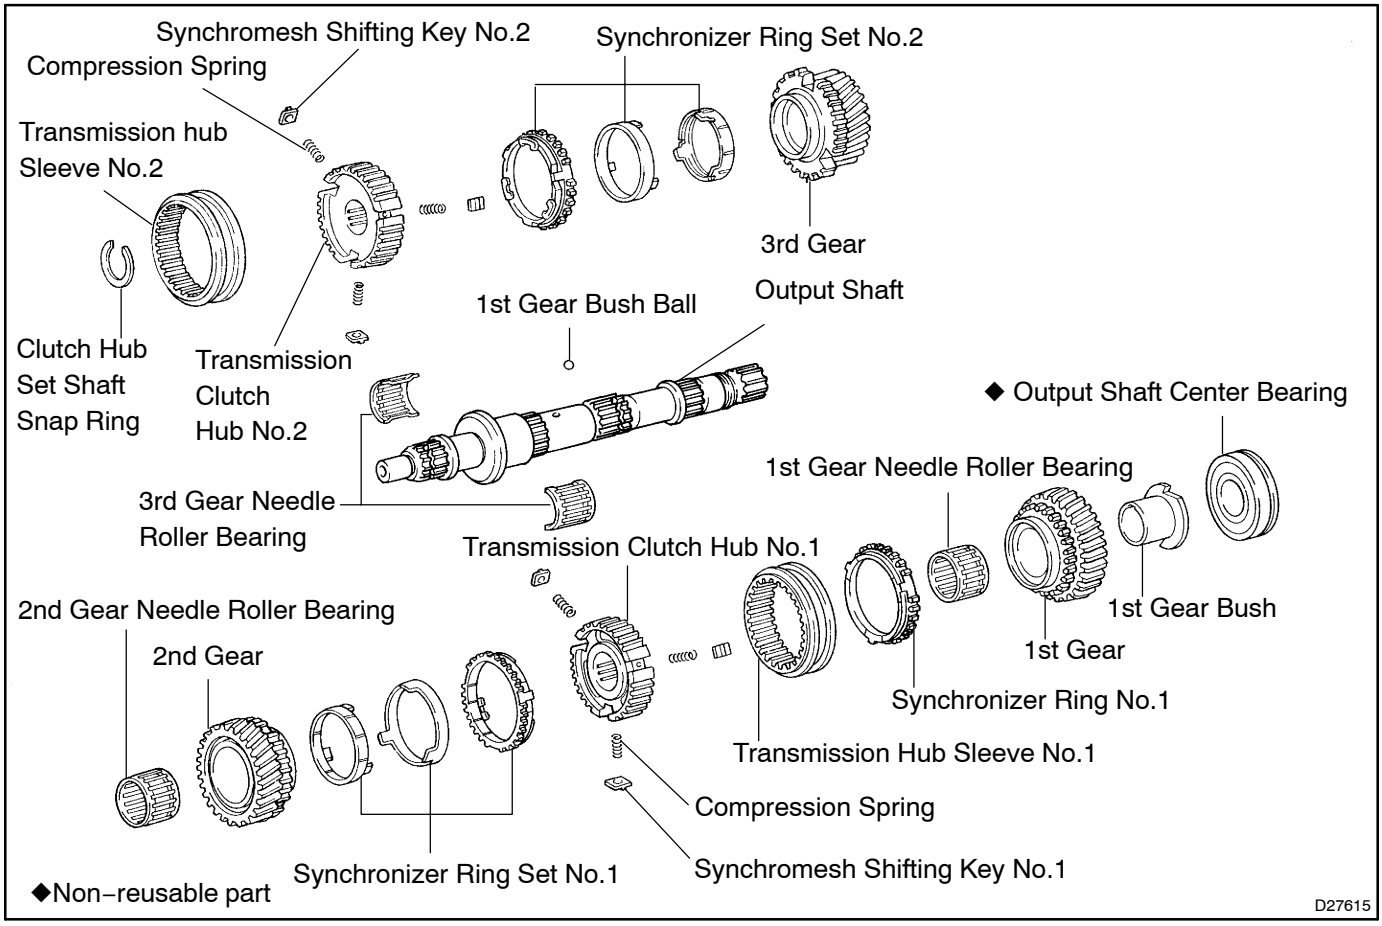


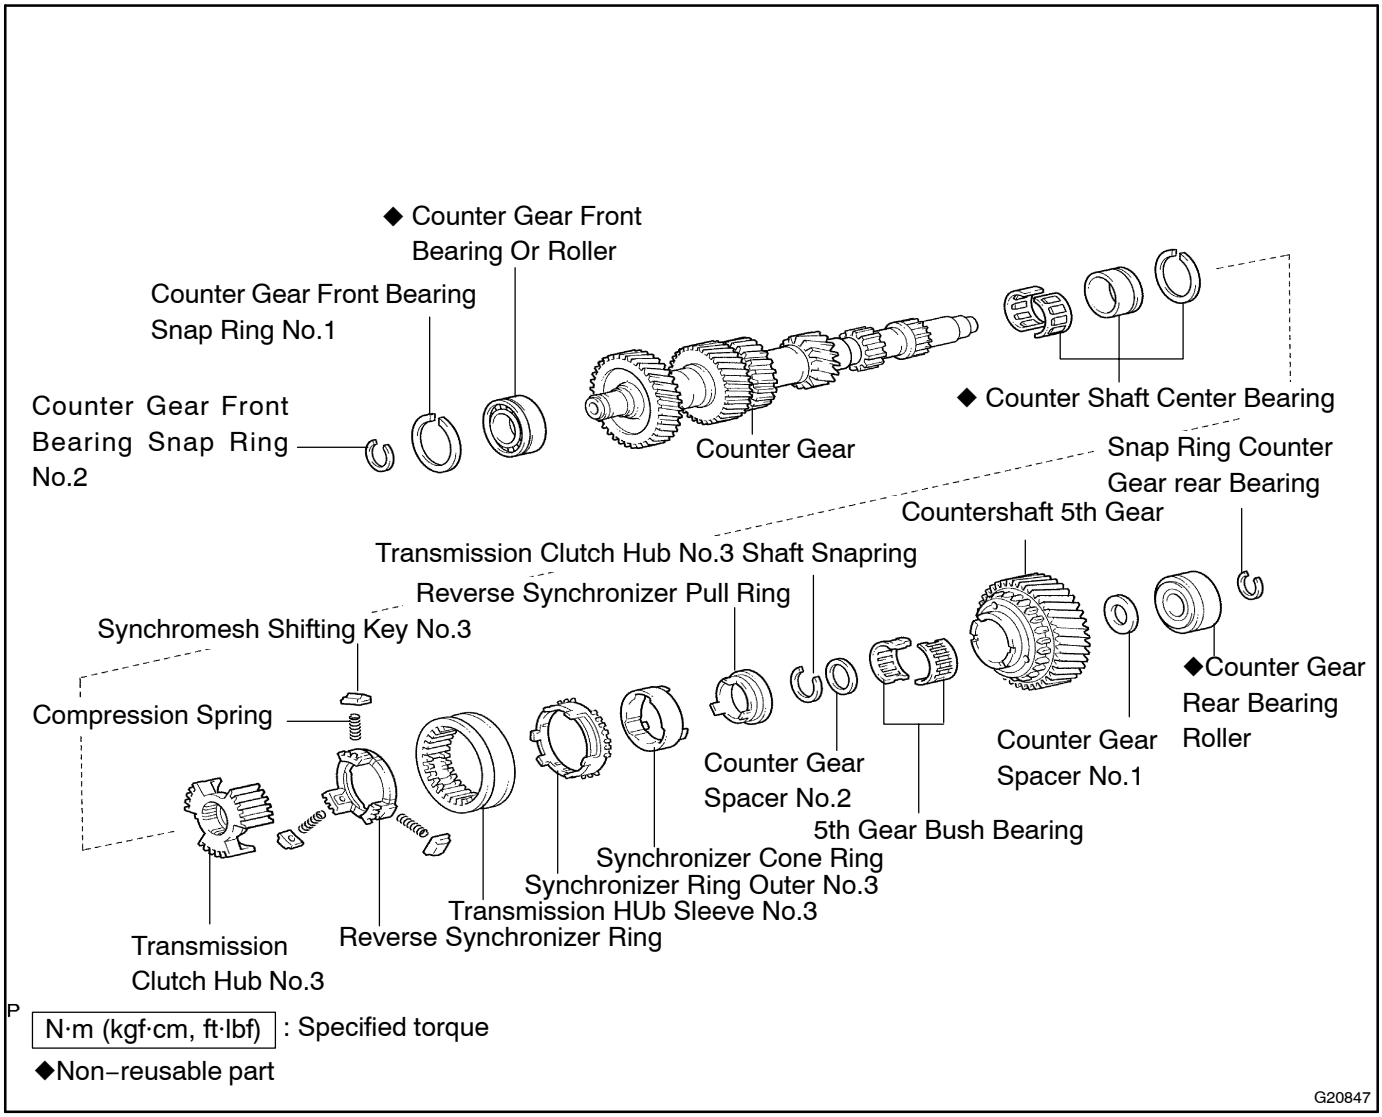

Gear Shift Fork No.1
Gear Shift Fork Shaft No.1
Shift Inter Lock Pin No.1
◆ 20 (204, 15)
◆ 20 (204, 15)
Shift Fork Shaft Snap Ring
Gear Shift Fork Shaft No.2
Shift Inter Lock Pin No.2
Shift Inter Lock Pin No.3
Reverse Shift Head Plug
25 (255, 18)
Reverse Shift Arm E–Ring
Reverse Shift Restrict Spring
Gear Shift Fork No.2
Reverse Shift Arm
Reverse Shift Restrict Ball
Shift Fork Set
Slotted Spring Pin
Reverse Shift Head
Shift Fork Shaft Snap Ring
Gear Shift Fork No.3
Shift Inter Lock
Pin No.2
Gear Shift Fork Shaft No.3
Gear Shift Fork Shaft No.4
Output Shaft Center Bearing Snap Ring
Output Shaft Assy
Synchronizer Ring No.2
Output Shaft Center
Bearing Shaft Snapring
Input Shaft Assy
Reverse Gear
Output Shaft
Rear Bearing
19(189, 14)
Input Shaft Bearing
Transmission Clutch
Hub No.3 Shaft
Snap Ring
5th Gear
Output Shaft Bearing
Shaft Snap Ring
Transmission
Clutch Hub No.3
Output Shaft Rear Bearing Retainer
Countershaft 5th Gear
Snap Ring
Counter Gear
Rear Bearing
Intermediate Plate
◆ Counter Shaft Center
Bearing Outer Race
5th Gear Bush
Bearing
◆ Counter Gear Rear
Bearing Roller
Counter Gear
Counter Gear
Spacer No.2
Counter Gear Spacer No.1
25(255, 18)
Syncronizer Ring
assy with Trans-
mission Hub
Sleeve No.3
Transmission Magnet
Reverse Idler Gear
Sub–assy
Reverse Idler Gear
Shift Stopper
Transmission Oil Separator
Transmission Magnet
Reverse Idler Gear
Shaft E–Ring
19(189, 14)
Reverse Idler Gear Shaft
P
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
G20845


Bearing Retainer Front
◆ Transmission Front Bearing Retainer Oil Seal
◆Non–reusable part
WM0295


◆ 33(337, 24)
Shift Lever Housing
Reverse Restrict Pin Plug
★ 25 (255, 18)
Shift fork set Slotted Spring Pin
◆Transfer Adaptor Oil Seal
Reverse Restrict Pin Assy
Shift & Select Lever
Transfer Oil Receiver Pipe
Snap Ring
◆ Output Shaft Rear Bearing Outer Race
Transfer Adaptor
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
★ Precoated part
G20846


Input Shaft Bearing
Front Bearing Shaft Snap Ring
Synchronizer Ring No.2
Input Shaft
◆ Input Shaft Front Bearing
Front Bearing Shaft Snap Ring
◆Non–reusable part
Q00884


Synchromesh Shifting Key No.2
Compression Spring
Synchronizer Ring Set No.2
Transmission hub
Sleeve No.2
3rd Gear
Output Shaft
1st Gear Bush Ball
Clutch Hub
Set Shaft
Snap Ring
Transmission
Clutch
Hub No.2
◆ Output Shaft Center Bearing
1st Gear Needle Roller Bearing
3rd Gear Needle
Roller Bearing
Transmission Clutch Hub No.1
2nd Gear Needle Roller Bearing
1st Gear Bush
2nd Gear
1st Gear
Synchronizer Ring No.1
Transmission Hub Sleeve No.1
Compression Spring
Synchronizer Ring Set No.1
Synchromesh Shifting Key No.1
◆Non–reusable part
D27615


◆ Counter Gear Front Bearing Or Roller
Counter Gear Front Bearing Snap Ring No.1
Counter Gear Front Bearing Snap Ring No.2
Counter Gear
◆ Counter Shaft Center Bearing
Snap Ring Counter Gear rear Bearing
Countershaft 5th Gear
Transmission Clutch Hub No.3 Shaft Snapring
Reverse Synchronizer Pull Ring
Synchromesh Shifting Key No.3
Compression Spring
◆Counter Gear Rear Bearing Roller
Counter Gear Spacer No.1
Counter Gear Spacer No.2
5th Gear Bush Bearing
Synchronizer Cone Ring
Synchronizer Ring Outer No.3
Transmission HUb Sleeve No.3
Reverse Synchronizer Ring
Transmission Clutch Hub No.3
P
N·m (kgf·cm, ft·lbf) : Specified torque
◆Non–reusable part
G20847