



400WT–01

COMPONENTS

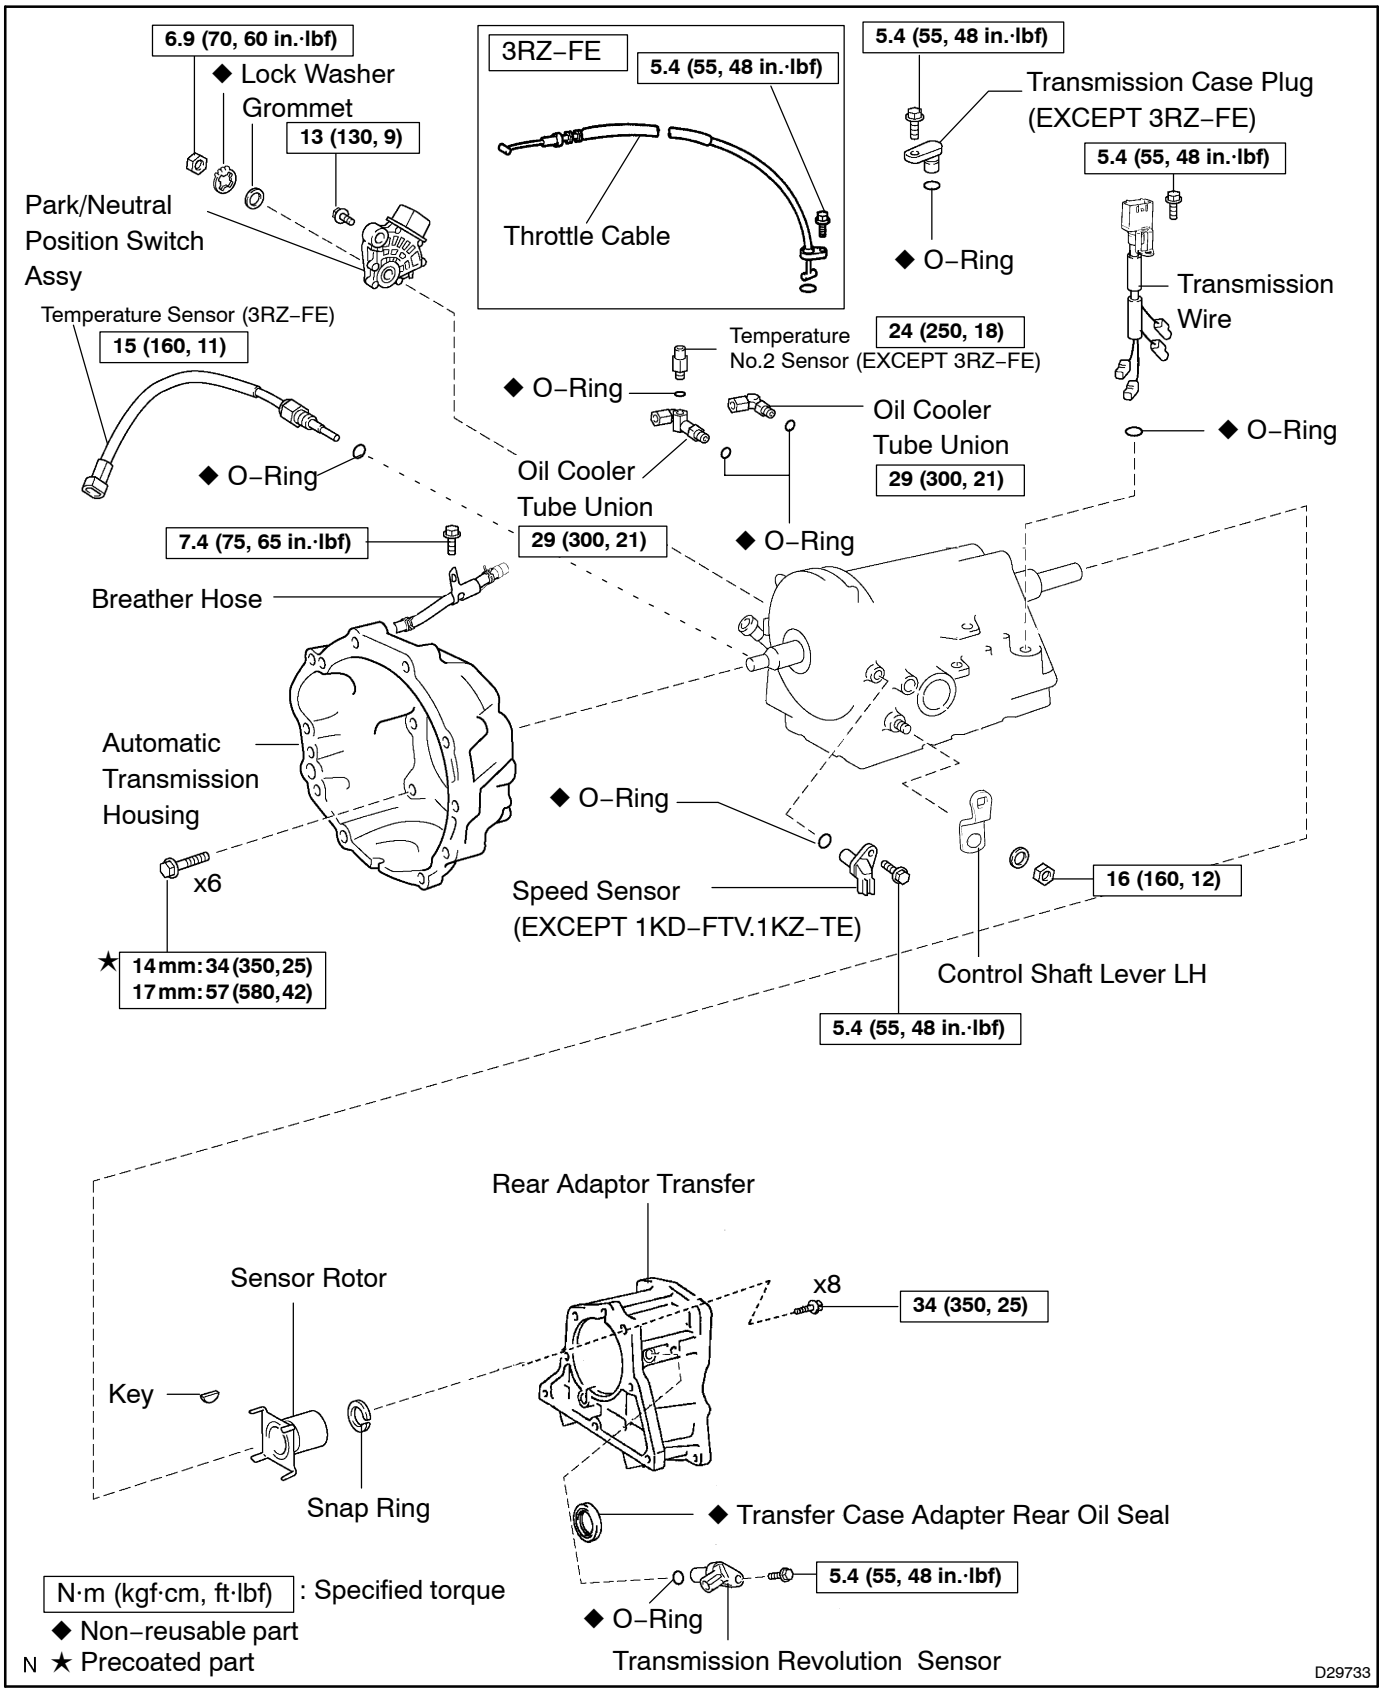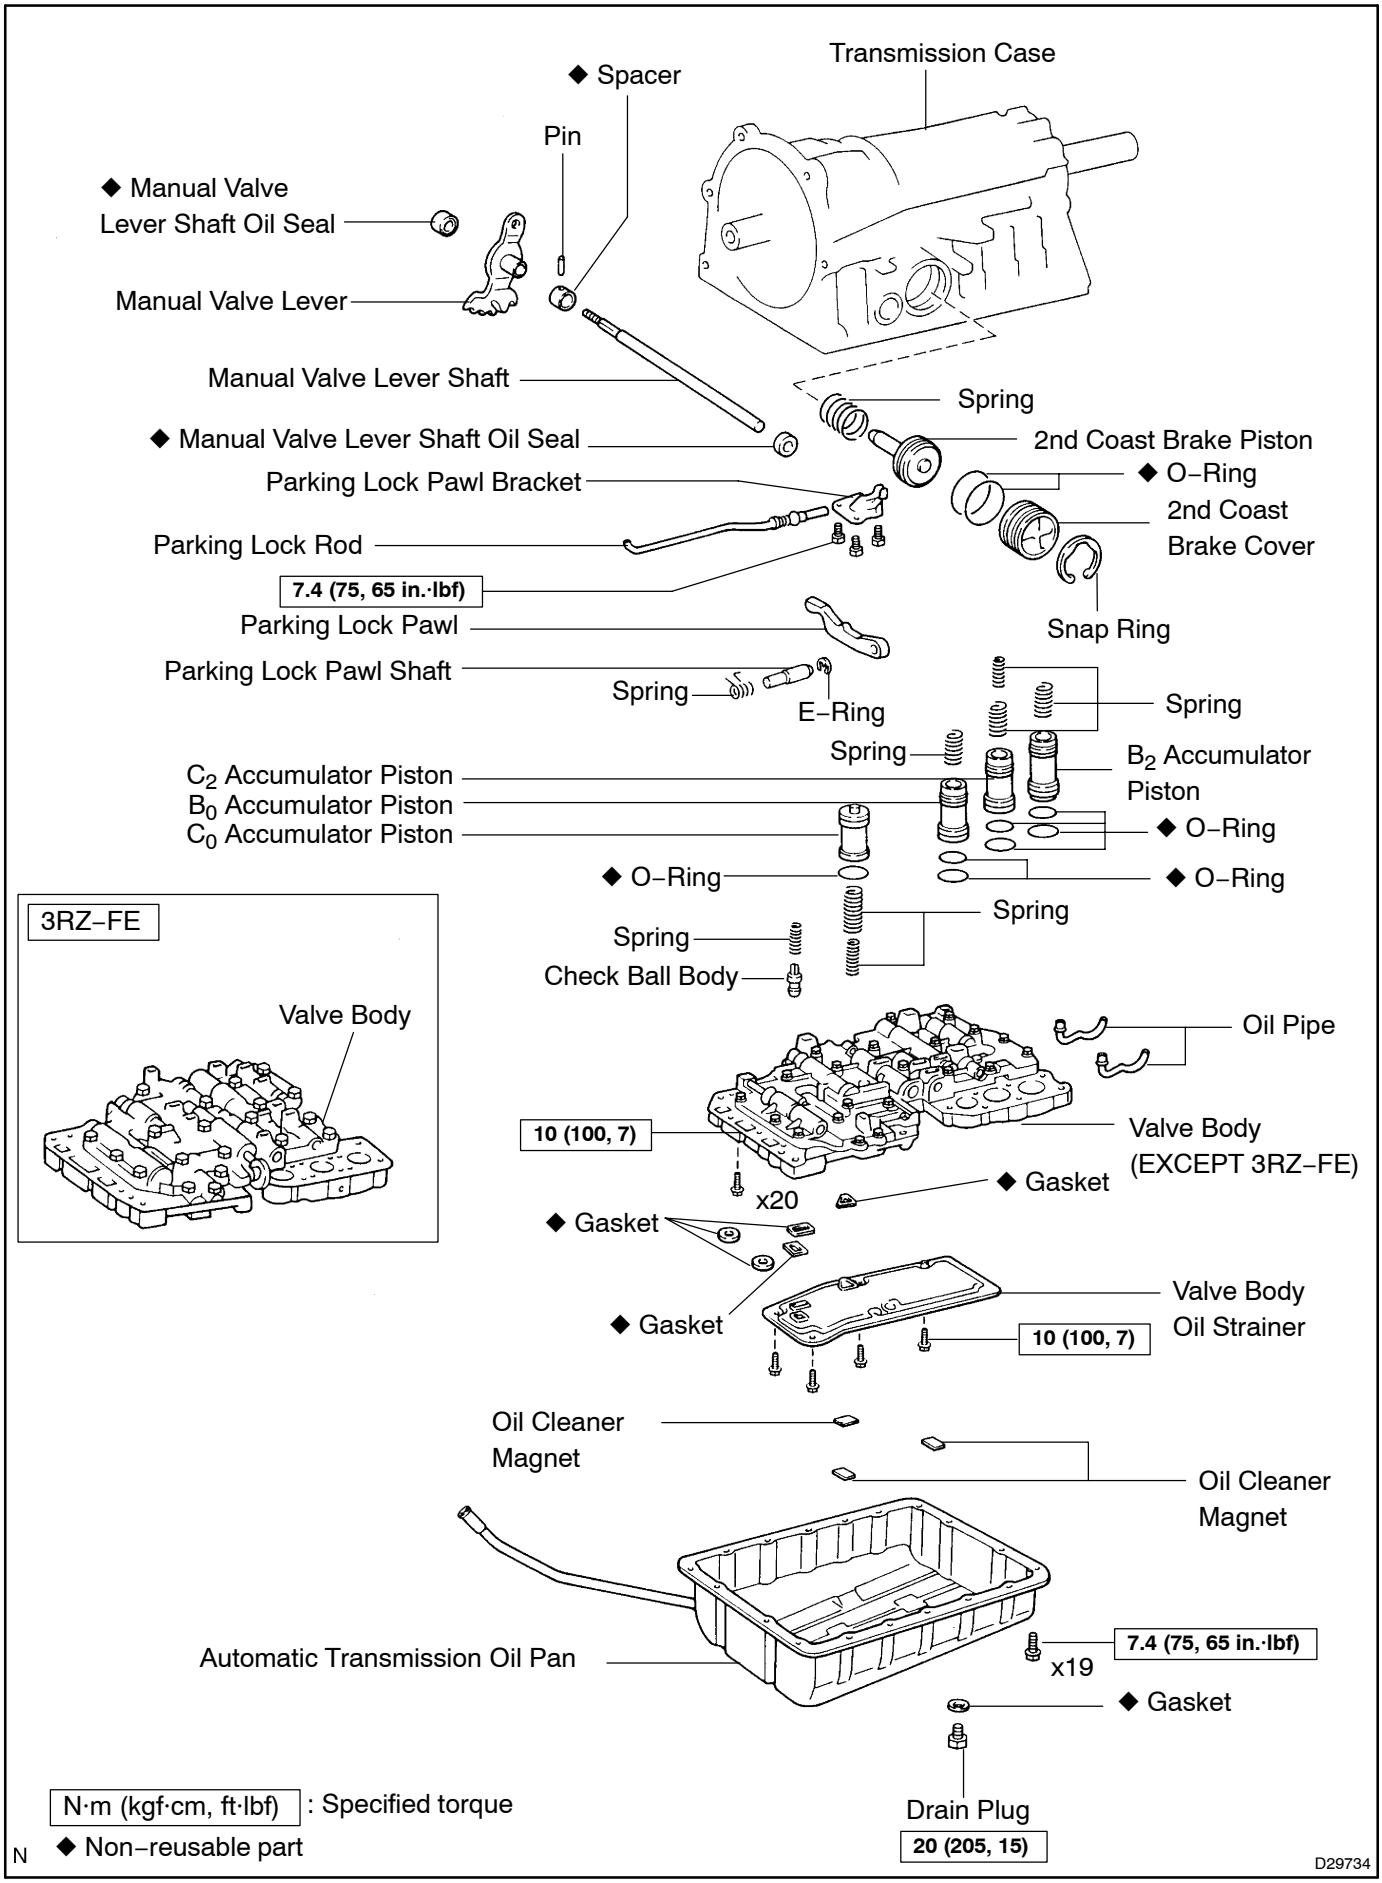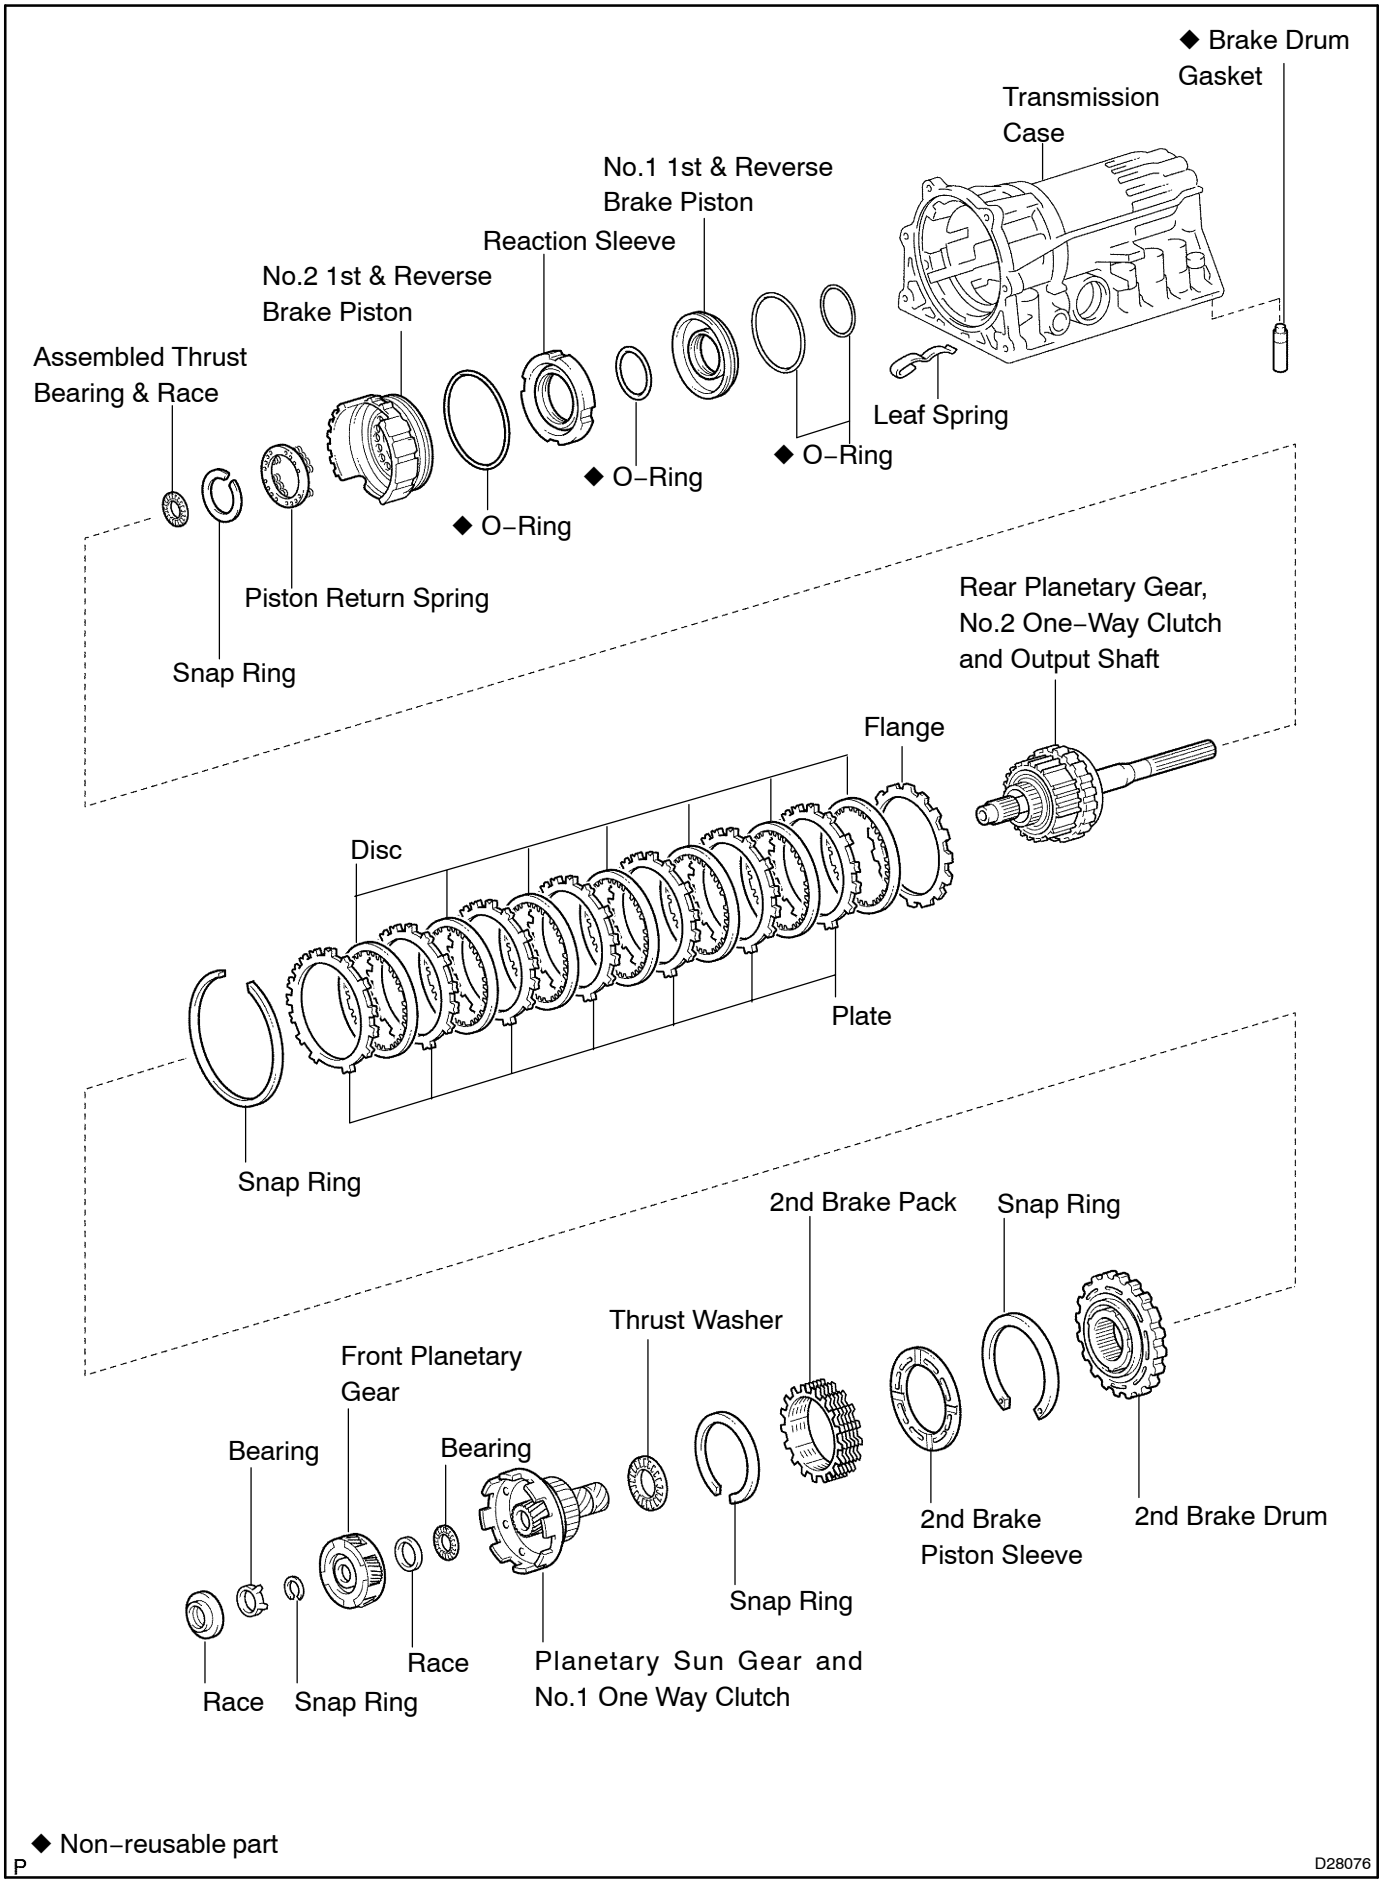


Transmission Case
◆ Spacer
Pin
◆ Manual Valve Lever Shaft Oil Seal
Manual Valve Lever
Manual Valve Lever Shaft
Spring
◆ Manual Valve Lever Shaft Oil Seal
2nd Coast Brake Piston
Parking Lock Pawl Bracket
◆ O–Ring
2nd Coast Brake Cover
Parking Lock Rod
7.4 (75, 65 in.·lbf)
Snap Ring
Parking Lock Pawl
Parking Lock Pawl Shaft
Spring
E–Ring
Spring
Spring
B2 Accumulator Piston
C2 Accumulator Piston
B0 Accumulator Piston
C0 Accumulator Piston
◆ O–Ring
◆ O–Ring
◆ O–Ring
Spring
Spring
Check Ball Body
3RZ–FE
Valve Body
Oil Pipe
10 (100, 7)
Valve Body (EXCEPT 3RZ–FE)
x20
◆ Gasket
◆ Gasket
Valve Body Oil Strainer
◆ Gasket
10 (100, 7)
Oil Cleaner Magnet
Oil Cleaner Magnet
Automatic Transmission Oil Pan
7.4 (75, 65 in.·lbf)
x19
◆ Gasket
Drain Plug
20 (205, 15)
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
N
D29734


◆ Brake Drum Gasket
Transmission Case
No.1 1st & Reverse Brake Piston
Reaction Sleeve
No.2 1st & Reverse Brake Piston
Assembled Thrust Bearing & Race
◆ O–Ring
◆ O–Ring
◆ O–Ring
Leaf Spring
Piston Return Spring
Snap Ring
Rear Planetary Gear, No.2 One–Way Clutch and Output Shaft
Flange
Disc
Plate
Snap Ring
2nd Brake Pack
Snap Ring
Thrust Washer
Front Planetary Gear
Bearing
Bearing
2nd Brake Piston Sleeve
2nd Brake Drum
Snap Ring
Race
Race
Snap Ring
Planetary Sun Gear and No.1 One Way Clutch
◆ Non–reusable part
P
D28076

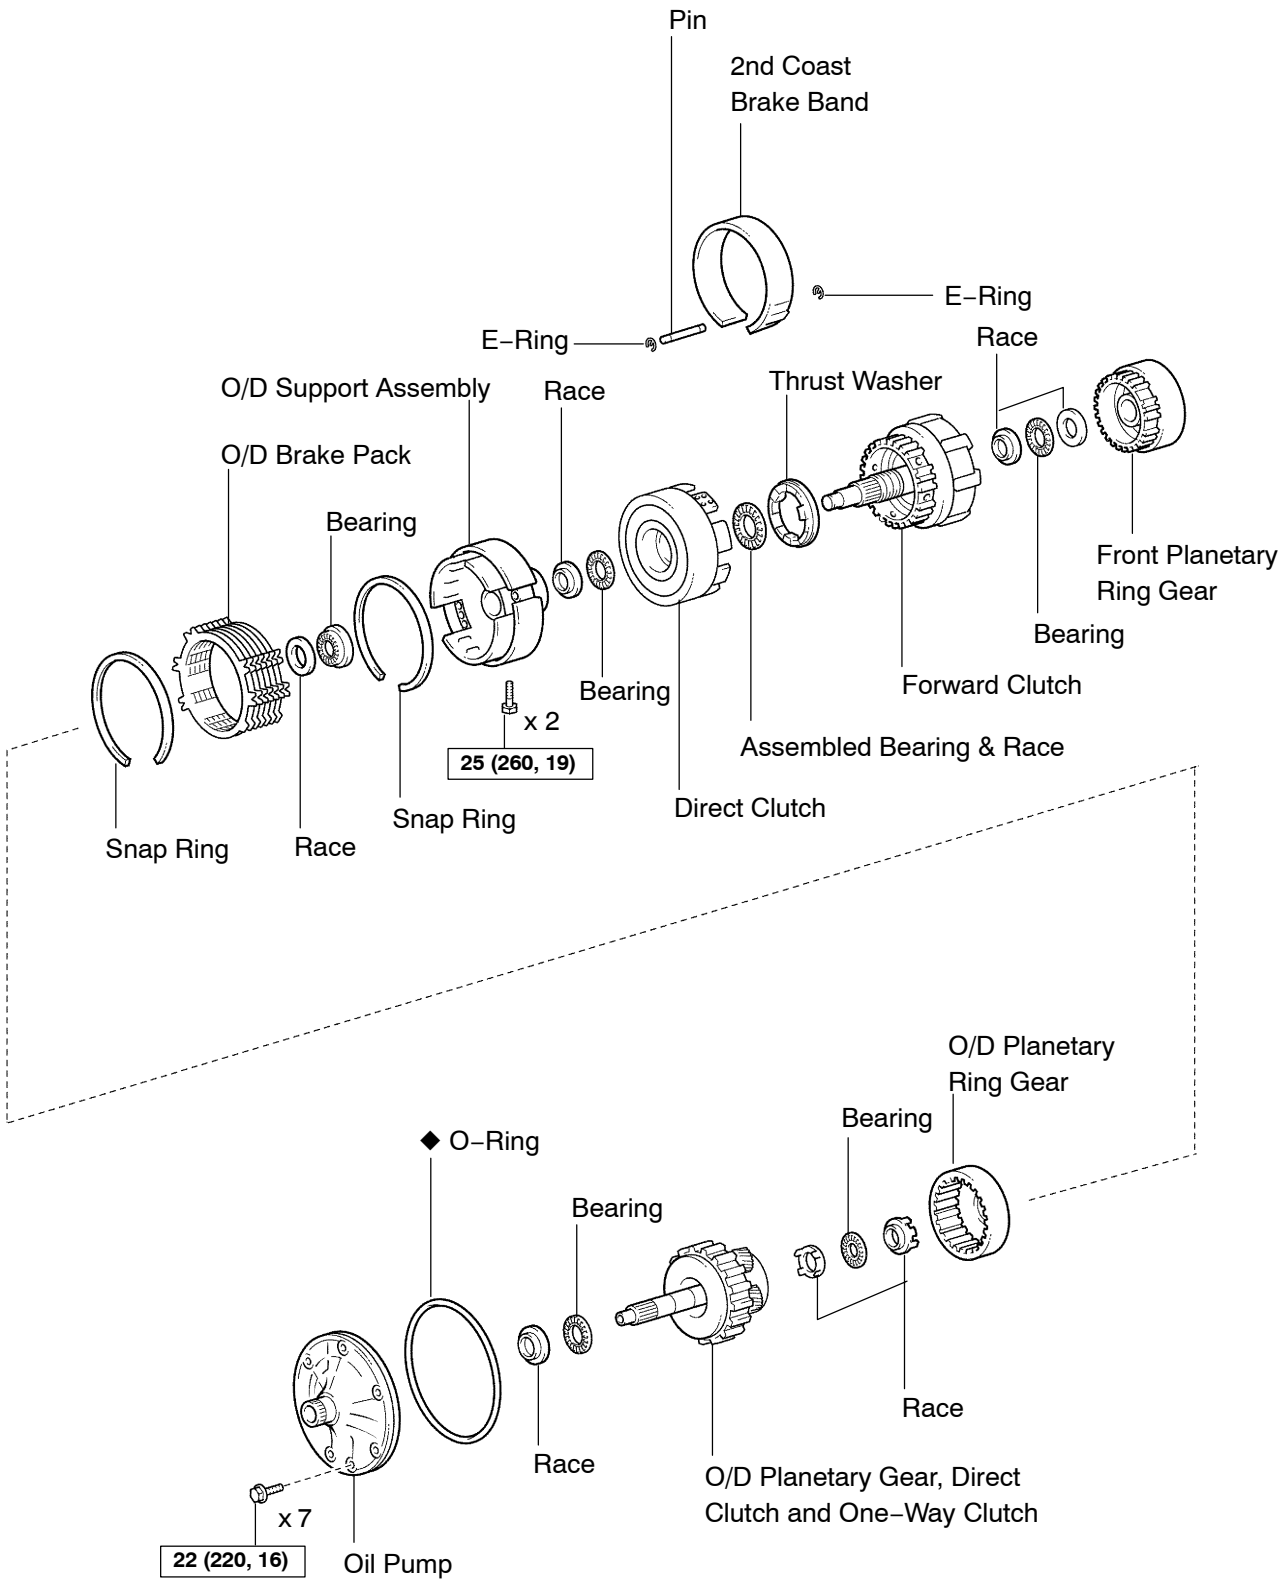

N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non–reusable part

P

D28077