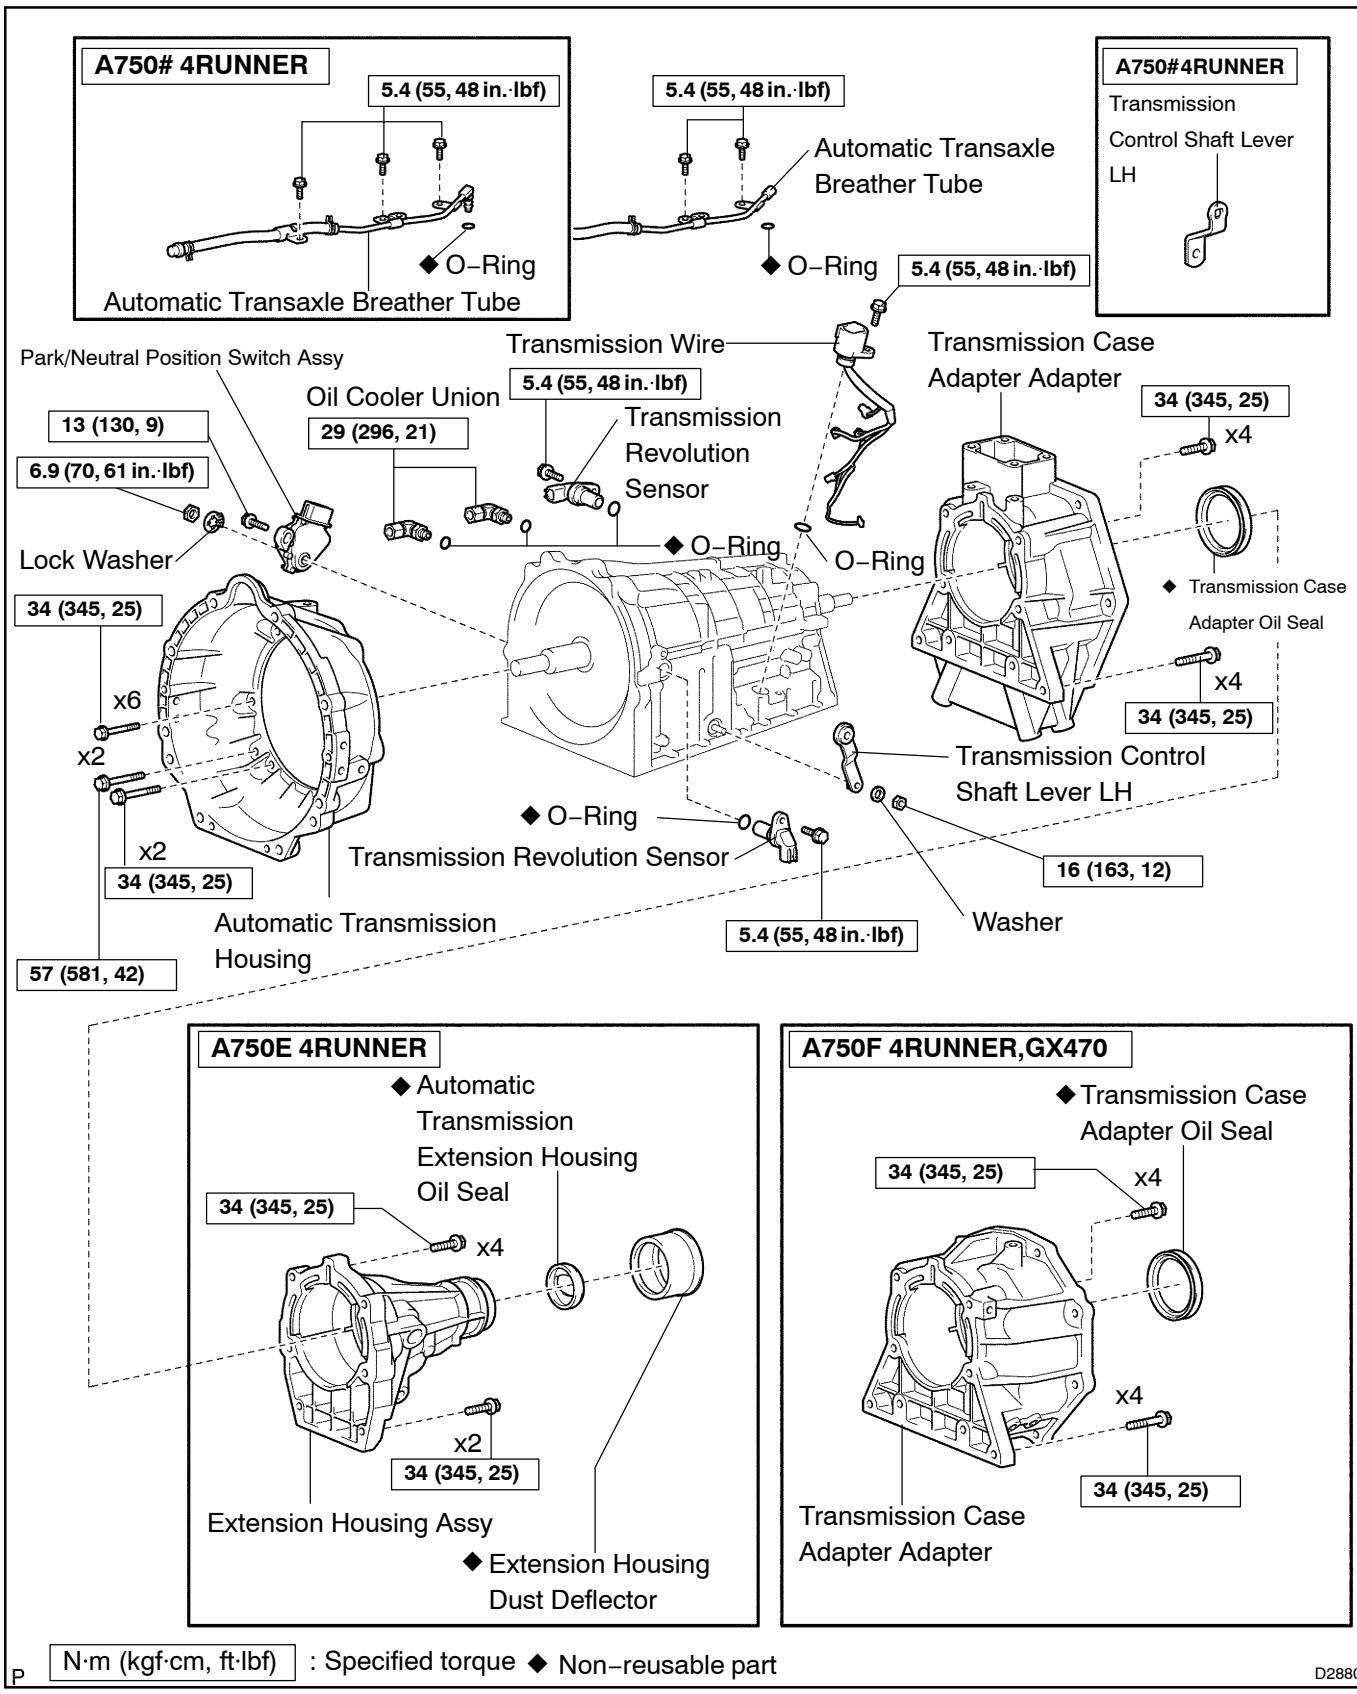
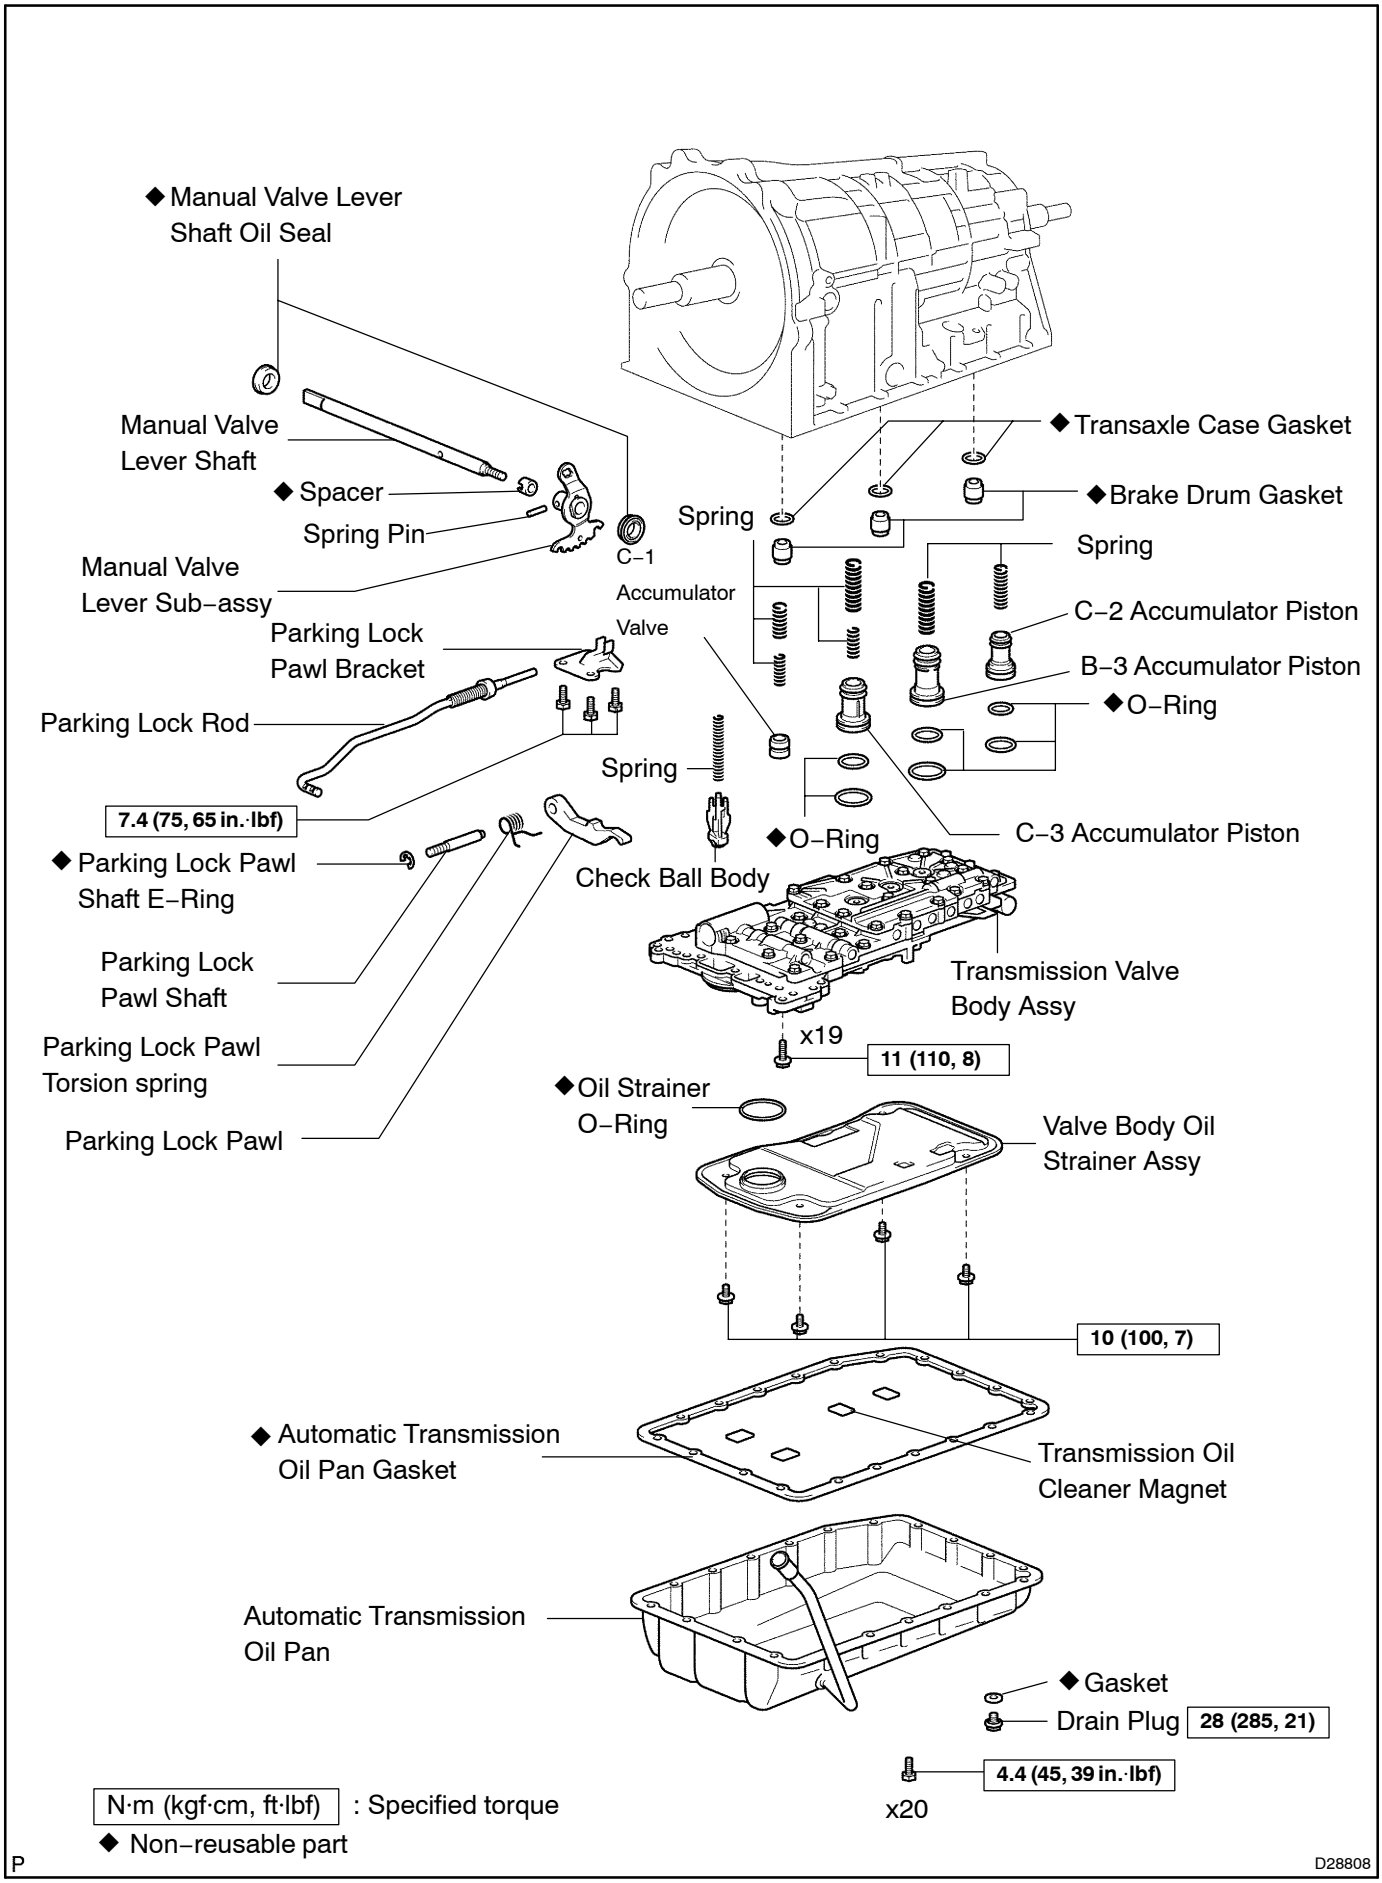
400XJ–01

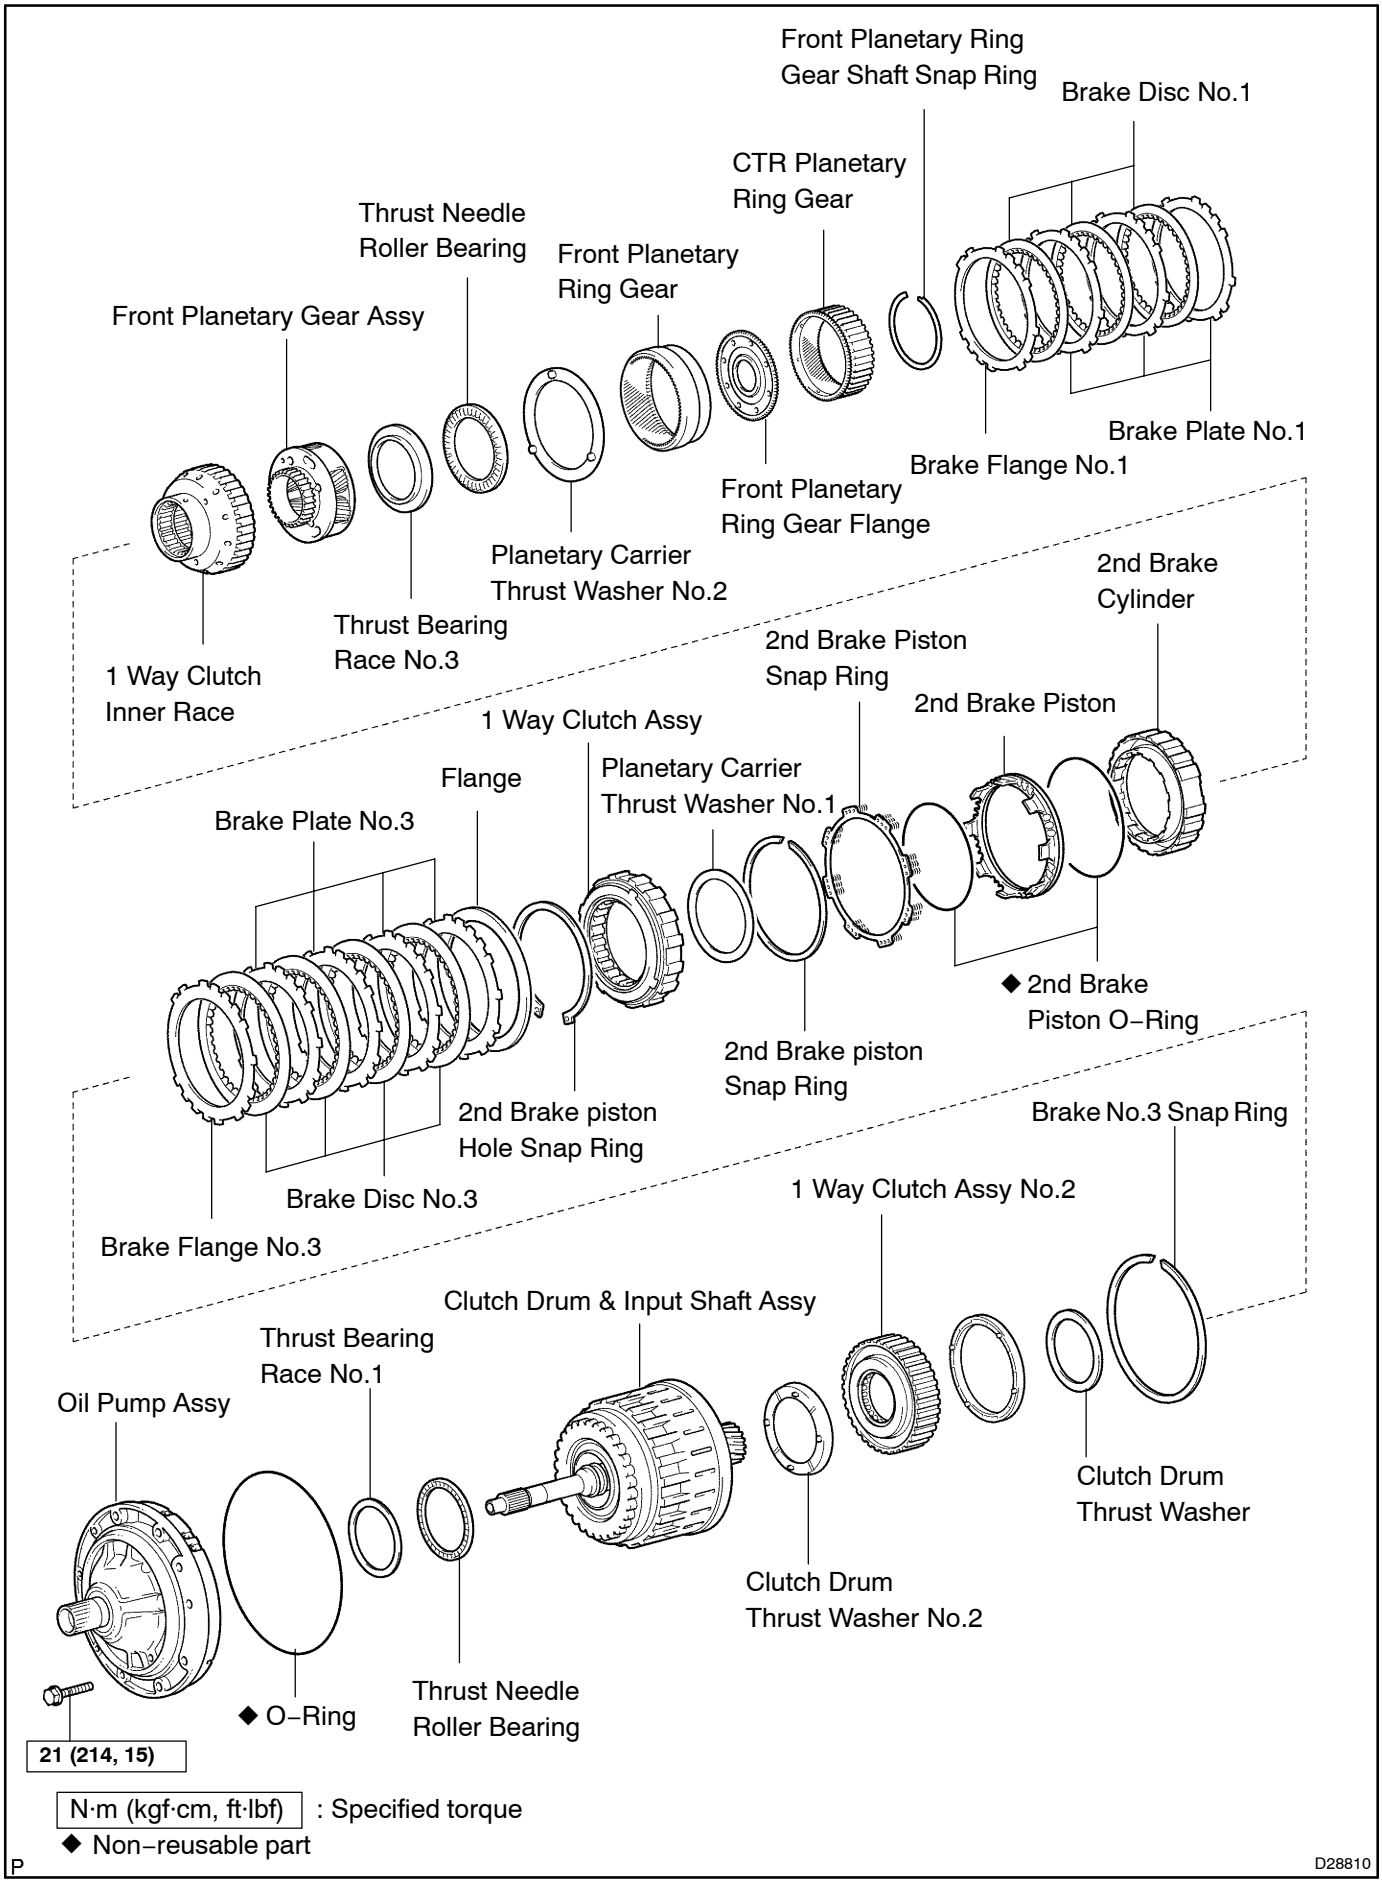
COMPONENTS

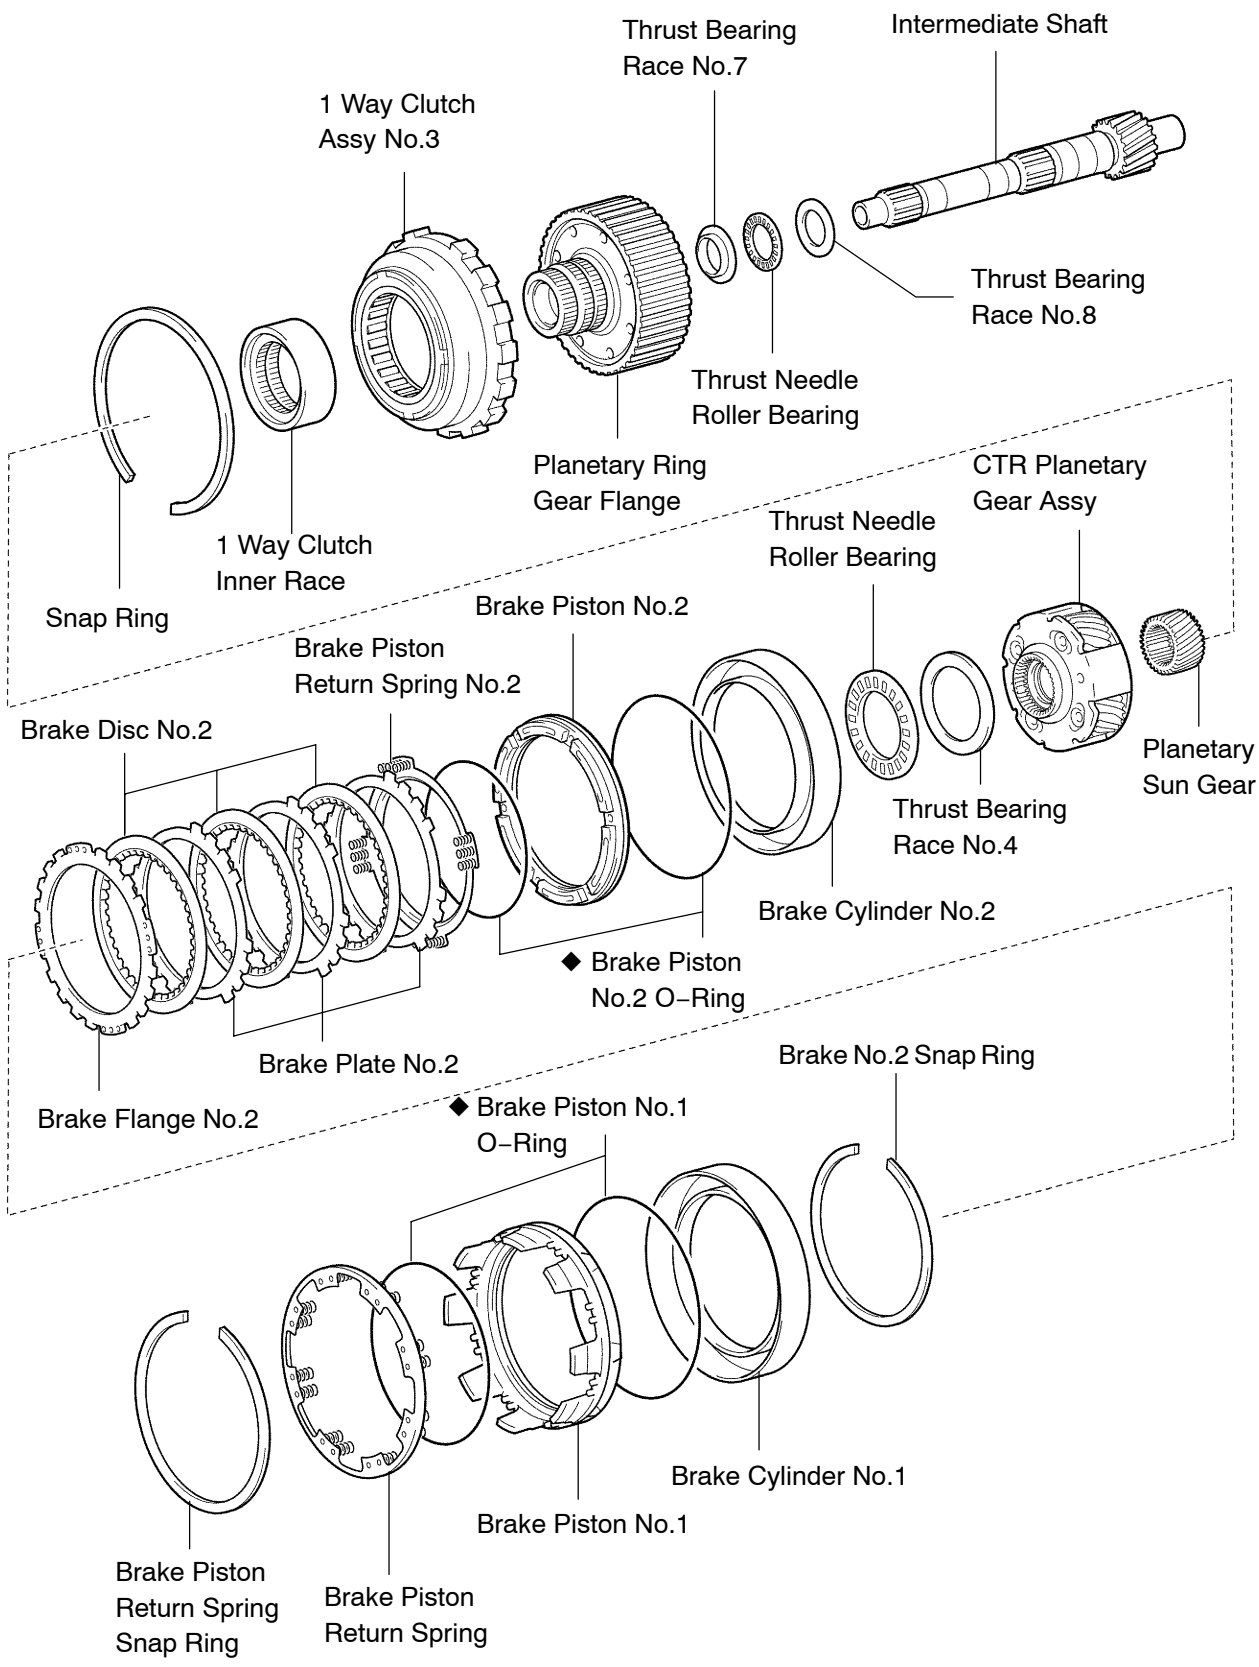


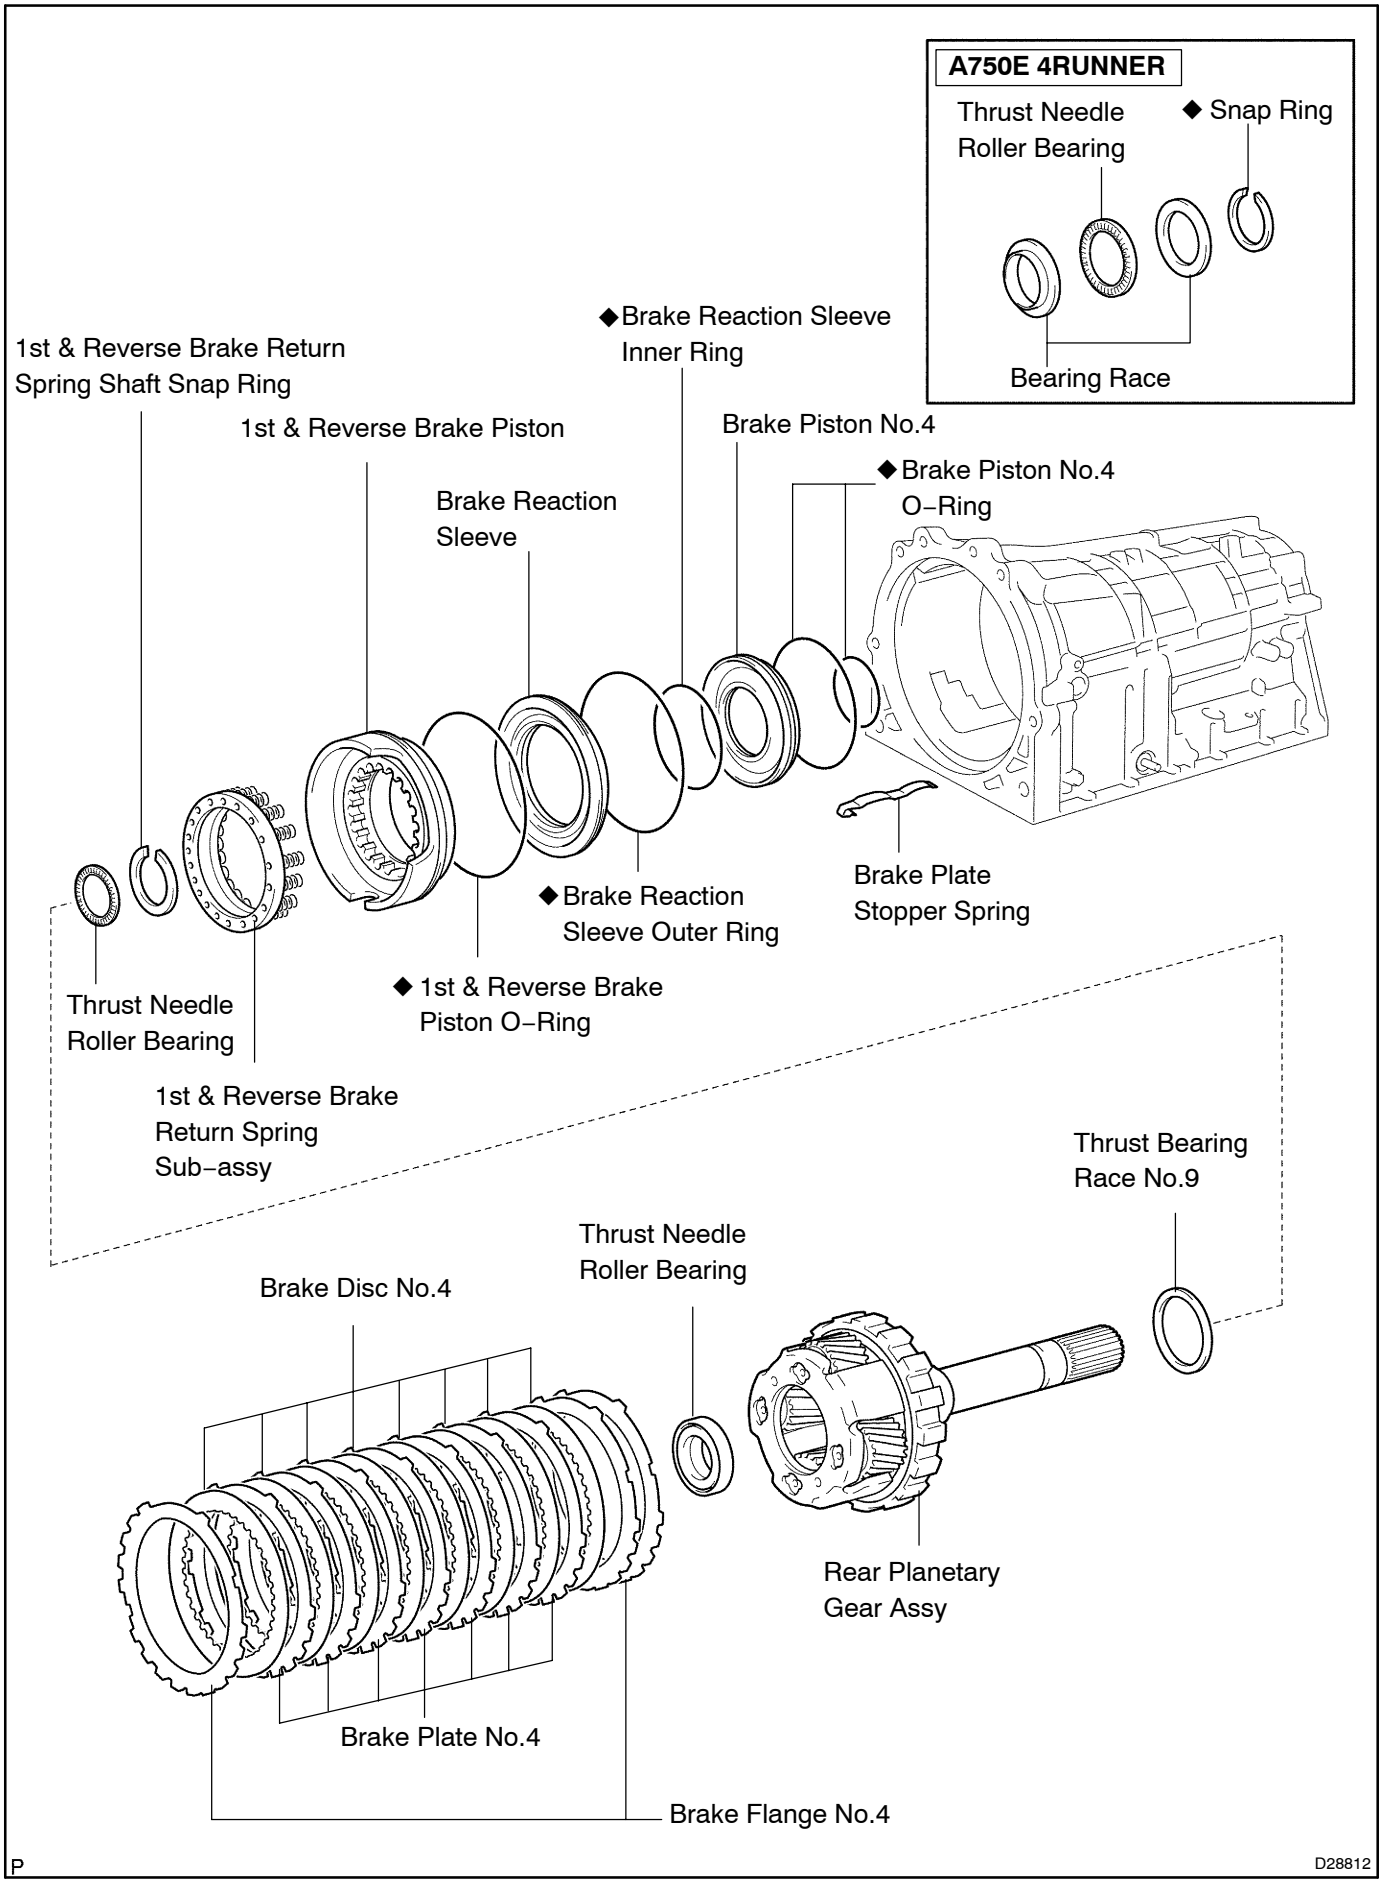
P N·m (kgf·cm, ft·lbf) : Specified torque ◆ Non–reusable part

D28807


◆Manual Valve Lever Shaft Oil Seal
Manual Valve Lever Shaft
◆Spacer
Spring Pin
Manual Valve Lever Sub–assy
Parking Lock Pawl Bracket
Parking Lock Rod
7.4 (75, 65 in.·lbf)
◆Parking Lock Pawl Shaft E–Ring
Parking Lock Pawl Shaft
Parking Lock Pawl Torsion spring
Parking Lock Pawl
C–1 Accumulator Valve
Spring
Spring
Spring
◆O–Ring
Check Ball Body
◆Transaxle Case Gasket
◆Brake Drum Gasket
Spring
C–2 Accumulator Piston
B–3 Accumulator Piston
◆O–Ring
C–3 Accumulator Piston
Transmission Valve Body Assy
x19
11 (110, 8)
◆Oil Strainer O–Ring
Valve Body Oil Strainer Assy
10 (100, 7)
◆Automatic Transmission Oil Pan Gasket
Transmission Oil Cleaner Magnet
Automatic Transmission Oil Pan
◆Gasket
Drain Plug
28 (285, 21)
4.4 (45, 39 in.·lbf)
x20
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
P
D28808


Front Planetary Ring Gear Shaft Snap Ring
Brake Disc No.1
CTR Planetary Ring Gear
Thrust Needle Roller Bearing
Front Planetary Ring Gear
Front Planetary Gear Assy
Brake Plate No.1
Brake Flange No.1
Front Planetary Ring Gear Flange
Planetary Carrier Thrust Washer No.2
Thrust Bearing Race No.3
1 Way Clutch Inner Race
2nd Brake Cylinder
2nd Brake Piston Snap Ring
2nd Brake Piston
1 Way Clutch Assy
Flange
Planetary Carrier Thrust Washer No.1
Brake Plate No.3
◆ 2nd Brake Piston O–Ring
2nd Brake piston Snap Ring
2nd Brake piston Hole Snap Ring
Brake No.3 Snap Ring
Brake Disc No.3
1 Way Clutch Assy No.2
Brake Flange No.3
Clutch Drum & Input Shaft Assy
Thrust Bearing Race No.1
Oil Pump Assy
Clutch Drum Thrust Washer
Clutch Drum Thrust Washer No.2
◆ O–Ring
Thrust Needle Roller Bearing
21 (214, 15)
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
P
D28810


Thrust Bearing
Race No.7
Intermediate Shaft
1 Way Clutch
Assy No.3
Thrust Bearing
Race No.8
Thrust Needle
Roller Bearing
Planetary Ring
Gear Flange
1 Way Clutch
Inner Race
Snap Ring
CTR Planetary
Gear Assy
Thrust Needle
Roller Bearing
Brake Piston No.2
Brake Piston
Return Spring No.2
Brake Disc No.2
Planetary
Sun Gear
Thrust Bearing
Race No.4
Brake Cylinder No.2
◆ Brake Piston
No.2 O–Ring
Brake Plate No.2
Brake Flange No.2
Brake No.2 Snap Ring
◆ Brake Piston No.1
O–Ring
Brake Cylinder No.1
Brake Piston No.1
Brake Piston
Return Spring
Snap Ring
Brake Piston
Return Spring
◆ Non–reusable part
P
D28811


A750E 4RUNNER
Thrust Needle Roller Bearing
◆ Snap Ring
Bearing Race
◆Brake Reaction Sleeve Inner Ring
1st & Reverse Brake Return Spring Shaft Snap Ring
1st & Reverse Brake Piston
Brake Piston No.4
◆Brake Piston No.4 O–Ring
Brake Reaction Sleeve
◆Brake Reaction Sleeve Outer Ring
Brake Plate Stopper Spring
Thrust Needle Roller Bearing
◆ 1st & Reverse Brake Piston O–Ring
1st & Reverse Brake Return Spring Sub–assy
Thrust Bearing Race No.9
Thrust Needle Roller Bearing
Brake Disc No.4
Rear Planetary Gear Assy
Brake Plate No.4
Brake Flange No.4
P
D28812