
RADIATOR UPPER SUPPORT (ASSY)

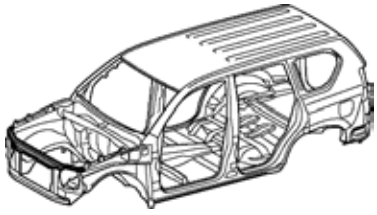

F43222A


Symbol meaning


REMOVAL	▲ : Remove Weld Points
INSTALLATION	■ : Plug Weld

F43222B


REMOVAL·INSTALLATION


[LH Side]

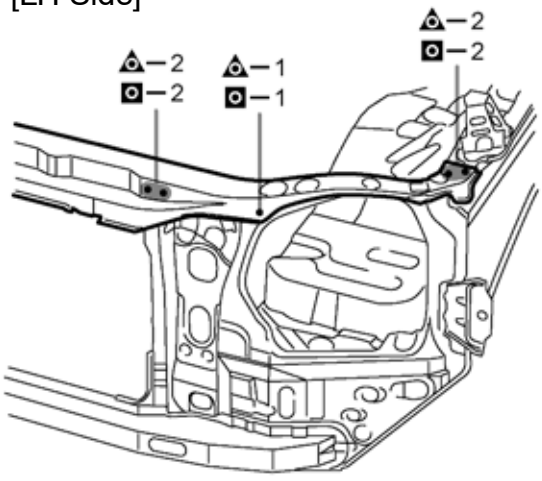

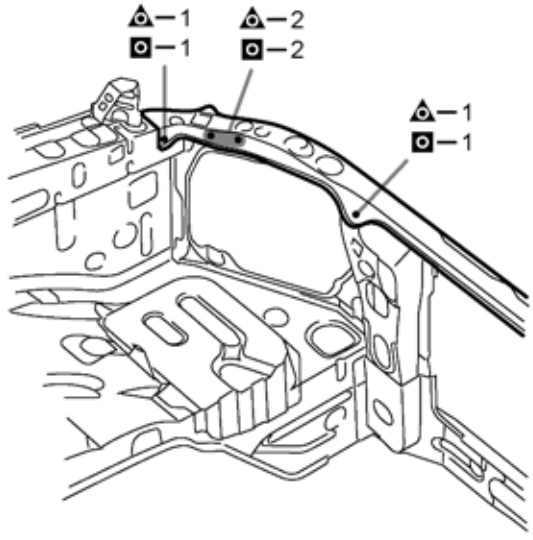

[RH Side]

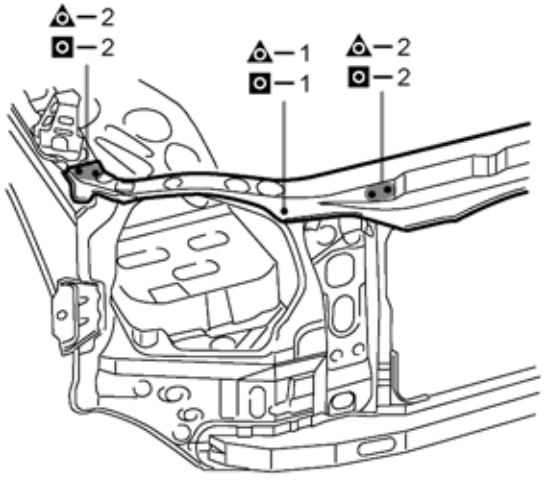

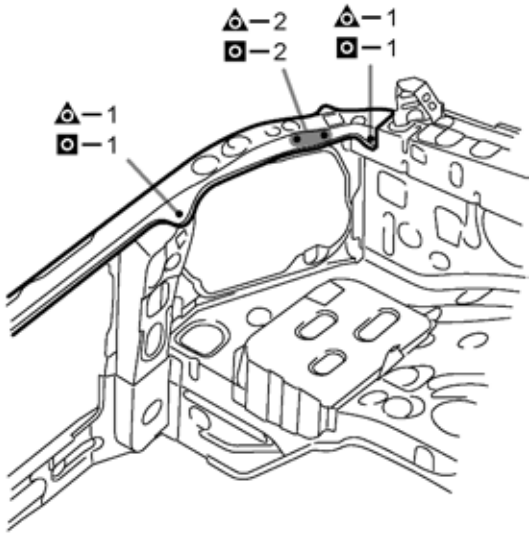

F43222

INSTALLATION POINT

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.