
RADIATOR SUPPORT (ASSY)

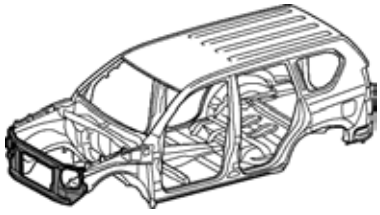


F43226A

Symbol meaning

REMOVAL	: Remove Weld Points
INSTALLATION	: Plug Weld

F43226B

REMOVAL·INSTALLATION

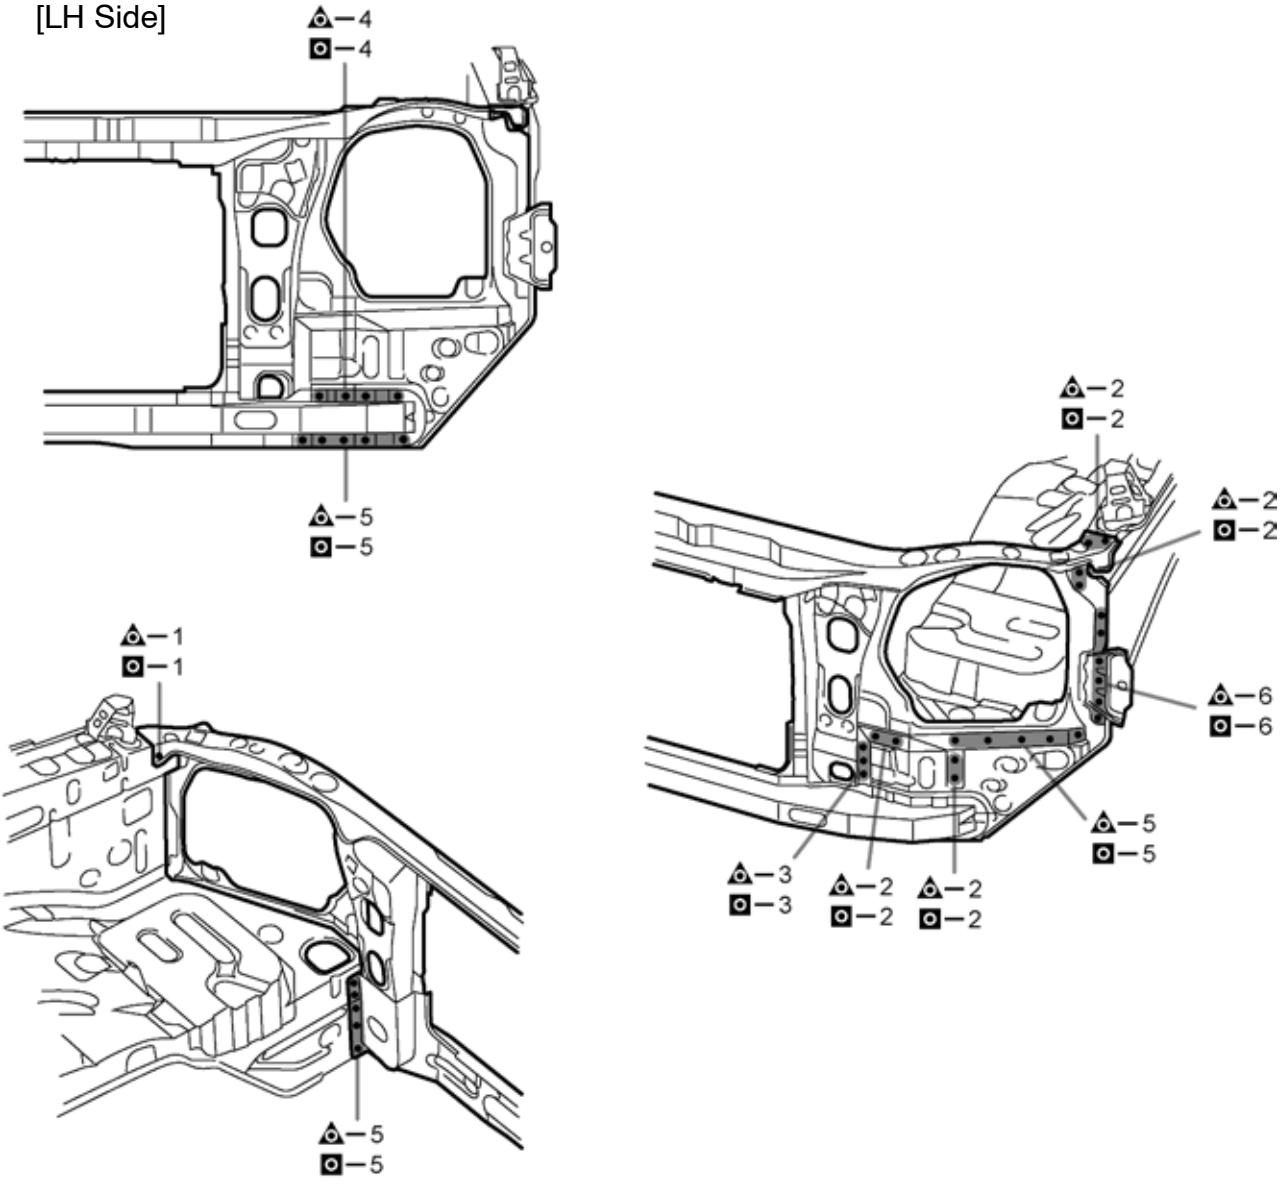

F43226

INSTALLATION POINT

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.


2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)

Symbol meaning

REMOVAL	: Remove Weld Points
INSTALLATION	: Plug Weld

F43226B


[RH Side]

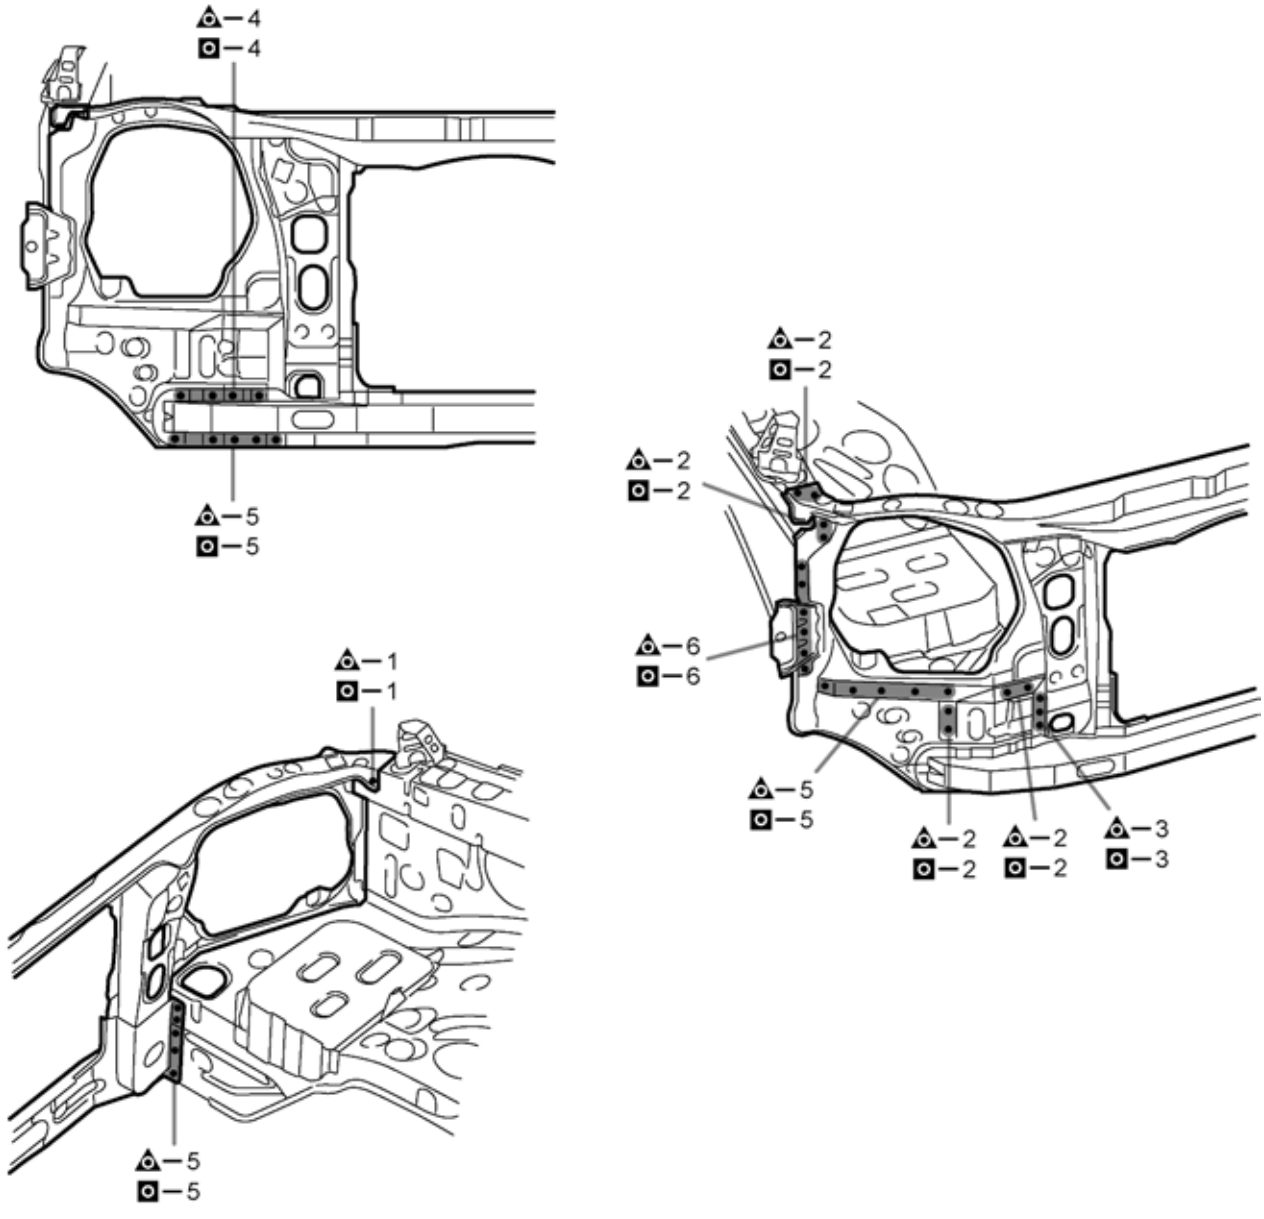

F43227

INSTALLATION POINT

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 After welding, apply body sealer to the corresponding parts. (See the paint·coating)
4 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

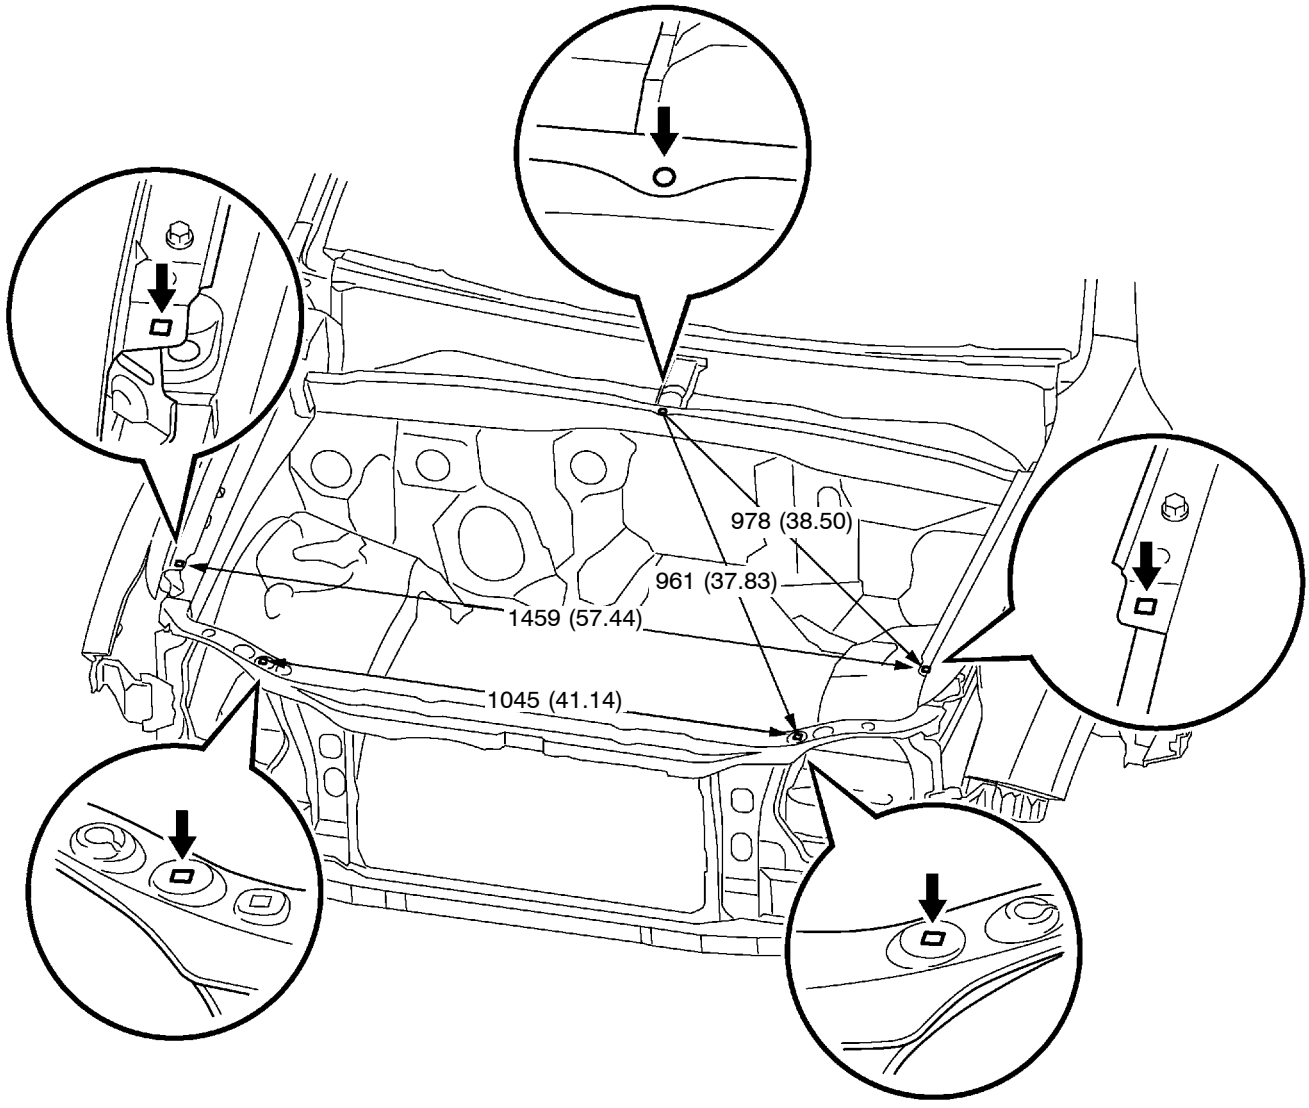

mm (in.)

F43228

INSTALLATION POINT

1 Measure the dimensions before installing the headlights.
2 These values are reference values.