
# FRONT BODY PILLAR LOWER GUSSET (ASSY)

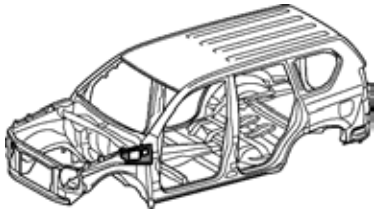


F43231A

Symbol meaning

| | |
|---|---|
| REMOVAL | ▲ ▲1 : Remove Weld Points |
| INSTALLATION | ⊙ I : Plug Weld |

F43231B

**REMOVAL·INSTALLATION**

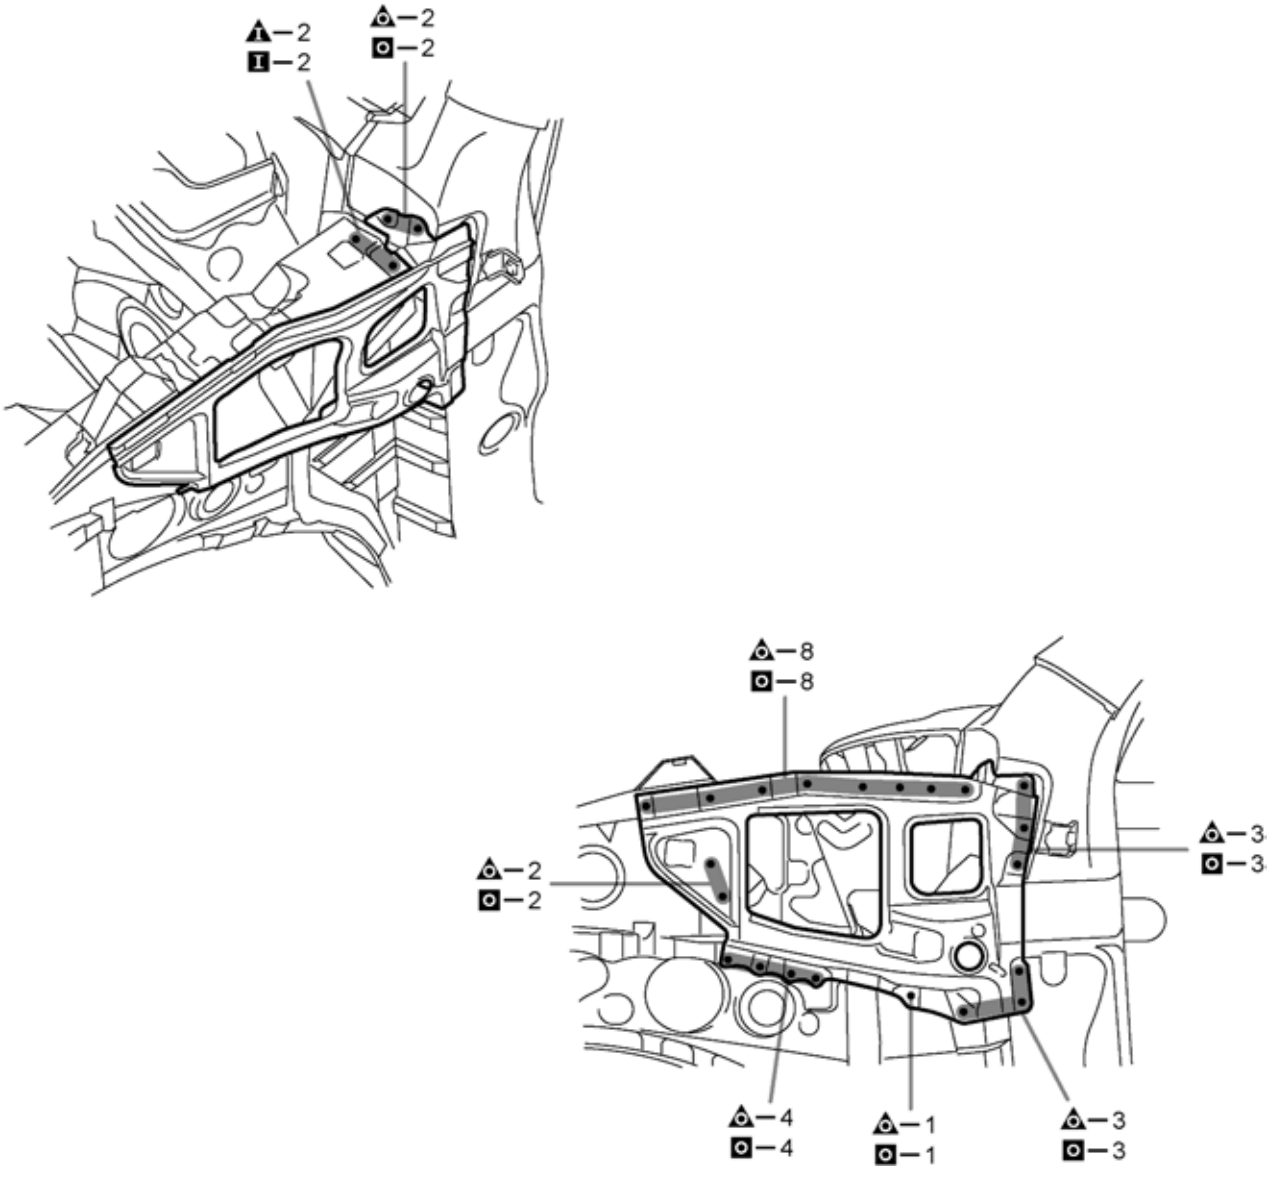


F43231

**INSTALLATION POINT**

1 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.