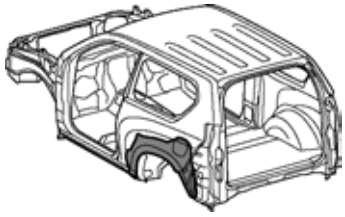
QUARTER WHEEL HOUSING OUTER PANEL (ASSY):
3 Door


F43275A

With the quarter panel removed.


Symbol meaning

: Remove Weld Points : Cut and Join Location

F43275B

REMOVAL

[LH]

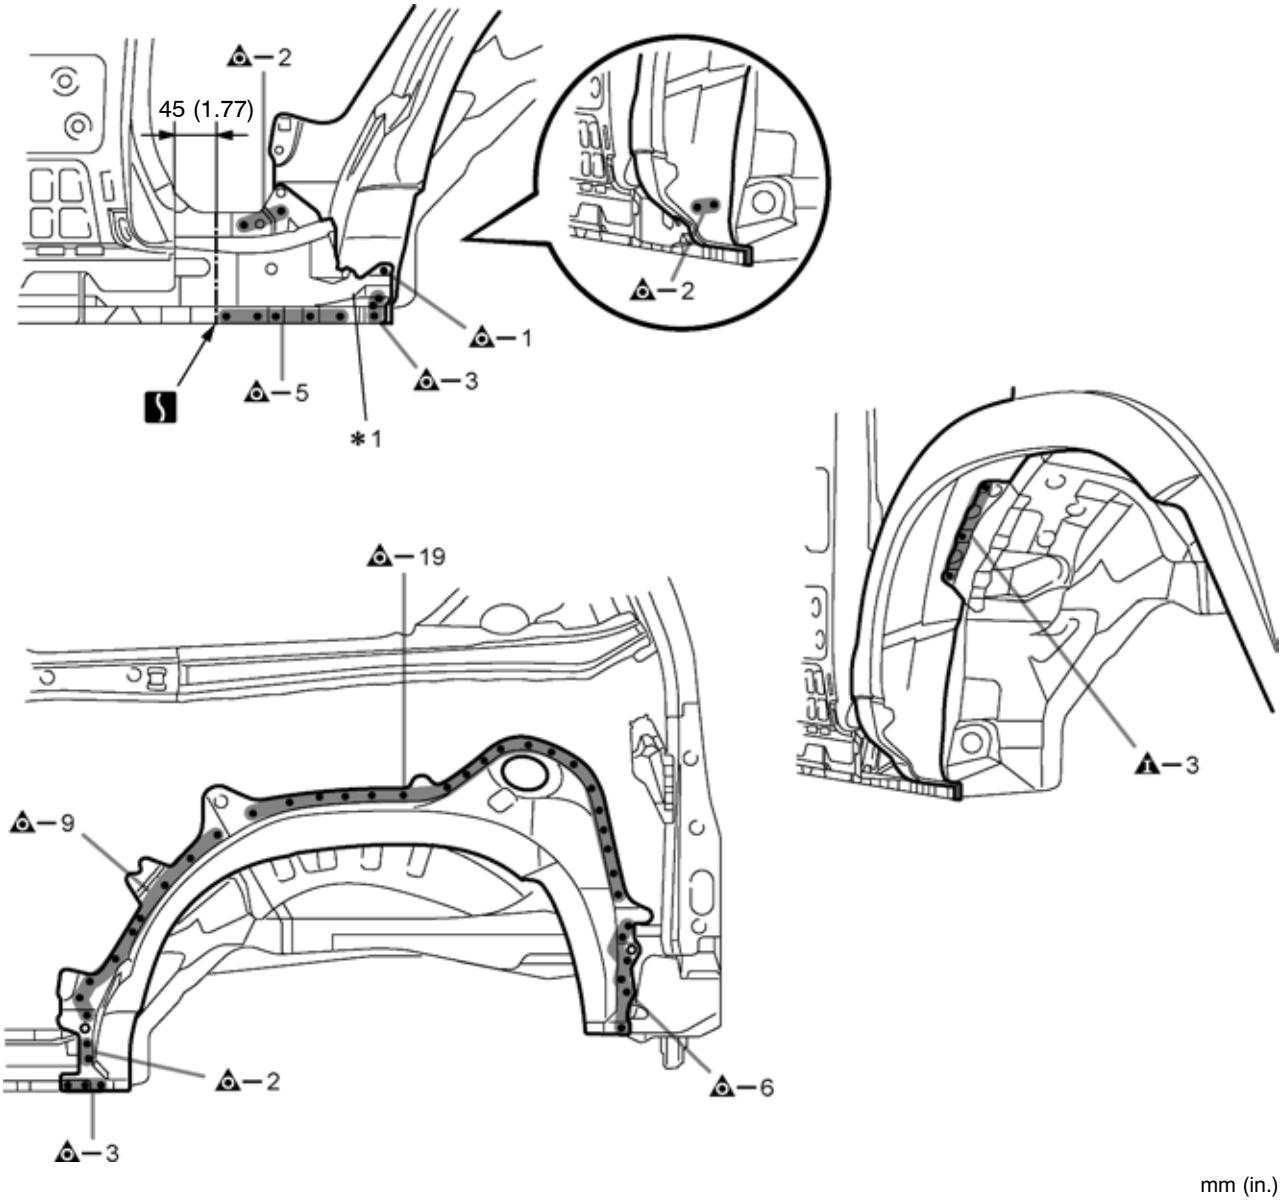

mm (in.)

F43275

REMOVAL POINT

1 *1 is reused.


2 After removing the *1 remove the quarter wheel housing outer panel.

Symbol meaning

: Remove Weld Points : Cut and Join Location

F43275B

[RH]

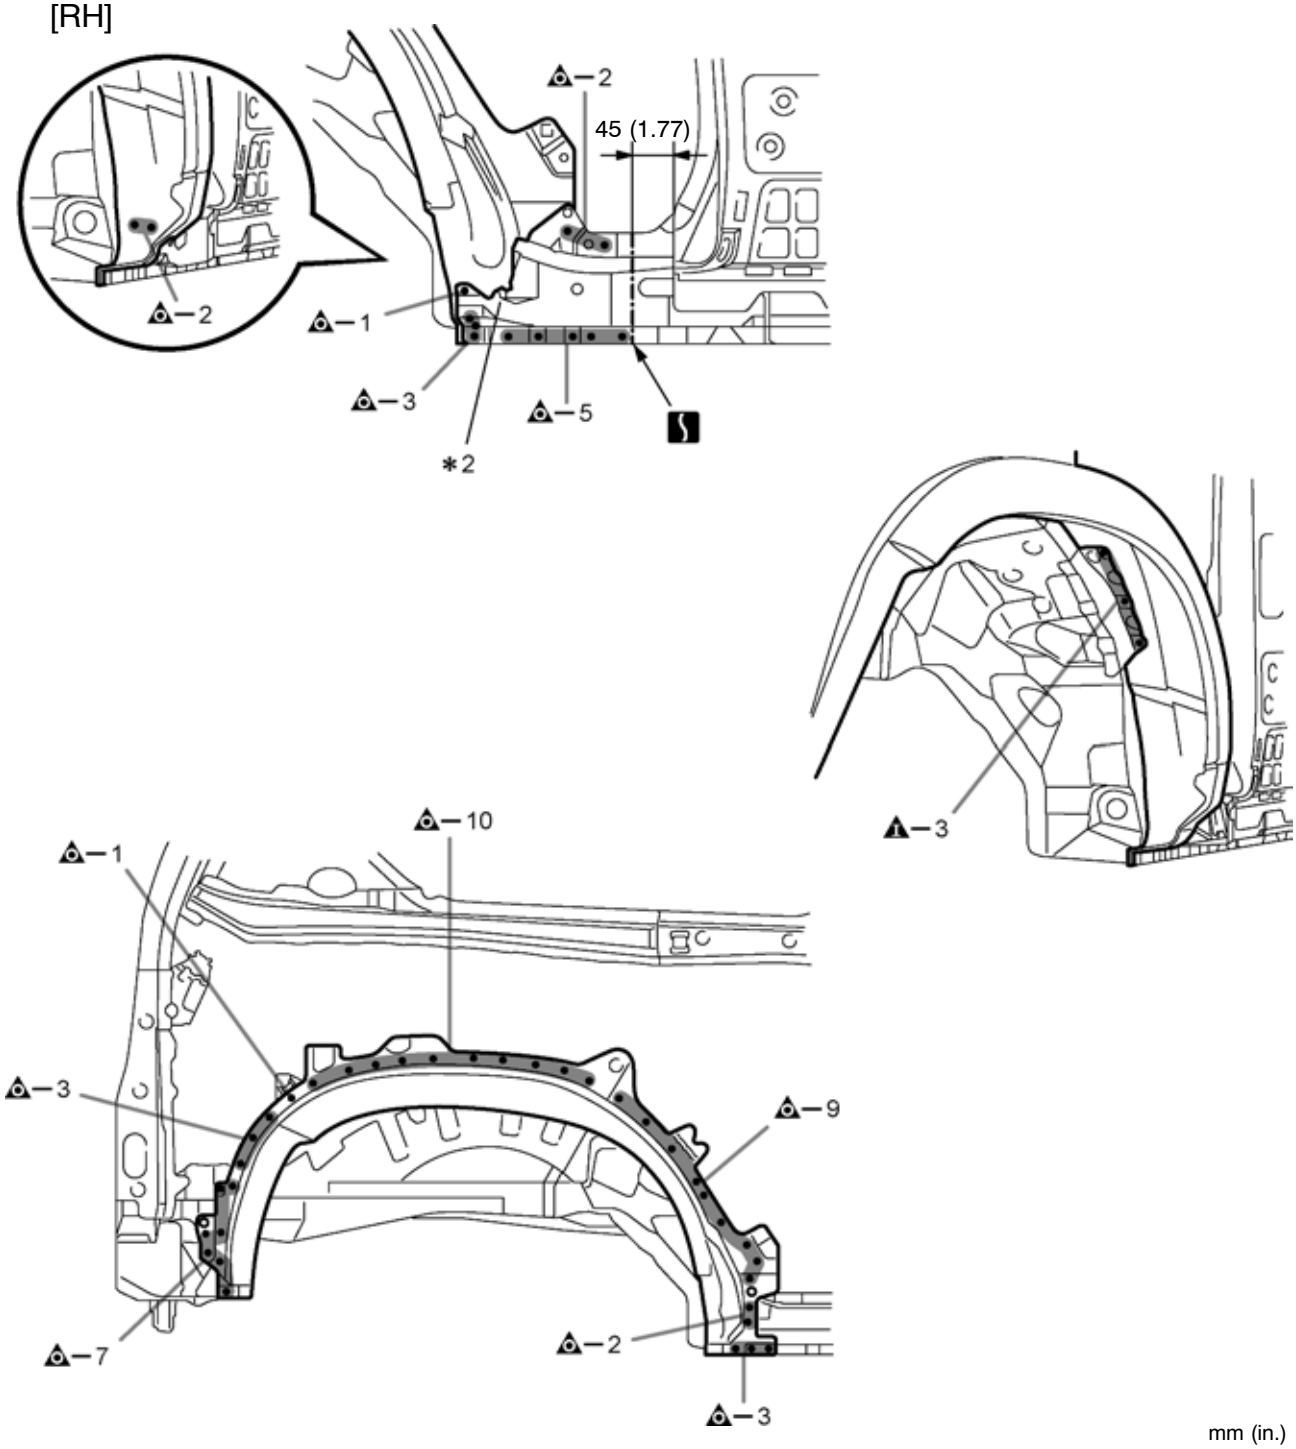

mm (in.)

F43276

REMOVAL POINT

1 *2 is reused.

2 After removing the *2 remove the quarter wheel housing outer panel.

Symbol meaning


: Spot Weld : Plug Weld : Butt Weld

: Body Sealer

F43277B

INSTALLATION

[LH]

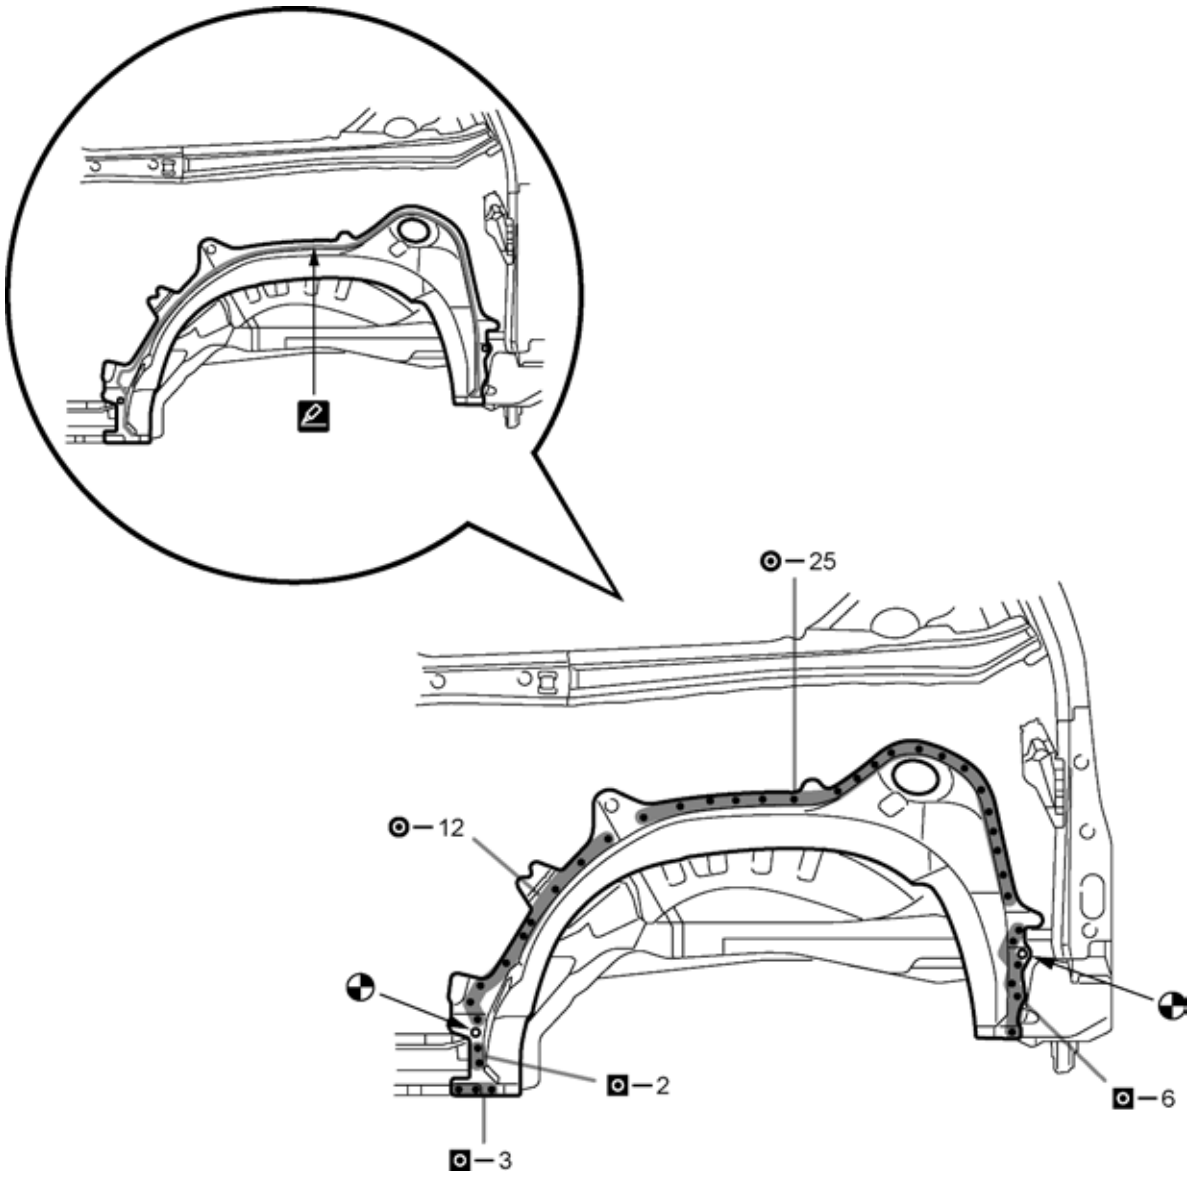

F43277

INSTALLATION POINT

1 For positioning of the new parts, align the installation standard holes of the outer panel and the inner panel.

2 Before installing a new part, apply body sealer.
HINT:
Apply body sealer in an even, continuous bead.


Symbol meaning


: Spot Weld : Plug Weld : Butt Weld

: Body Sealer

F43277B

[LH]

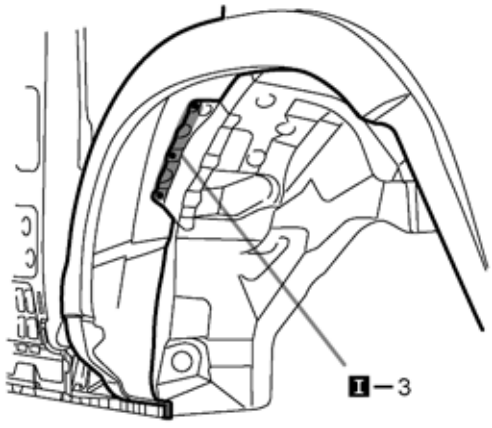

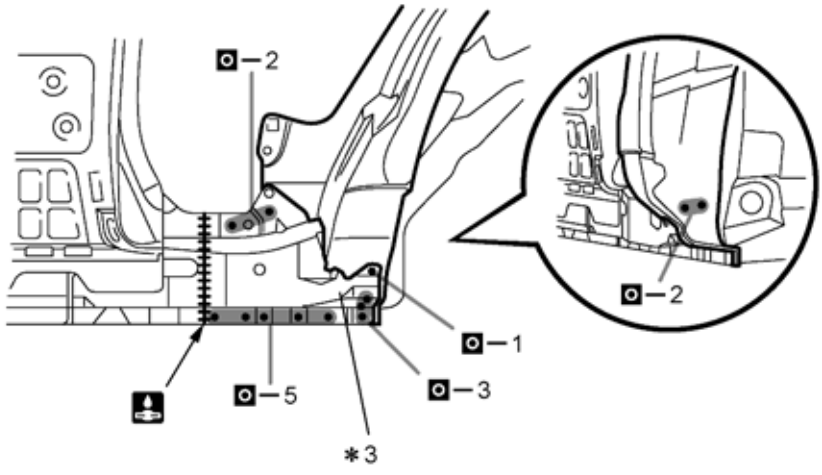


F43278

INSTALLATION POINT

1 After welding the quarter wheel housing outer panel to the vehicle side, install the *3.
2 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint·coating)
3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

[RH]

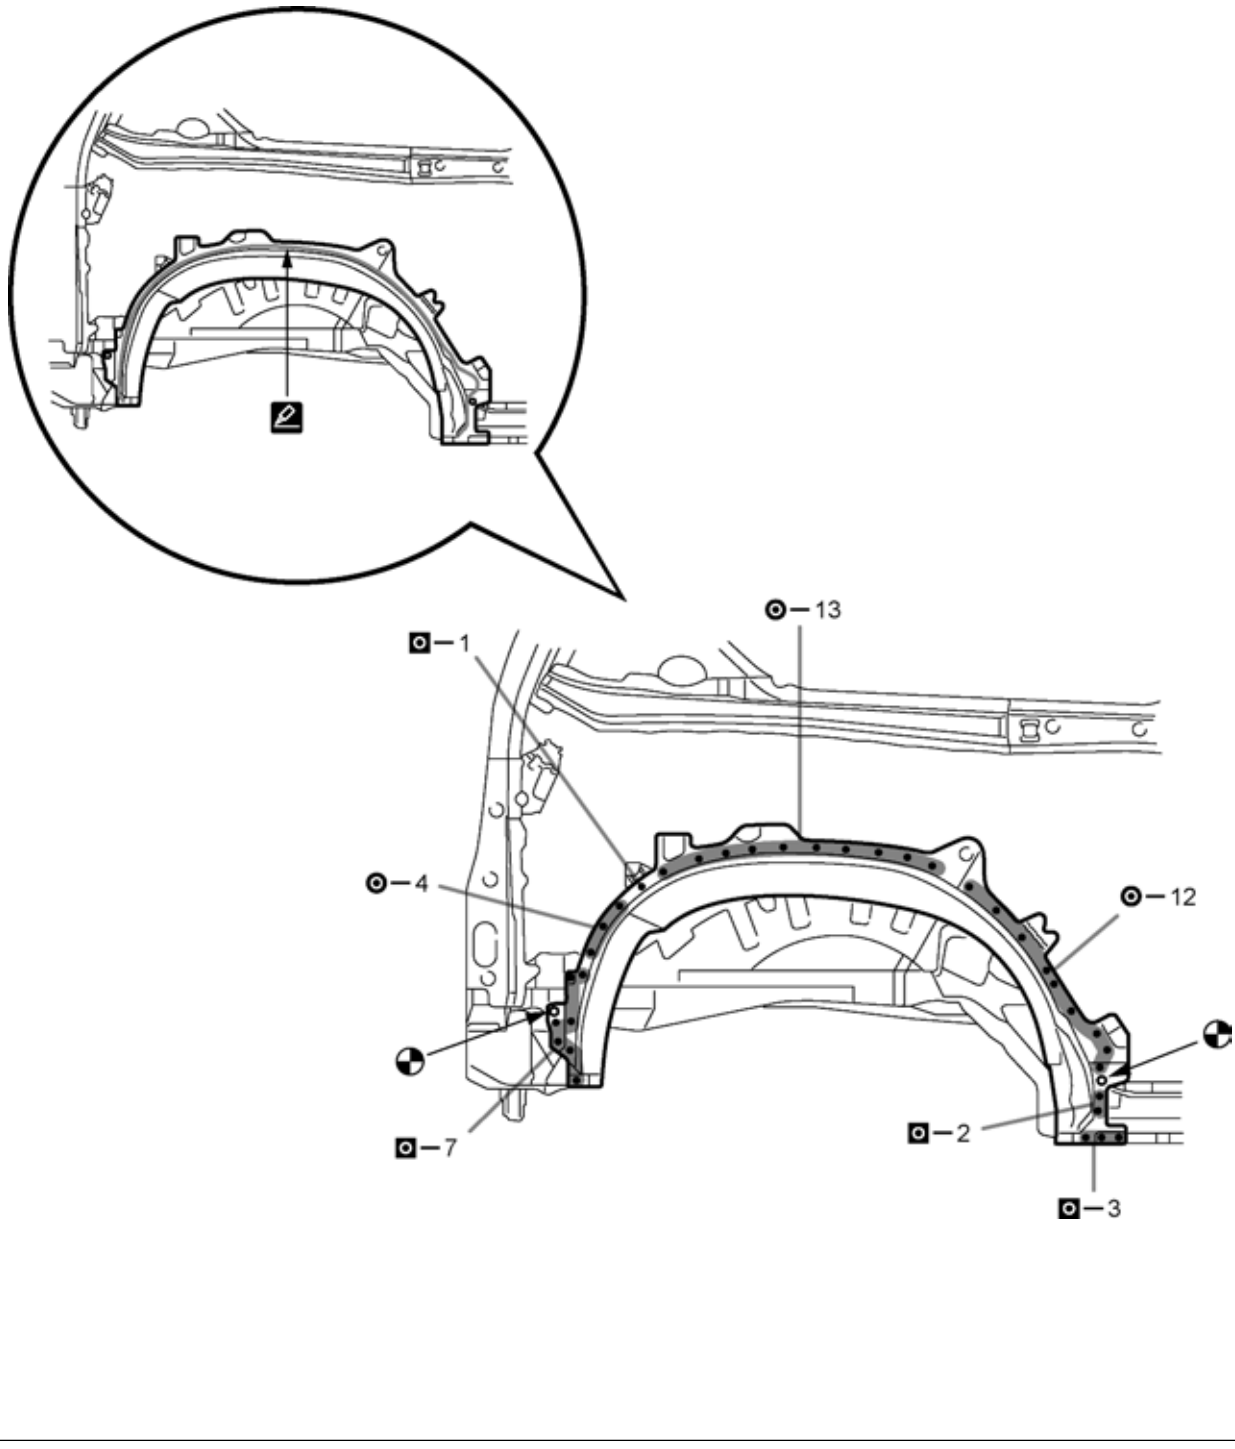

INSTALLATION POINT

1 For positioning of the new parts, align the installation standard holes of the outer panel and the inner panel.

2 Before installing a new part, apply body sealer.
HINT:
Apply body sealer in an even, continuous bead.


Symbol meaning


: Spot Weld : Plug Weld : Butt Weld

: Body Sealer

F43277B

[RH]

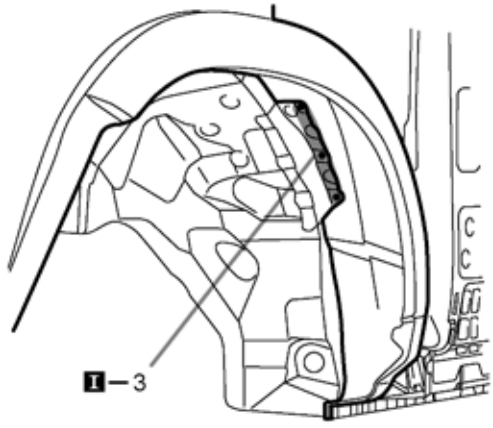

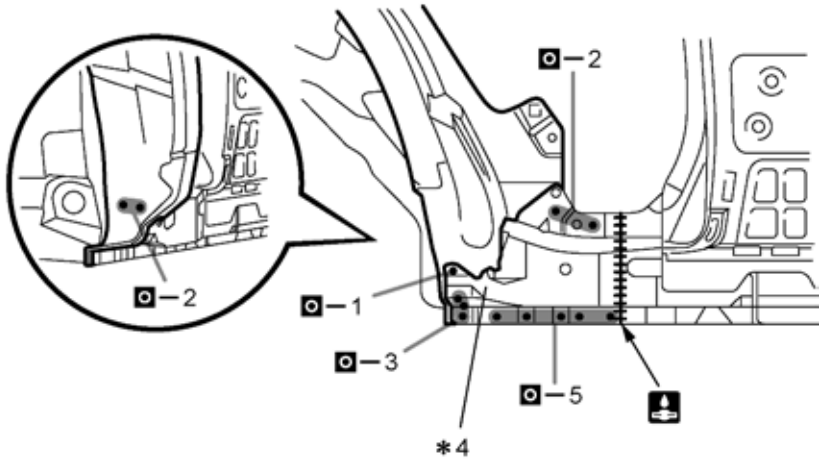


F43280

INSTALLATION POINT

1 After welding the quarter wheel housing outer panel to the vehicle side, install the *4.
2 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint·coating)
3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

QUARTER WHEEL HOUSING OUTER PANEL (ASSY):
5 Door

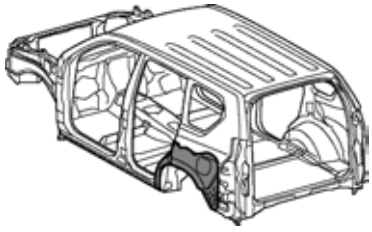
F43281A

With the quarter panel removed.

Symbol meaning


: Remove Weld Points : Cut with Disc Sander etc.

: Cut and Join Location

F43281B

REMOVAL

[LH]

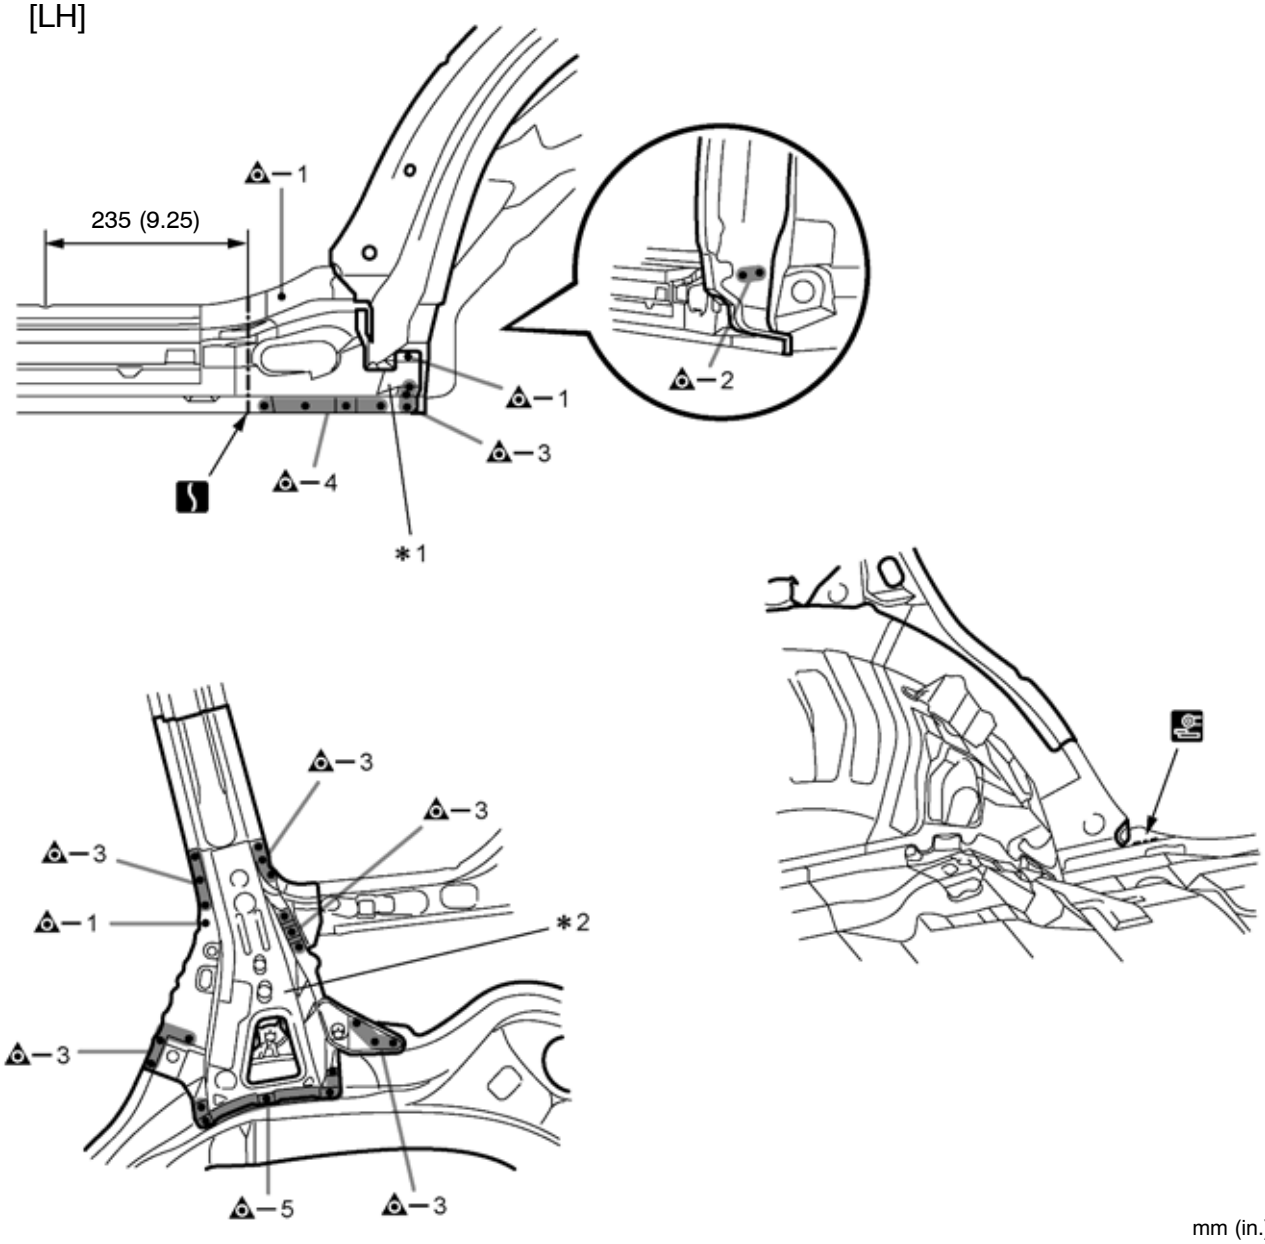

mm (in.)

F43281

REMOVAL POINT

1 *1 is reused.

2 After removing the *1 and *2 remove the quarter wheel housing outer panel.


Symbol meaning


: Remove Weld Points : Cut with Disc Sander etc.

: Cut and Join Location

F43281B

[LH]

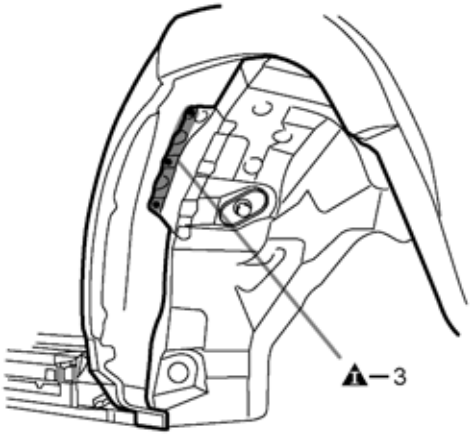

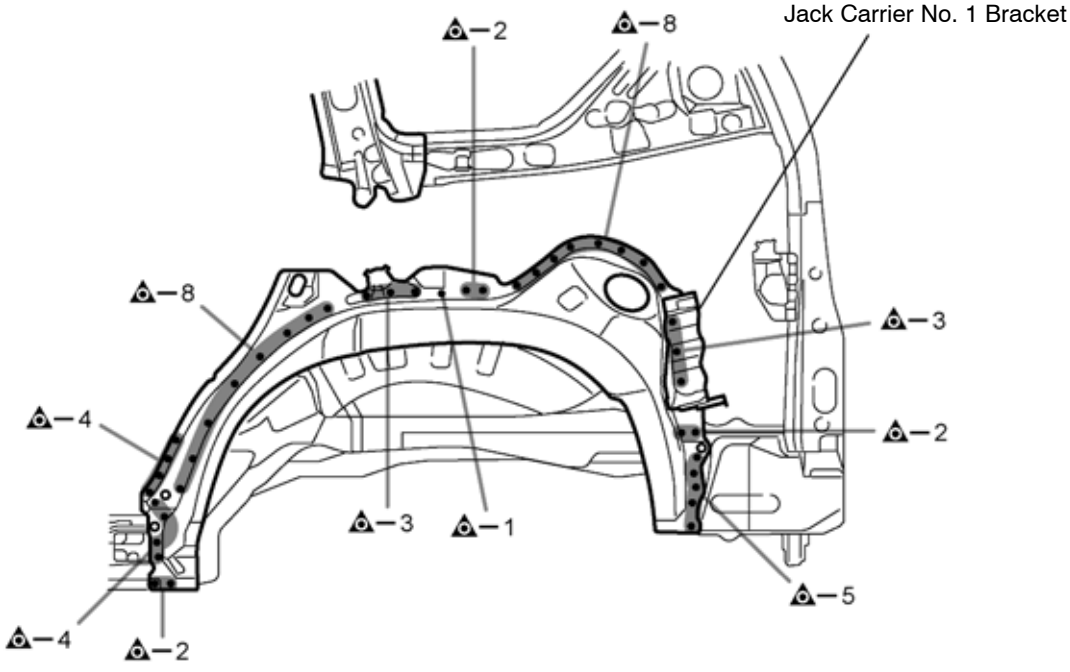



F43282


REMOVAL POINT

1 Remove the jack carrier No. 1 bracket at the same time.

[RH]

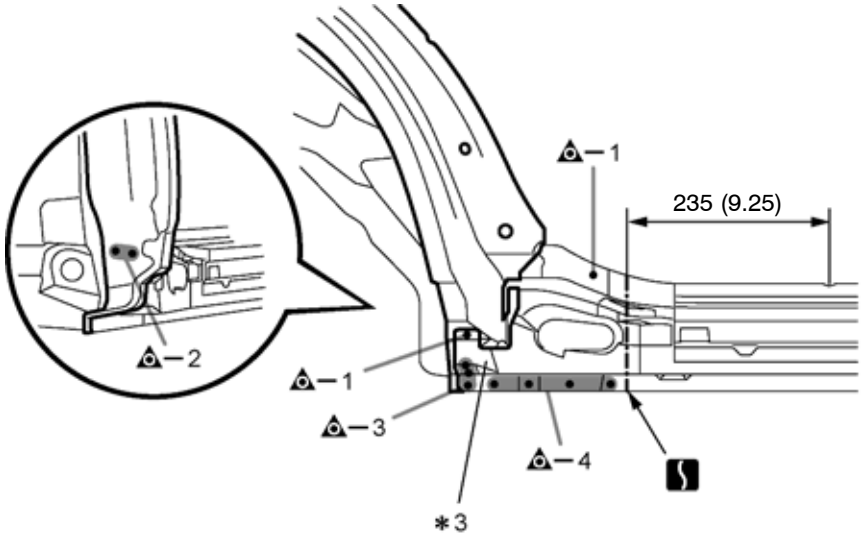

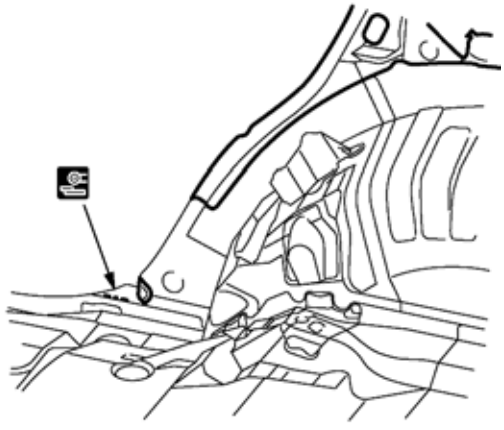

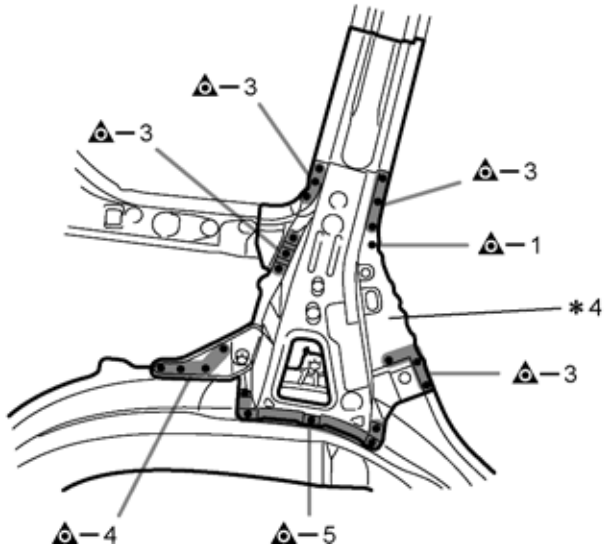

mm (in.)

F43283

REMOVAL POINT

1 *3 is reused.

2 After removing the *3 and *4 remove the quarter wheel housing outer panel.


Symbol meaning


: Remove Weld Points : Cut with Disc Sander etc.

: Cut and Join Location

F43281B

[RH]

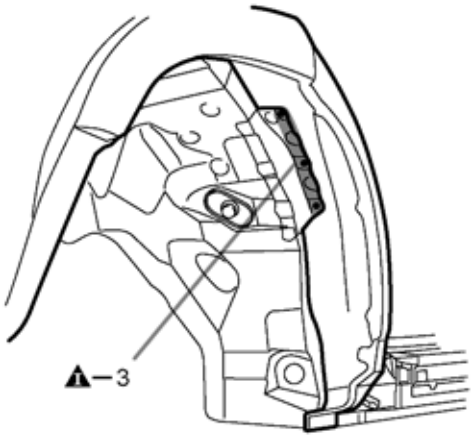

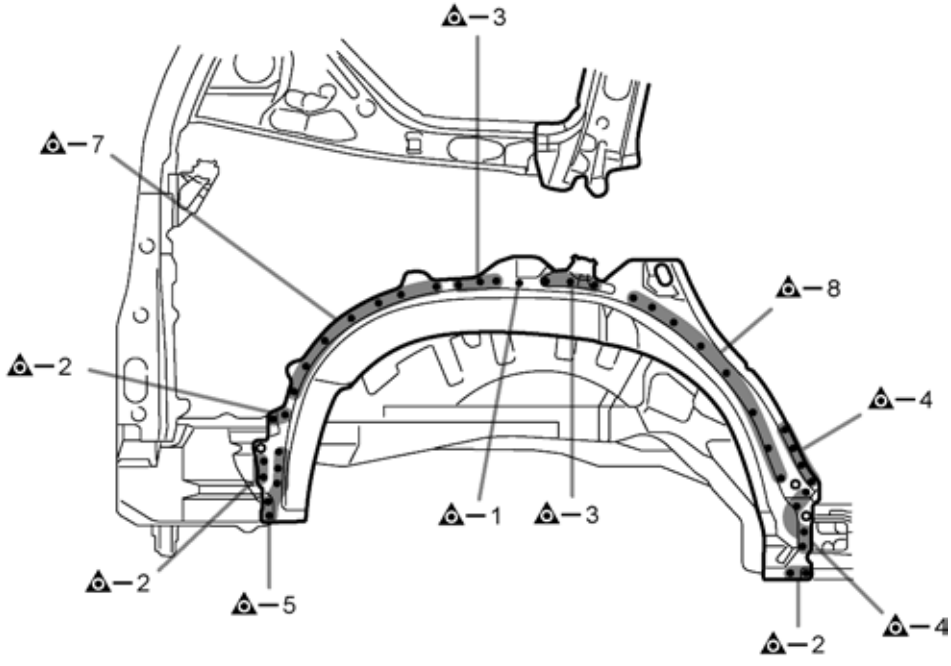

F43284

Symbol meaning


: Remove Weld Points : Spot Weld : Plug Weld

: Fillet Weld : Butt Weld : Body Sealer

F43285B

INSTALLATION

[LH]

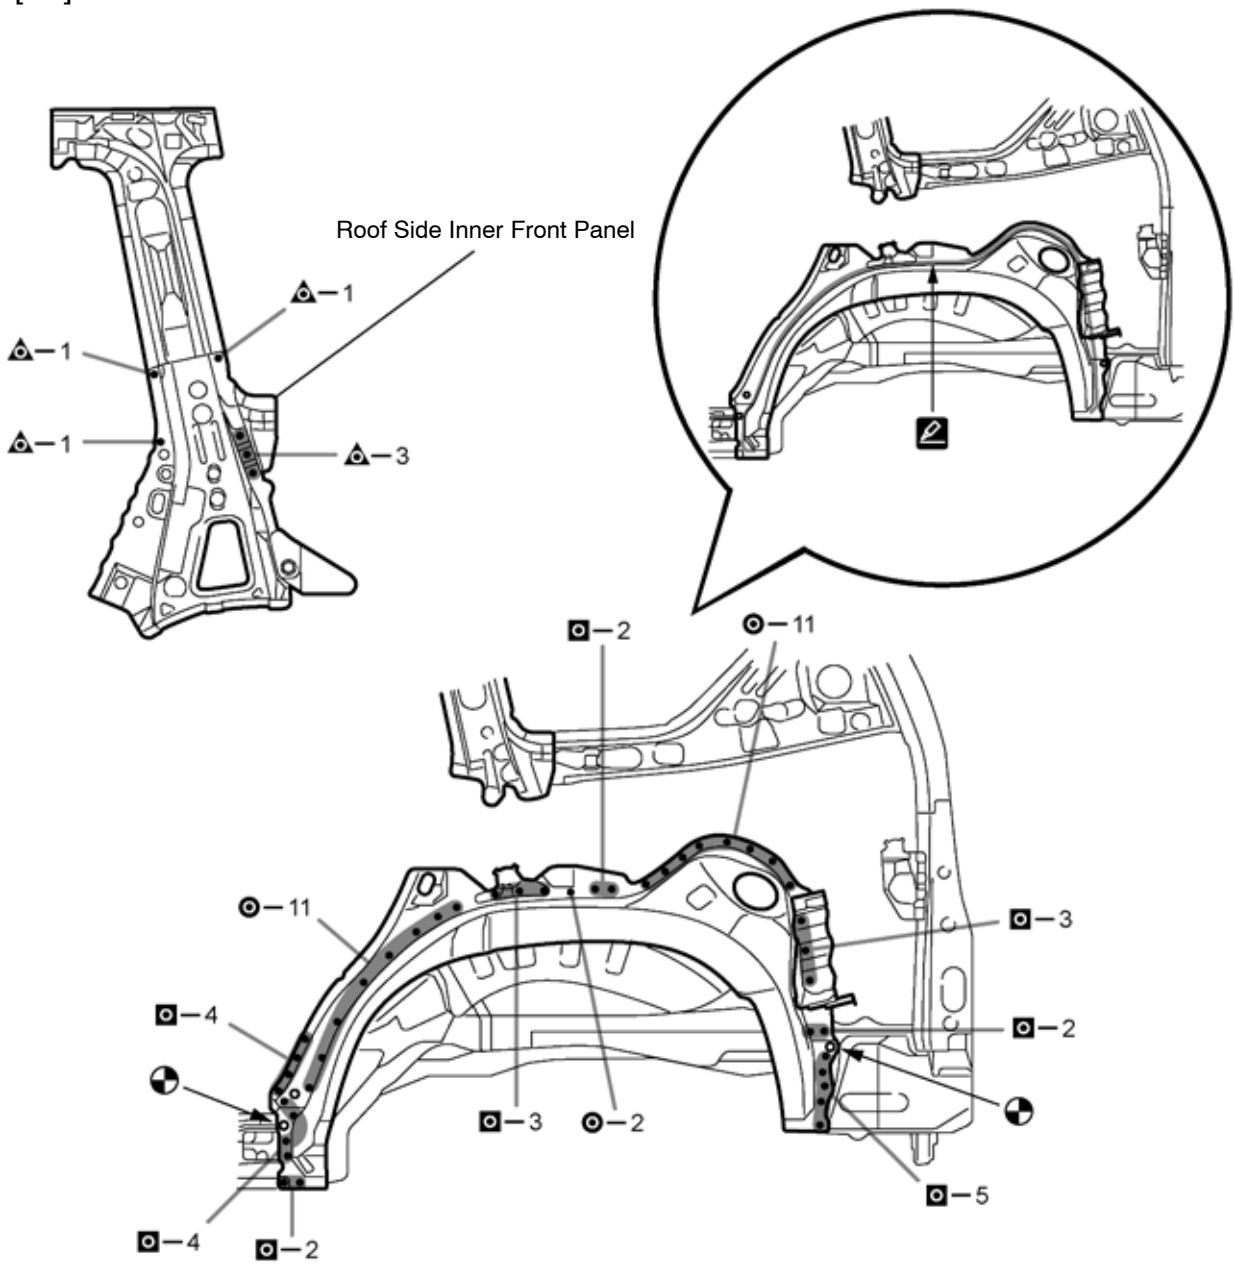

F43285

INSTALLATION POINT

1 If the entire supply part is not needed, remove the part of the supply part that is needed.
2 For positioning of the new parts, align the installation standard holes of the outer panel and the inner panel.
3 Before installing a new part, apply body sealer.
HINT:
Apply body sealer in an even, continuous bead.


Symbol meaning


: Remove Weld Points : Spot Weld : Plug Weld

: Fillet Weld : Butt Weld : Body Sealer

F43285B


[LH]

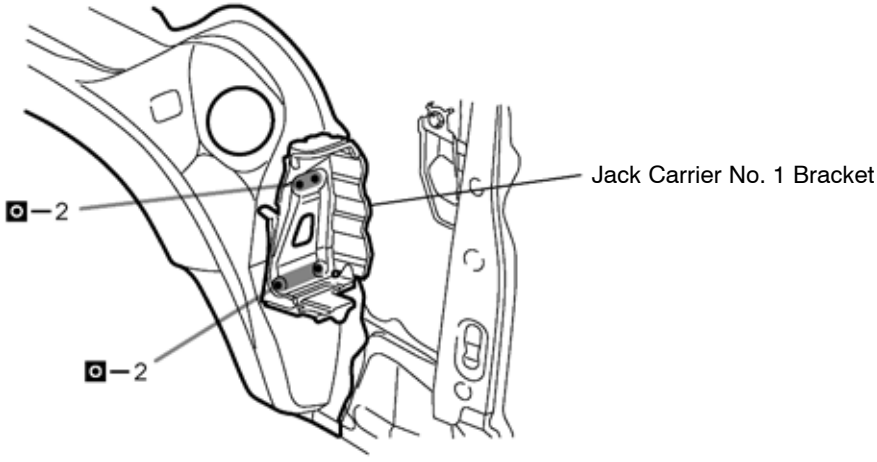


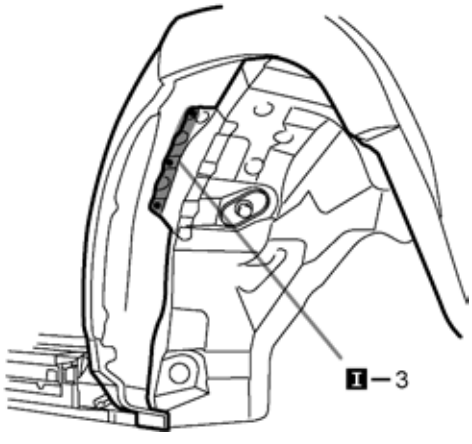


F43286

[LH]

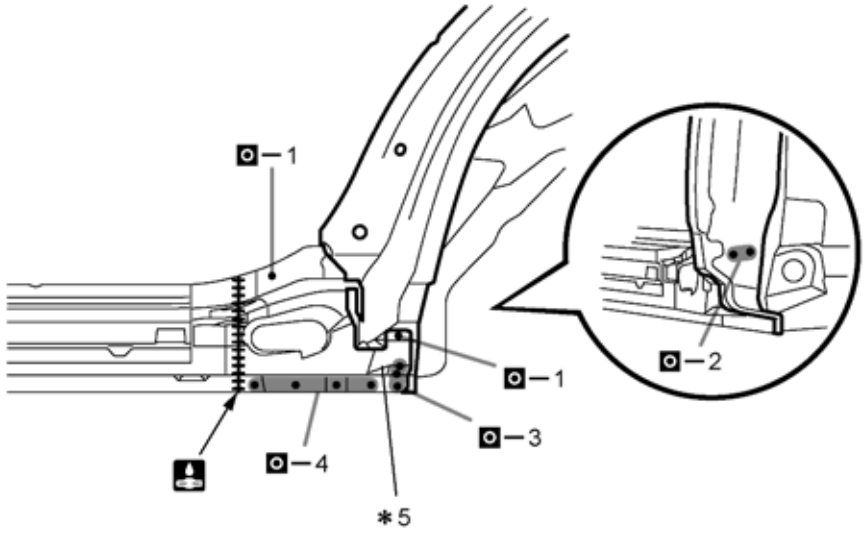

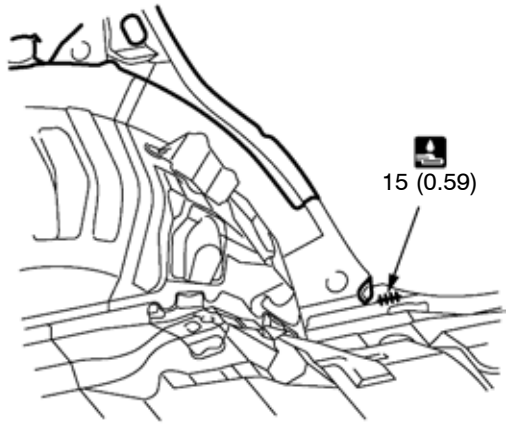

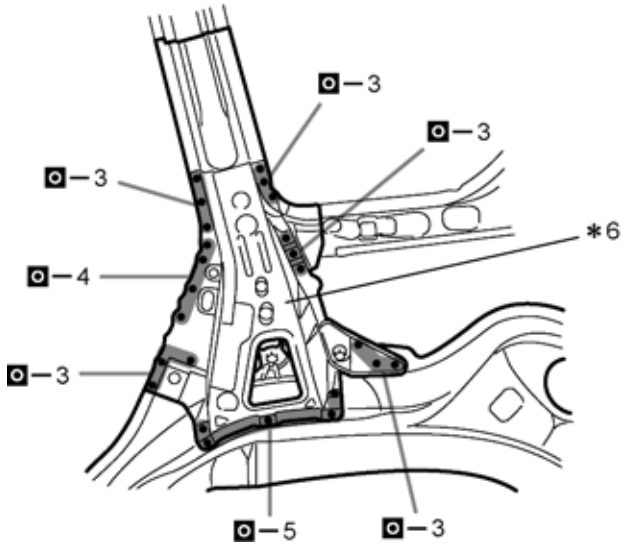

mm (in.)

F43287

INSTALLATION POINT

1 After welding the quarter wheel housing outer panel to the vehicle side, install the *5 and *6.
2 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint·coating)
3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.


Symbol meaning

: Remove Weld Points : Spot Weld : Plug Weld

: Fillet Weld : Butt Weld : Body Sealer

F43285B

[RH]

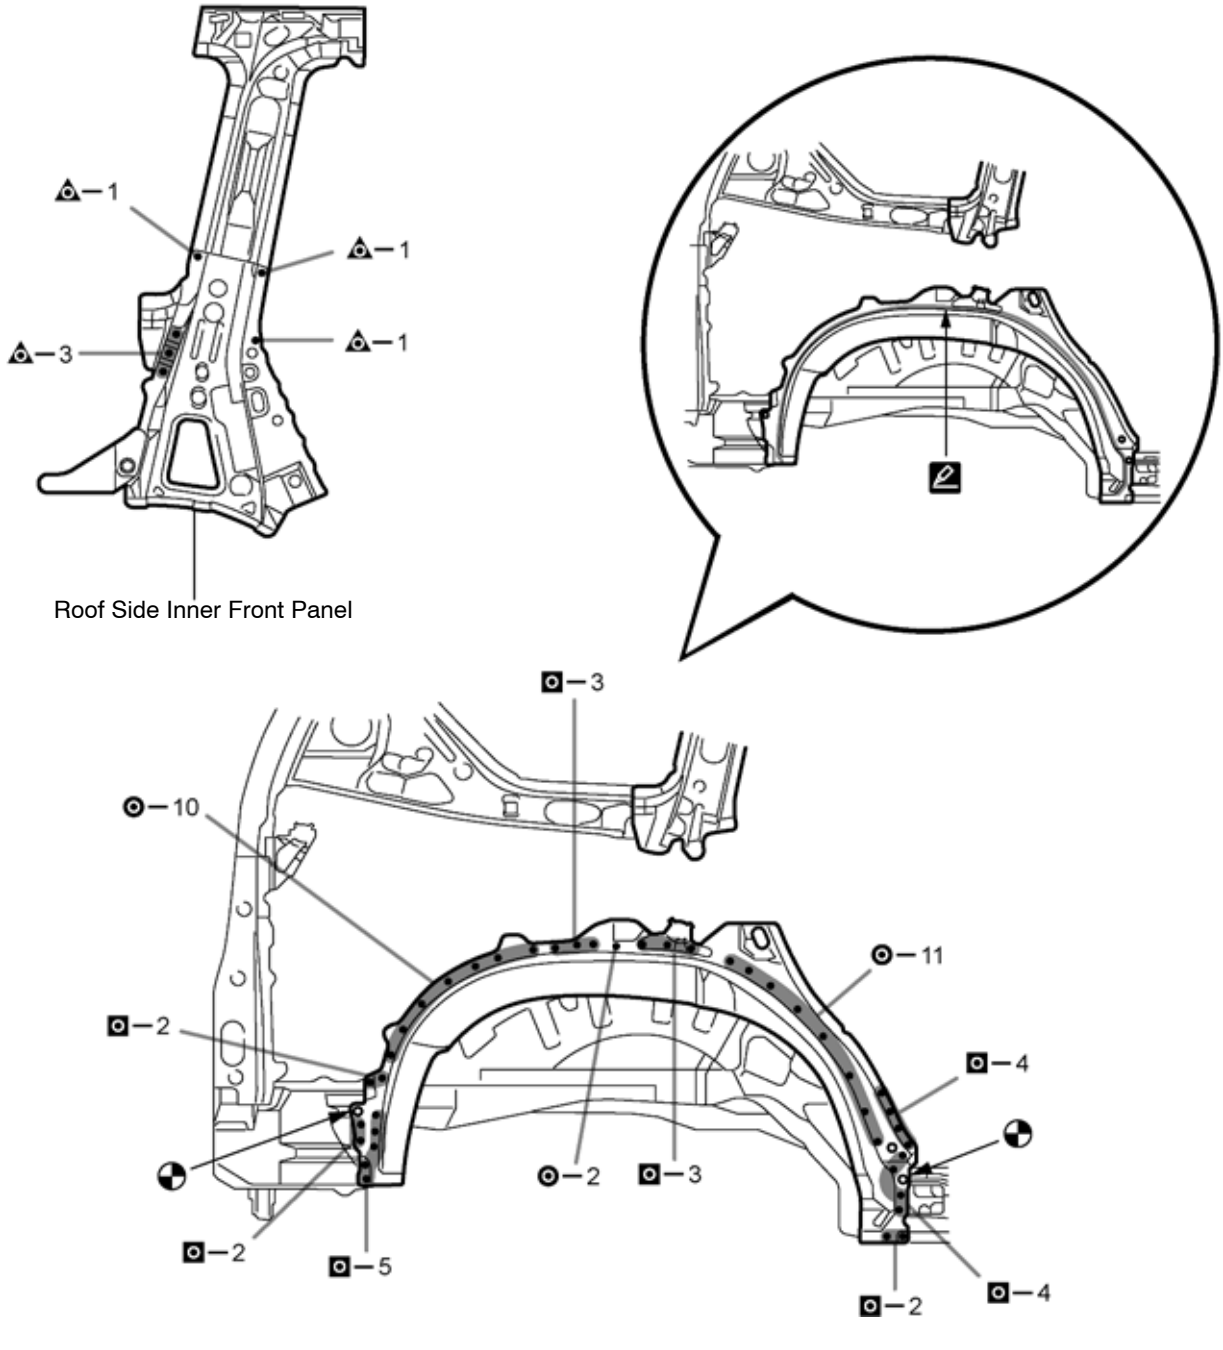


F43288

INSTALLATION POINT

1 If the entire supply part is not needed, remove the part of the supply part that is needed.
2 For positioning of the new parts, align the installation standard holes of the outer panel and the inner panel.
3 Before installing a new part, apply body sealer.
HINT:
Apply body sealer in an even, continuous bead.

[RH]

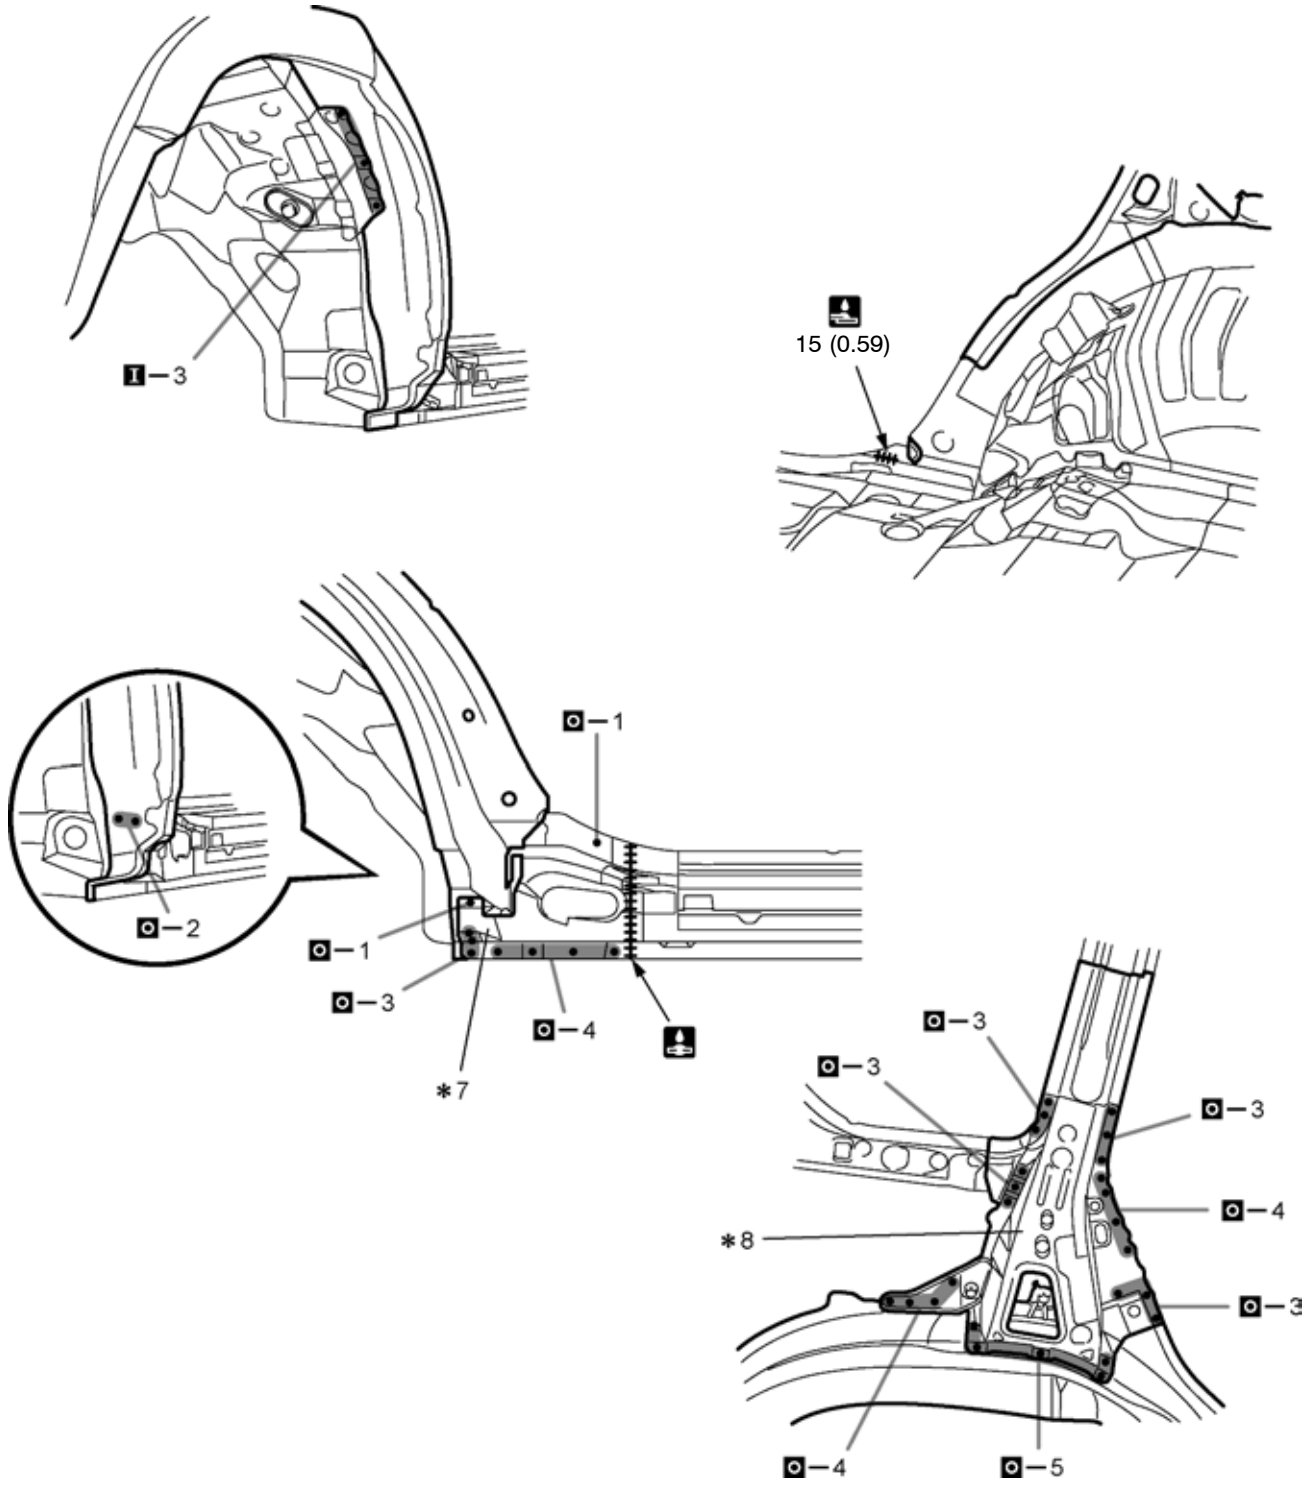

INSTALLATION POINT

1 After welding the quarter wheel housing outer panel to the vehicle side, install the *7 and *8.
2 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint·coating)
3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.