
ROOF SIDE INNER UPPER PANEL (ASSY):

3 Door

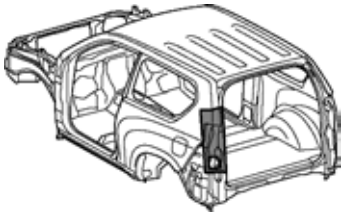

F43298A

With the back door opening side reinforce removed.


Symbol meaning

REMOVAL	A M A : Remove Weld Points
INSTALLATION	O M I : Plug Weld

F43298B

REMOVAL·INSTALLATION

[LH]

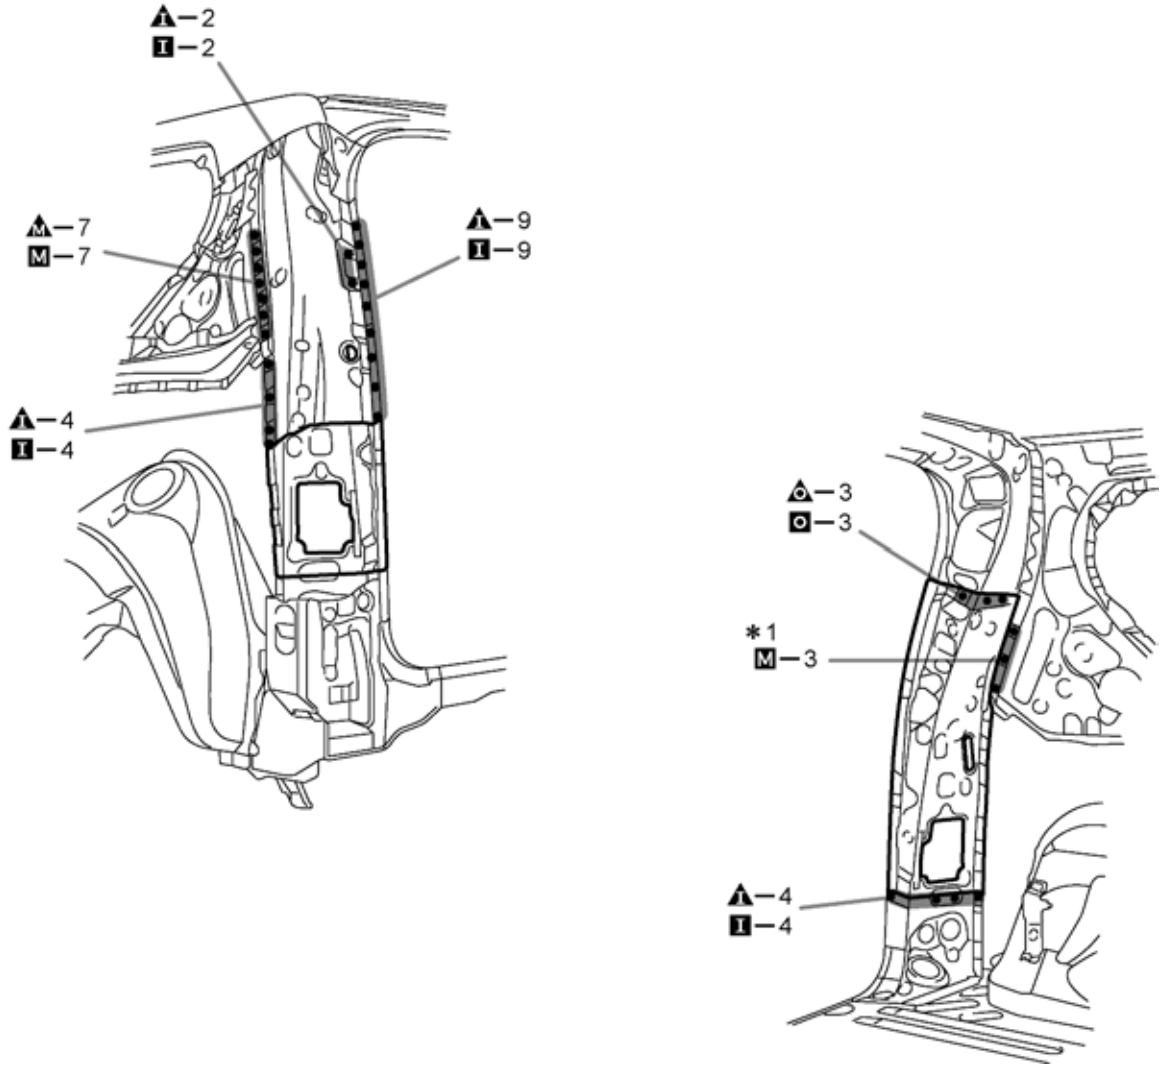


F43298

INSTALLATION POINT

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 *1 is only for installation.
3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

[RH]

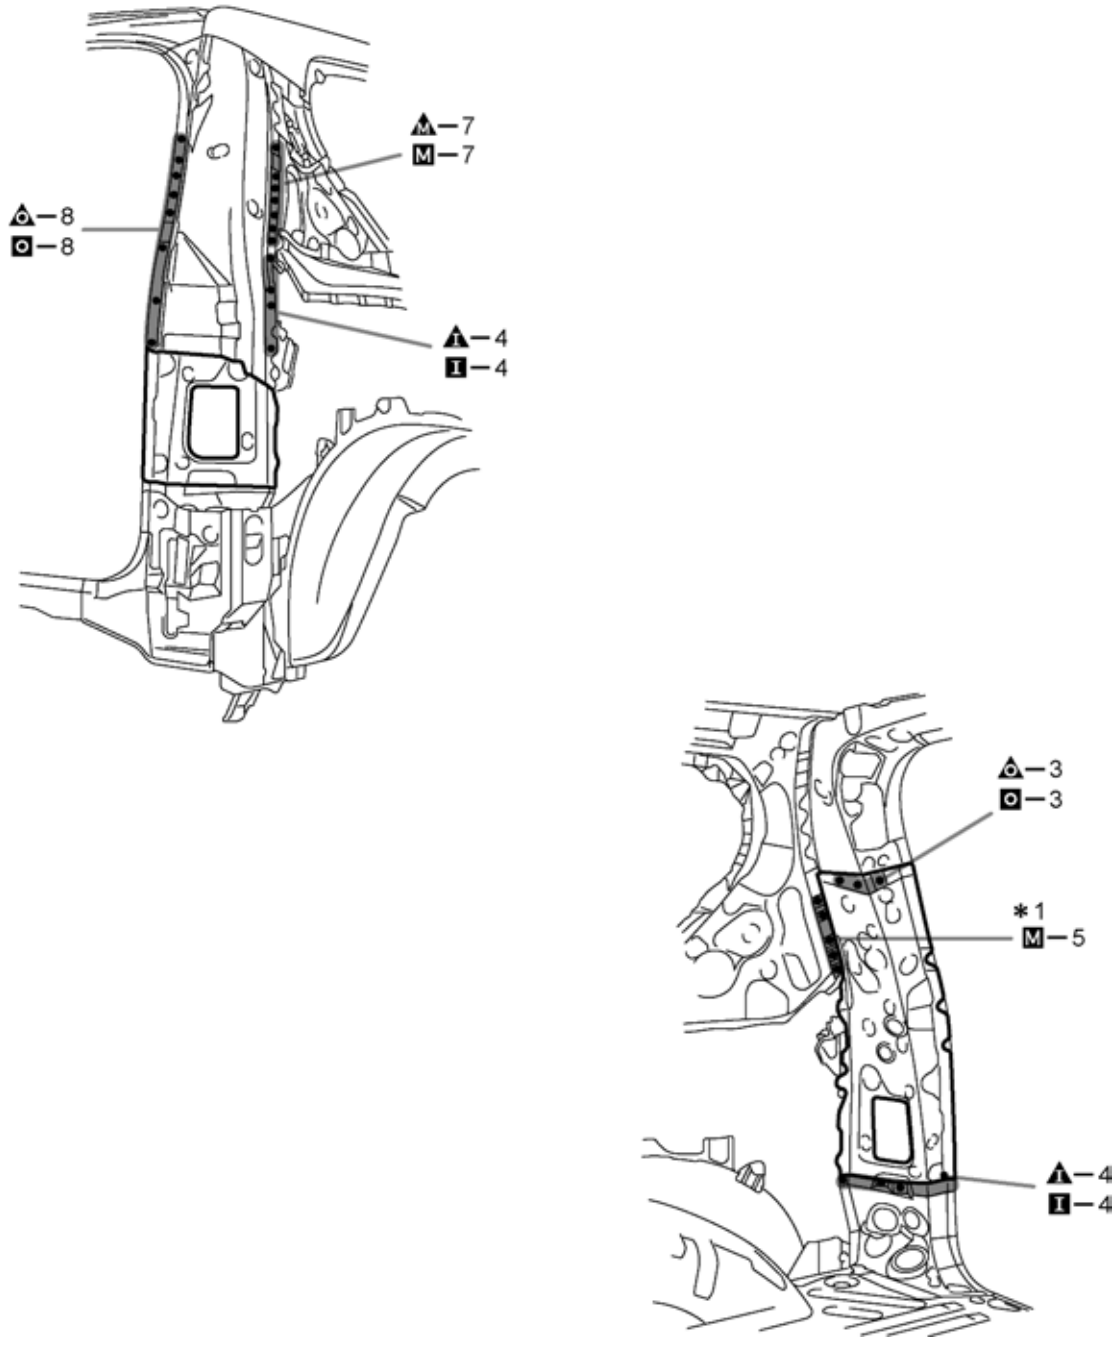


F43299

INSTALLATION POINT

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 *1 is only for installation.
3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

ROOF SIDE INNER UPPER PANEL (ASSY):

5 Door

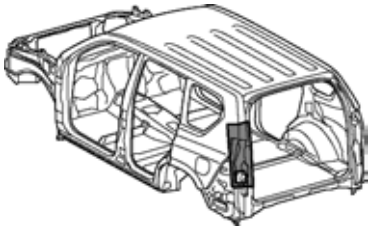

F43300A

With the back door opening side reinforce removed.


Symbol meaning

REMOVAL	: Remove Weld Points
INSTALLATION	: Plug Weld

F43300B

REMOVAL·INSTALLATION

[LH]

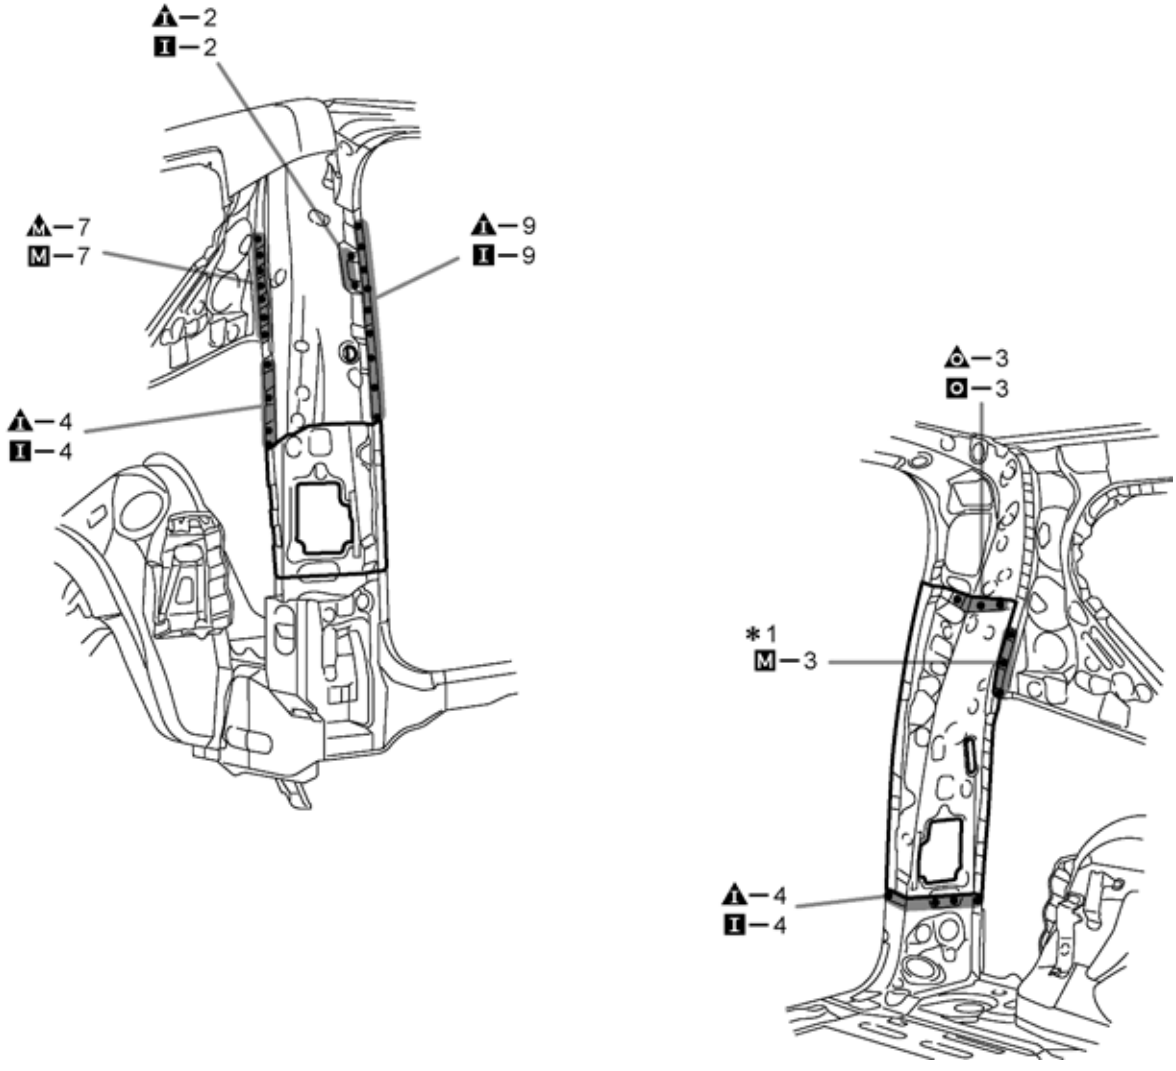


F43300

INSTALLATION POINT

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 *1 is only for installation.
3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

[RH]

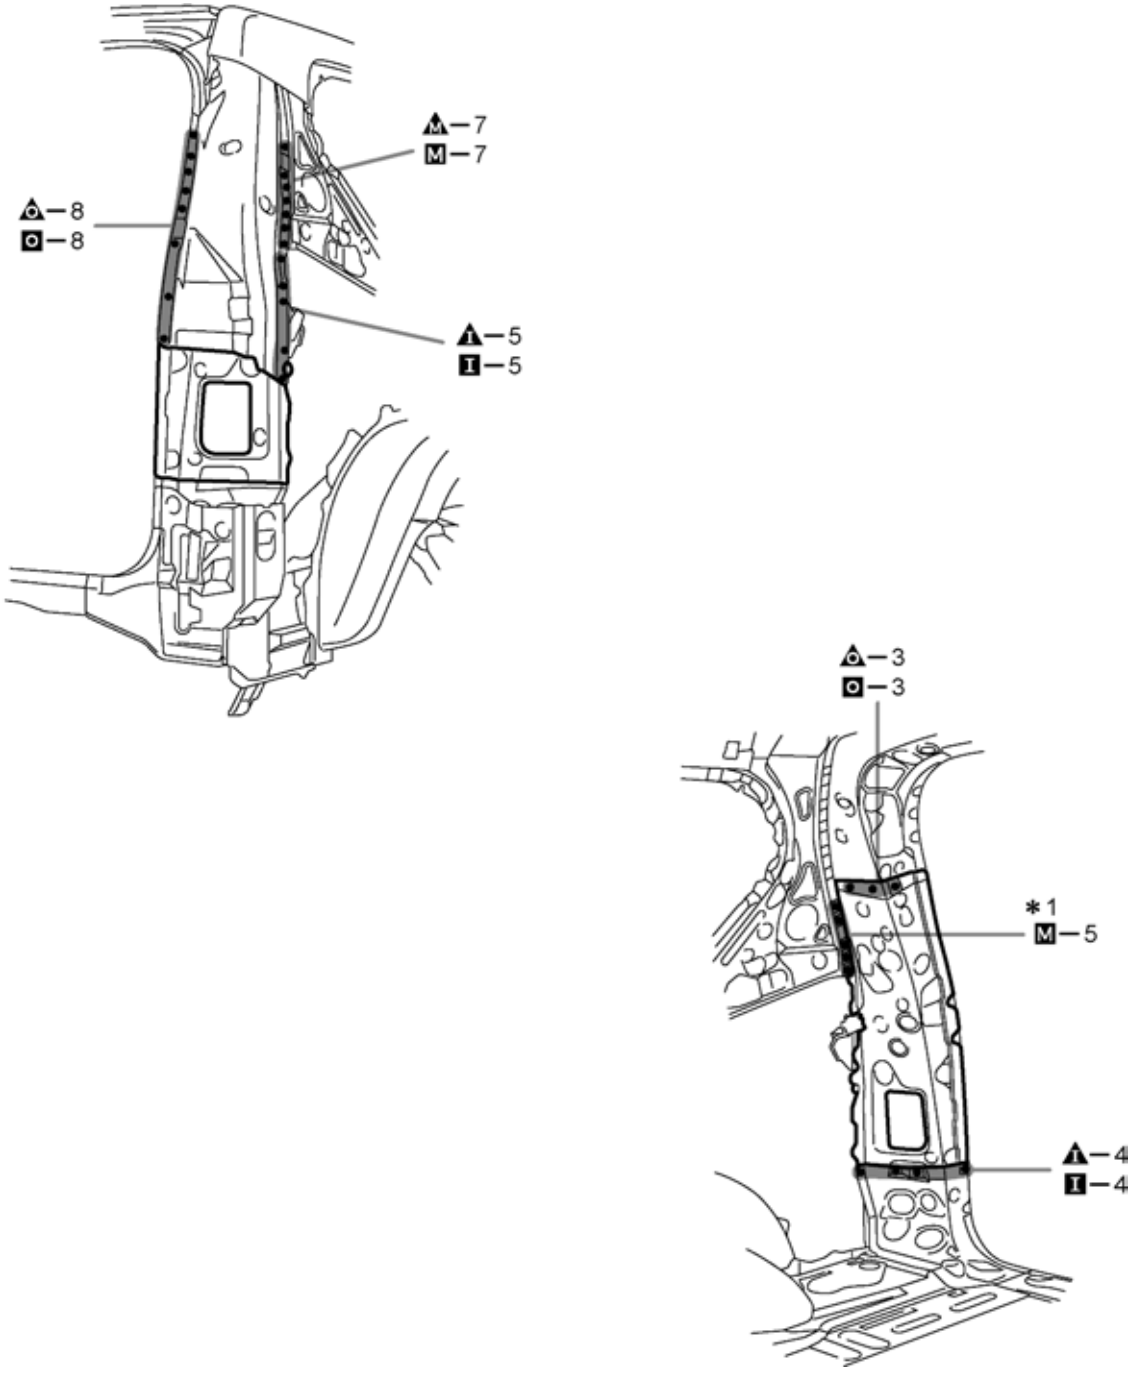

F43301

INSTALLATION POINT

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 *1 is only for installation.
3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.