
BODY LOWER BACK PANEL (CUT):

3 Door

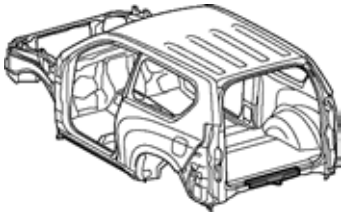


F43302A

Symbol meaning

REMOVAL	M A : Remove Weld Points : Cut and Join Location
INSTALLATION	I : Spot Weld M I : Plug Weld : Butt Weld

F43302B

REMOVAL·INSTALLATION

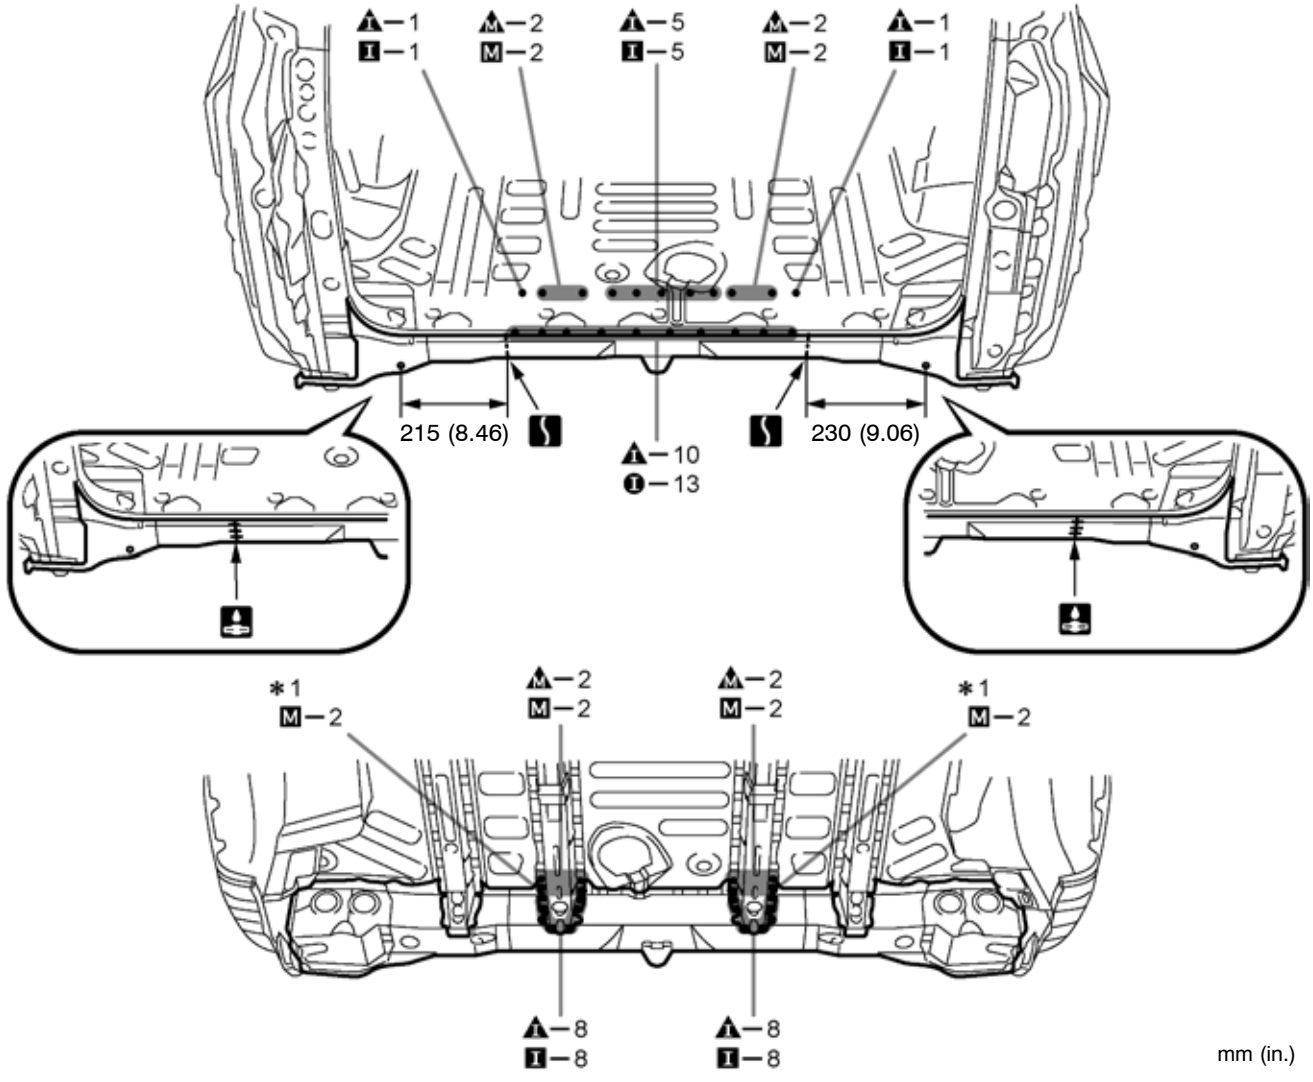


F43302

INSTALLATION POINT

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 *1 is only for installation.
4 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint·coating)
5 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

BODY LOWER BACK PANEL (CUT):

5 Door

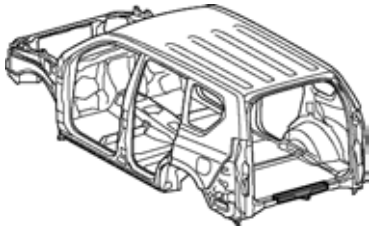


F43303A

Symbol meaning

REMOVAL	: Remove Weld Points	: Cut and Join Location
INSTALLATION	: Spot Weld : Plug Weld	: Butt Weld

F43303B

REMOVAL·INSTALLATION

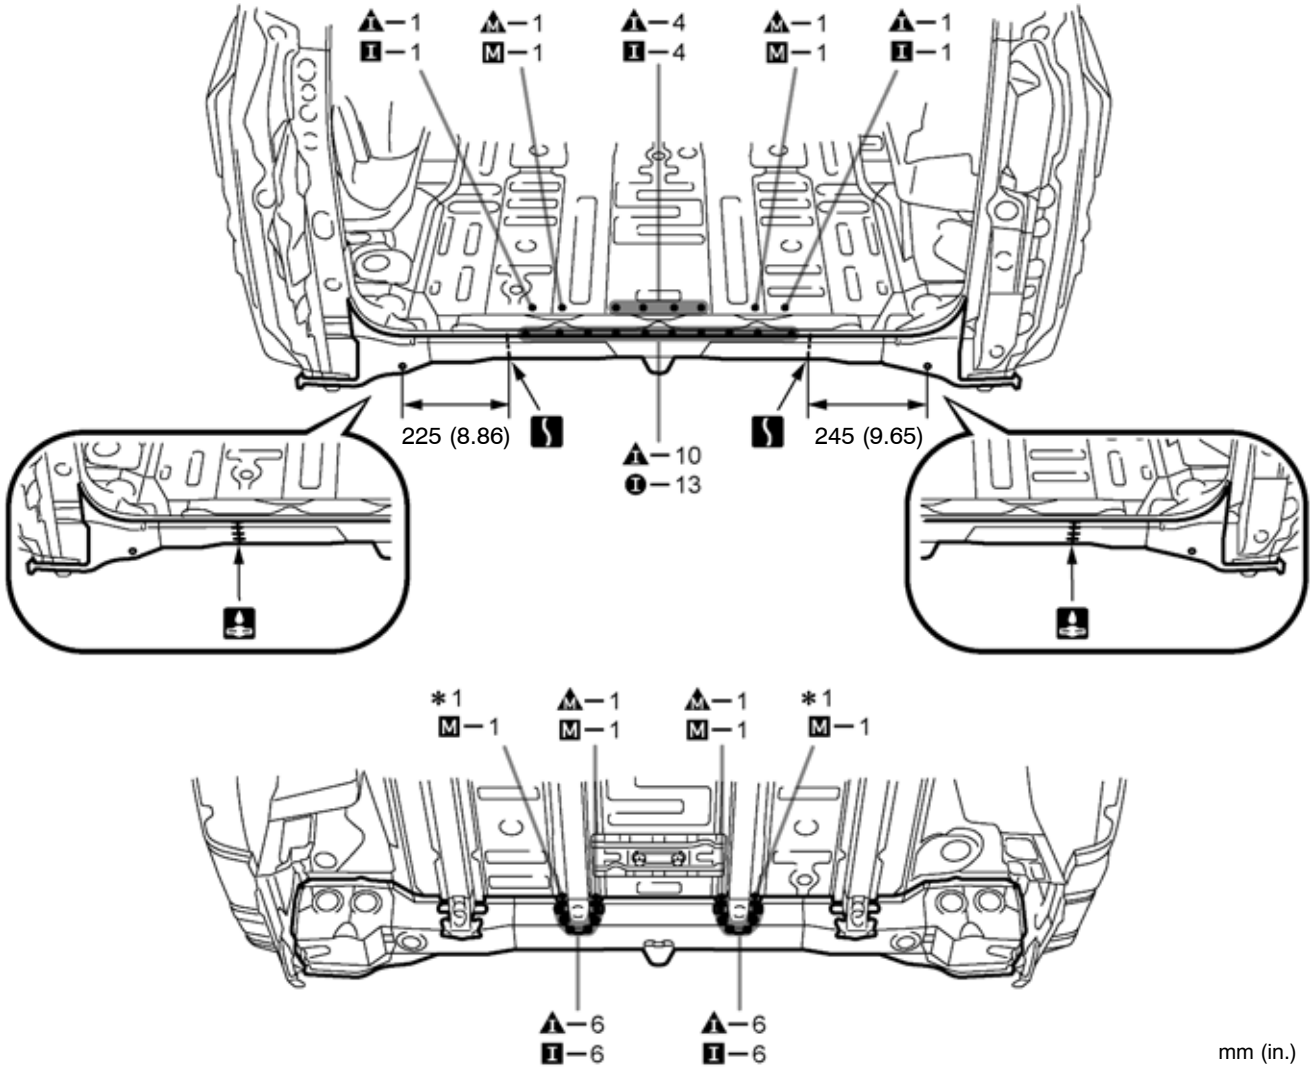

F43303

INSTALLATION POINT

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 *1 is only for installation.
4 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint·coating)
5 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.