BODY LOWER BACK PANEL (ASSY):

3 Door



F43304A

With the back door opening side reinforce removed.


Symbol meaning

REMOVAL	: Remove Weld Points	: Cut and Join Location
INSTALLATION	: Spot Weld : Plug Weld	: Butt Weld

F43304B

REMOVAL·INSTALLATION

[LH Side]

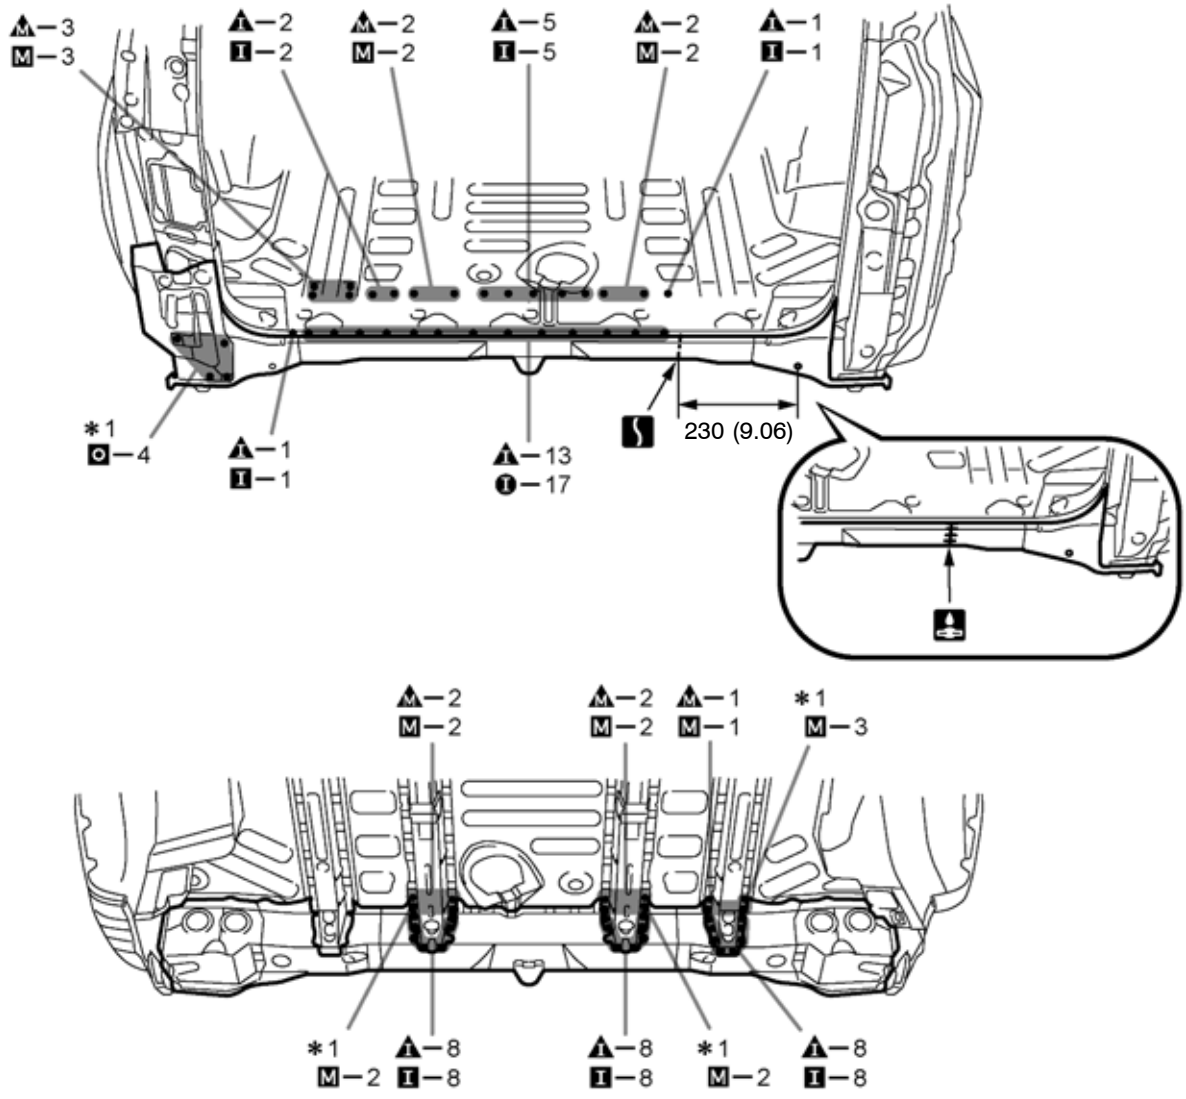


mm (in.)

F43304

INSTALLATION POINT

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 *1 is only for installation.

[LH Side]

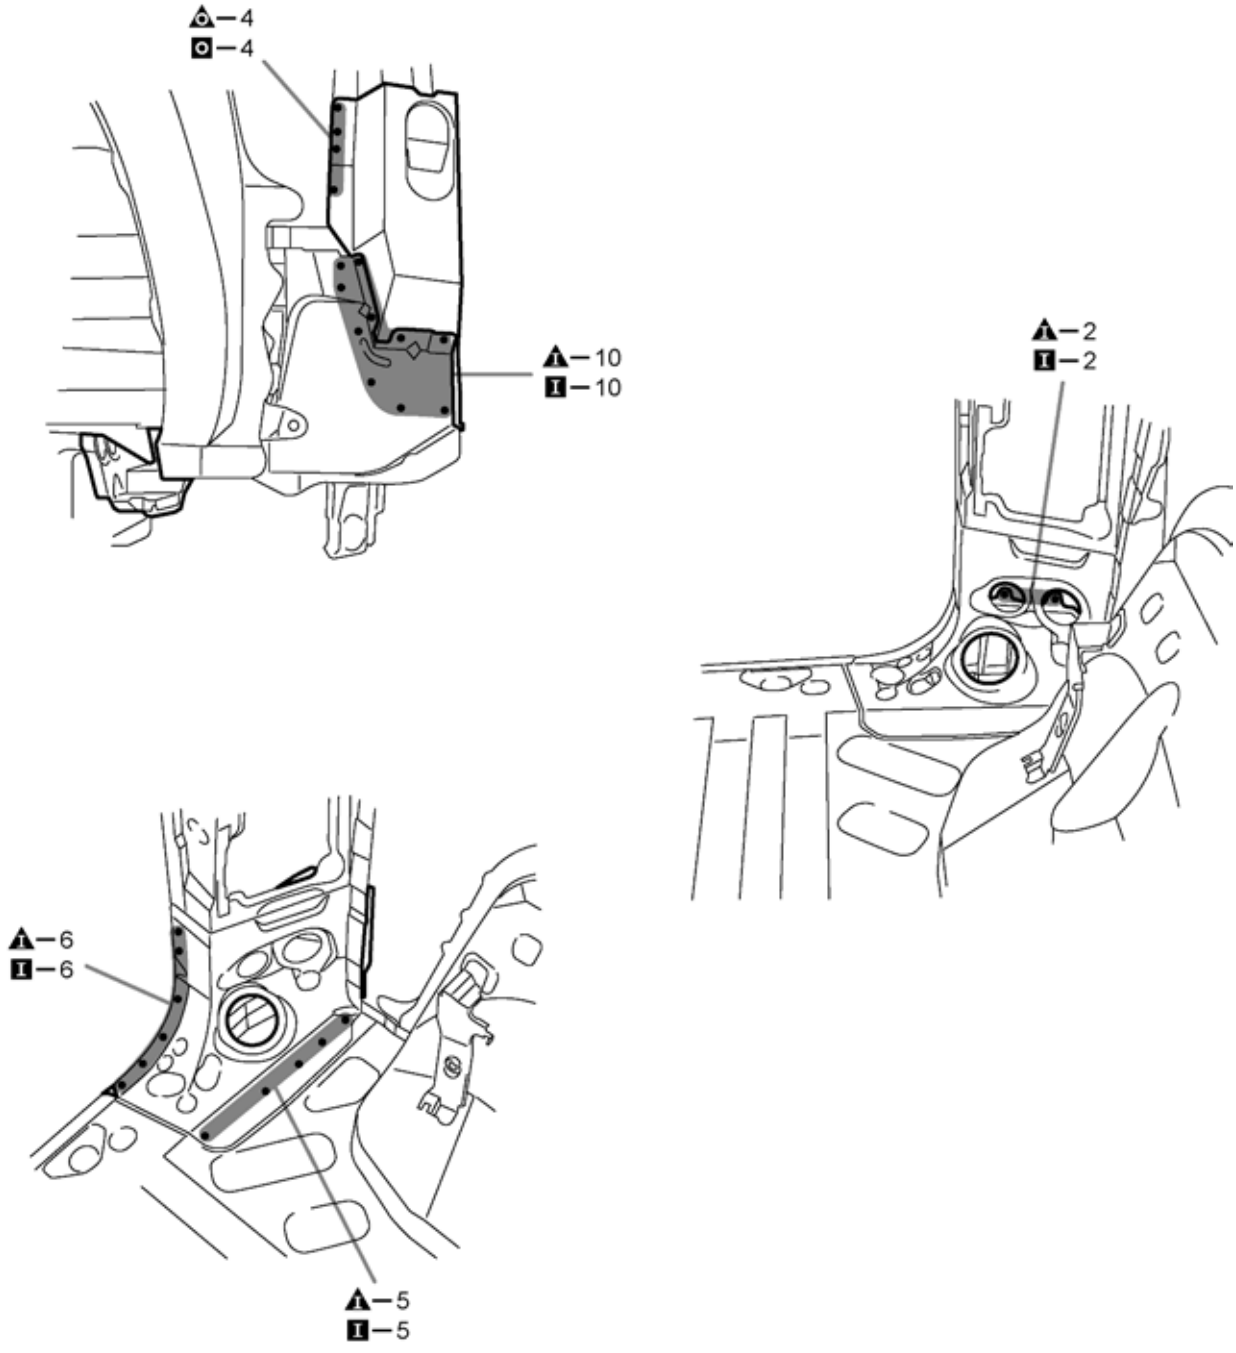

INSTALLATION POINT


1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint·coating)
4 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.


Symbol meaning

REMOVAL	: Remove Weld Points	: Cut and Join Location
INSTALLATION	: Spot Weld	: Plug Weld : Butt Weld

F43304B

[RH Side]

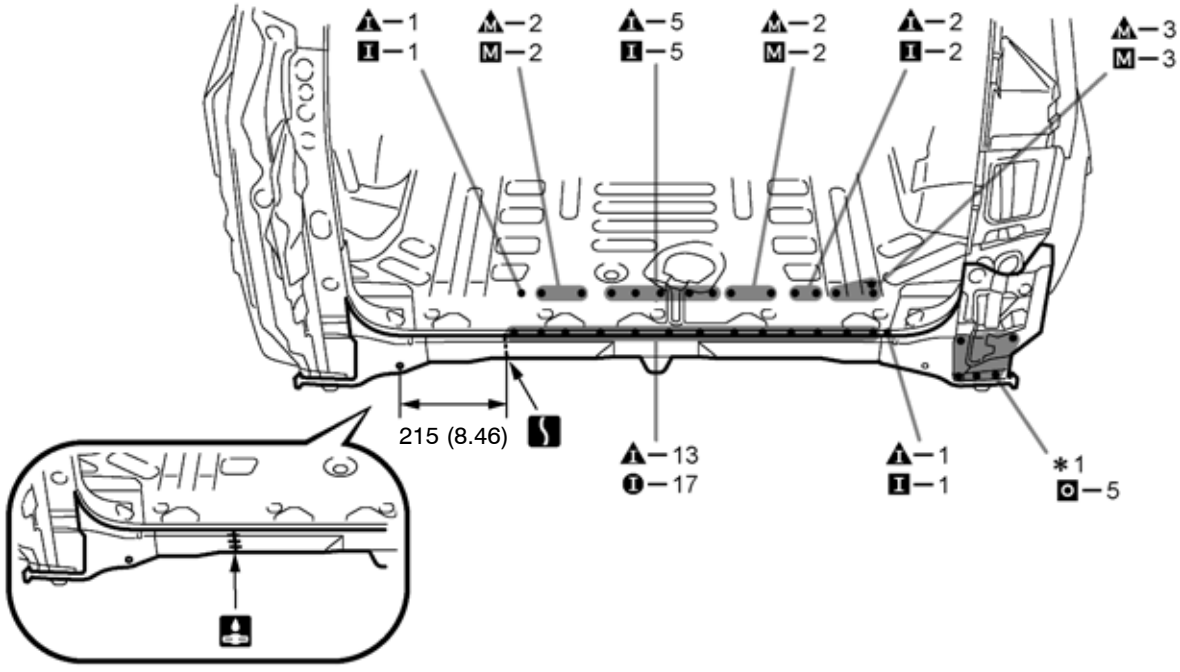

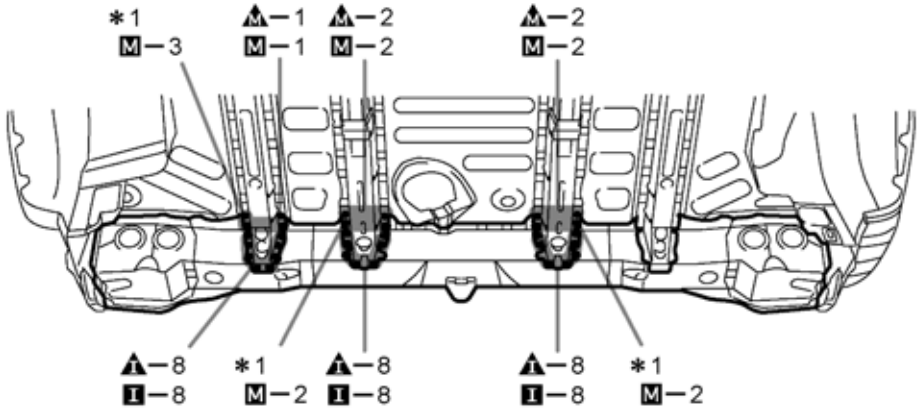


mm (in.)

F43306

INSTALLATION POINT

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 *1 is only for installation.

[RH Side]

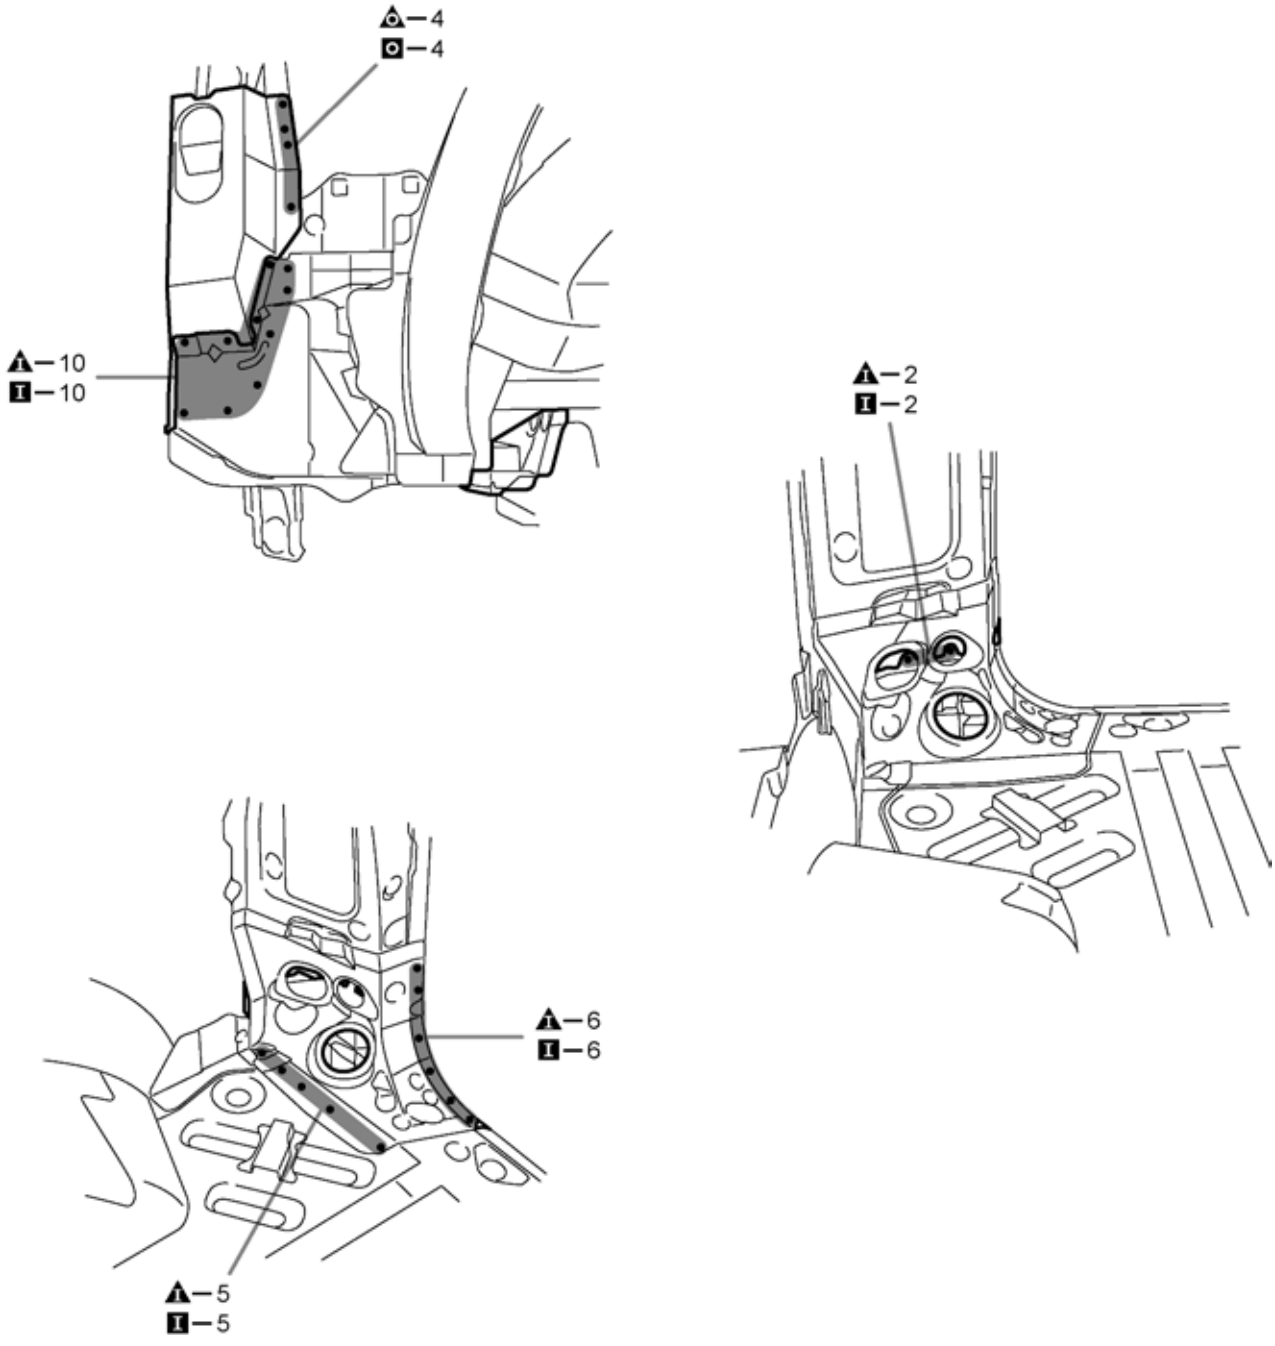


F43307

INSTALLATION POINT

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint·coating)
4 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

BODY LOWER BACK PANEL (ASSY):

5 Door

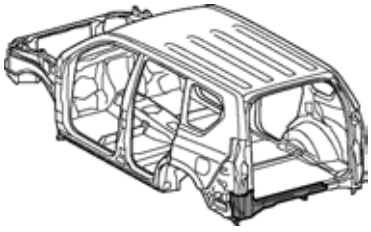

F43308A

With the back door opening side reinforce removed.


Symbol meaning

REMOVAL	: Remove Weld Points	: Cut and Join Location
INSTALLATION	: Spot Weld : Plug Weld	: Butt Weld

F43308B

REMOVAL·INSTALLATION

[LH Side]

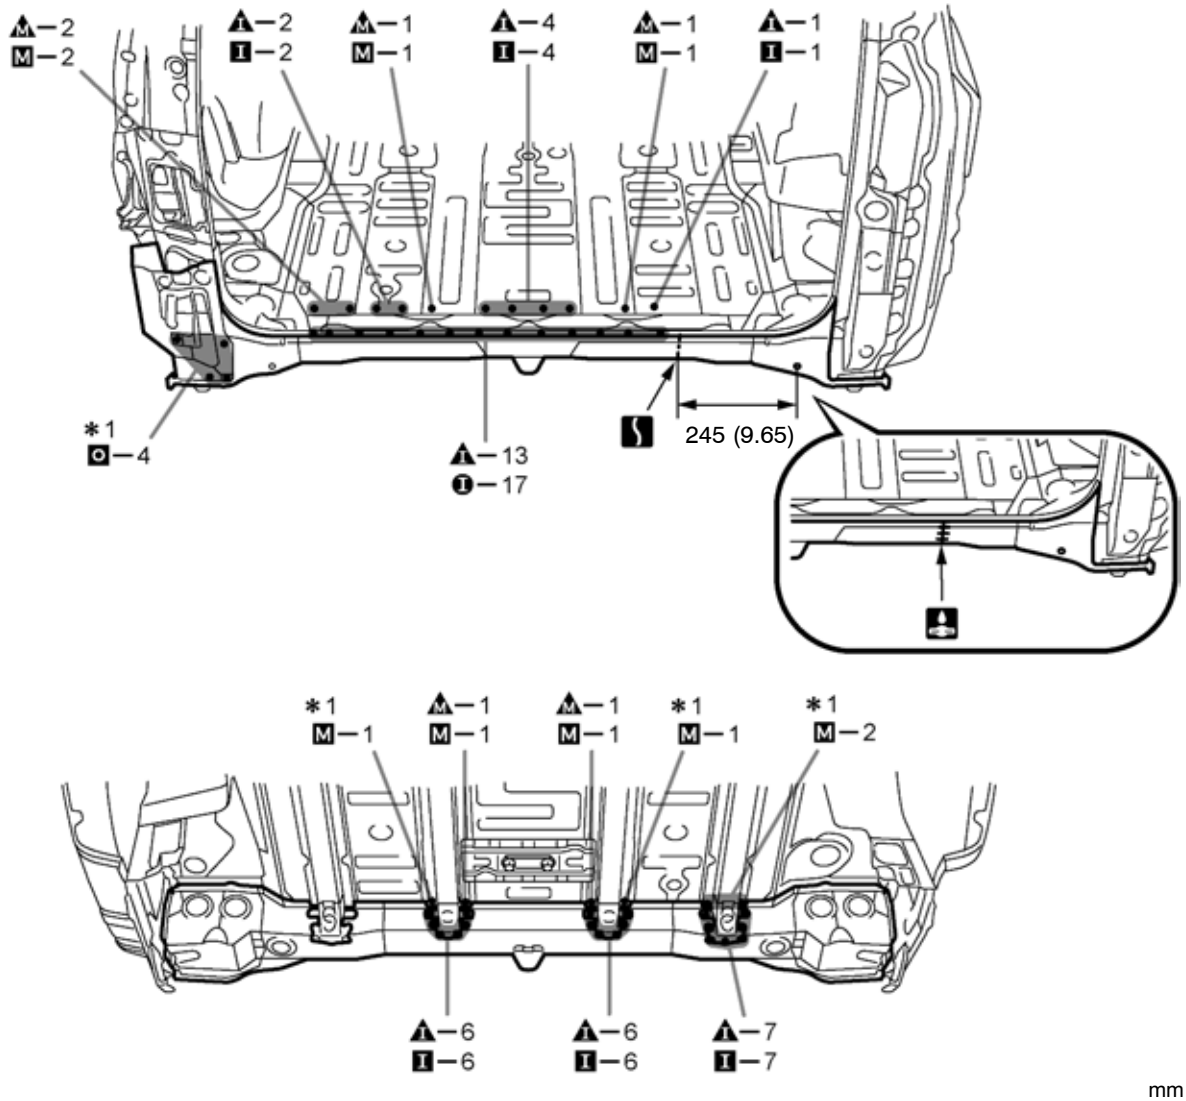


mm (in.)

F43308

INSTALLATION POINT

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 *1 is only for installation.

[LH Side]

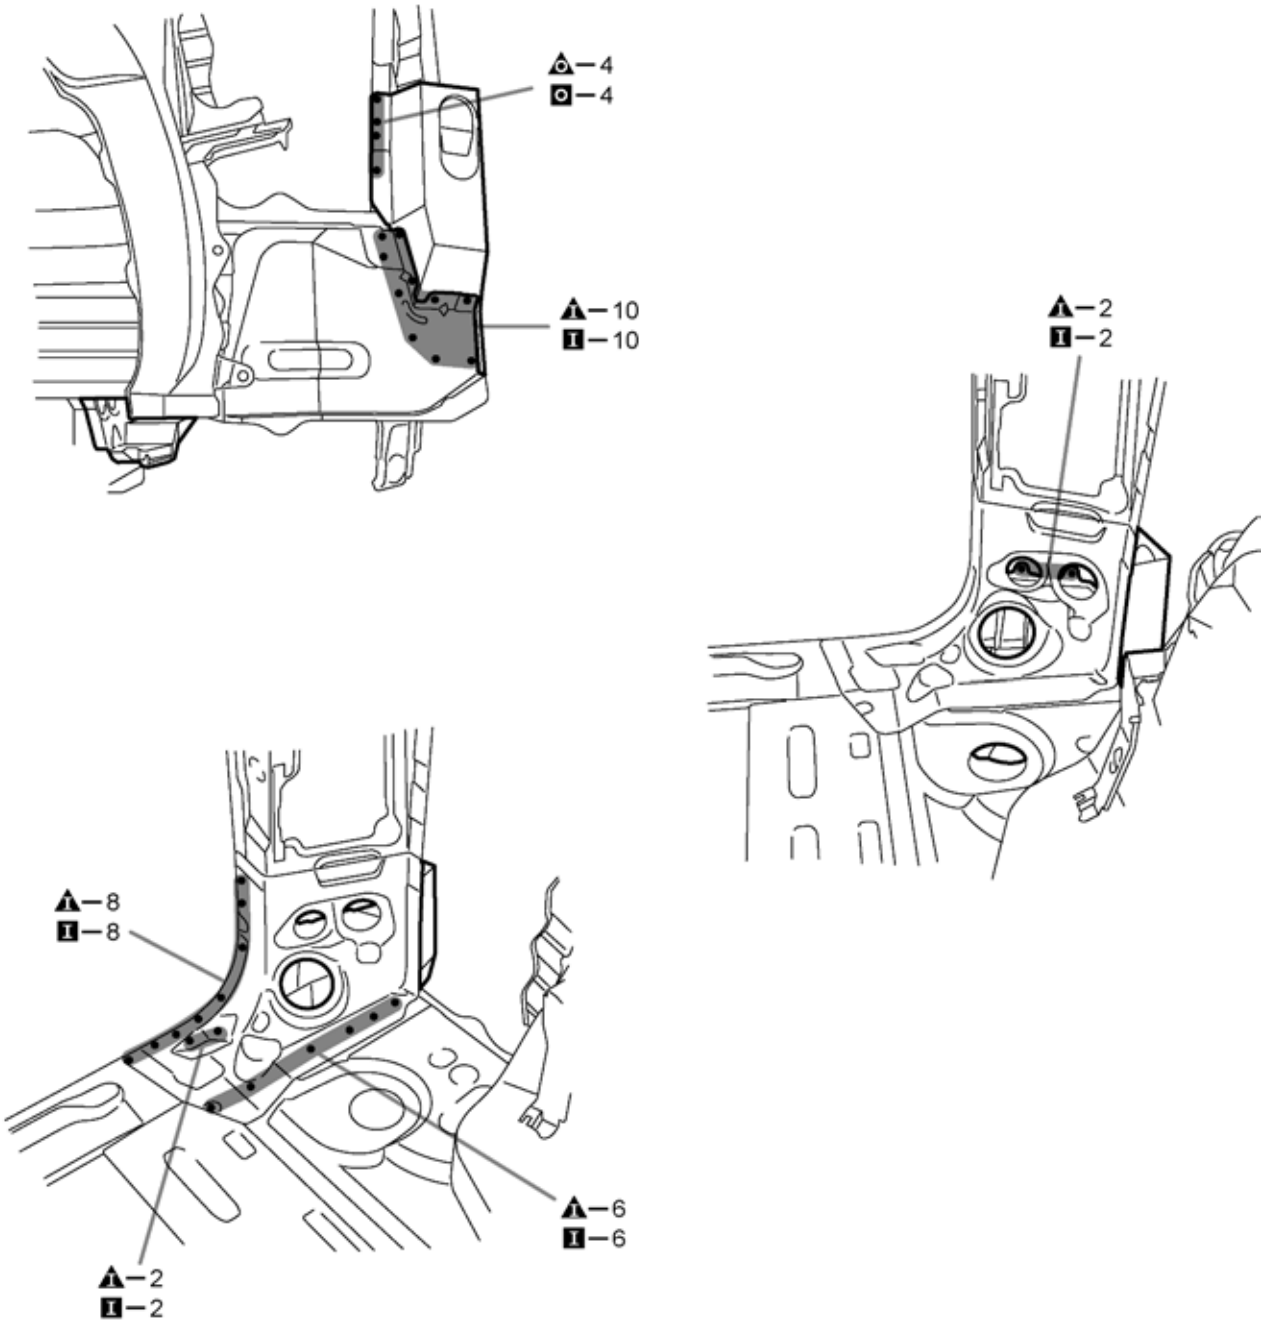

F43309

INSTALLATION POINT


1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint·coating)
4 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.


Symbol meaning

REMOVAL	: Remove Weld Points	: Cut and Join Location
INSTALLATION	: Spot Weld	: Plug Weld : Butt Weld

F43308B

[RH Side]

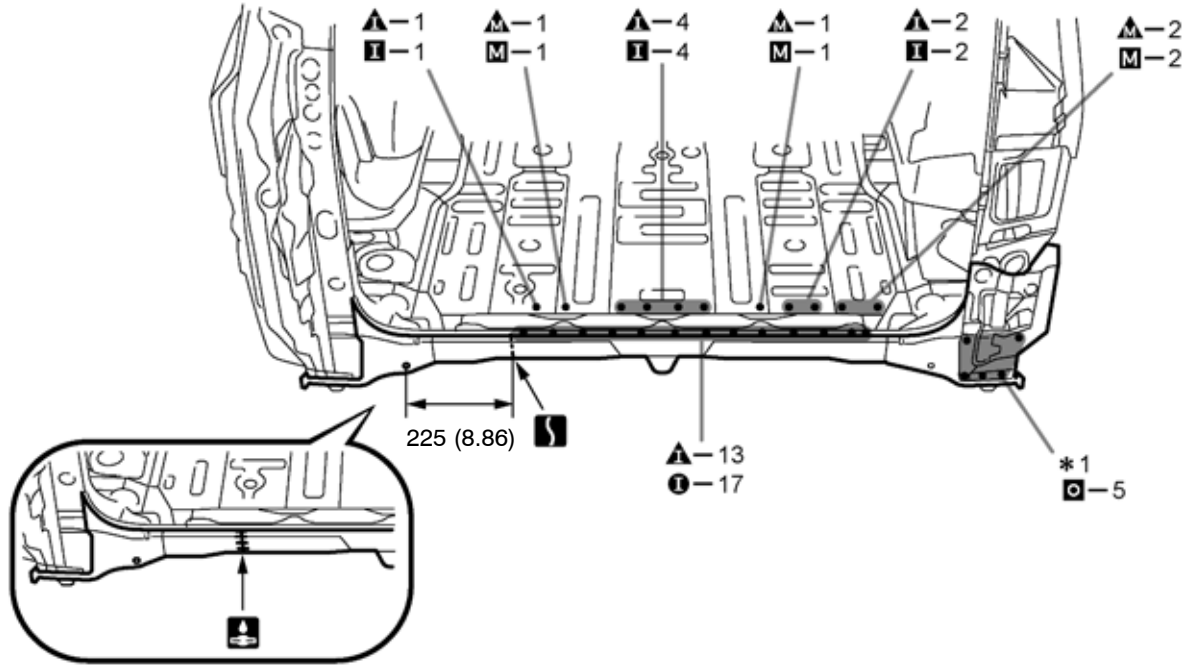

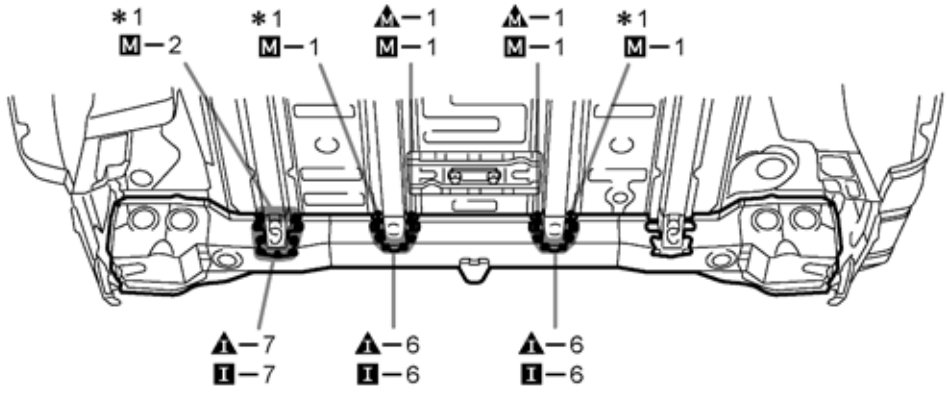


mm (in.)

F43310

INSTALLATION POINT

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 *1 is only for installation.

[RH Side]

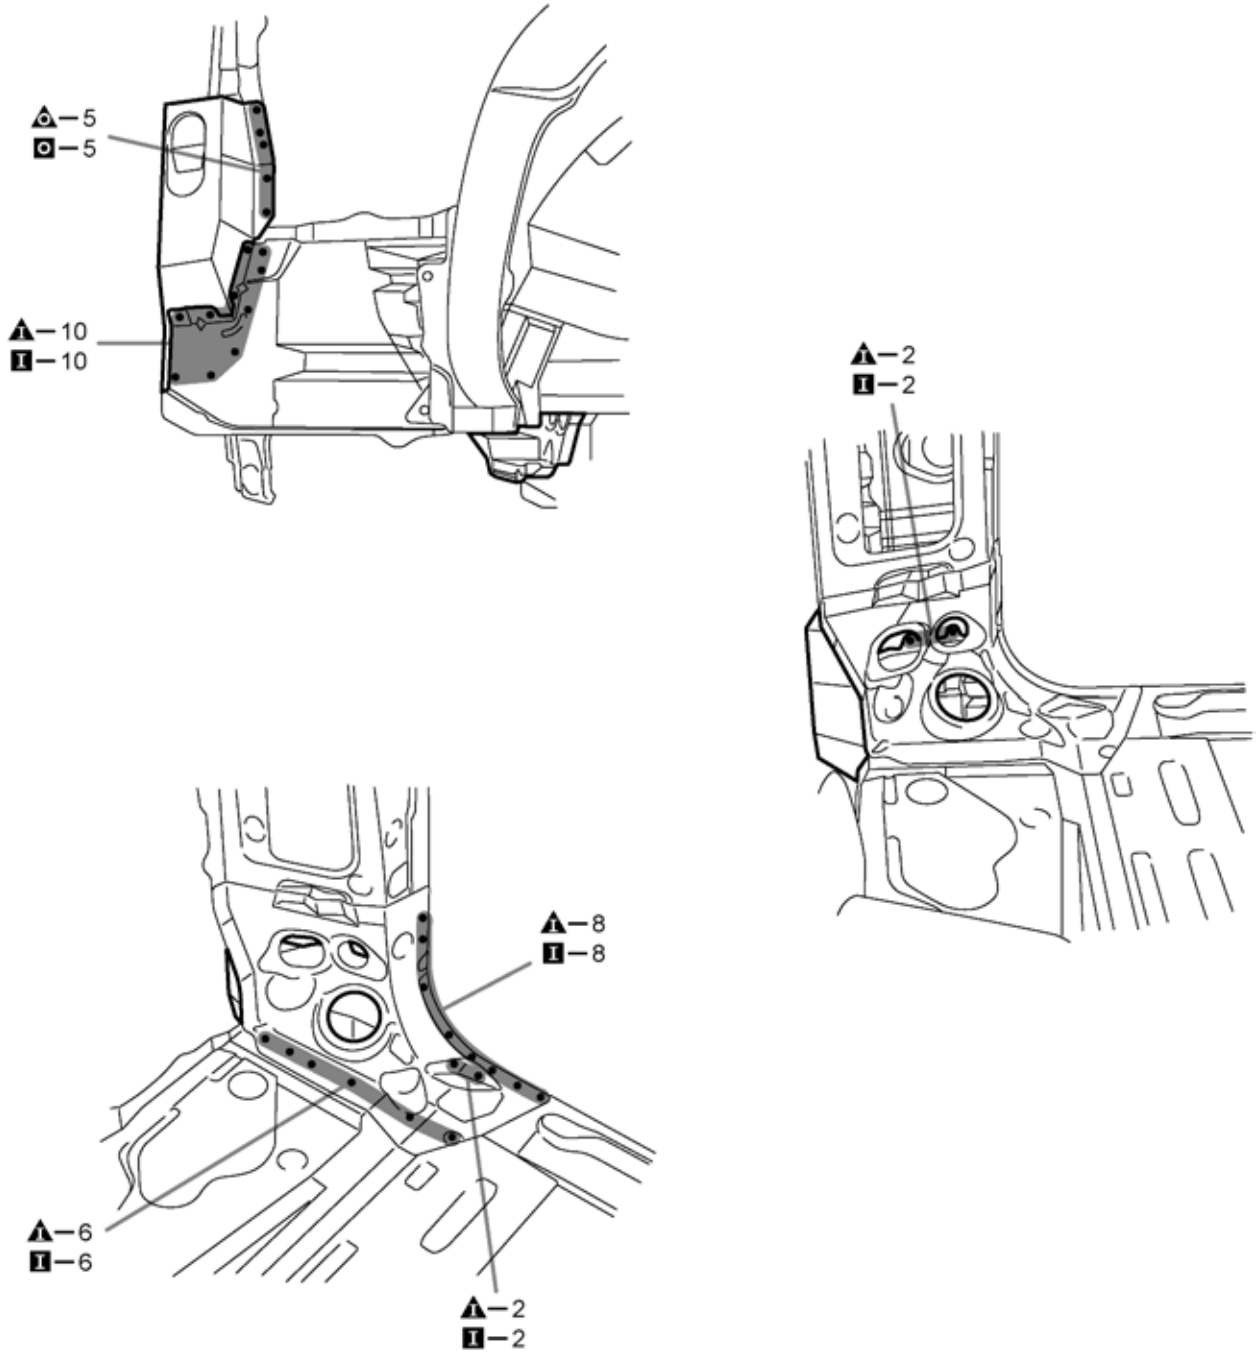

F43311

INSTALLATION POINT

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint·coating)
4 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.