
REAR FLOOR CROSSMEMBER NO. 2 (ASSY):
3 Door

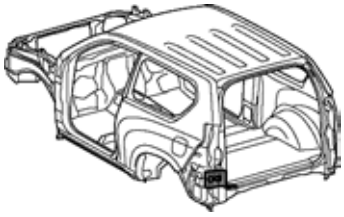

F43312A


Symbol meaning

REMOVAL	▲ : Remove Weld Points
INSTALLATION	■ : Plug Weld

F43312B

REMOVAL·INSTALLATION

[LH]

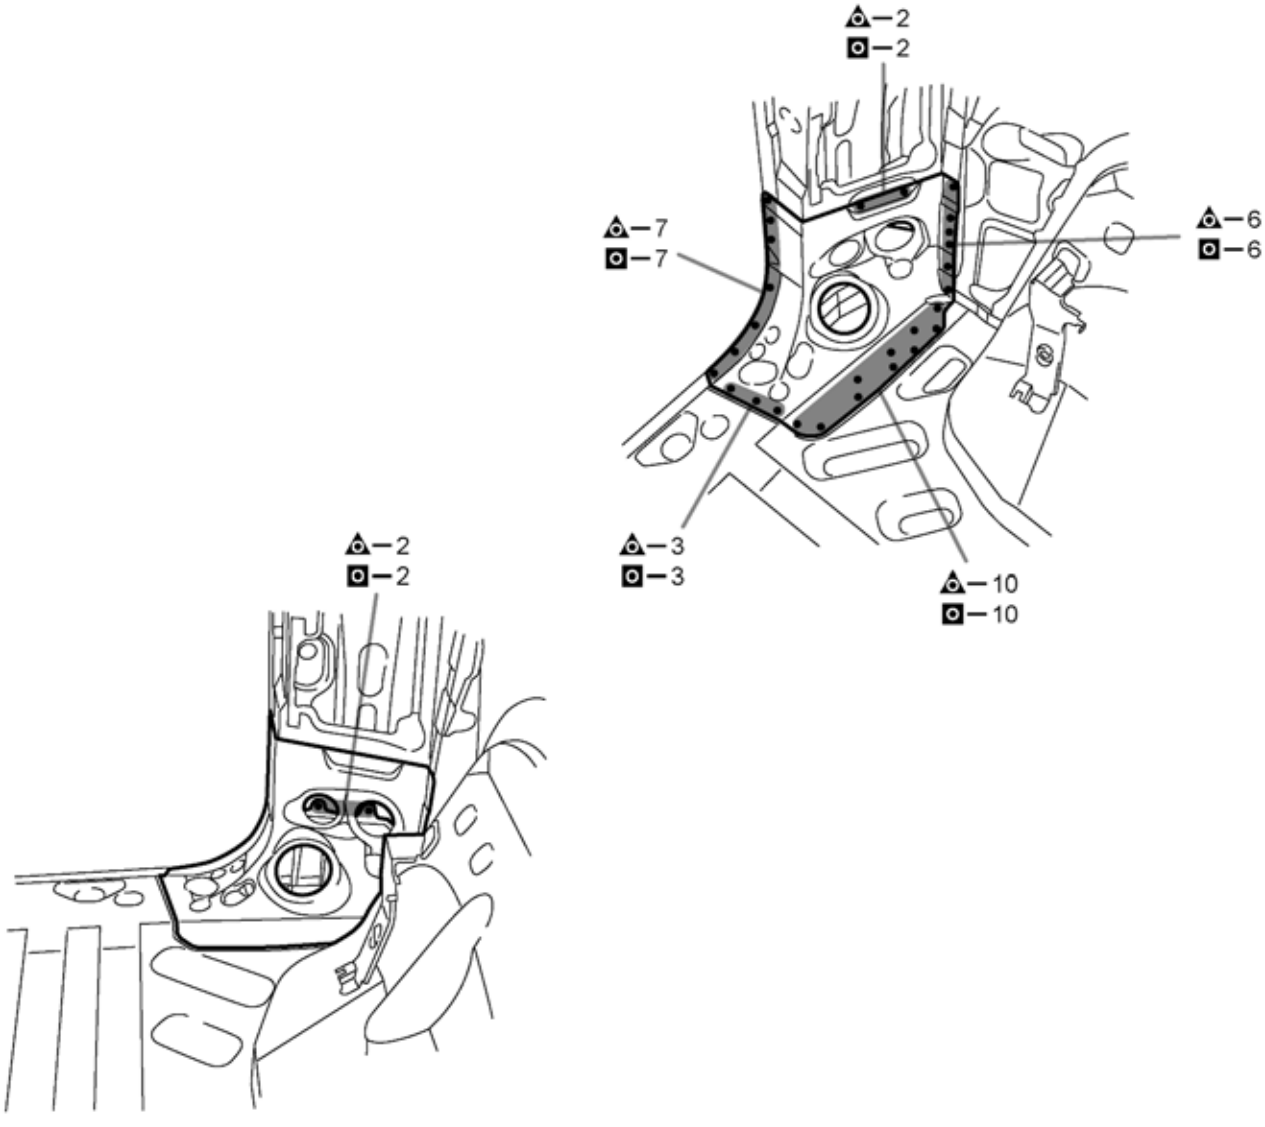


F43312

INSTALLATION POINT

1 After welding, apply body sealer to the corresponding parts. (See the paint·coating)
2 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

[RH]

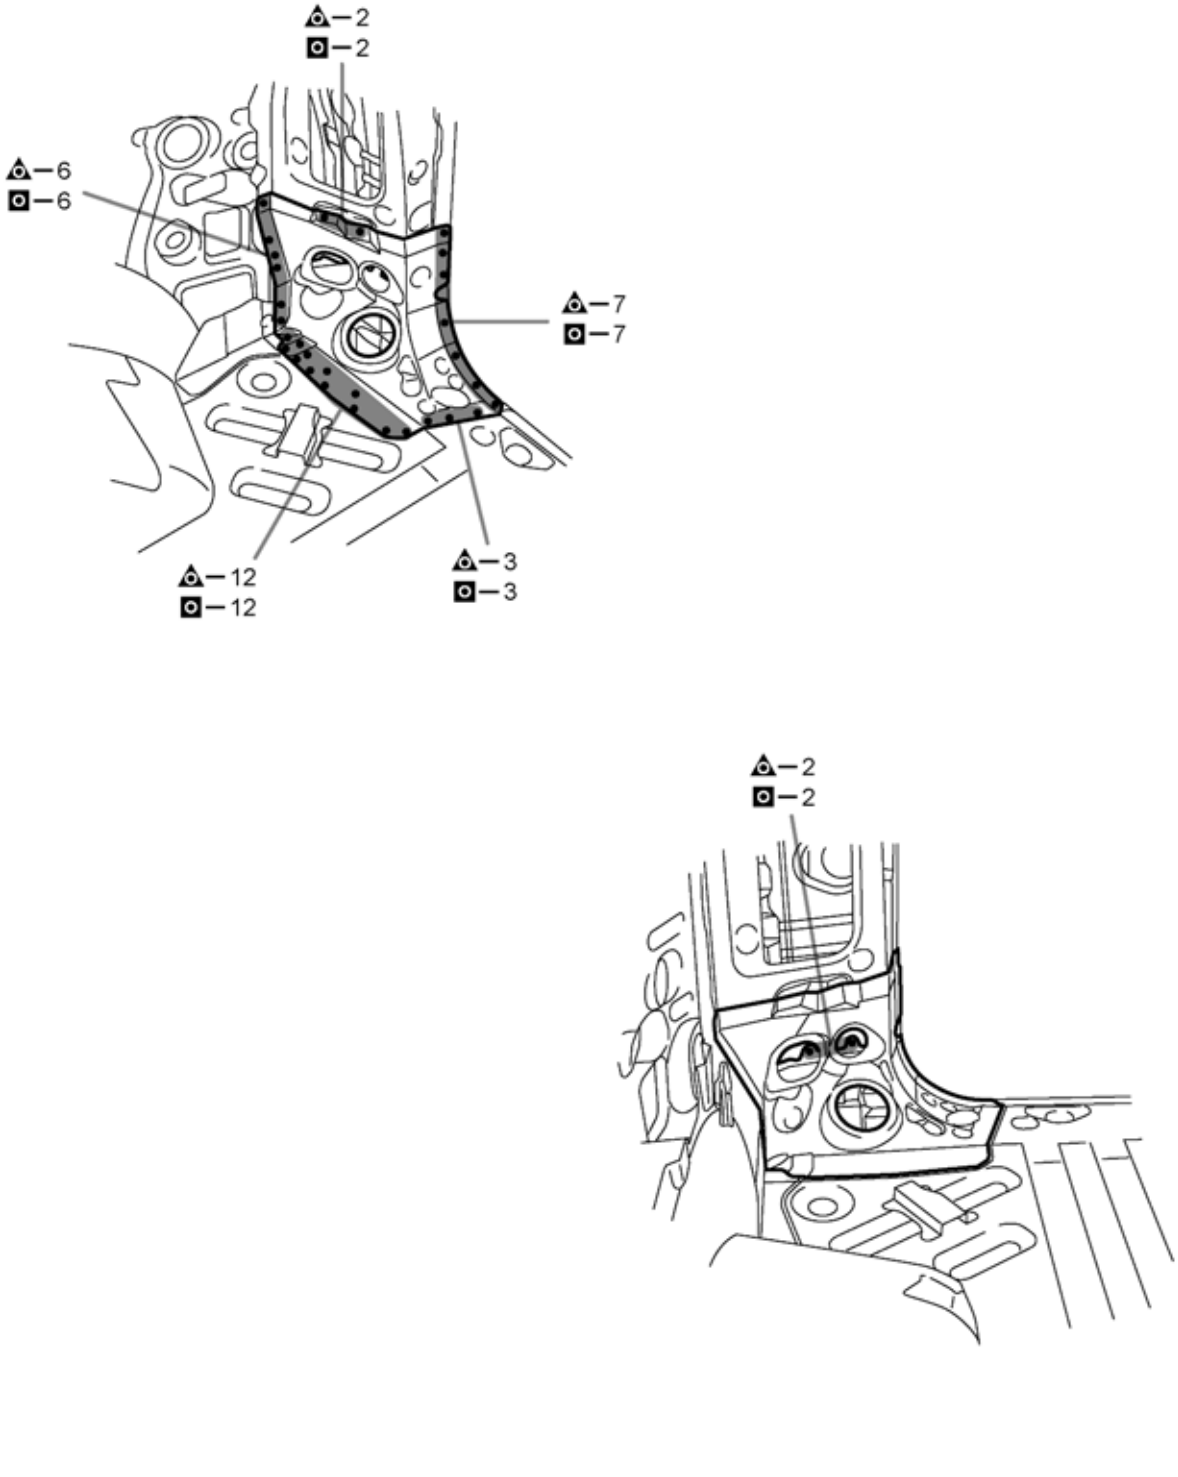


F43313

INSTALLATION POINT

1 After welding, apply body sealer to the corresponding parts. (See the paint·coating)

2 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

REAR FLOOR CROSSMEMBER NO. 2 (ASSY):
5 Door

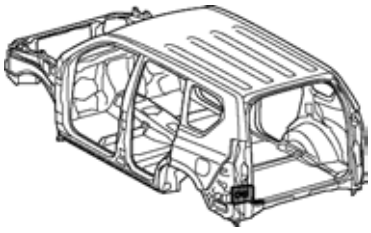
F43314A


Symbol meaning

REMOVAL	: Remove Weld Points
INSTALLATION	: Plug Weld

F43314B

REMOVAL·INSTALLATION

[LH]

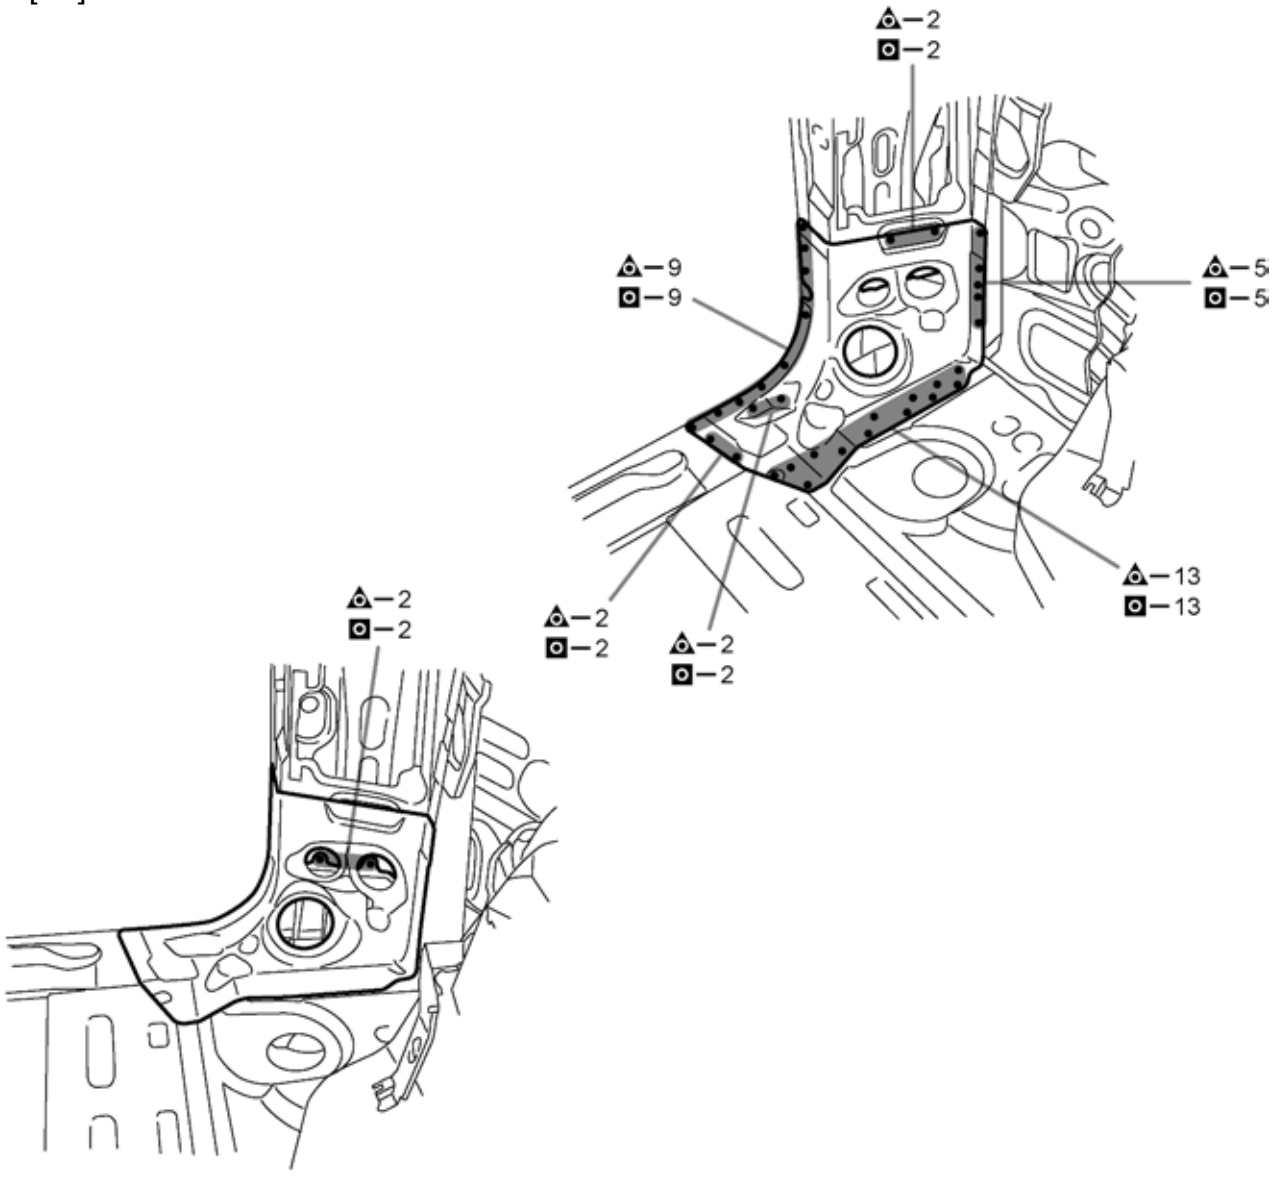


F43314

INSTALLATION POINT

1 After welding, apply body sealer to the corresponding parts. (See the paint·coating)
2 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

[RH]

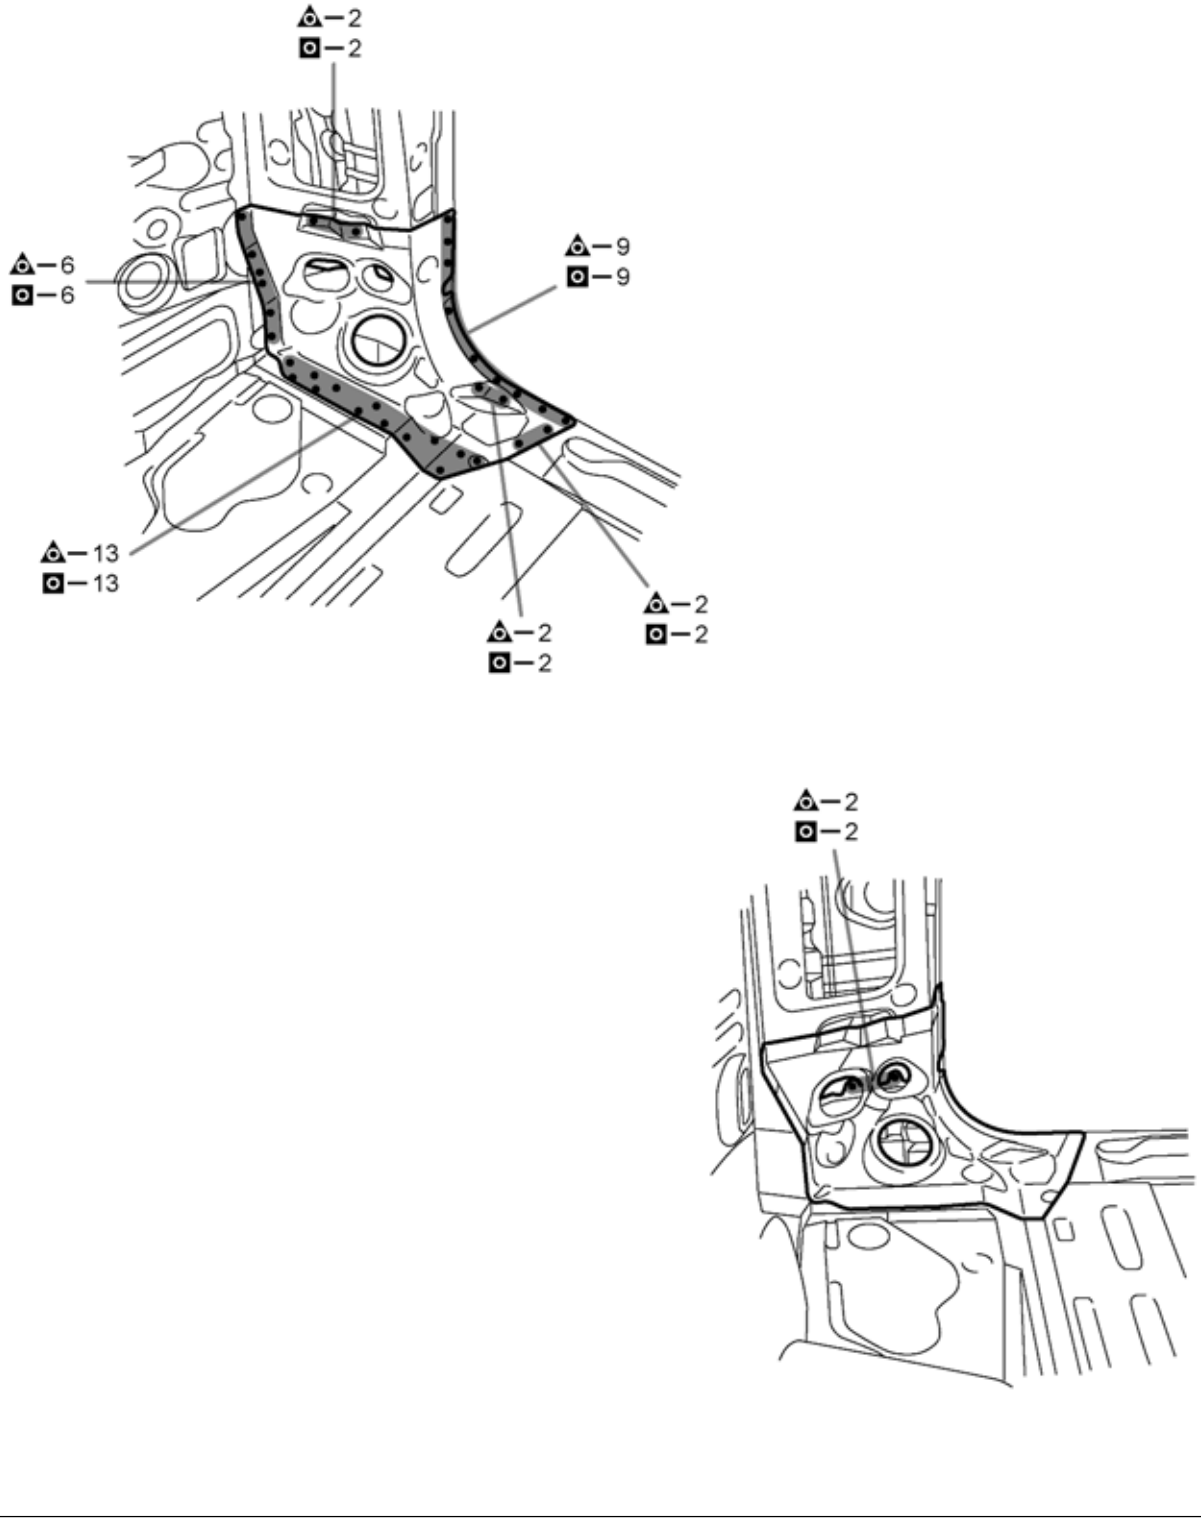

F43315

INSTALLATION POINT

1 After welding, apply body sealer to the corresponding parts. (See the paint·coating)
2 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.