
REAR FLOOR SIDE PANEL (ASSY):

5 Door

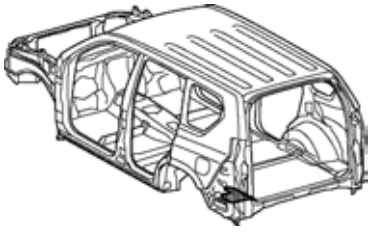

F43324A

With the rear floor crossmember No. 2 removed.


Symbol meaning

REMOVAL	A M A : Remove Weld Points
INSTALLATION	O M I : Plug Weld

F43324B

REMOVAL·INSTALLATION

[LH]

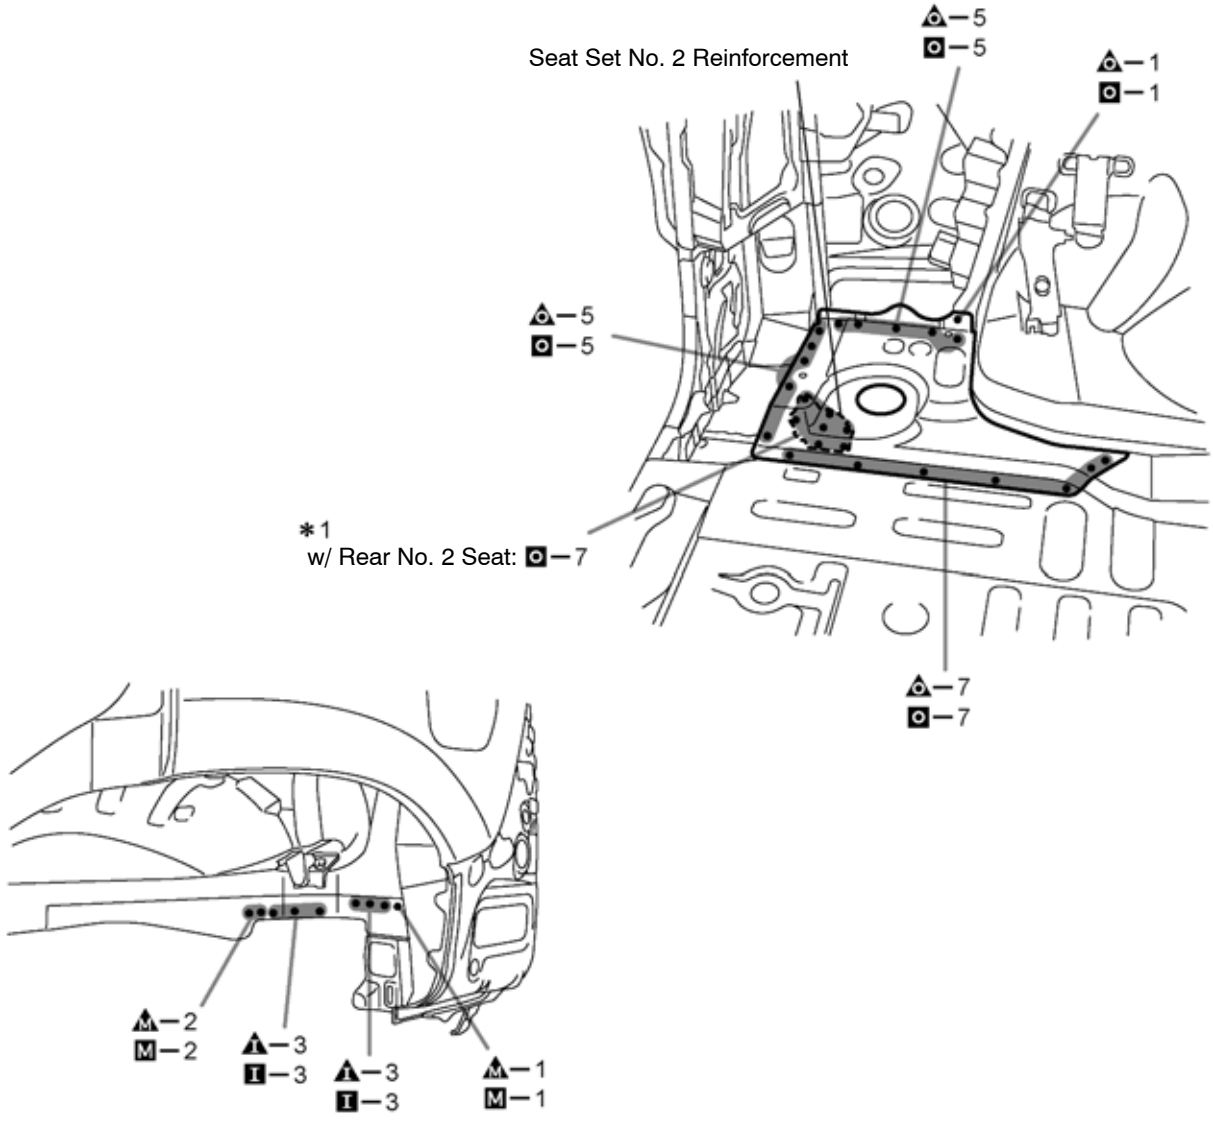



F43324

INSTALLATION POINT

1 *1 is only for installation.
2 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint·coating)
3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

[RH]

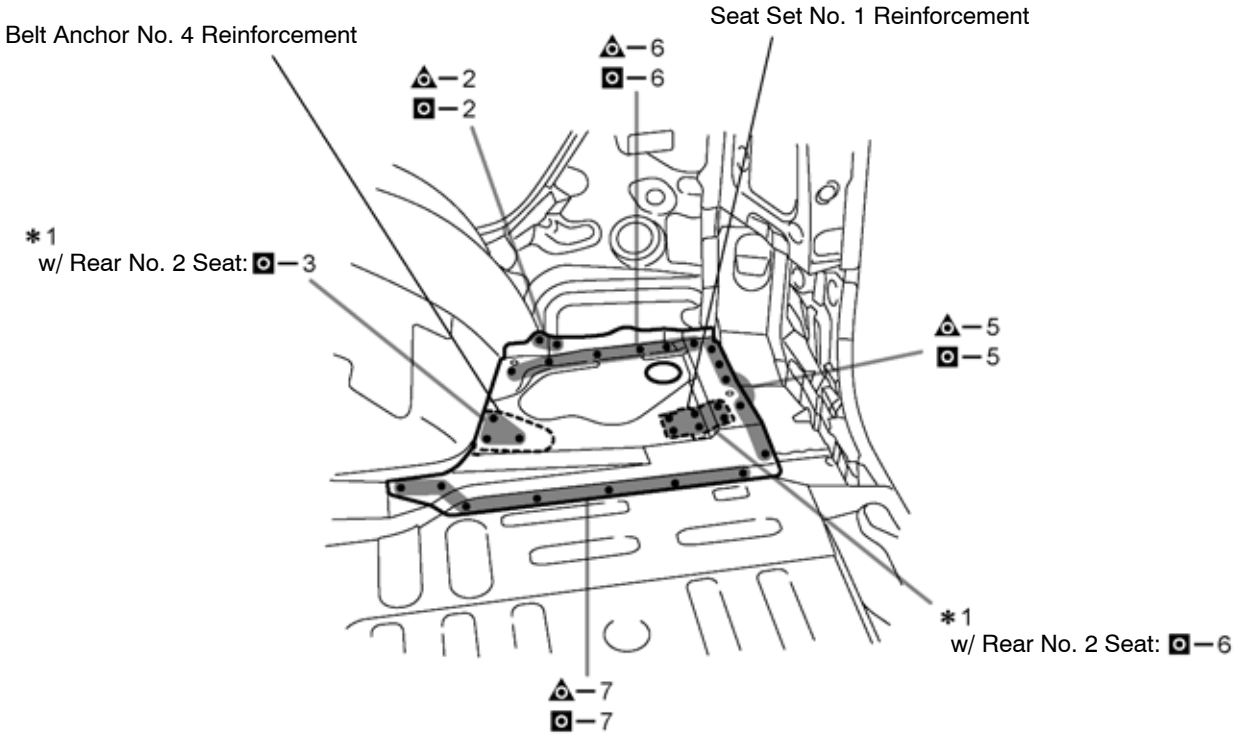

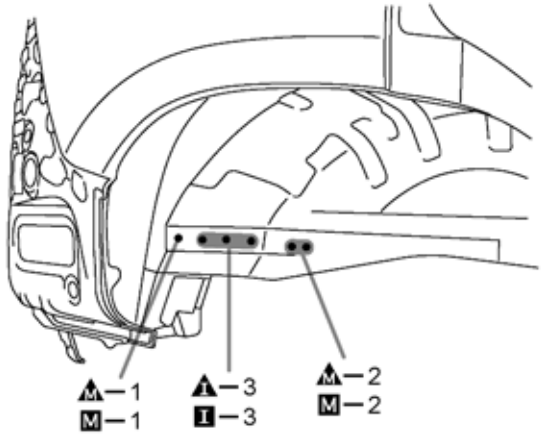

F43325

INSTALLATION POINT

1 *1 is only for installation.
2 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint·coating)
3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.