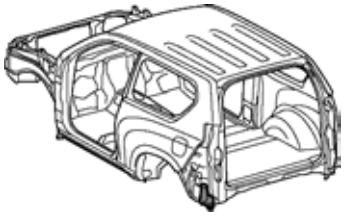
REAR FLOOR SIDE PANEL REAR EXTENSION (ASSY):
3 Door


F43326A

With the back door opening side reinforce removed.


Symbol meaning

REMOVAL	: Remove Weld Points
INSTALLATION	: Spot Weld : Plug Weld

F43326B

REMOVAL·INSTALLATION

[LH]

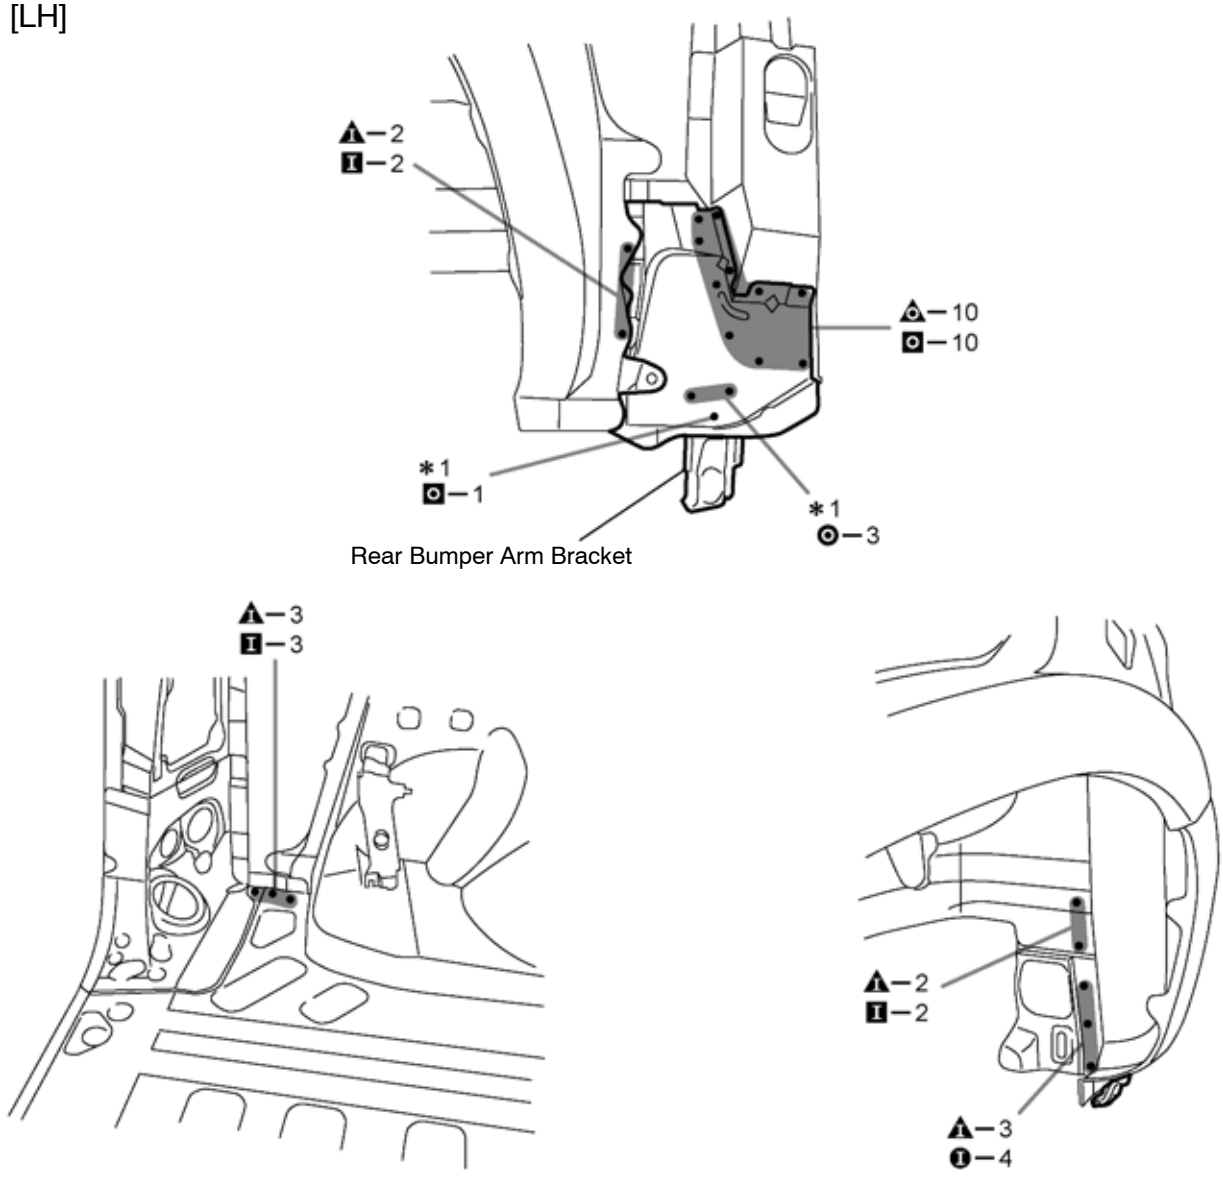


F43326

INSTALLATION POINT

1 *1 is only for installation.
2 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint·coating)
3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.


[RH]

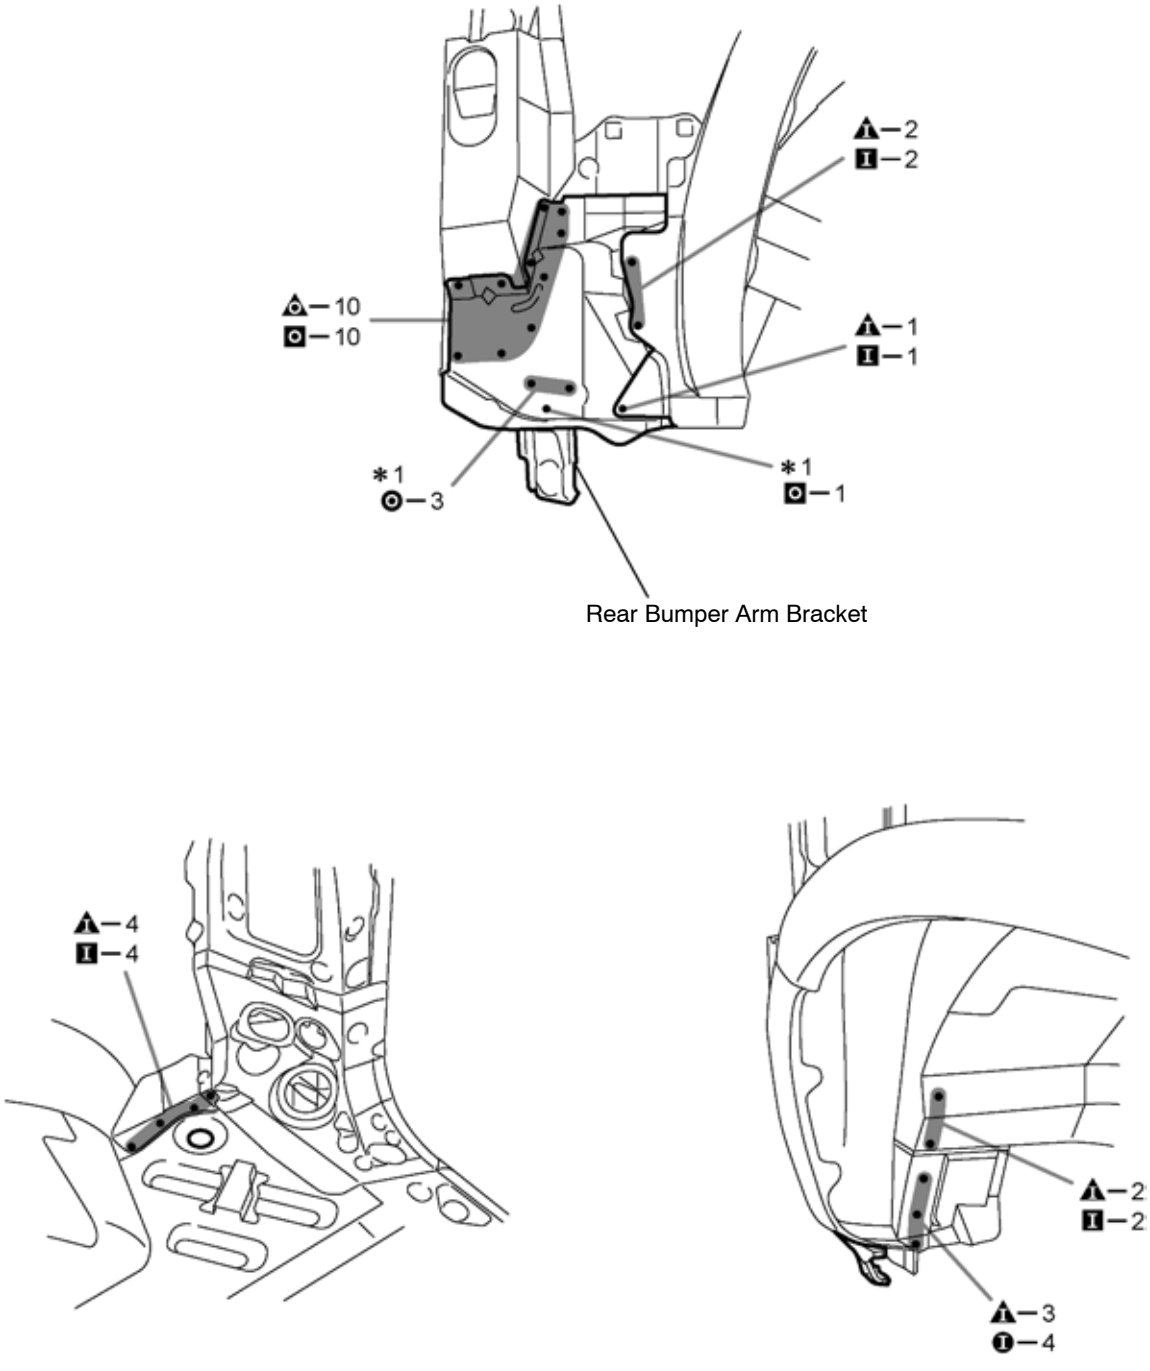

INSTALLATION POINT

1 *1 is only for installation.
2 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint·coating)
3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

REAR FLOOR SIDE PANEL REAR EXTENSION (ASSY):
5 Door

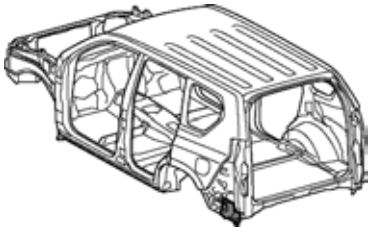
F43328A

With the back door opening side reinforce removed.


Symbol meaning

REMOVAL	: Remove Weld Points
INSTALLATION	: Spot Weld : Plug Weld


F43328B


REMOVAL·INSTALLATION

[LH]

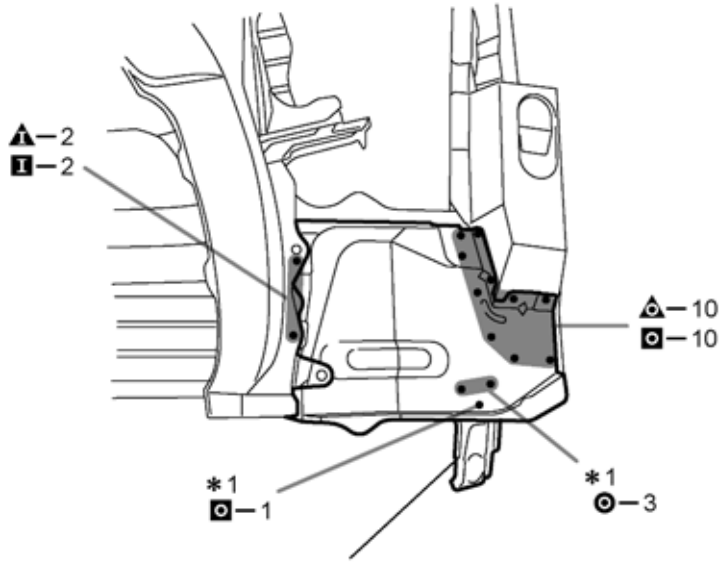

Rear Bumper Arm Bracket

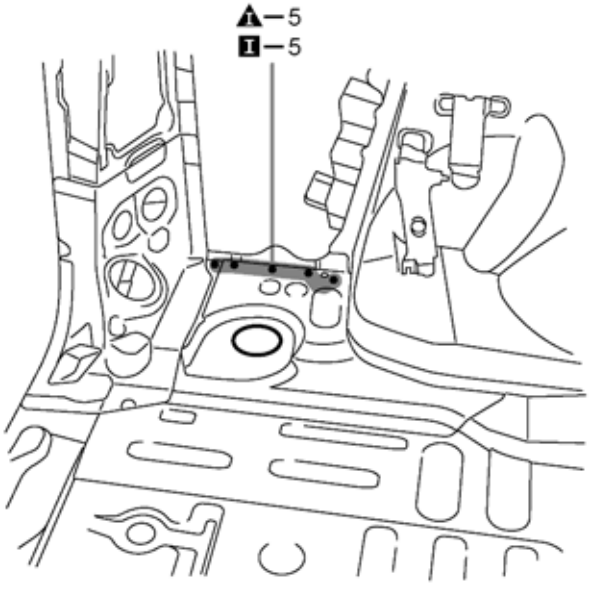

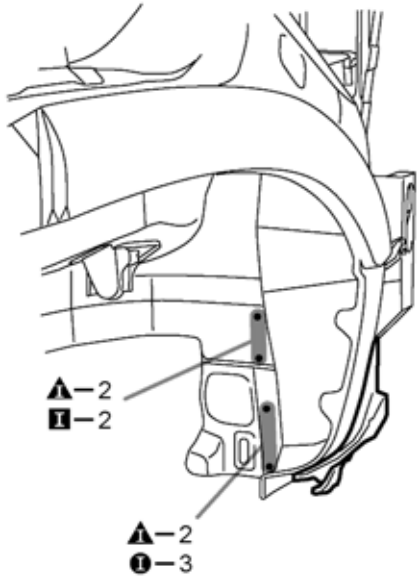



F43328


INSTALLATION POINT

1 *1 is only for installation.
2 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint·coating)
3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

[RH]

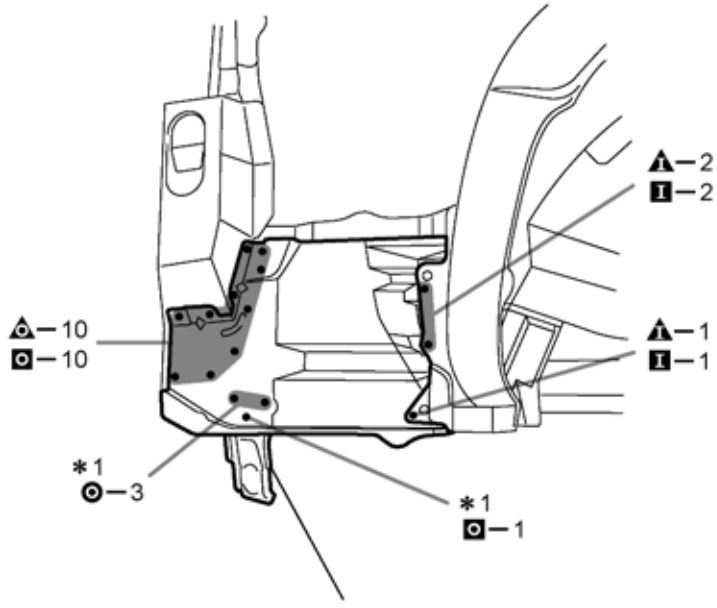

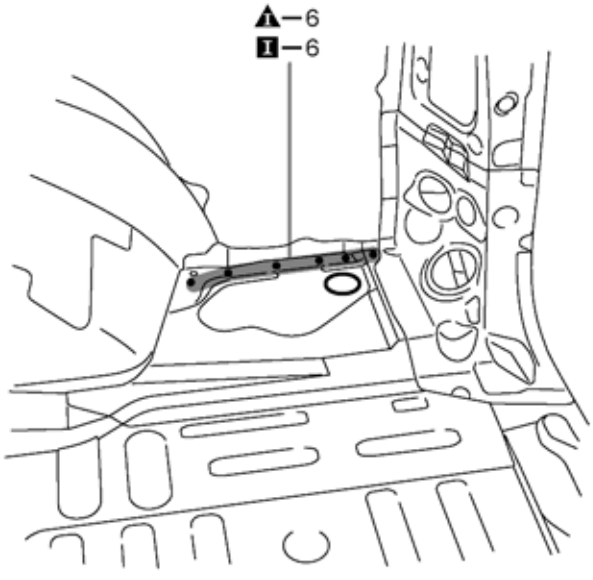

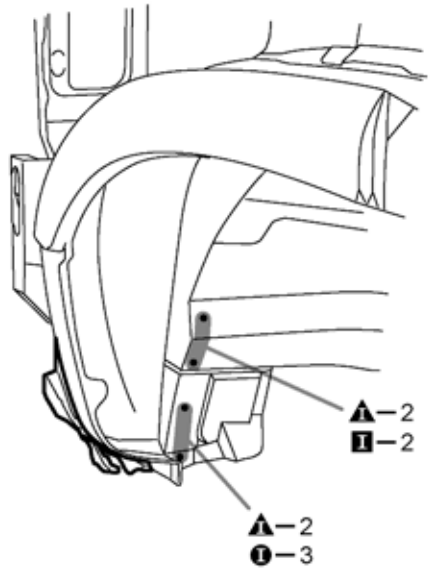

F43329

INSTALLATION POINT

1 *1 is only for installation.
2 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint·coating)
3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.