
REAR FLOOR SIDE MEMBER (CUT):

3 Door

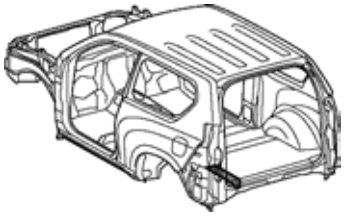

F43330A


With the rear floor pan removed.

Symbol meaning

REMOVAL	: Remove Weld Points	: Cut and Join Location
INSTALLATION	: Plug Weld	: Butt Weld

F43330B

REMOVAL·INSTALLATION

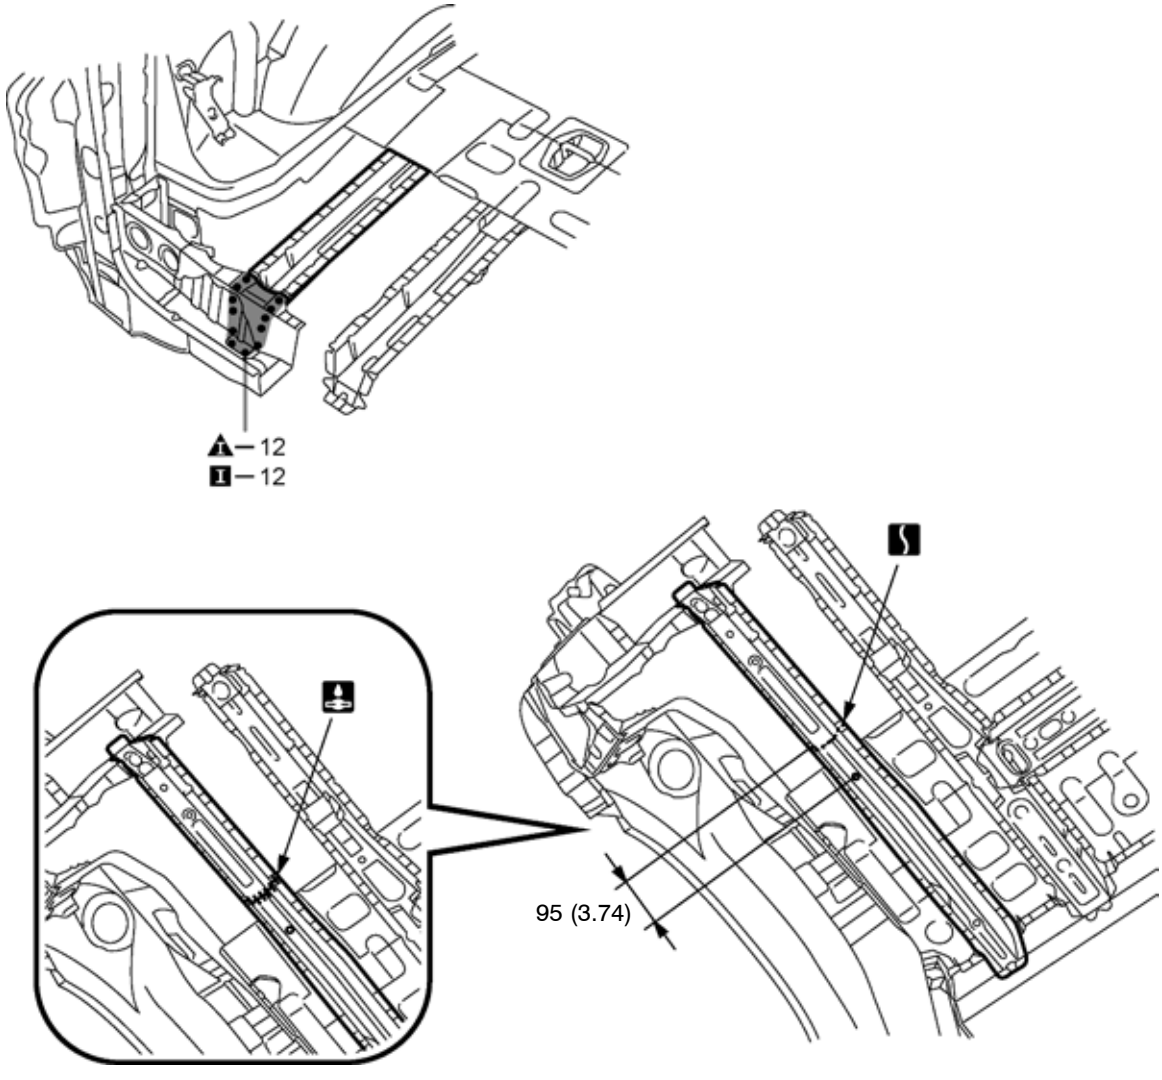

mm (in.)


F43330

INSTALLATION POINT

1 After welding, apply undercoating to the corresponding parts. (See the paint·coating)
2 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

REAR FLOOR SIDE MEMBER (CUT):

5 Door

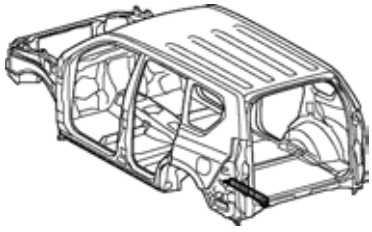

F43331A


With the rear floor pan removed.

Symbol meaning

: Remove Weld Points

F43331B

REMOVAL

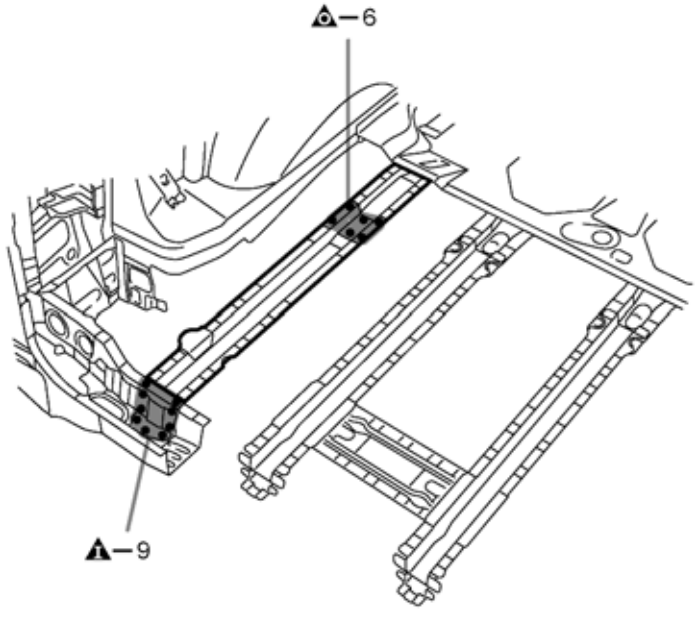


F43331


Symbol meaning

: Remove Weld Points : Plug Weld

F43383B

INSTALLATION

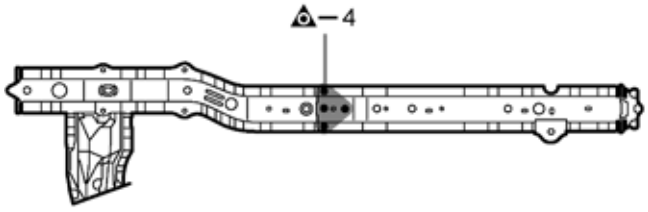

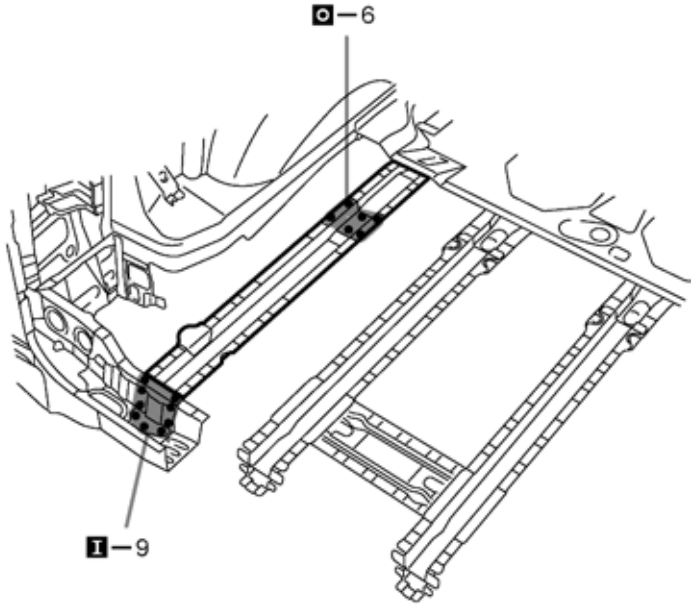

F43383

INSTALLATION POINT

1 If the entire supply part is not needed, remove the part of the supply part that is needed.
2 After welding, apply undercoating to the corresponding parts. (See the paint·coating)
3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.