
REAR FLOOR SIDE CENTER MEMBER (CUT):

3 Door

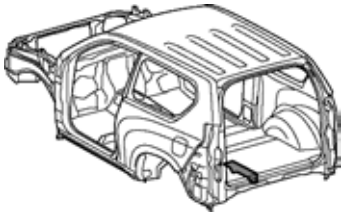

F43333A


With the rear floor pan removed.

Symbol meaning

REMOVAL		: Cut and Join Location
INSTALLATION		: Butt Weld

F43333B

REMOVAL·INSTALLATION

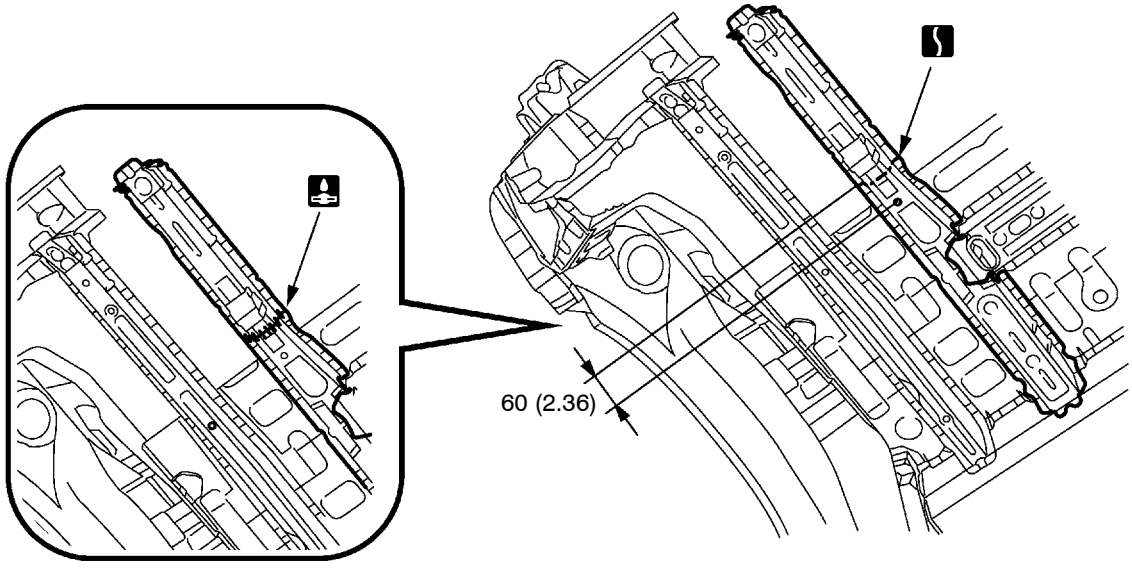


mm (in.)

F43333

INSTALLATION POINT

1 After welding, apply undercoating to the corresponding parts. (See the paint·coating)
2 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

REAR FLOOR SIDE CENTER MEMBER (CUT):
5 Door

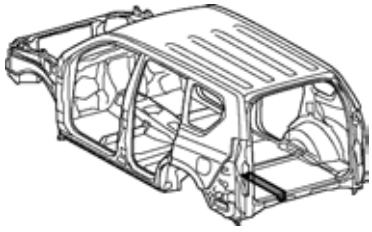
F43334A


With the rear floor crossmember No. 3 removed.

Symbol meaning

: Remove Weld Points

F43334B

REMOVAL

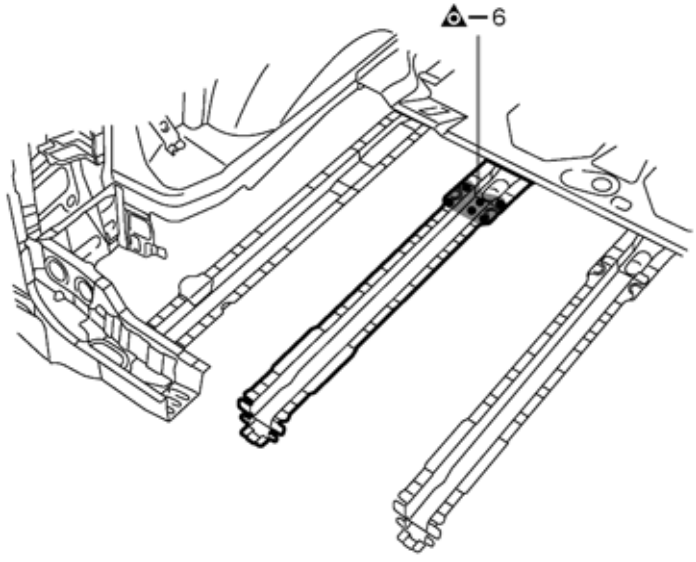


F43334

Symbol meaning

: Remove Weld Points : Plug Weld

F43384B

INSTALLATION

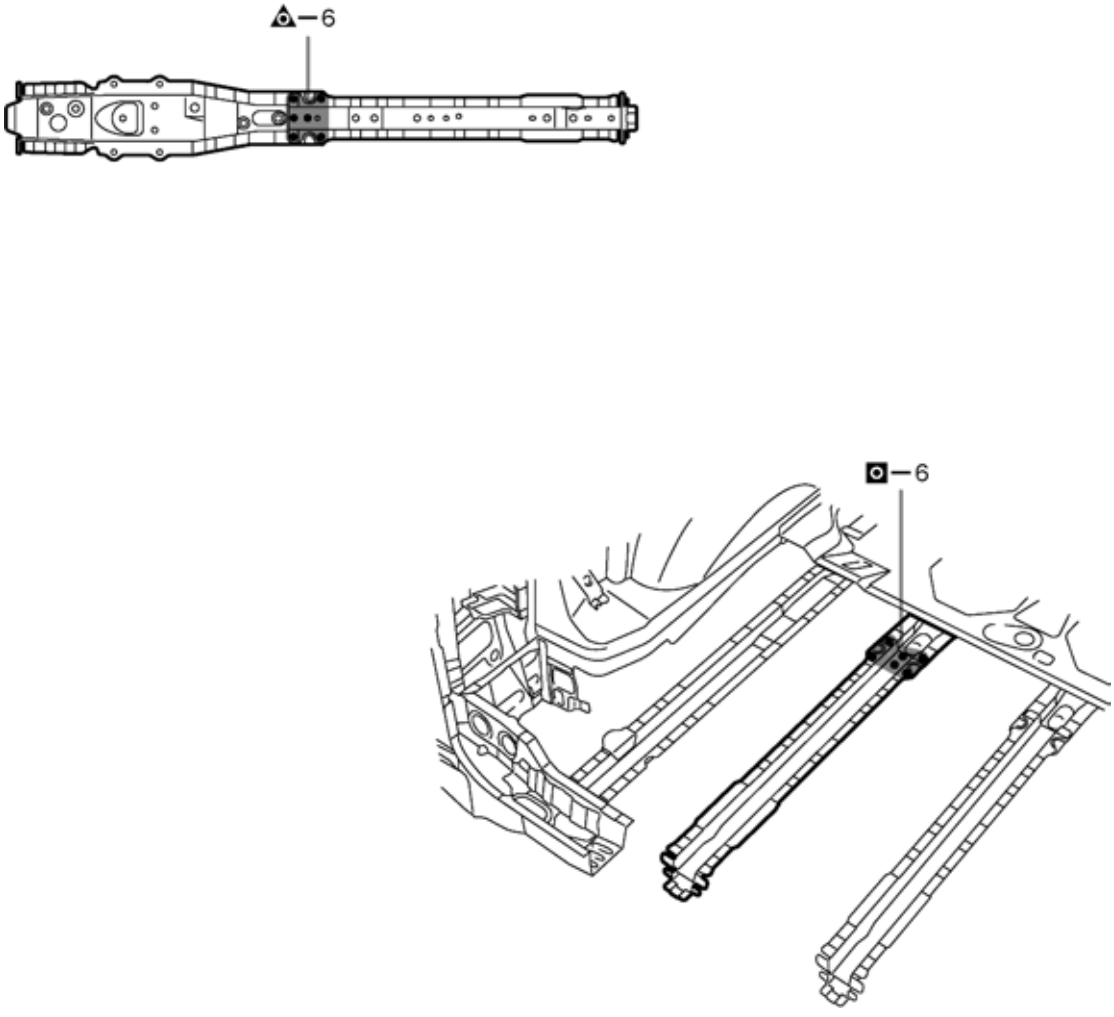

F43384

INSTALLATION POINT

1 If the entire supply part is not needed, remove the part of the supply part that is needed.
2 After welding, apply undercoating to the corresponding parts. (See the paint·coating)
3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.