7. PRECAUTIONS FOR SRS AIRBAG SYSTEM

(a) HANDLING OF A VEHICLE THAT HAS BEEN DAMAGED IN A COLLISION

(1) Refer to the TOYOTA Repair Manual for the SRS airbag system inspection procedures.

(2) If impacts are likely to occur to the front airbag sensors, side airbag sensors, rear airbag sensors, rear floor side airbag sensor or center airbag sensor remove each sensor as necessary beforehand.


(3) Do not allow the front airbag sensors, side airbag sensors, rear airbag sensors, rear floor side airbag sensor or center airbag sensor to become heated to high temperatures.

(4) Check the wire harnesses and connectors for damage and/or melting, as some areas of the airbags and seat belt pretensioners may heat up to several hundred degrees when they operate.

(b) PRECAUTIONS FOR USING AN ELECTRIC WELDER

(1) Check the Diagnostic Trouble Codes (DTCs).


1. If one or more DTCs are displayed;
   - Disconnect the negative (–) terminal cable from the battery.
   - Disconnect all the malfunctioning circuit connectors.
   - Disconnect the center airbag sensor assembly connector.
2. If DTCs are NOT displayed;
   - Inspect for damage to the electric wiring harnesses and connectors.
   - Disconnect the negative (–) terminal cable from the battery.
   - Disconnect the center airbag sensor assembly connector.

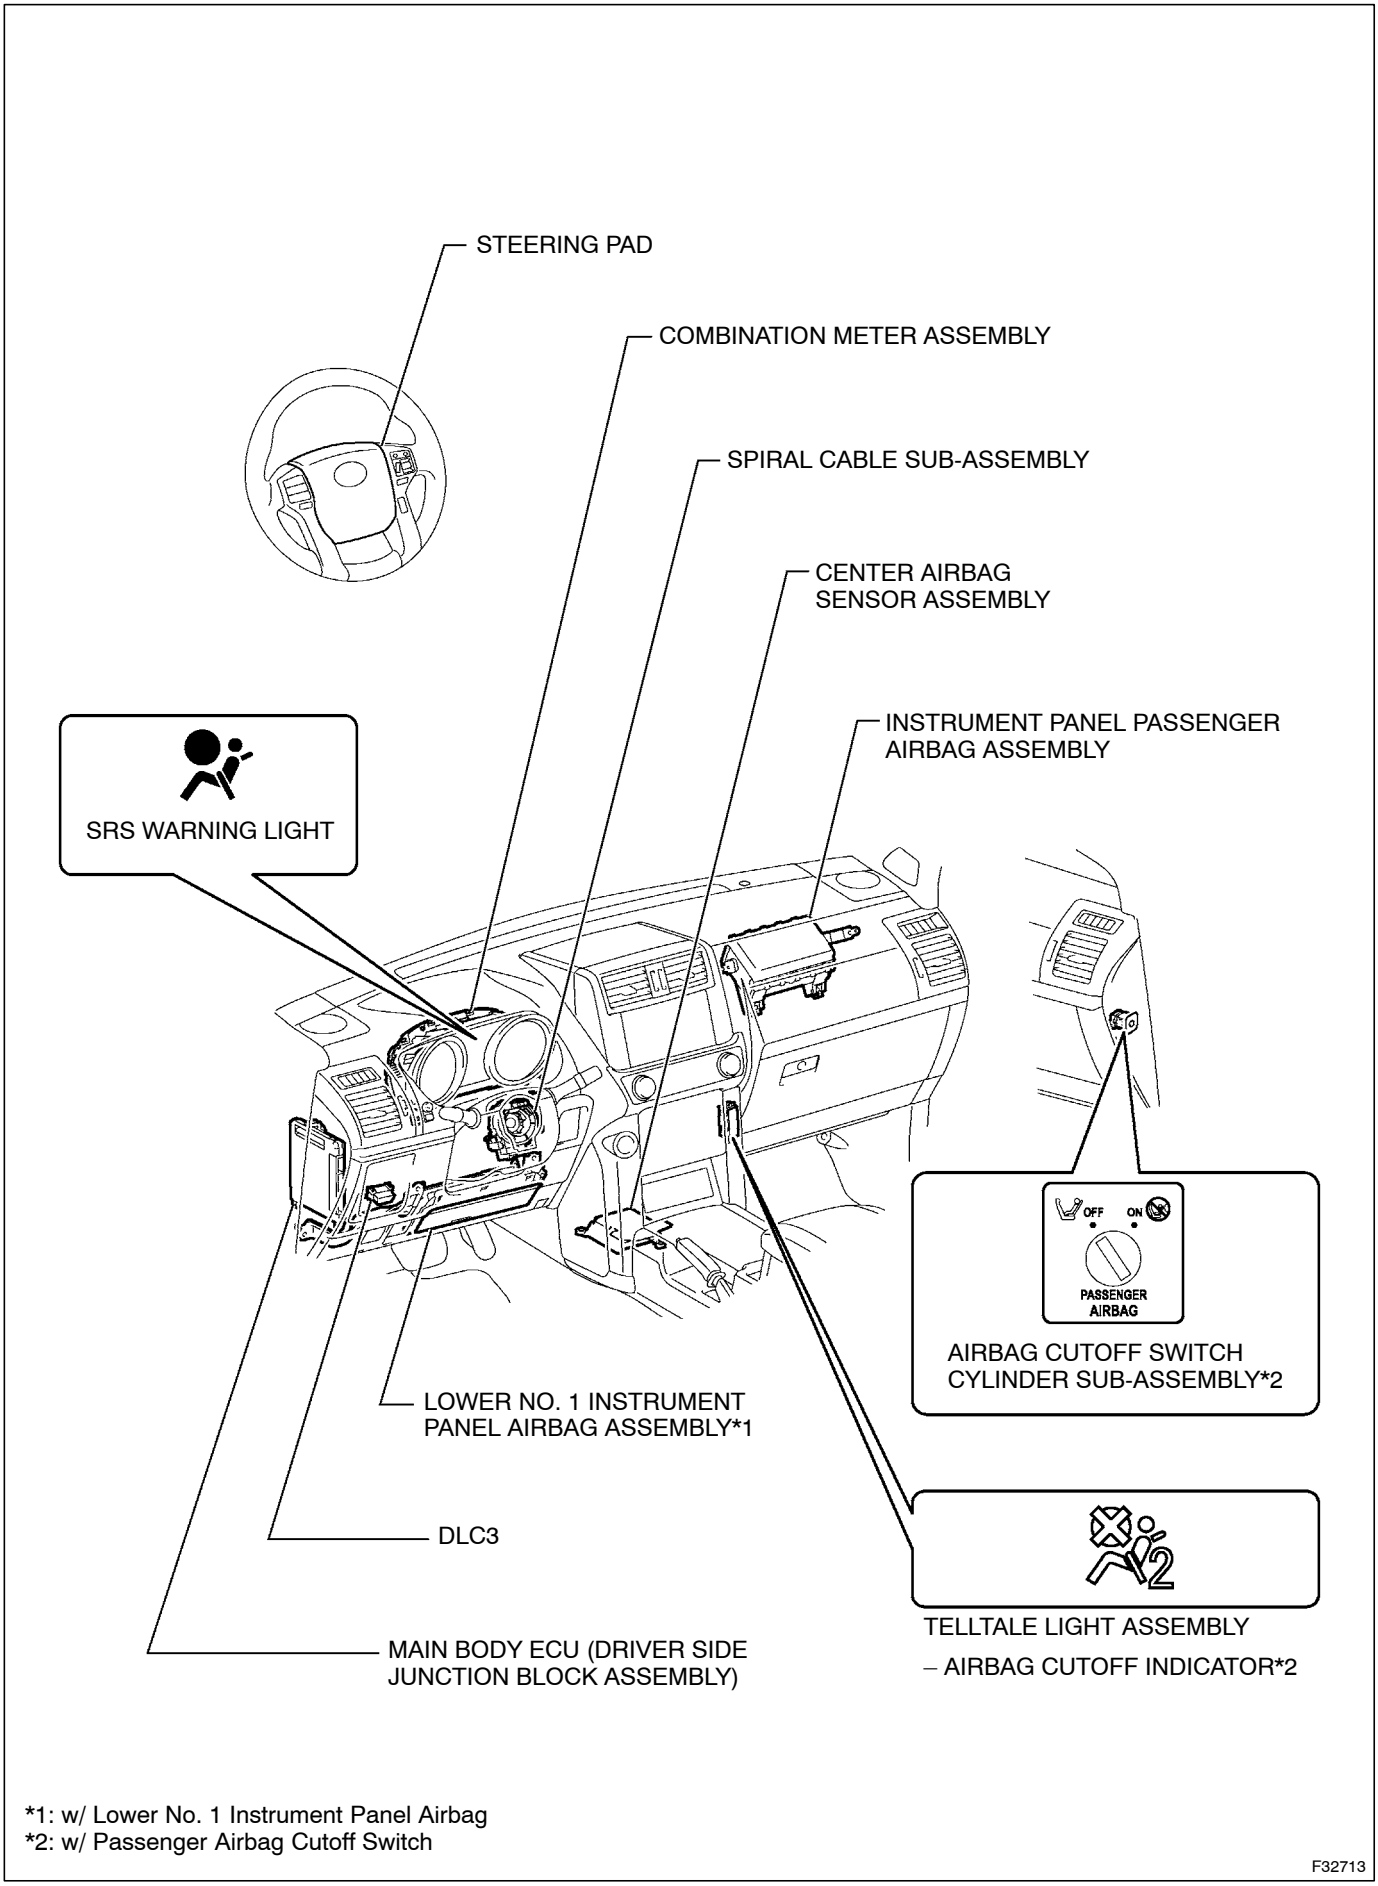

*1: w/ Lower No. 1 Instrument Panel Airbag
*2: w/ Passenger Airbag Cutoff Switch


F32713

for 3 Door:

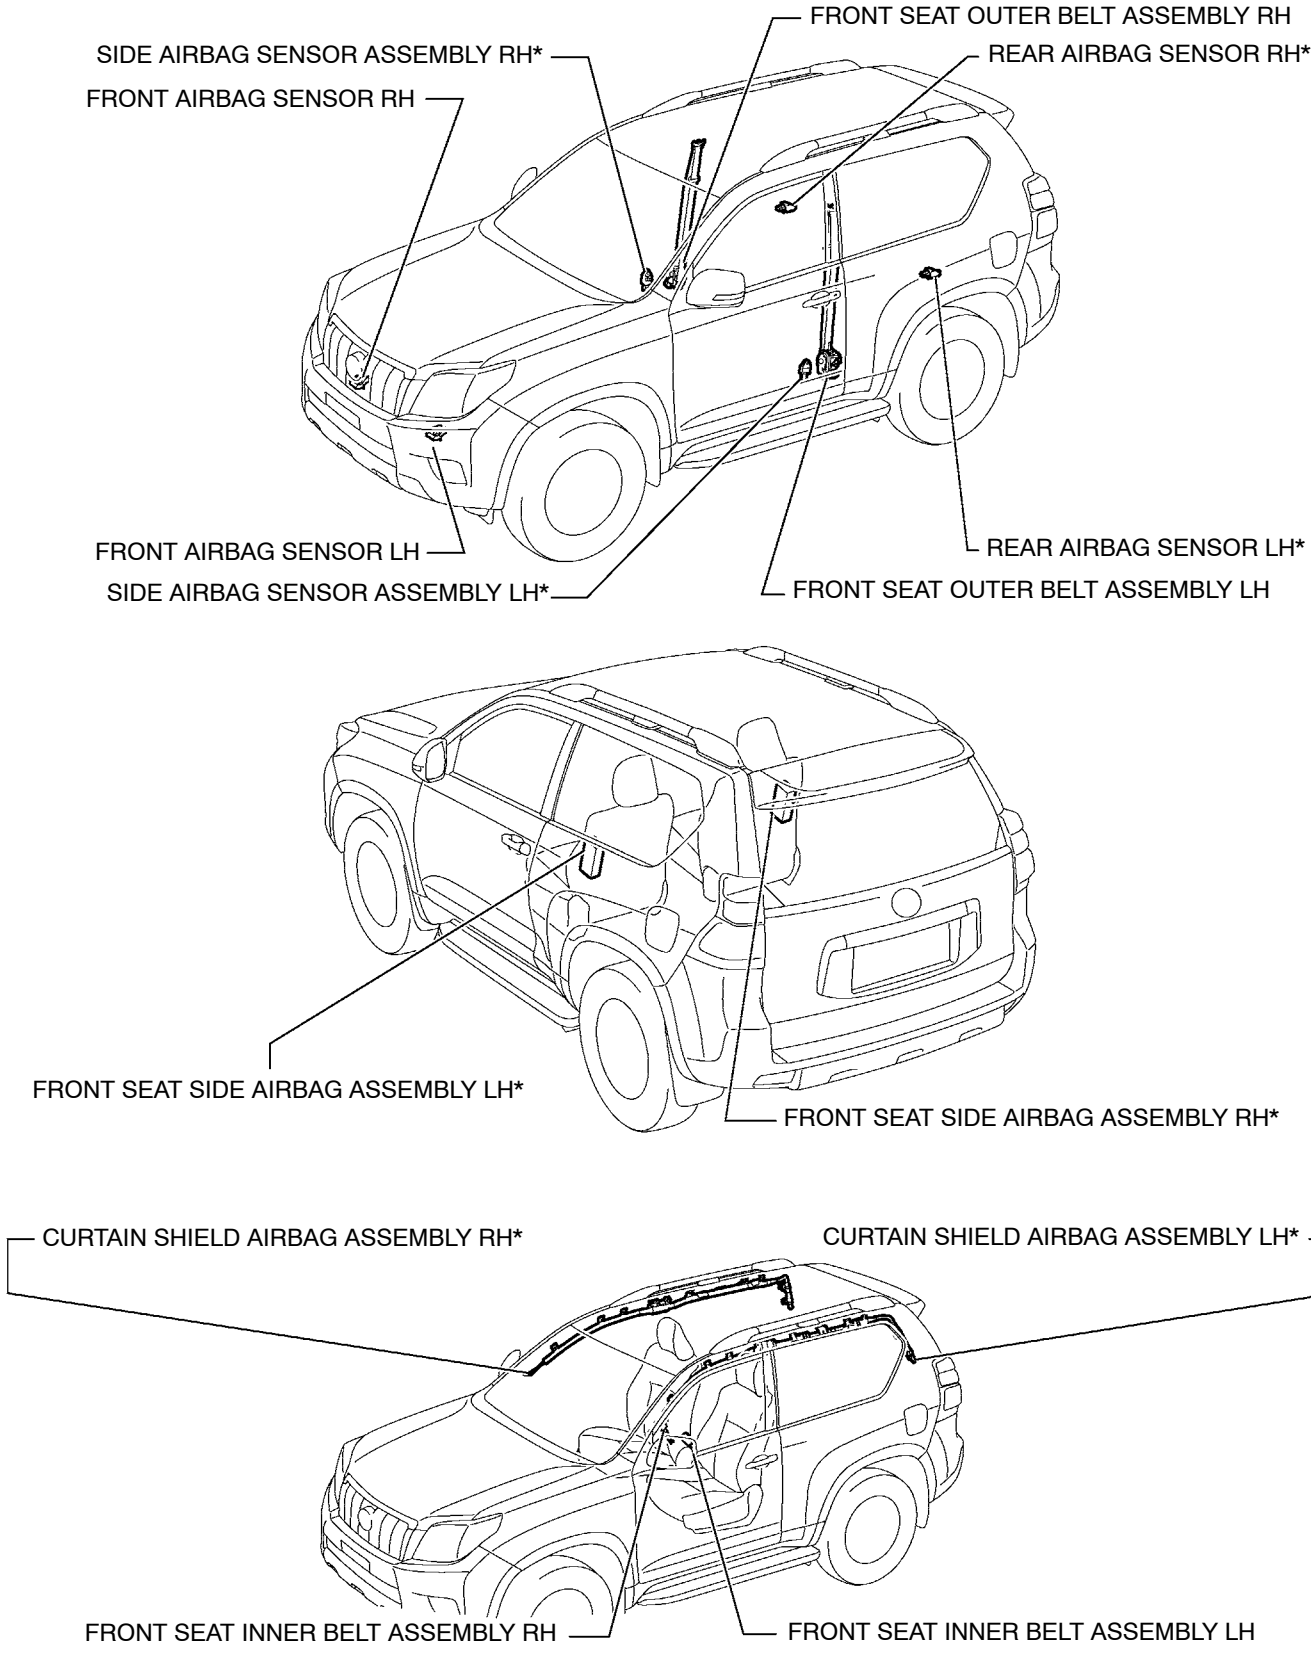

*: w/ Side Airbag

F32712

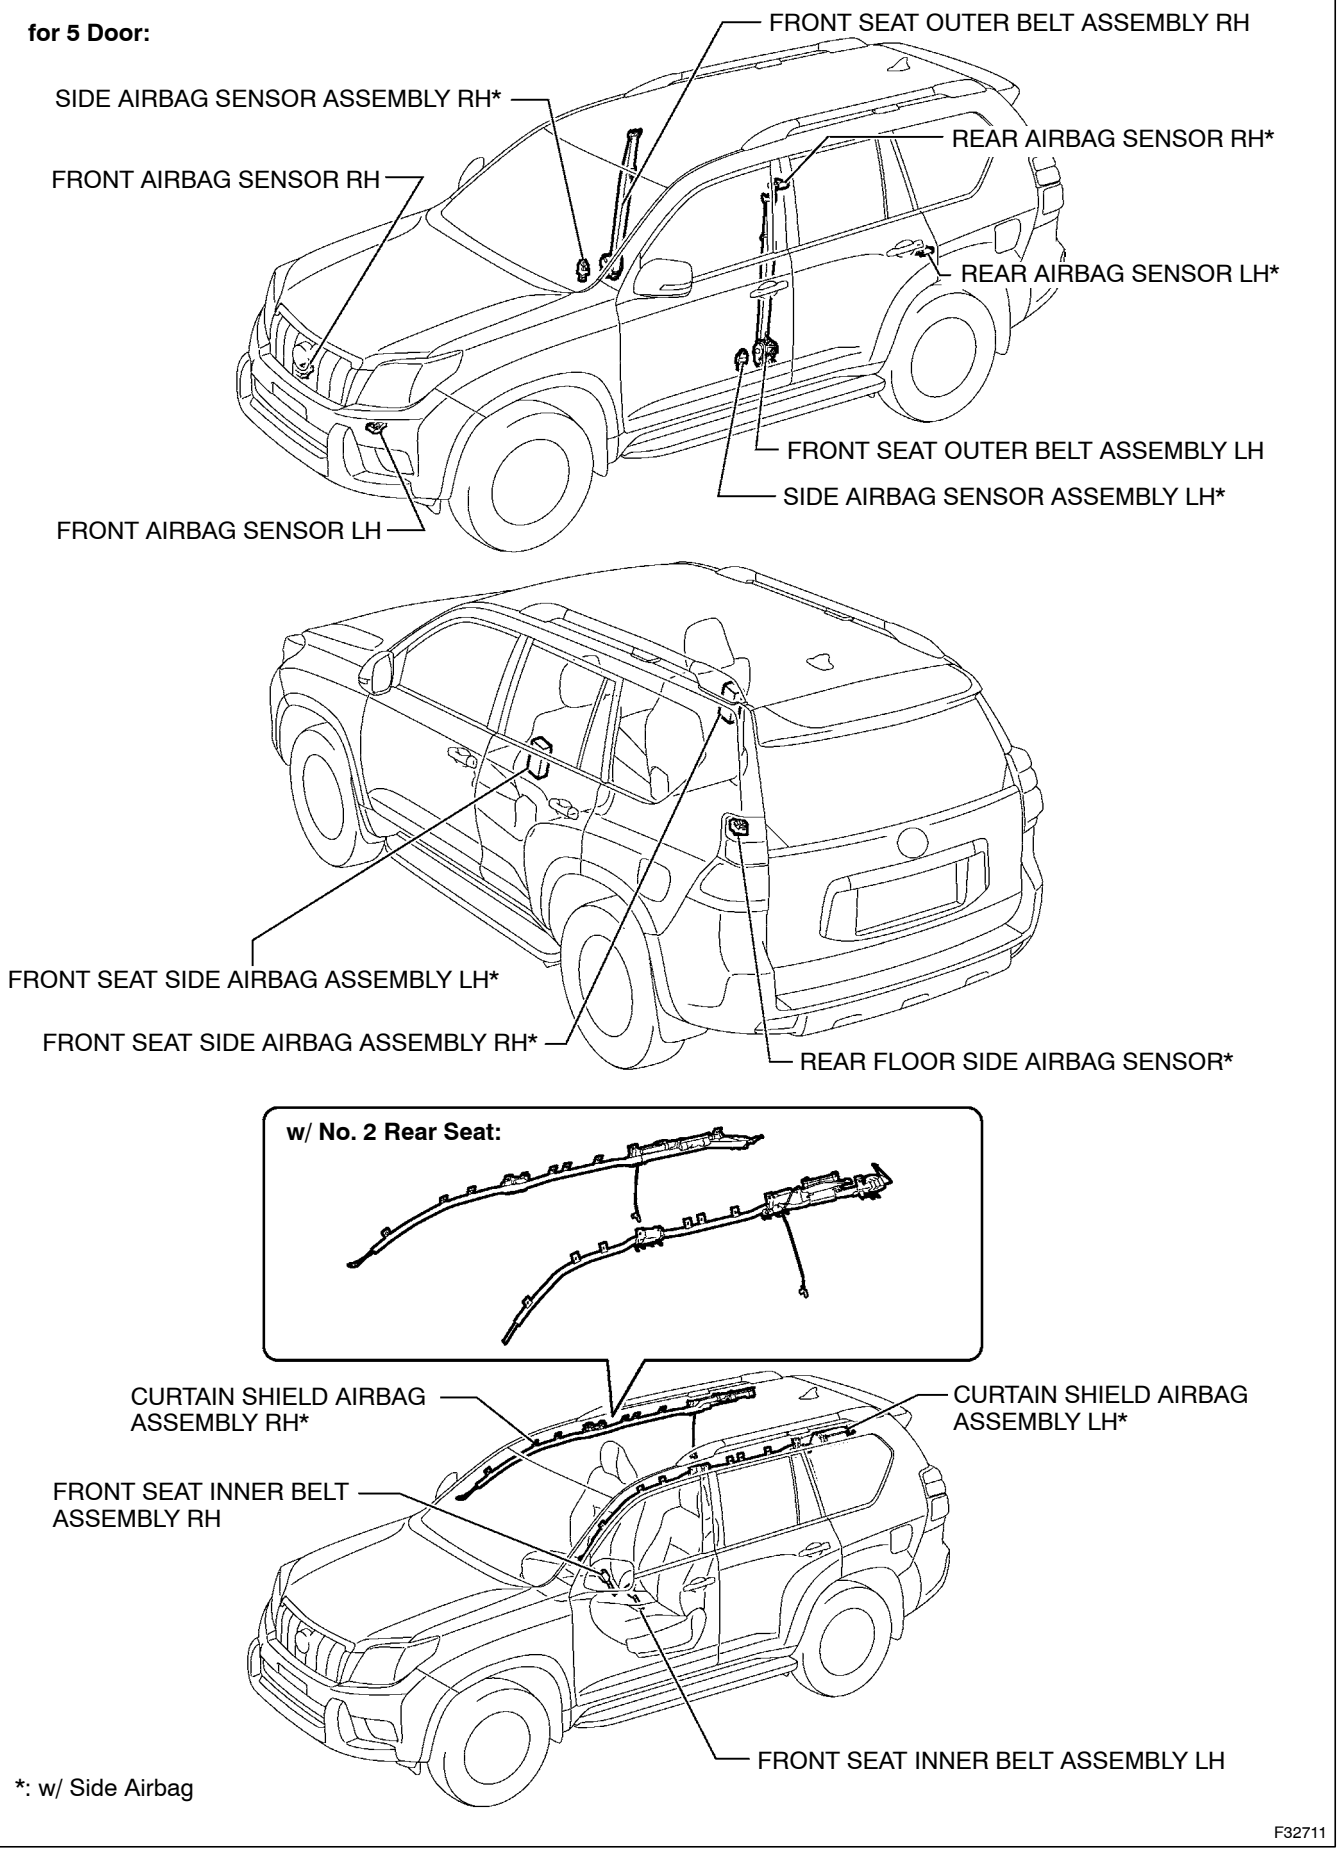
for 5 Door:
FRONT SEAT OUTER BELT ASSEMBLY RH
SIDE AIRBAG SENSOR ASSEMBLY RH*
REAR AIRBAG SENSOR RH*
FRONT AIRBAG SENSOR RH
REAR AIRBAG SENSOR LH*
FRONT SEAT OUTER BELT ASSEMBLY LH
SIDE AIRBAG SENSOR ASSEMBLY LH*
FRONT AIRBAG SENSOR LH
FRONT SEAT SIDE AIRBAG ASSEMBLY LH*
FRONT SEAT SIDE AIRBAG ASSEMBLY RH*
REAR FLOOR SIDE AIRBAG SENSOR*
w/ No. 2 Rear Seat:
CURTAIN SHIELD AIRBAG ASSEMBLY RH*
CURTAIN SHIELD AIRBAG ASSEMBLY LH*
FRONT SEAT INNER BELT ASSEMBLY RH
FRONT SEAT INNER BELT ASSEMBLY LH
*: w/ Side Airbag
F32711