



3. ILLUSTRATION OF WELD POINT SYMBOLS



REMOVAL

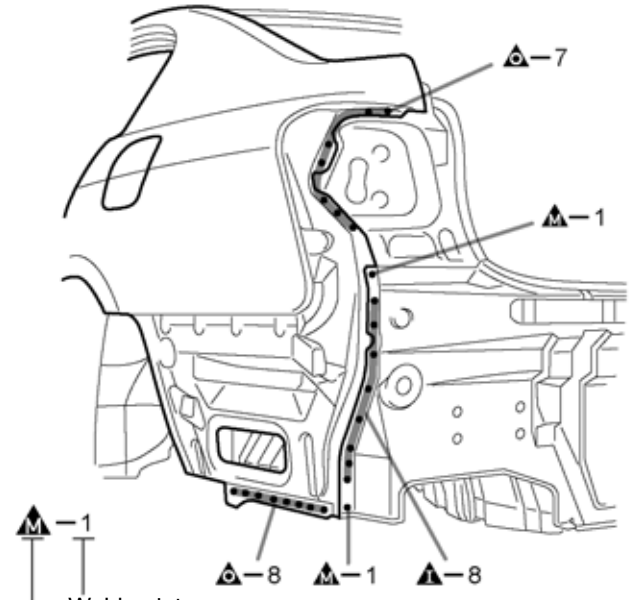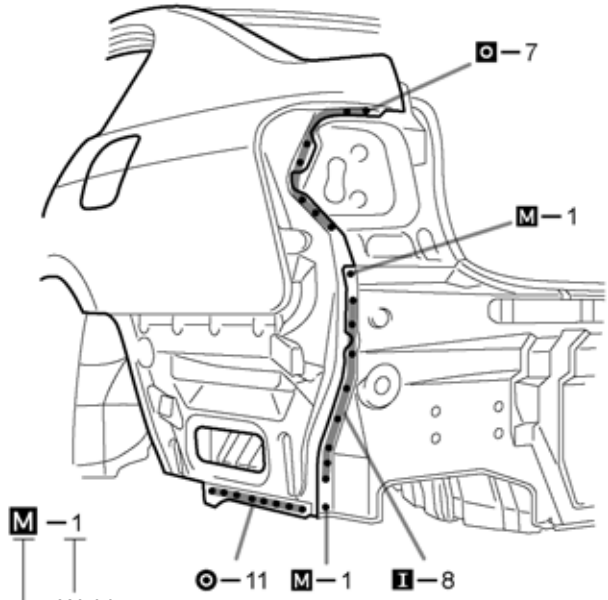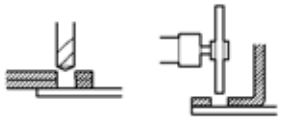

INSTALLATION

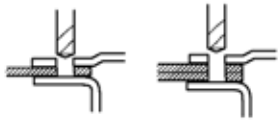

SYMBOLS	MEANING	ILLUSTRATION
▲	Remove Weld Points	
O	Position of Panel Being Replaced is on Outside	
M	Position of Panel Being Replaced is in Center	
I	Position of Panel Being Replaced is on Inside	

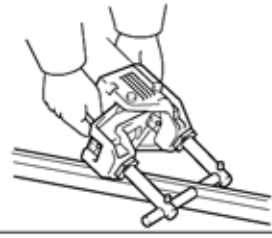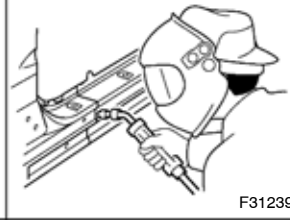SYMBOLS	MEANING	ILLUSTRATION
●	Spot Welding	
■	Plug Welding	
+	Spot MIG Welding	

F31239