
BODY PANEL SEALING AREAS

1 Be sure to apply body sealer to the body panel joints and door edges (tip of outer panel folded part), etc., to waterproof and rustproof them.
HINT:
- *Apply degreasing agent to a clean cloth and clean the sealer application areas.*
- *After removing the applied spot sealer from the sealer application areas using thinner or equivalent, rust-proof the areas by applying primer or equivalent. Then apply body sealer.*
- *If sealer is unnecessarily applied to an area, apply degreasing agent to a clean cloth and clean off the body sealer immediately.*


++++++++++	Flat Finishing	———	No Flat Finishing

1. ENGINE COMPARTMENT

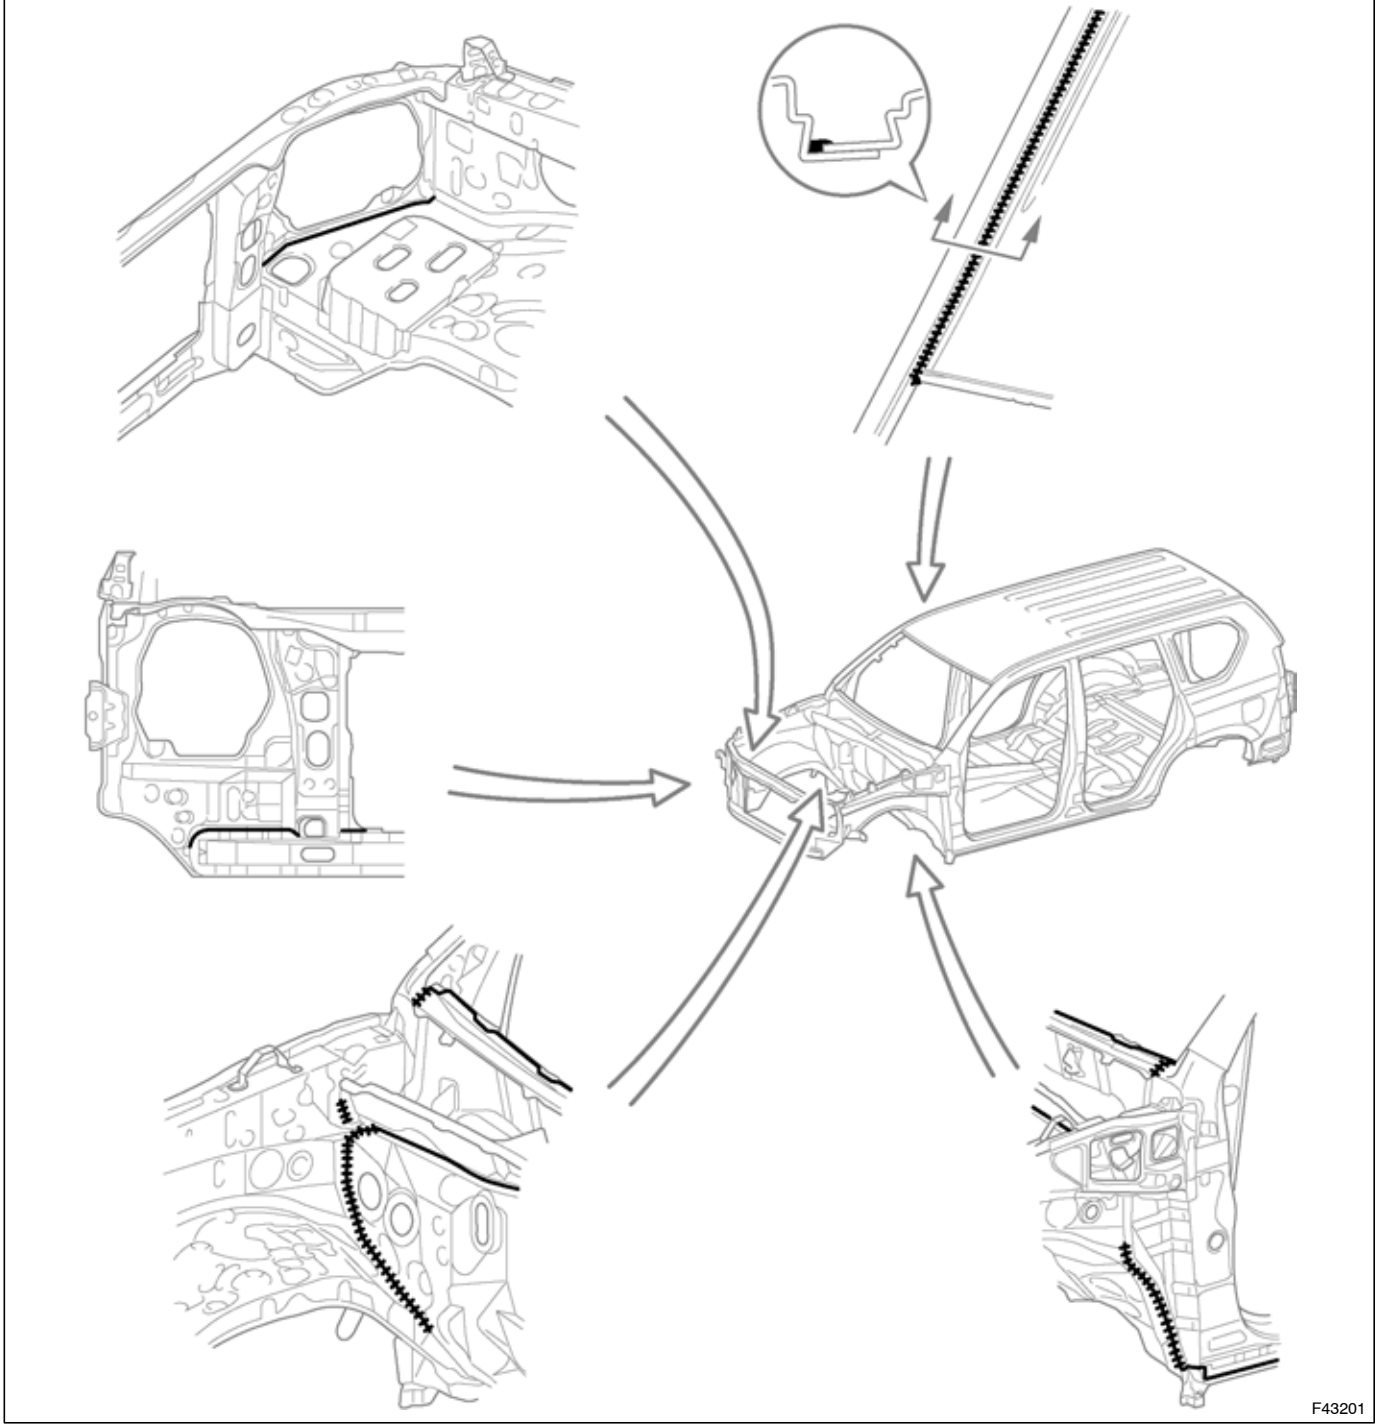


2. INSIDE

[3 Door]

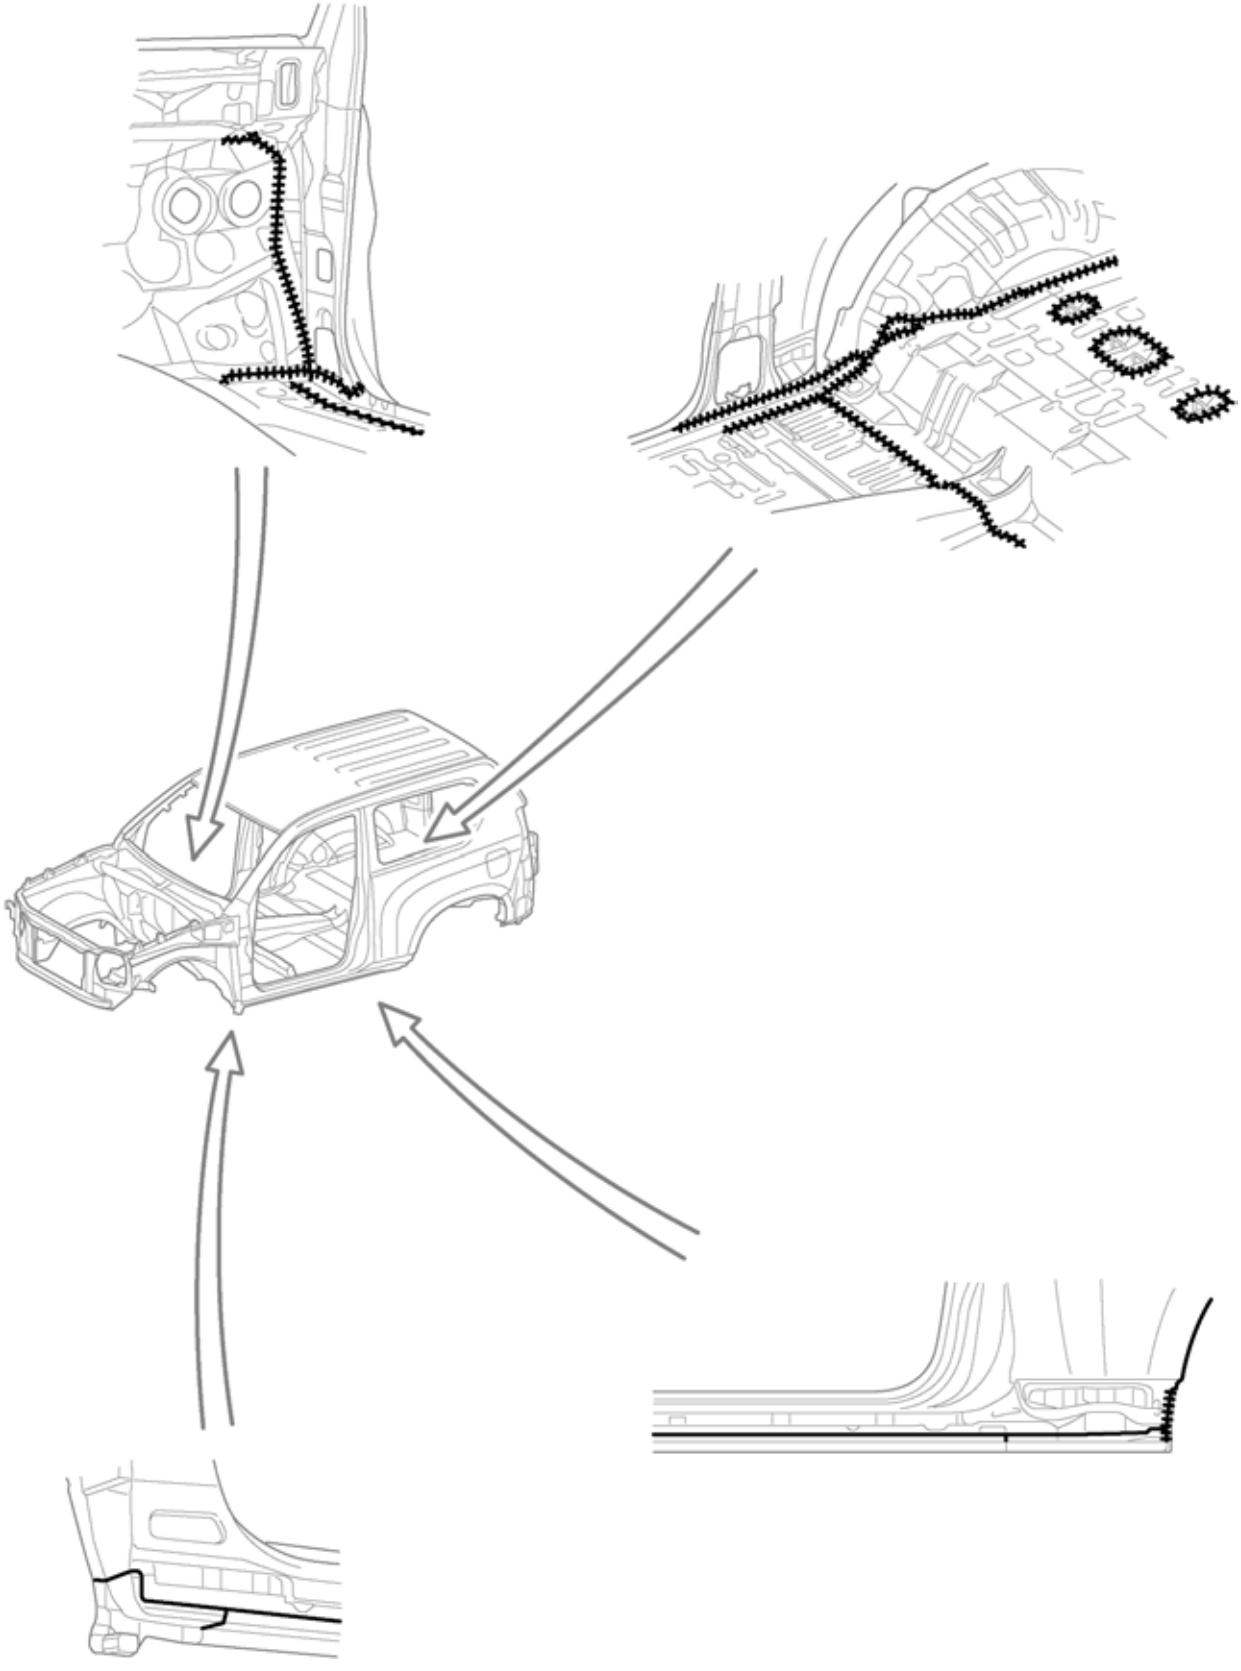

F43202


[5 Door]

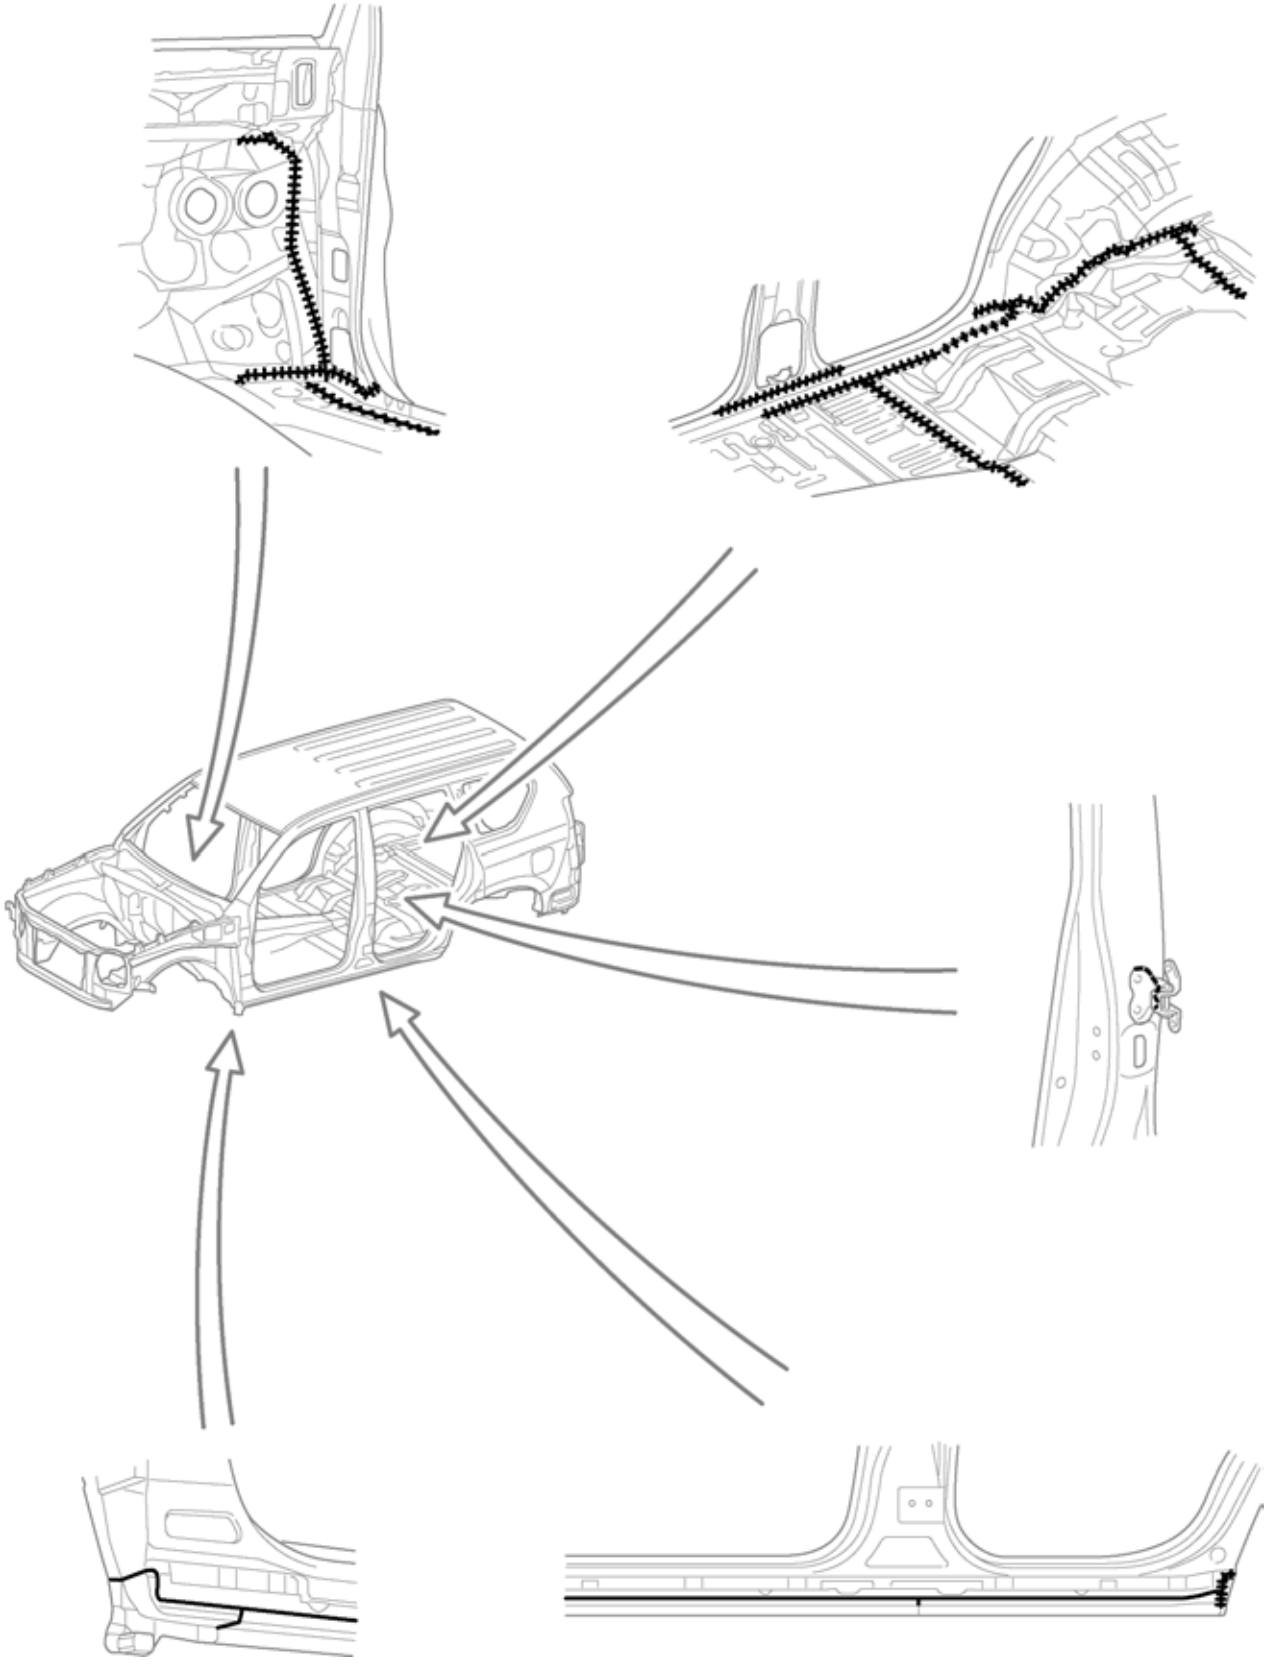

F43203


3. OUTSIDE

[3 Door]

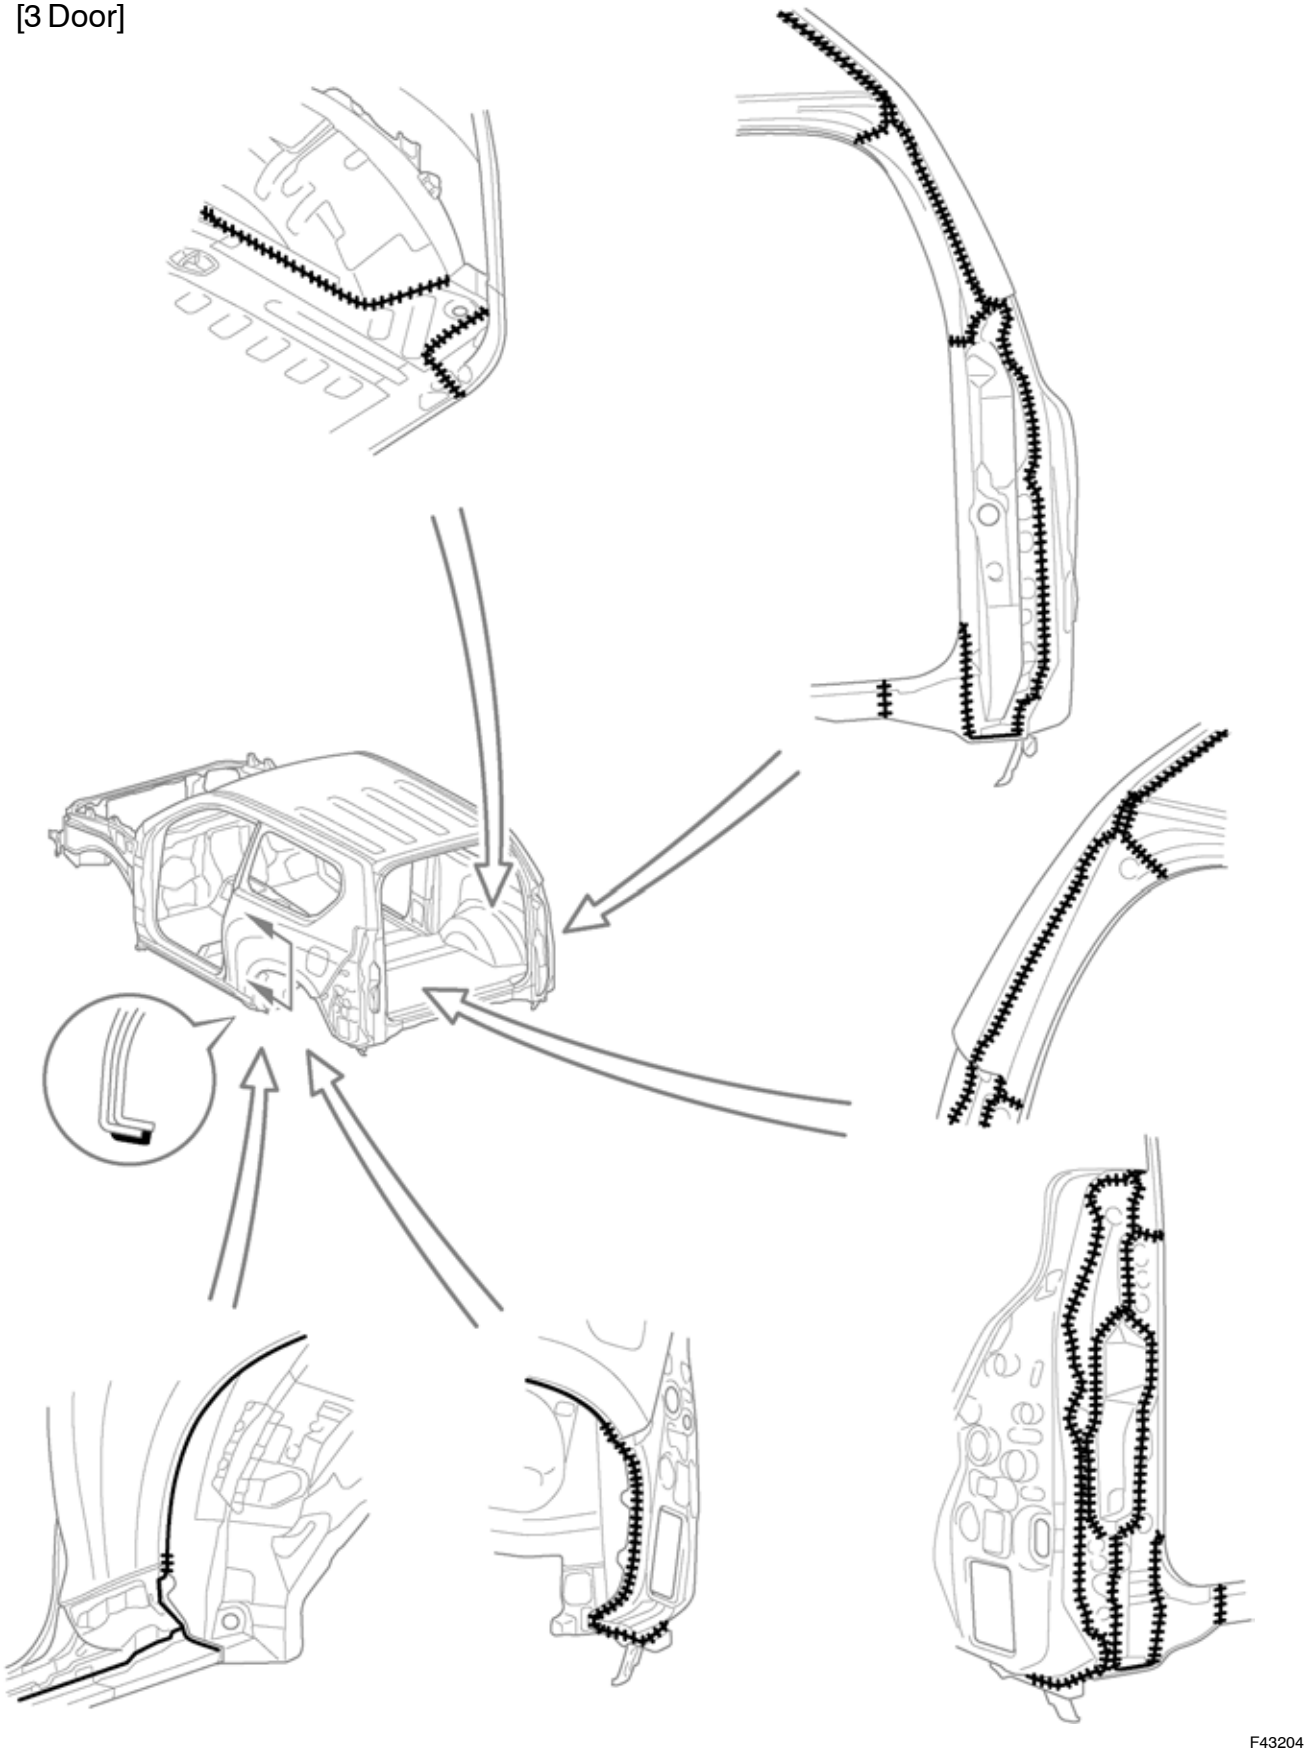

F43204


[5 Door]

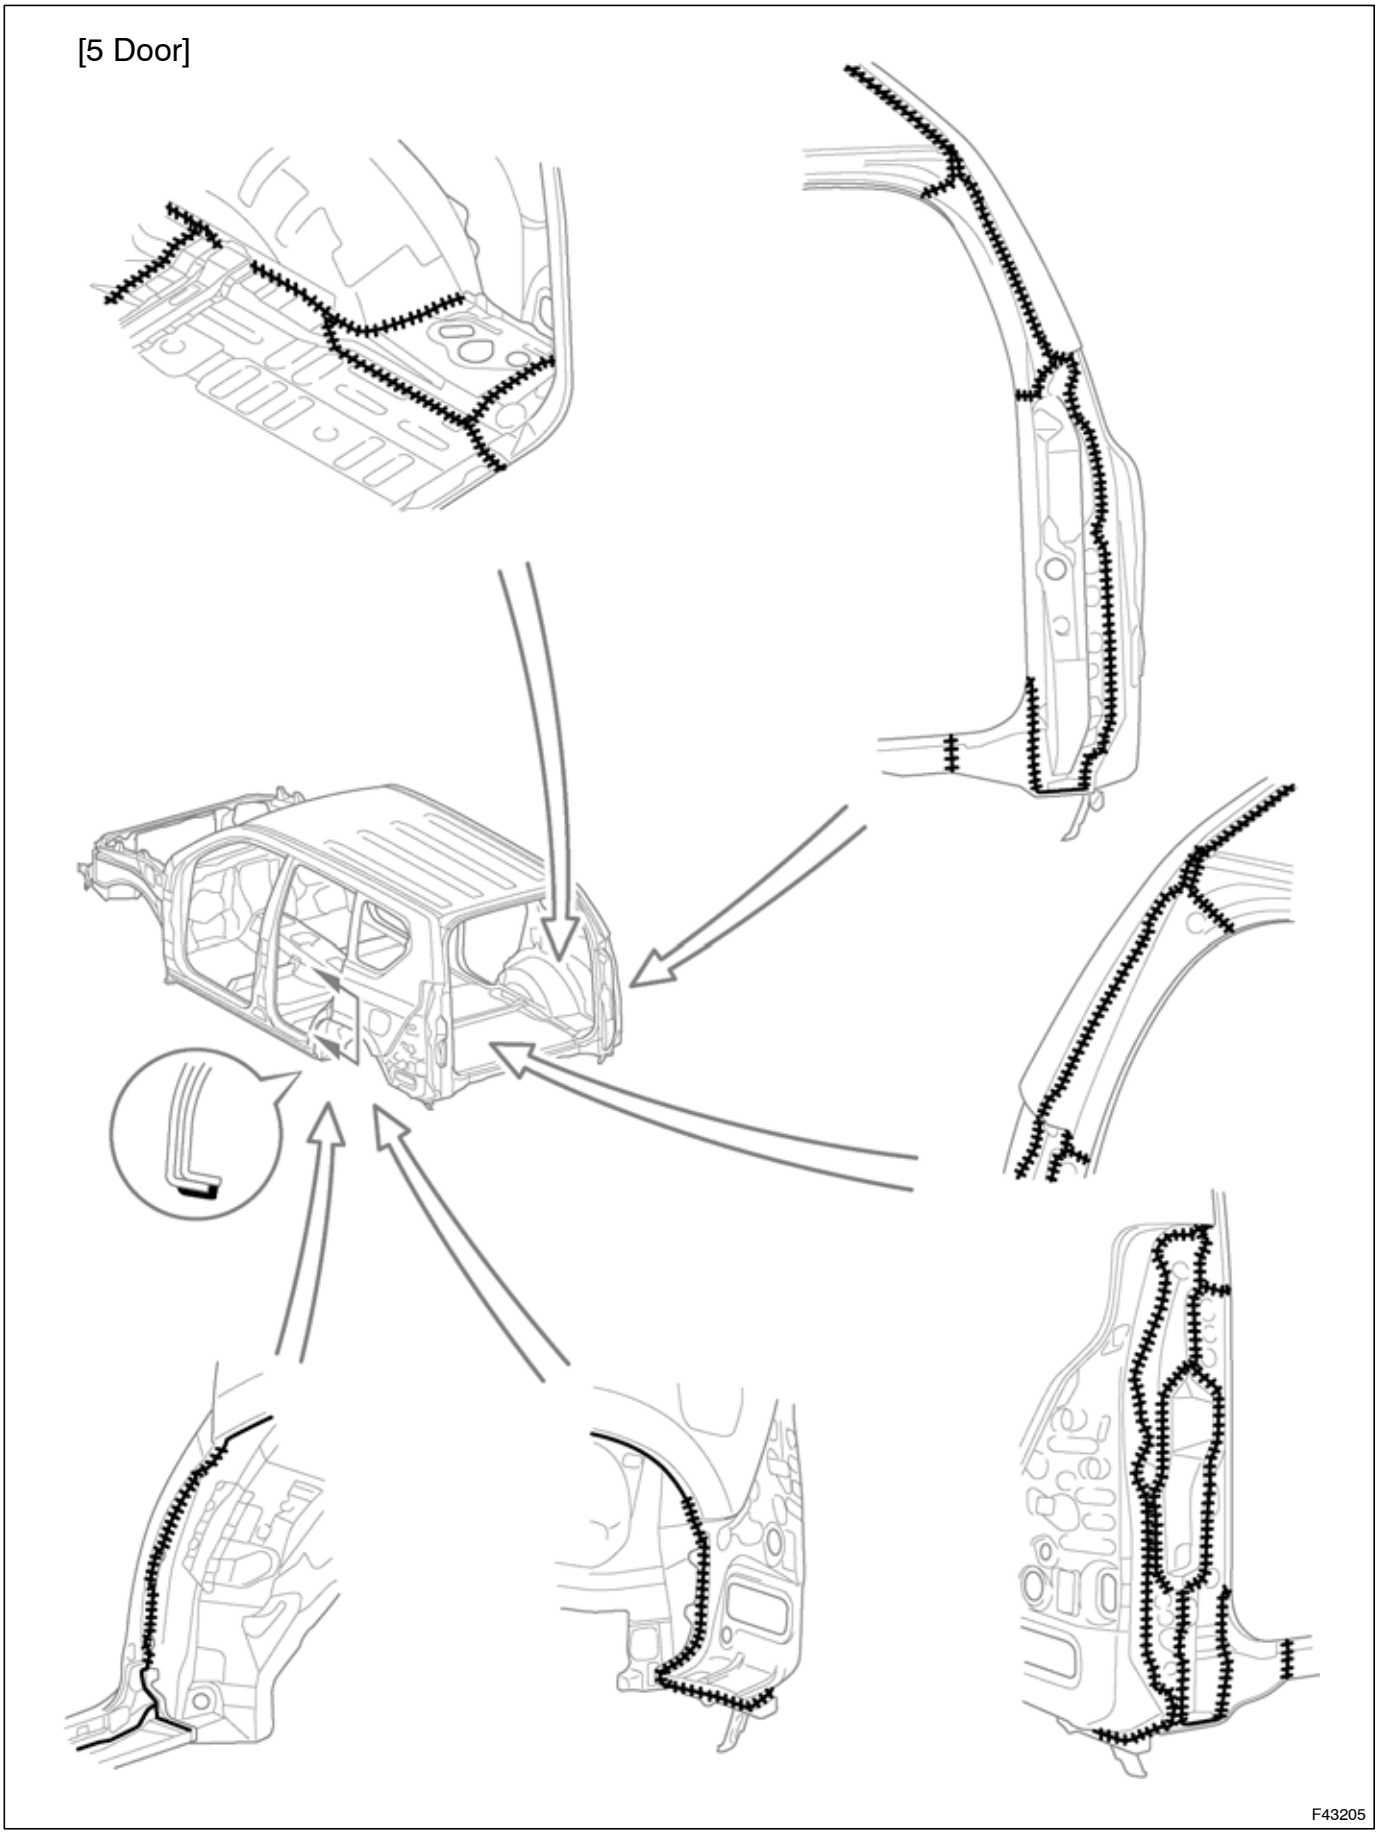


F43205

4. DOOR PARTS


[3 Door, 5 Door]

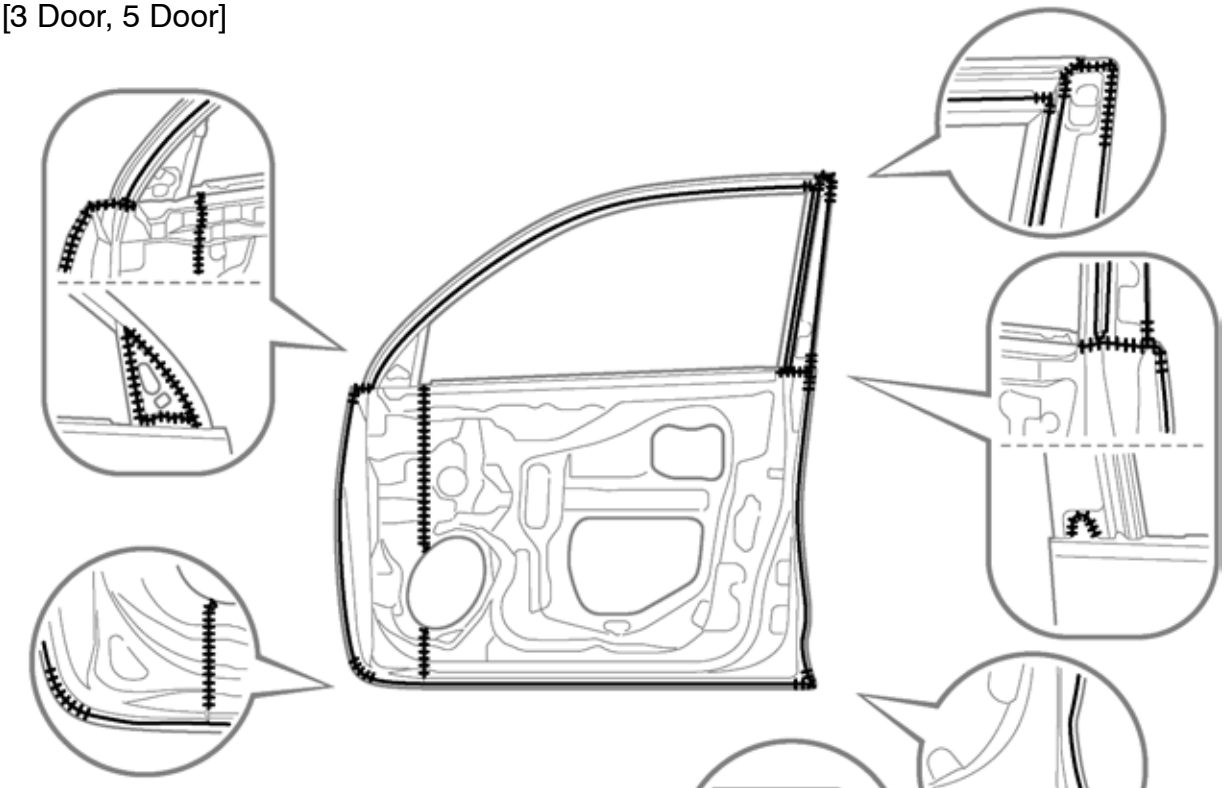

[5 Door]

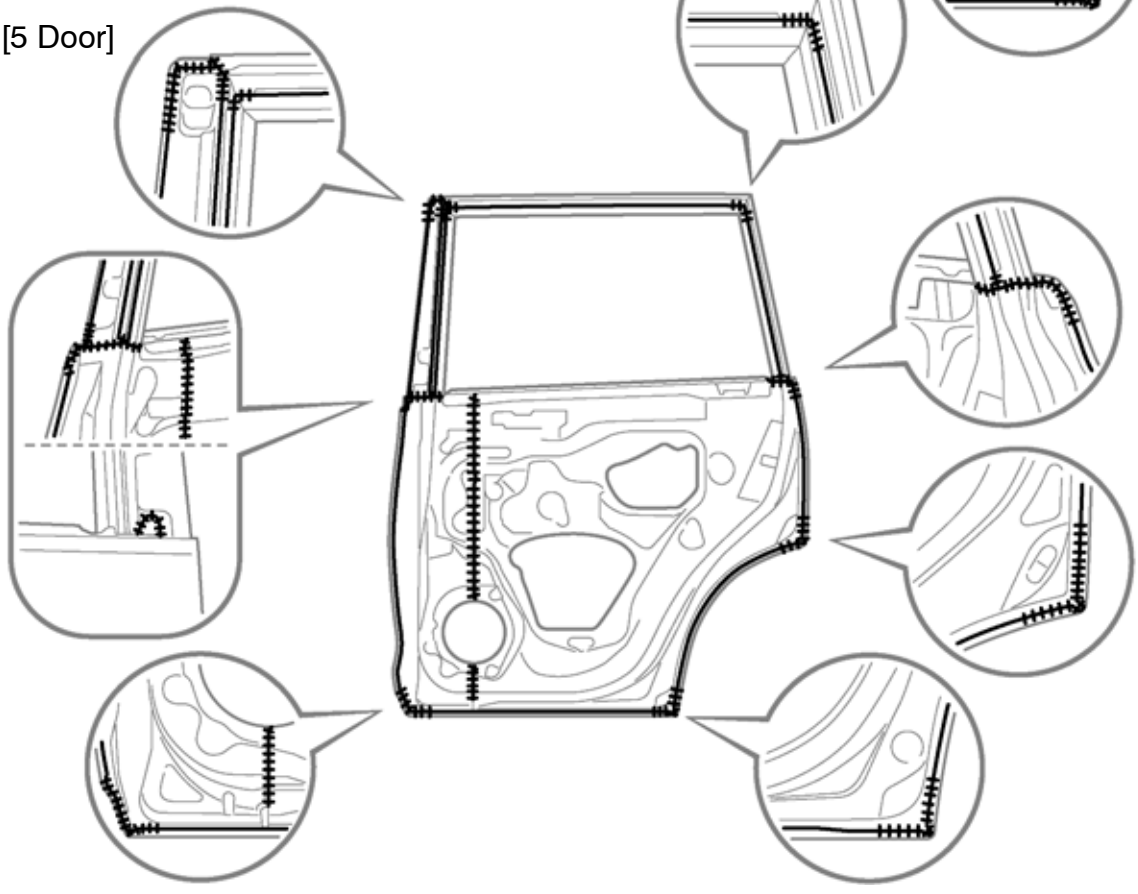


F43206

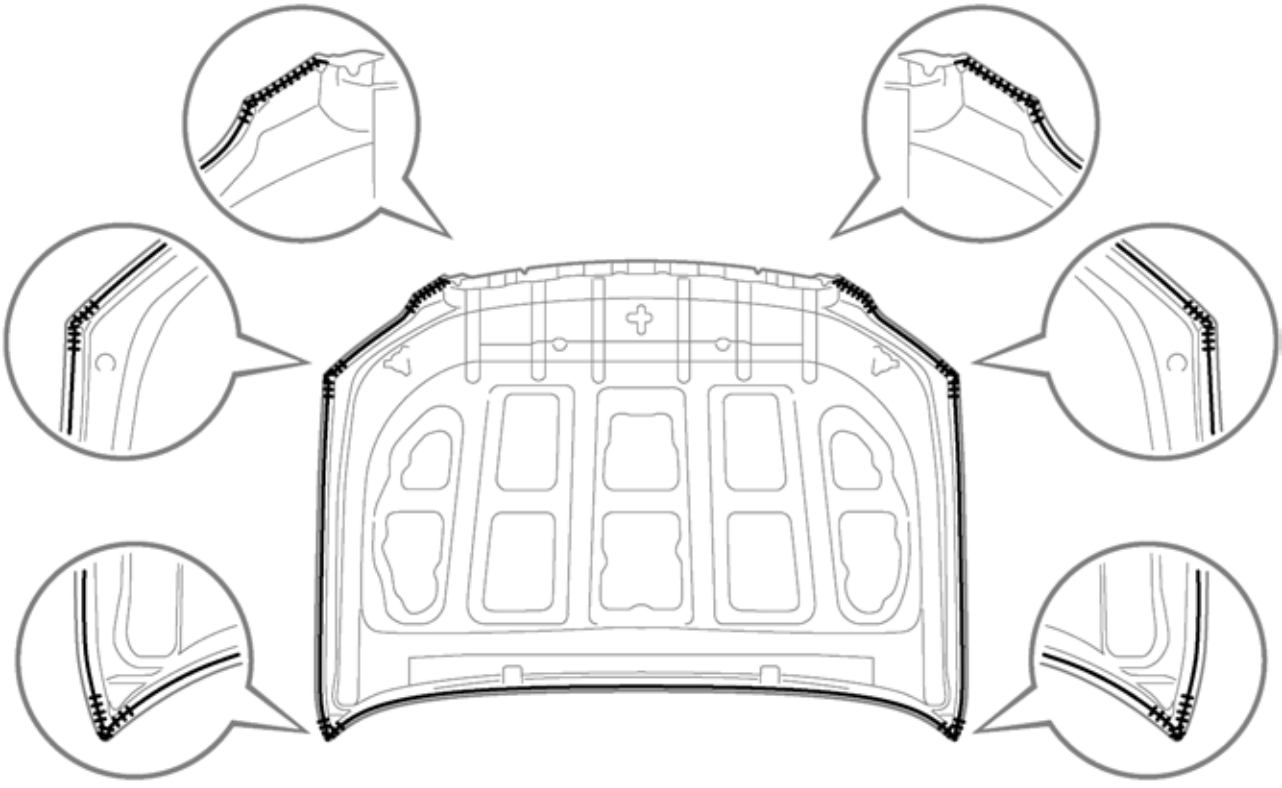


F43207

[w/o Tire Carrier]

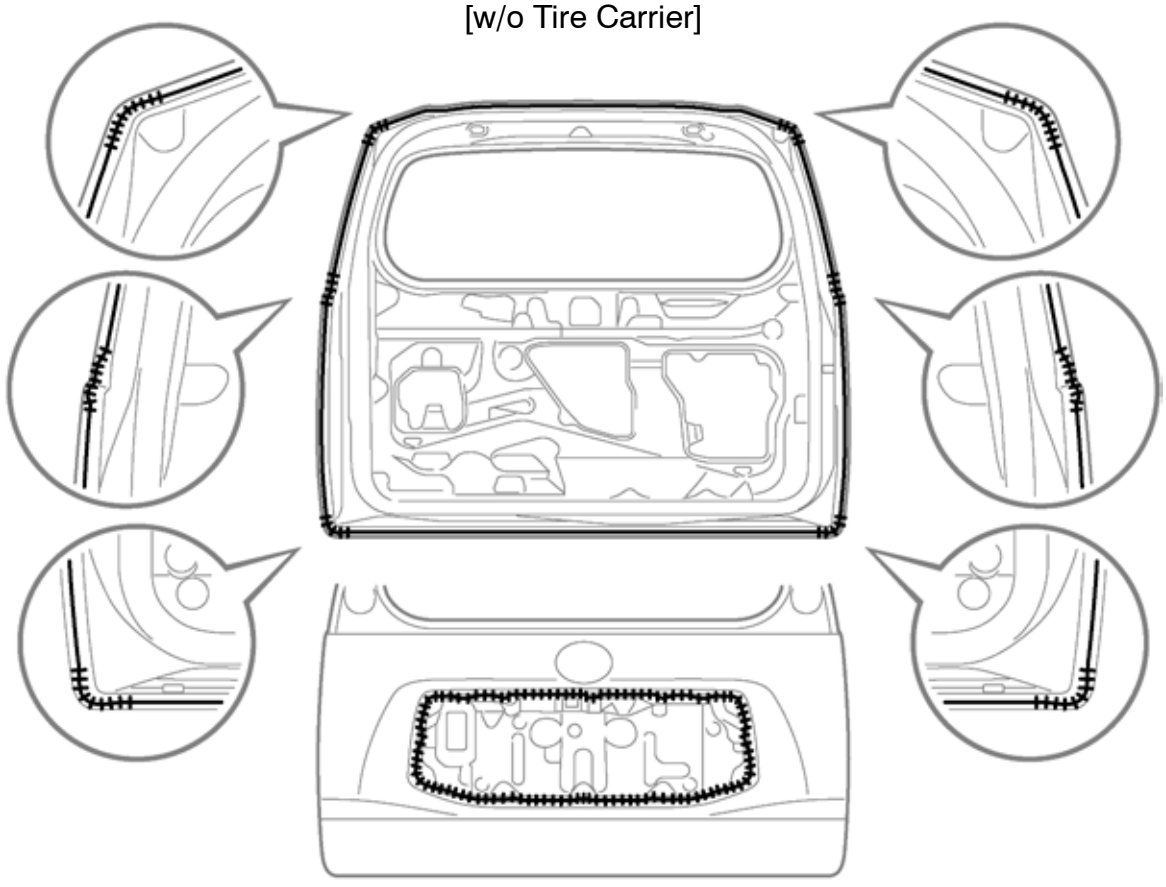

[w/ Tire Carrier]

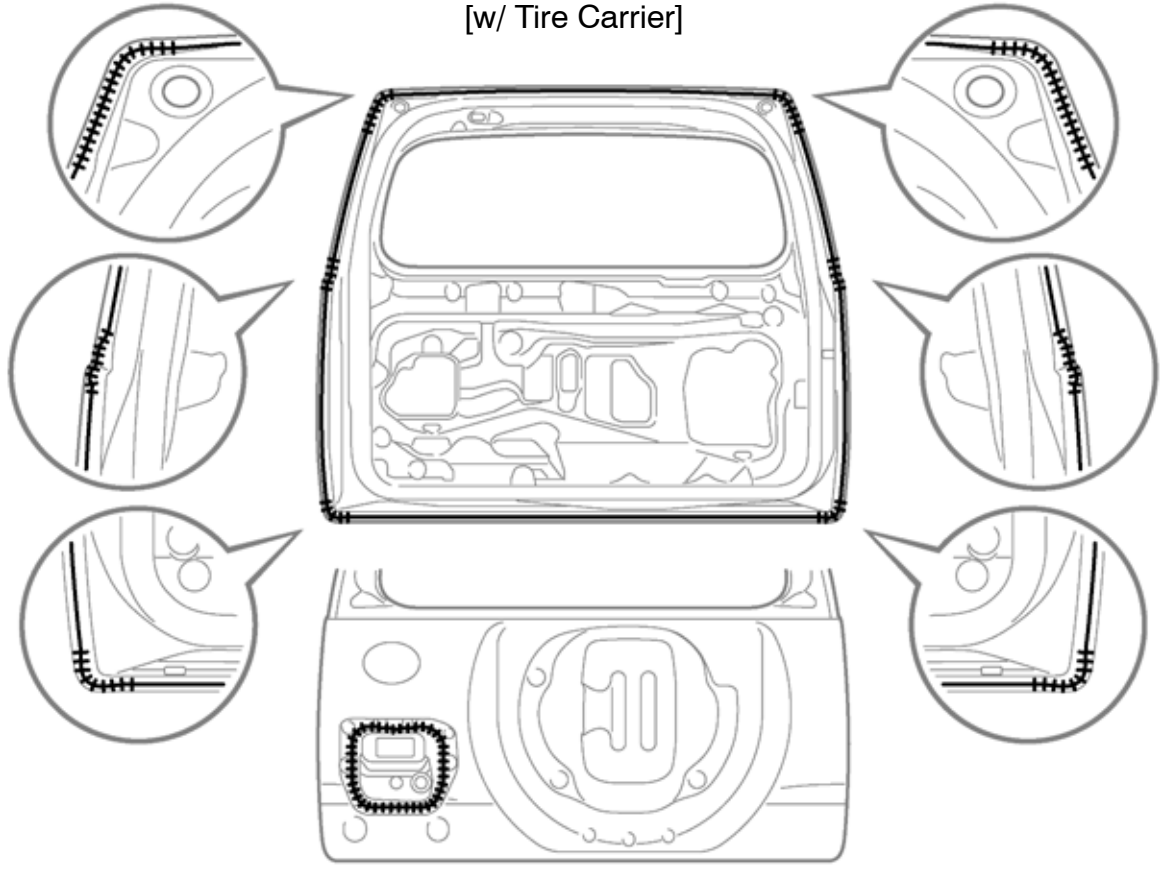

F43208