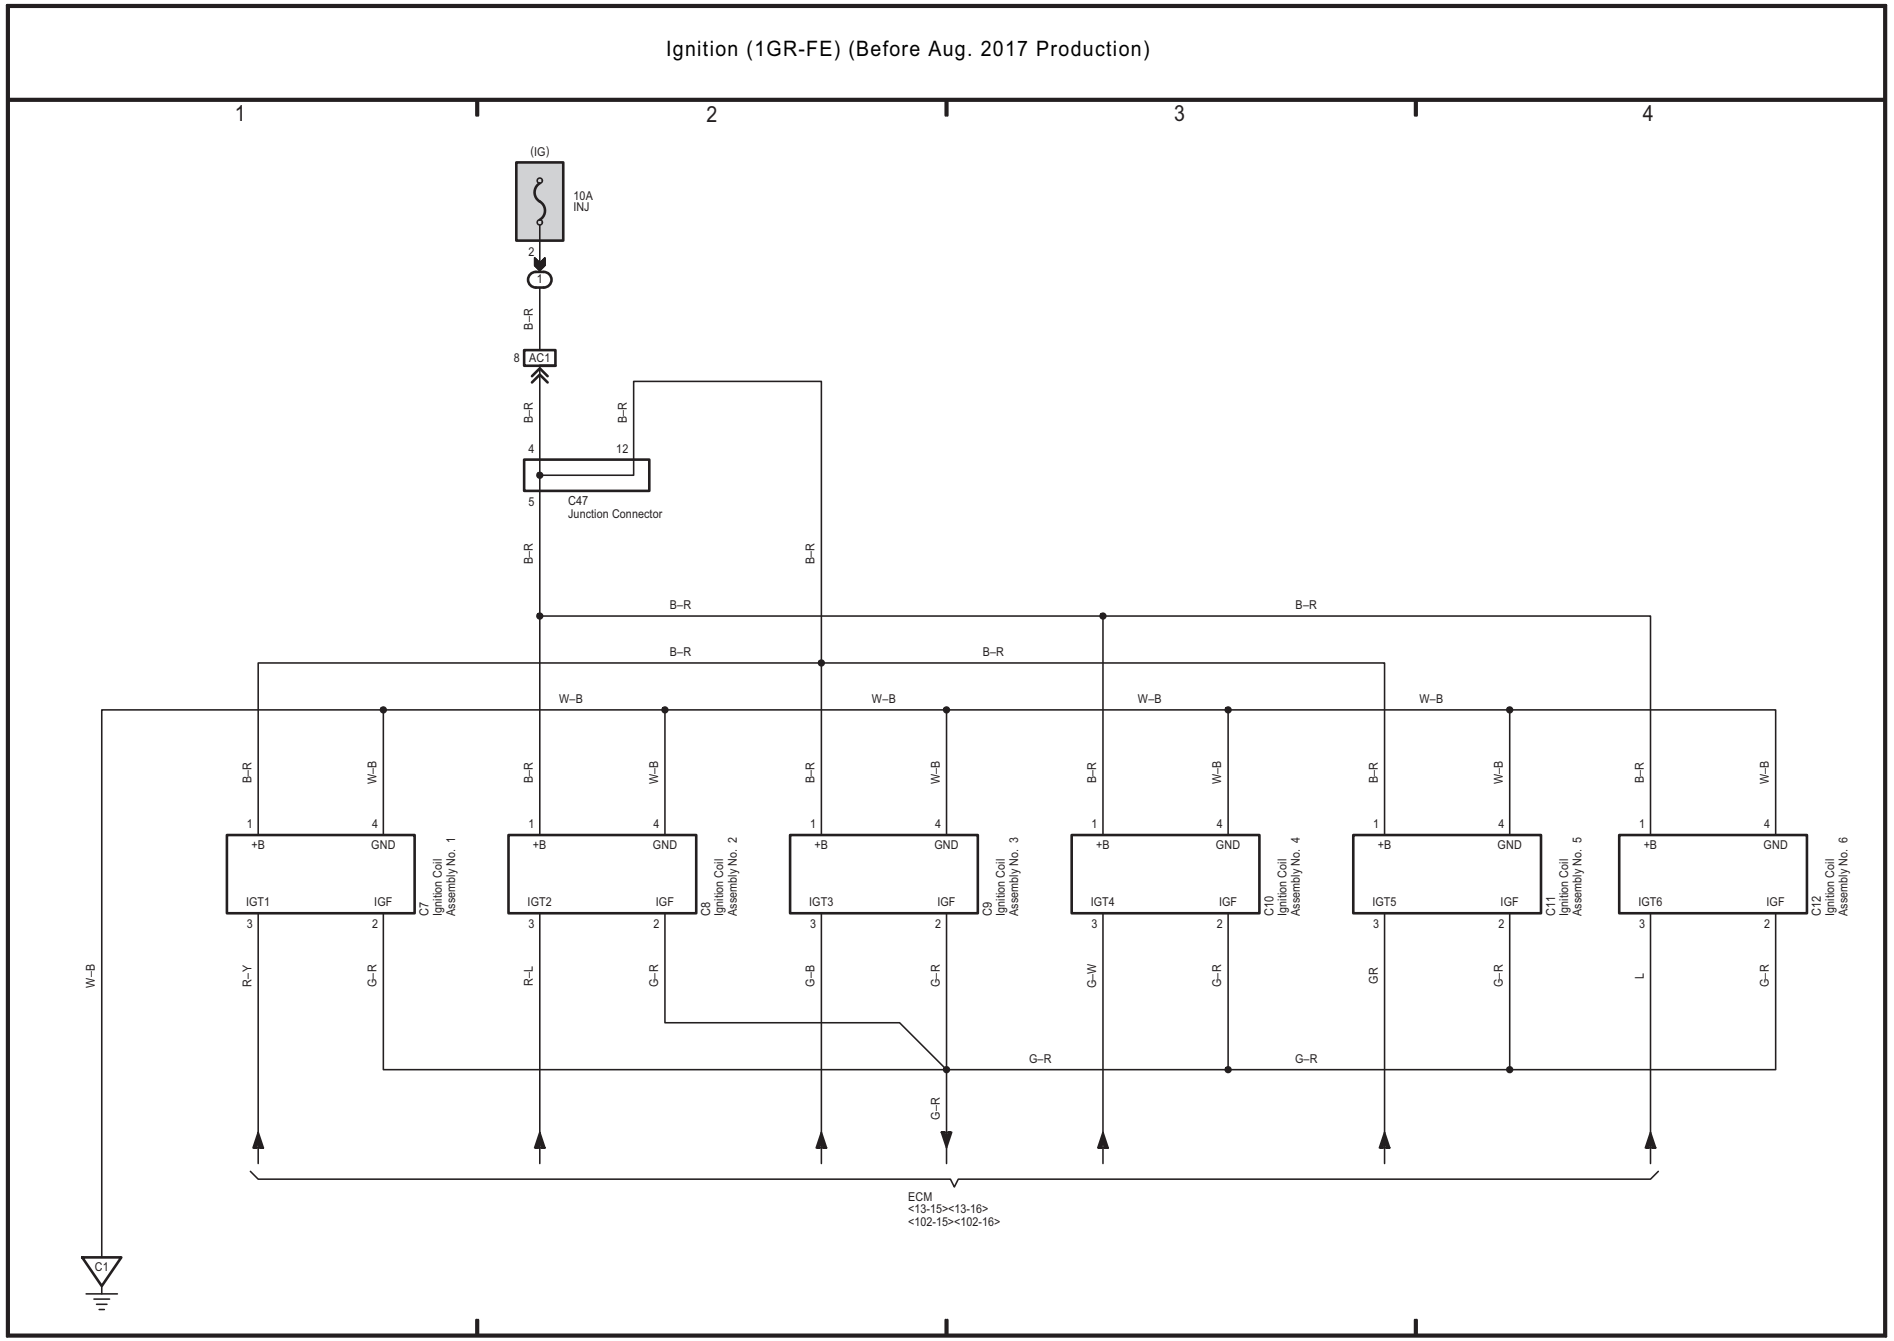

Ignition (1GR-FE) (Before Aug. 2017 Production)
1
2
3
4
(IG)
10A
INJ
2
1
B–R
8
AC1
B–R
4
B–R
12
5
C47
Junction Connector
B–R
B–R
B–R
B–R
B–R
W–B
W–B
W–B
W–B
B–R
W–B
1
4
+B
GND
IGT1
IGF
3
2
C7
Ignition Coil
Assembly No. 1
IGT2
C8
Ignition Coil
Assembly No. 2
IGT3
C9
Ignition Coil
Assembly No. 3
IGT4
C10
Ignition Coil
Assembly No. 4
IGT5
C11
Ignition Coil
Assembly No. 5
IGT6
C12
Ignition Coil
Assembly No. 6
W–B
R–Y
G–R
R–L
G–R
G–B
G–R
G–W
G–R
GR
G–R
L
G–R
G–R
G–R
ECM
<13-15><13-16>
<102-15><102-16>
C1