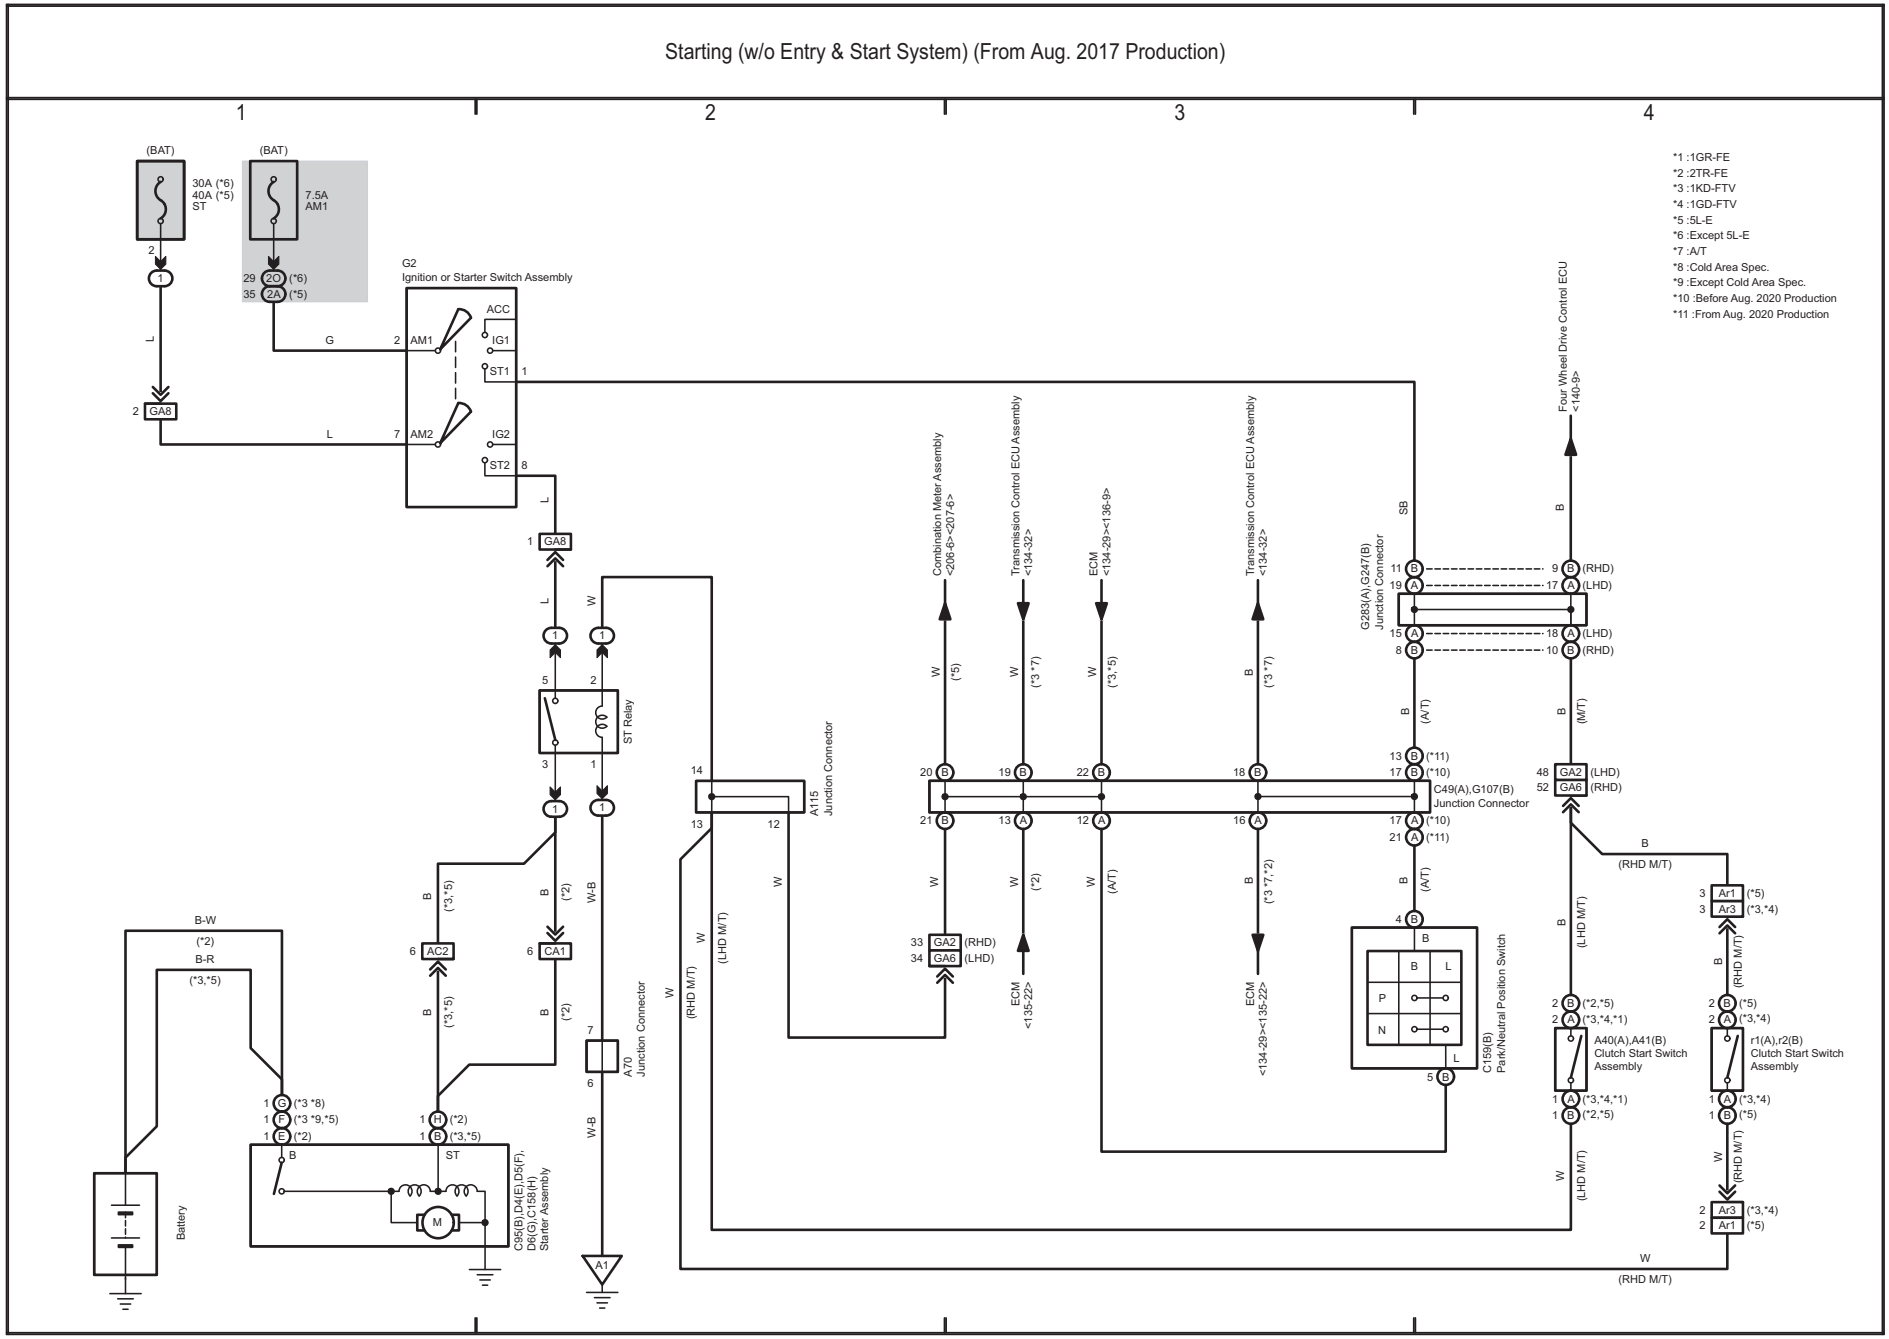

Starting (w/o Entry & Start System) (From Aug. 2017 Production)
1
2
3
4
(BAT)
30A (*6)
40A (*5)
ST
(BAT)
7.5A
AM1
G2
Ignition or Starter Switch Assembly
ACC
IG1
ST1
AM1
AM2
IG2
ST2
GA8
ST Relay
AC2
CA1
A70
Junction Connector
A115
Junction Connector
Battery
C95(B),D4(E),D5(F),
D6(G),C158(H)
Starter Assembly
Combination Meter Assembly
<206-6><20-43>
Transmission Control ECU Assembly
<134-32>
ECM
<134-29><136-9>
Transmission Control ECU Assembly
<134-32>
G283(A),G247(B)
Junction Connector
C49(A),G107(B)
Junction Connector
C159(B)
Park/Neutral Position Switch
Four Wheel Drive Control ECU
<140-9>
A40(A),A41(B)
Clutch Start Switch
Assembly
r1(A),r2(B)
Clutch Start Switch
Assembly
ECM
<135-22>
ECM
<134-29><135-22>
(RHD)
(LHD)
(A/T)
(M/T)
(RHD M/T)
(LHD M/T)
*1 :1GR-FE
*2 :2TR-FE
*3 :1KD-FTV
*4 :1GD-FTV
*5 :5L-E
*6 :Except 5L-E
*7 :A/T
*8 :Cold Area Spec.
*9 :Except Cold Area Spec.
*10 :Before Aug. 2020 Production
*11 :From Aug. 2020 Production