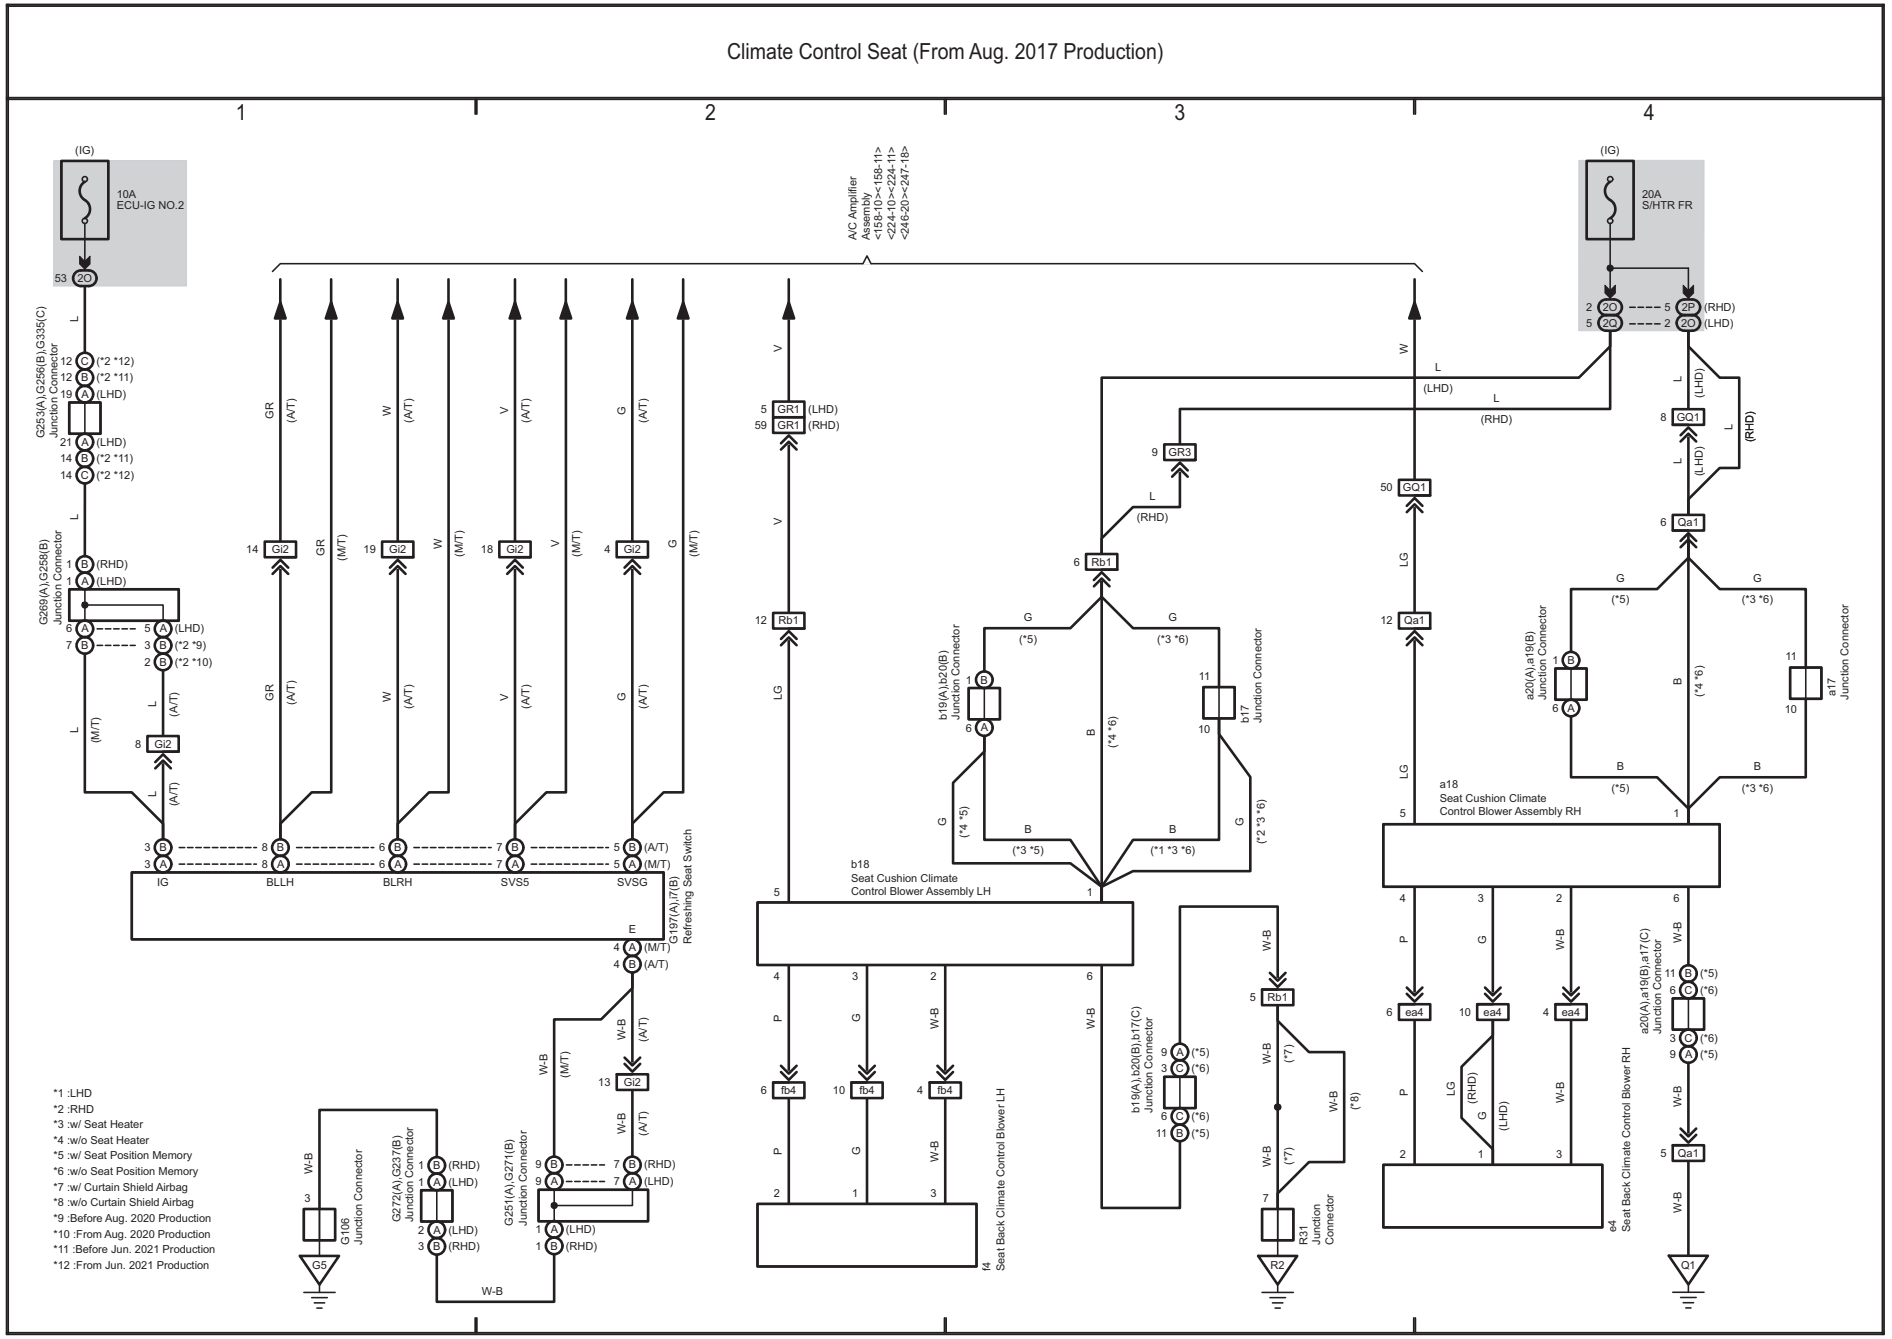

Climate Control Seat (From Aug. 2017 Production)
1
2
3
4
(IG)
10A
ECU-IG NO.2
20A
S/HTR FR
A/C Amplifier
Assembly
<158-10><158-11>
<224-10><224-11>
<246-20><247-18>
G253(A),G256(B),G335(C)
Junction Connector
G269(A),G258(B)
Junction Connector
G272(A),G237(B)
Junction Connector
G251(A),G271(B)
Junction Connector
G106
Junction Connector
G5
G197(A),I7(B)
Refreshing Seat Switch
IG
BLLH
BLRH
SVS5
SVSG
b18
Seat Cushion Climate
Control Blower Assembly LH
b19(A),b20(B)
Junction Connector
b17
Junction Connector
f4
Seat Back Climate Control Blower LH
b19(A),b20(B),b17(C)
Junction Connector
R31
Junction Connector
R2
a18
Seat Cushion Climate
Control Blower Assembly RH
a20(A),a19(B)
Junction Connector
a17
Junction Connector
a20(A),a19(B),a17(C)
Junction Connector
e4
Seat Back Climate Control Blower RH
Q1
*1 :LHD
*2 :RHD
*3 :w/ Seat Heater
*4 :w/o Seat Heater
*5 :w/ Seat Position Memory
*6 :w/o Seat Position Memory
*7 :w/ Curtain Shield Airbag
*8 :w/o Curtain Shield Airbag
*9 :Before Aug. 2020 Production
*10 :From Aug. 2020 Production
*11 :Before Jun. 2021 Production
*12 :From Jun. 2021 Production