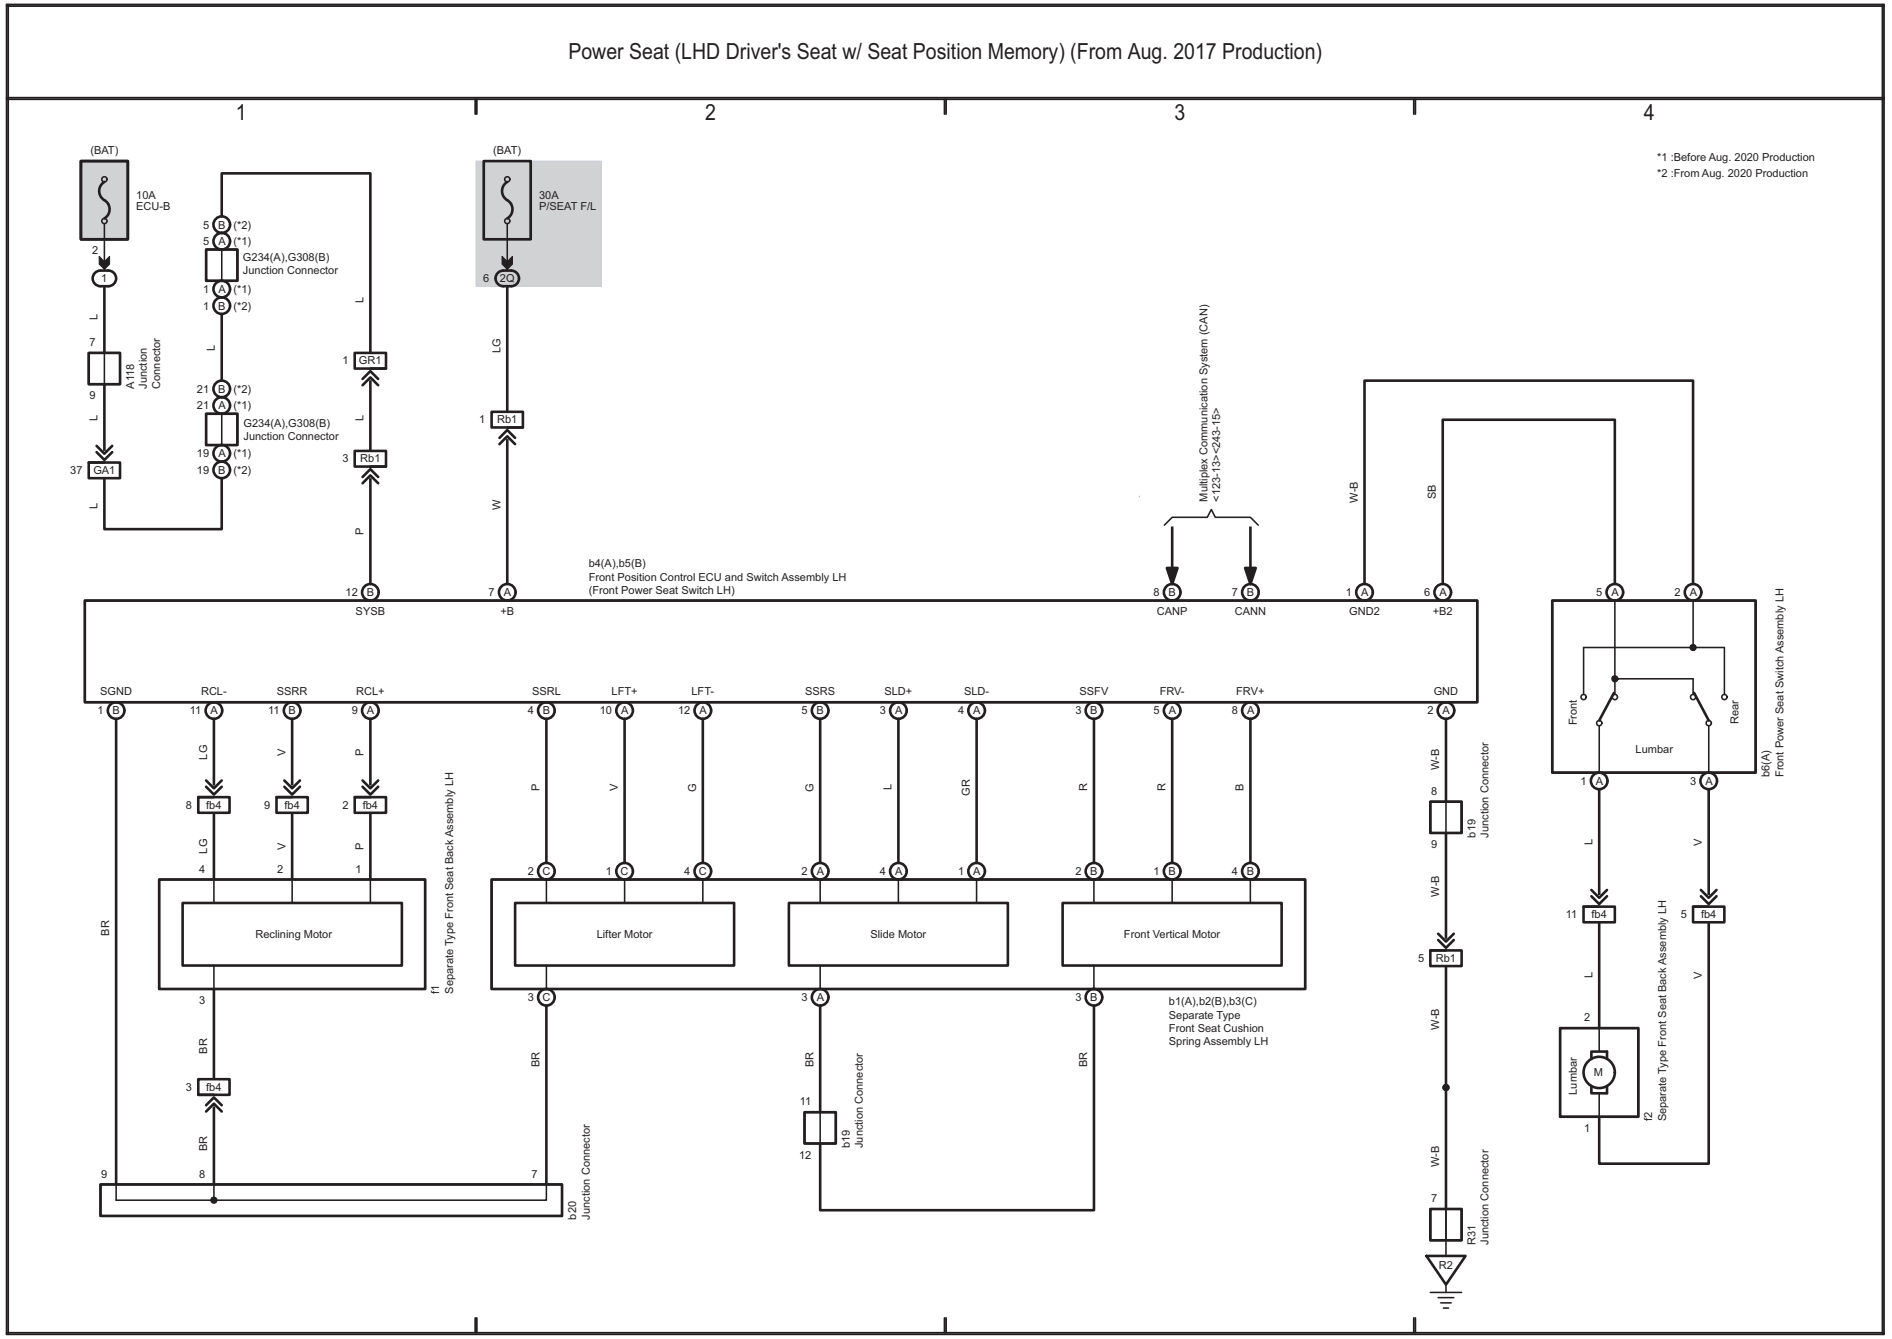

Power Seat (LHD Driver's Seat w/ Seat Position Memory) (From Aug. 2017 Production)
1
2
3
4
*1 :Before Aug. 2020 Production
*2 :From Aug. 2020 Production
(BAT)
10A
ECU-B
30A
P/SEAT F/L
G234(A),G308(B)
Junction Connector
A118
Junction
Connector
Multiplex Communication System (CAN)
<123-13><243-15>
b4(A),b5(B)
Front Position Control ECU and Switch Assembly LH
(Front Power Seat Switch LH)
SYSB
+B
CANP
CANN
GND2
+B2
SGND
RCL-
SSRR
RCL+
SSRL
LFT+
LFT-
SSRS
SLD+
SLD-
SSFV
FRV-
FRV+
GND
Reclining Motor
Lifter Motor
Slide Motor
Front Vertical Motor
f1
Separate Type Front Seat Back Assembly LH
b1(A),b2(B),b3(C)
Separate Type
Front Seat Cushion
Spring Assembly LH
b19
Junction Connector
b20
Junction Connector
R31
Junction Connector
R2
Front
Rear
Lumbar
b6(A)
Front Power Seat Switch Assembly LH
f2
Separate Type Front Seat Back Assembly LH