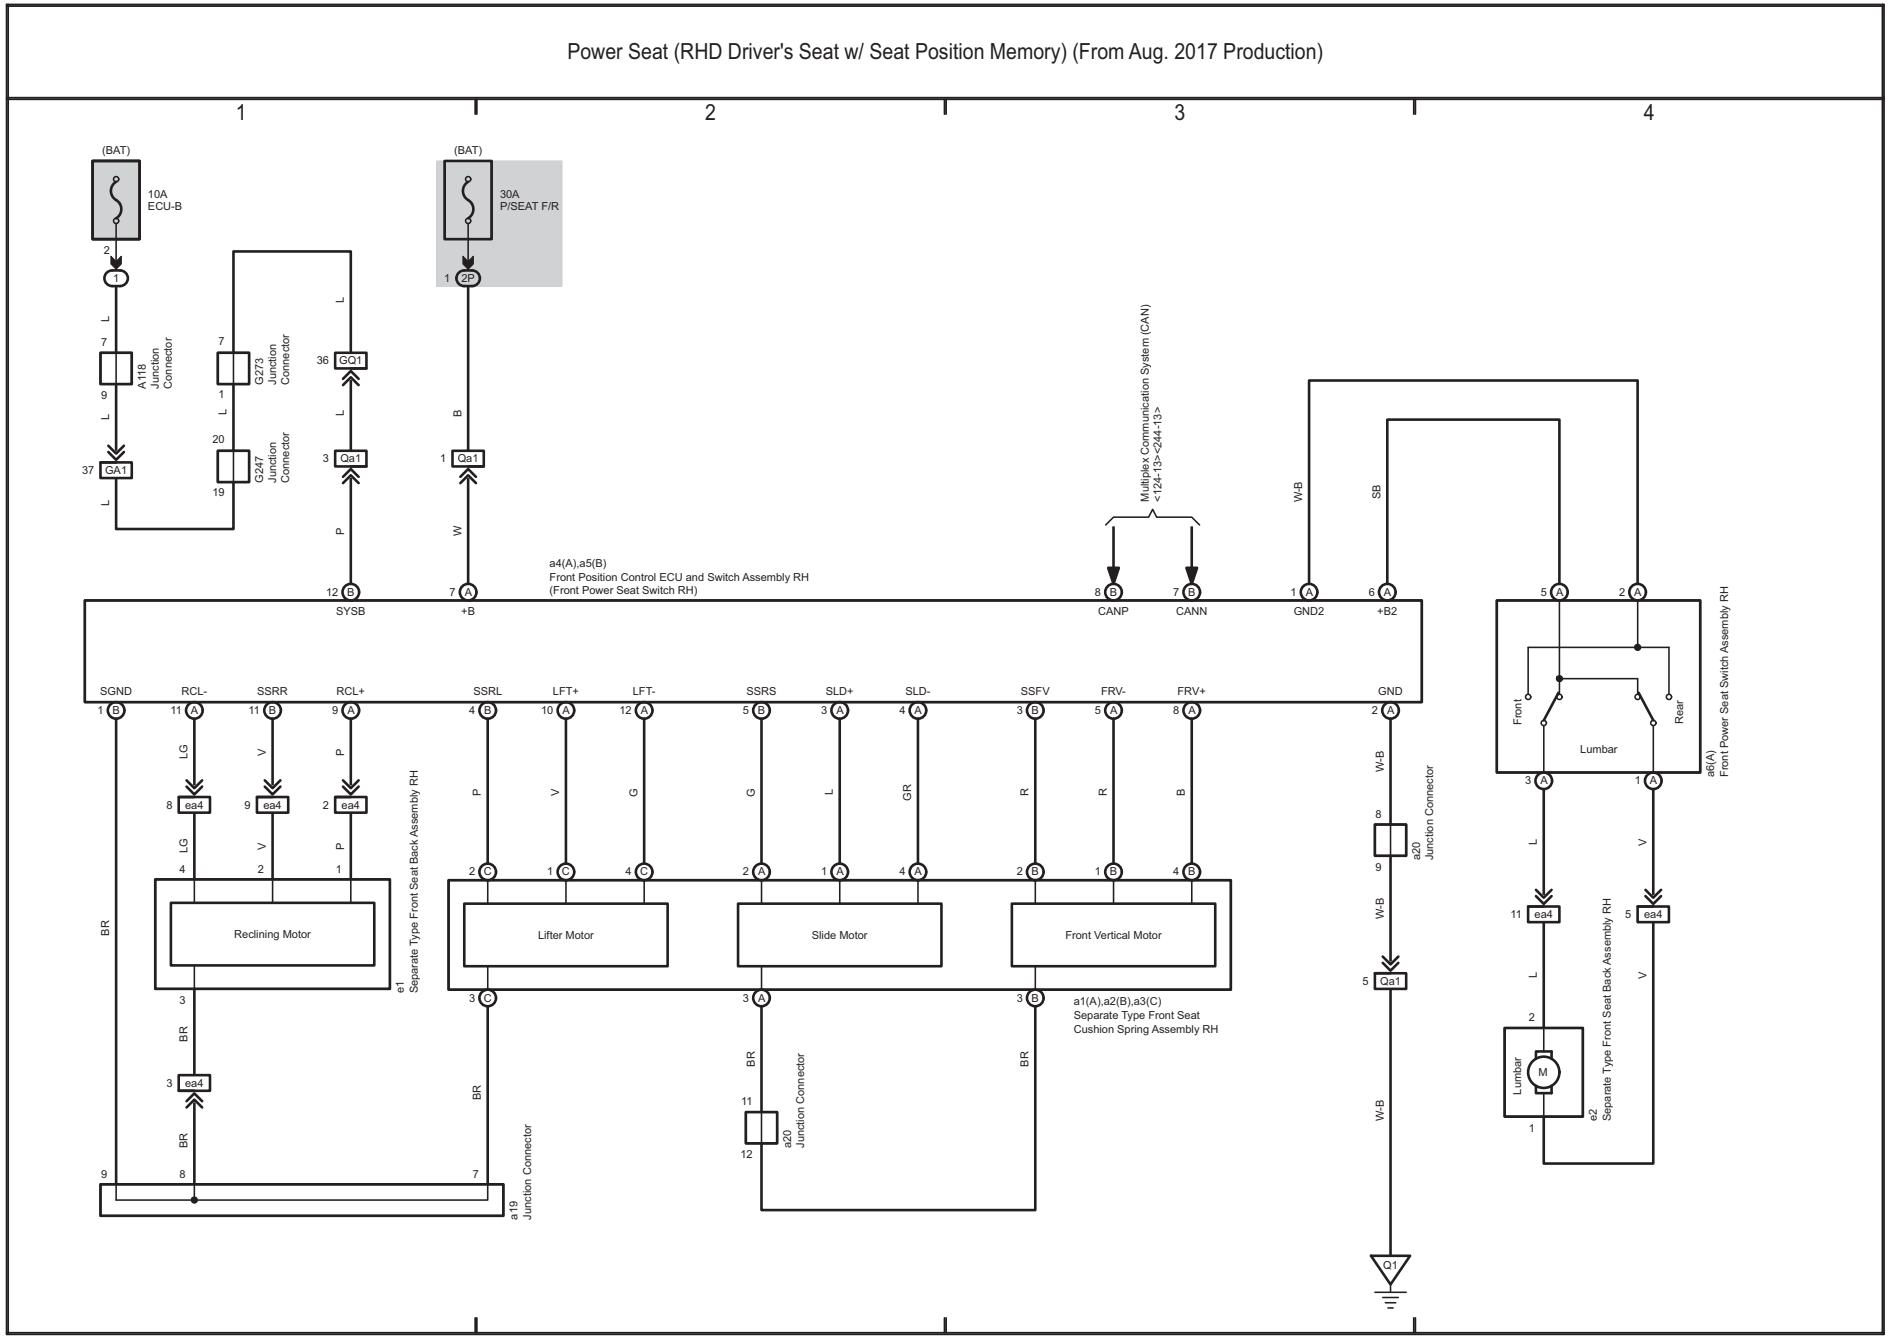

Power Seat (RHD Driver's Seat w/ Seat Position Memory) (From Aug. 2017 Production)
1
2
3
4
(BAT)
10A
ECU-B
(BAT)
30A
P/SEAT F/R
A118
Junction
Connector
G273
Junction
Connector
G247
Junction
Connector
GA1
GQ1
Qa1
2P
Multiplex Communication System (CAN)
<124-13><244-13>
a4(A),a5(B)
Front Position Control ECU and Switch Assembly RH
(Front Power Seat Switch RH)
SYSB
+B
CANP
CANN
GND2
+B2
SGND
RCL-
SSRR
RCL+
SSRL
LFT+
LFT-
SSRS
SLD+
SLD-
SSFV
FRV-
FRV+
GND
Reclining Motor
Lifter Motor
Slide Motor
Front Vertical Motor
e1
Separate Type Front Seat Back Assembly RH
a19
Junction Connector
a20
Junction Connector
a1(A),a2(B),a3(C)
Separate Type Front Seat
Cushion Spring Assembly RH
a20
Junction Connector
Q1
Front
Rear
Lumbar
a6(A)
Front Power Seat Switch Assembly RH
Lumbar
M
e2
Separate Type Front Seat Back Assembly RH