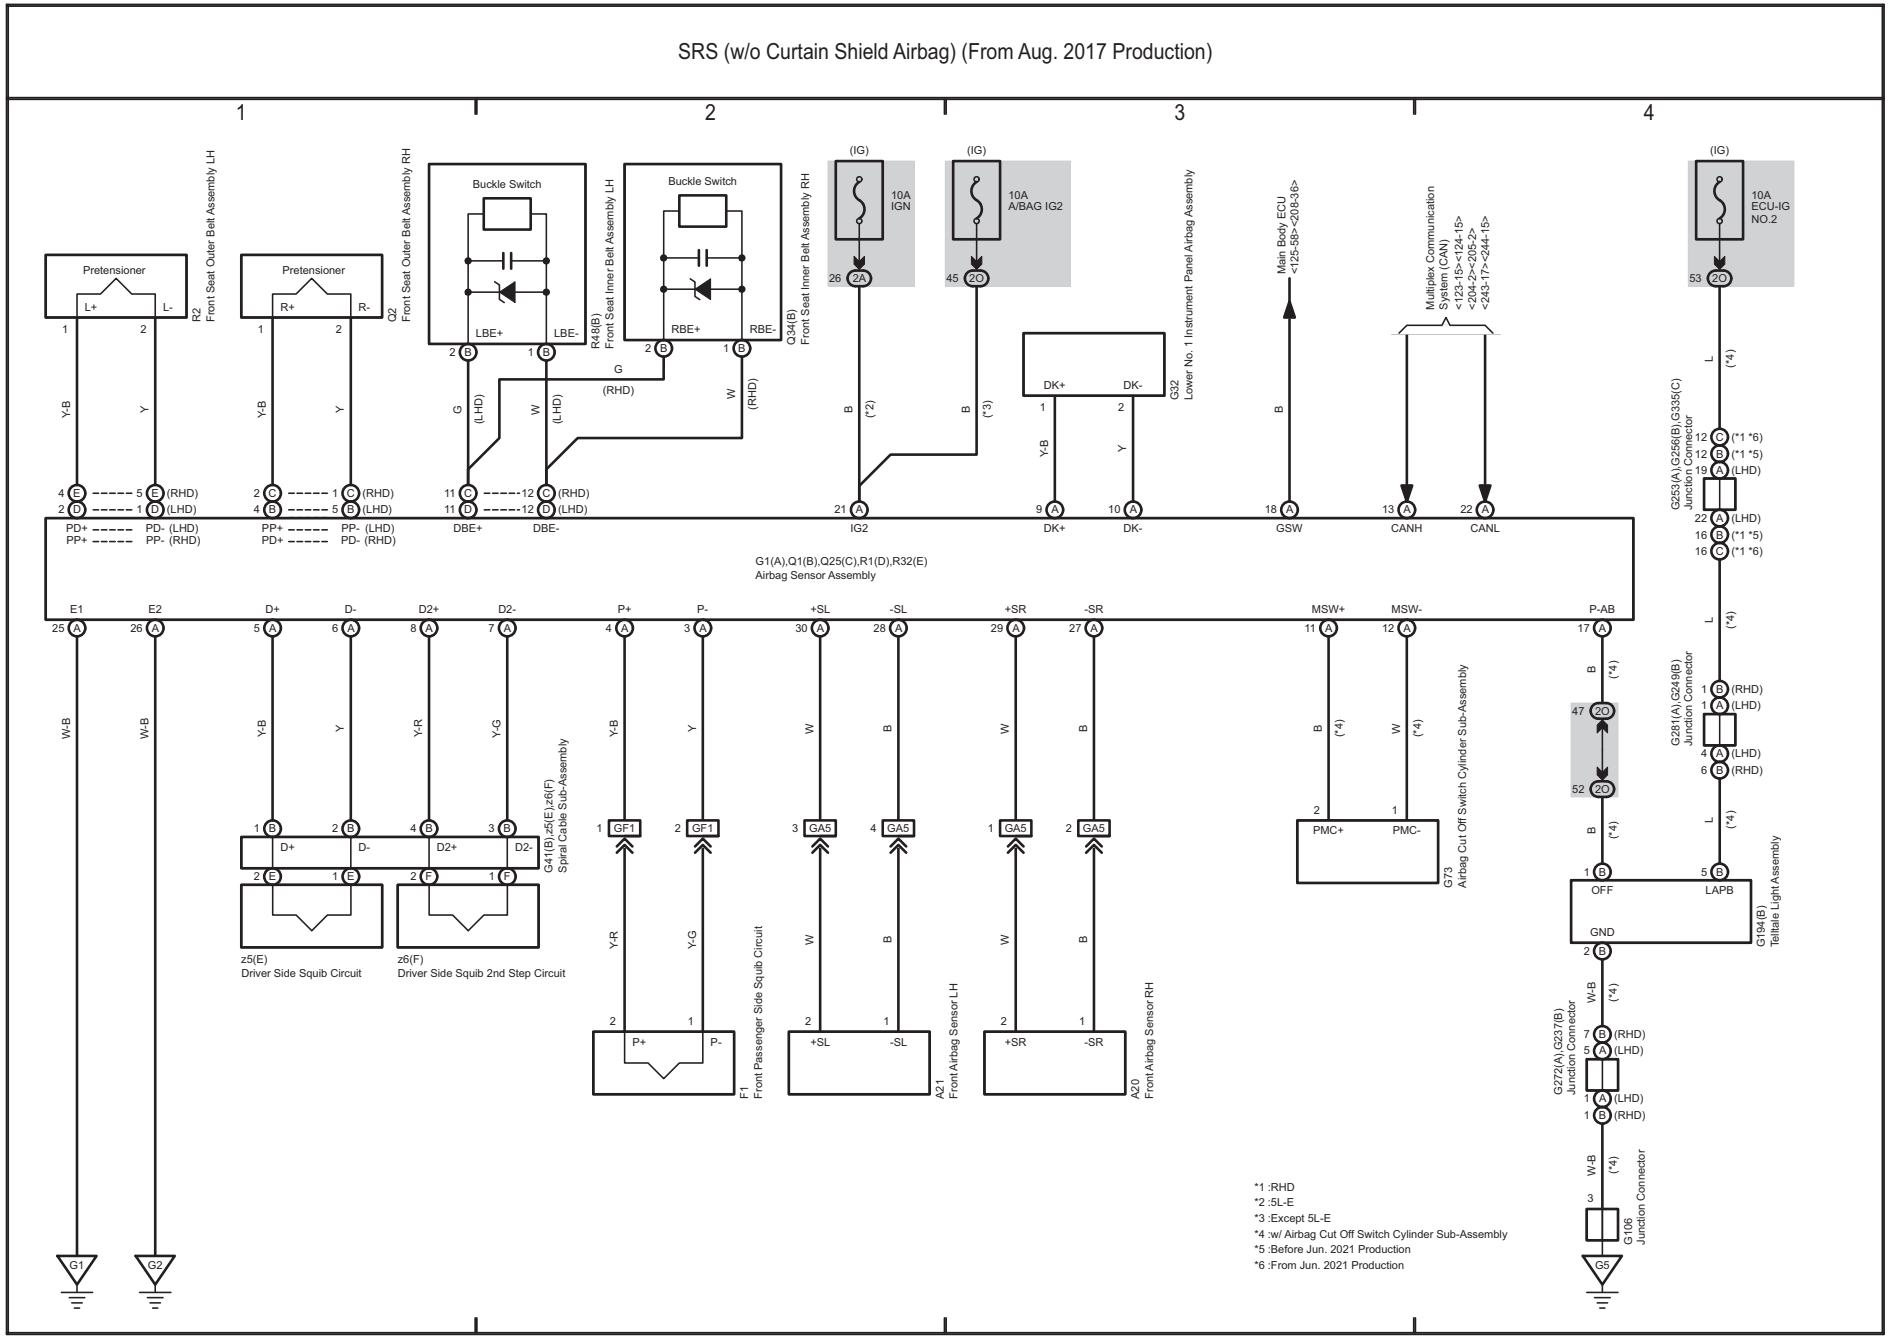

SRS (w/o Curtain Shield Airbag) (From Aug. 2017 Production)
1
2
3
4
Pretensioner
L+
L-
R2
Front Seat Outer Belt Assembly LH
Pretensioner
R+
R-
Q2
Front Seat Outer Belt Assembly RH
Buckle Switch
LBE+
LBE-
R48(B)
Front Seat Inner Belt Assembly LH
Buckle Switch
RBE+
RBE-
Q34(B)
Front Seat Inner Belt Assembly RH
(IG)
10A
IGN
(IG)
10A
A/BAG IG2
G32
Lower No. 1 Instrument Panel Airbag Assembly
Main Body ECU
<125-58><208-36>
Multiplex Communication System (CAN)
<123-15><124-15>
<204-2><205-2>
<243-17><244-15>
(IG)
10A
ECU-IG
NO.2
G253(A),G256(B),G335(C)
Junction Connector
G281(A),G249(B)
Junction Connector
G1(A),Q1(B),Q25(C),R1(D),R32(E)
Airbag Sensor Assembly
G41(B),z5(E),z6(F)
Spiral Cable Sub-Assembly
z5(E)
Driver Side Squib Circuit
z6(F)
Driver Side Squib 2nd Step Circuit
F1
Front Passenger Side Squib Circuit
A21
Front Airbag Sensor LH
A20
Front Airbag Sensor RH
G73
Airbag Cut Off Switch Cylinder Sub-Assembly
G194(B)
Telltale Light Assembly
G272(A),G237(B)
Junction Connector
G106
Junction Connector
*1 :RHD
*2 :5L-E
*3 :Except 5L-E
*4 :w/ Airbag Cut Off Switch Cylinder Sub-Assembly
*5 :Before Jun. 2021 Production
*6 :From Jun. 2021 Production