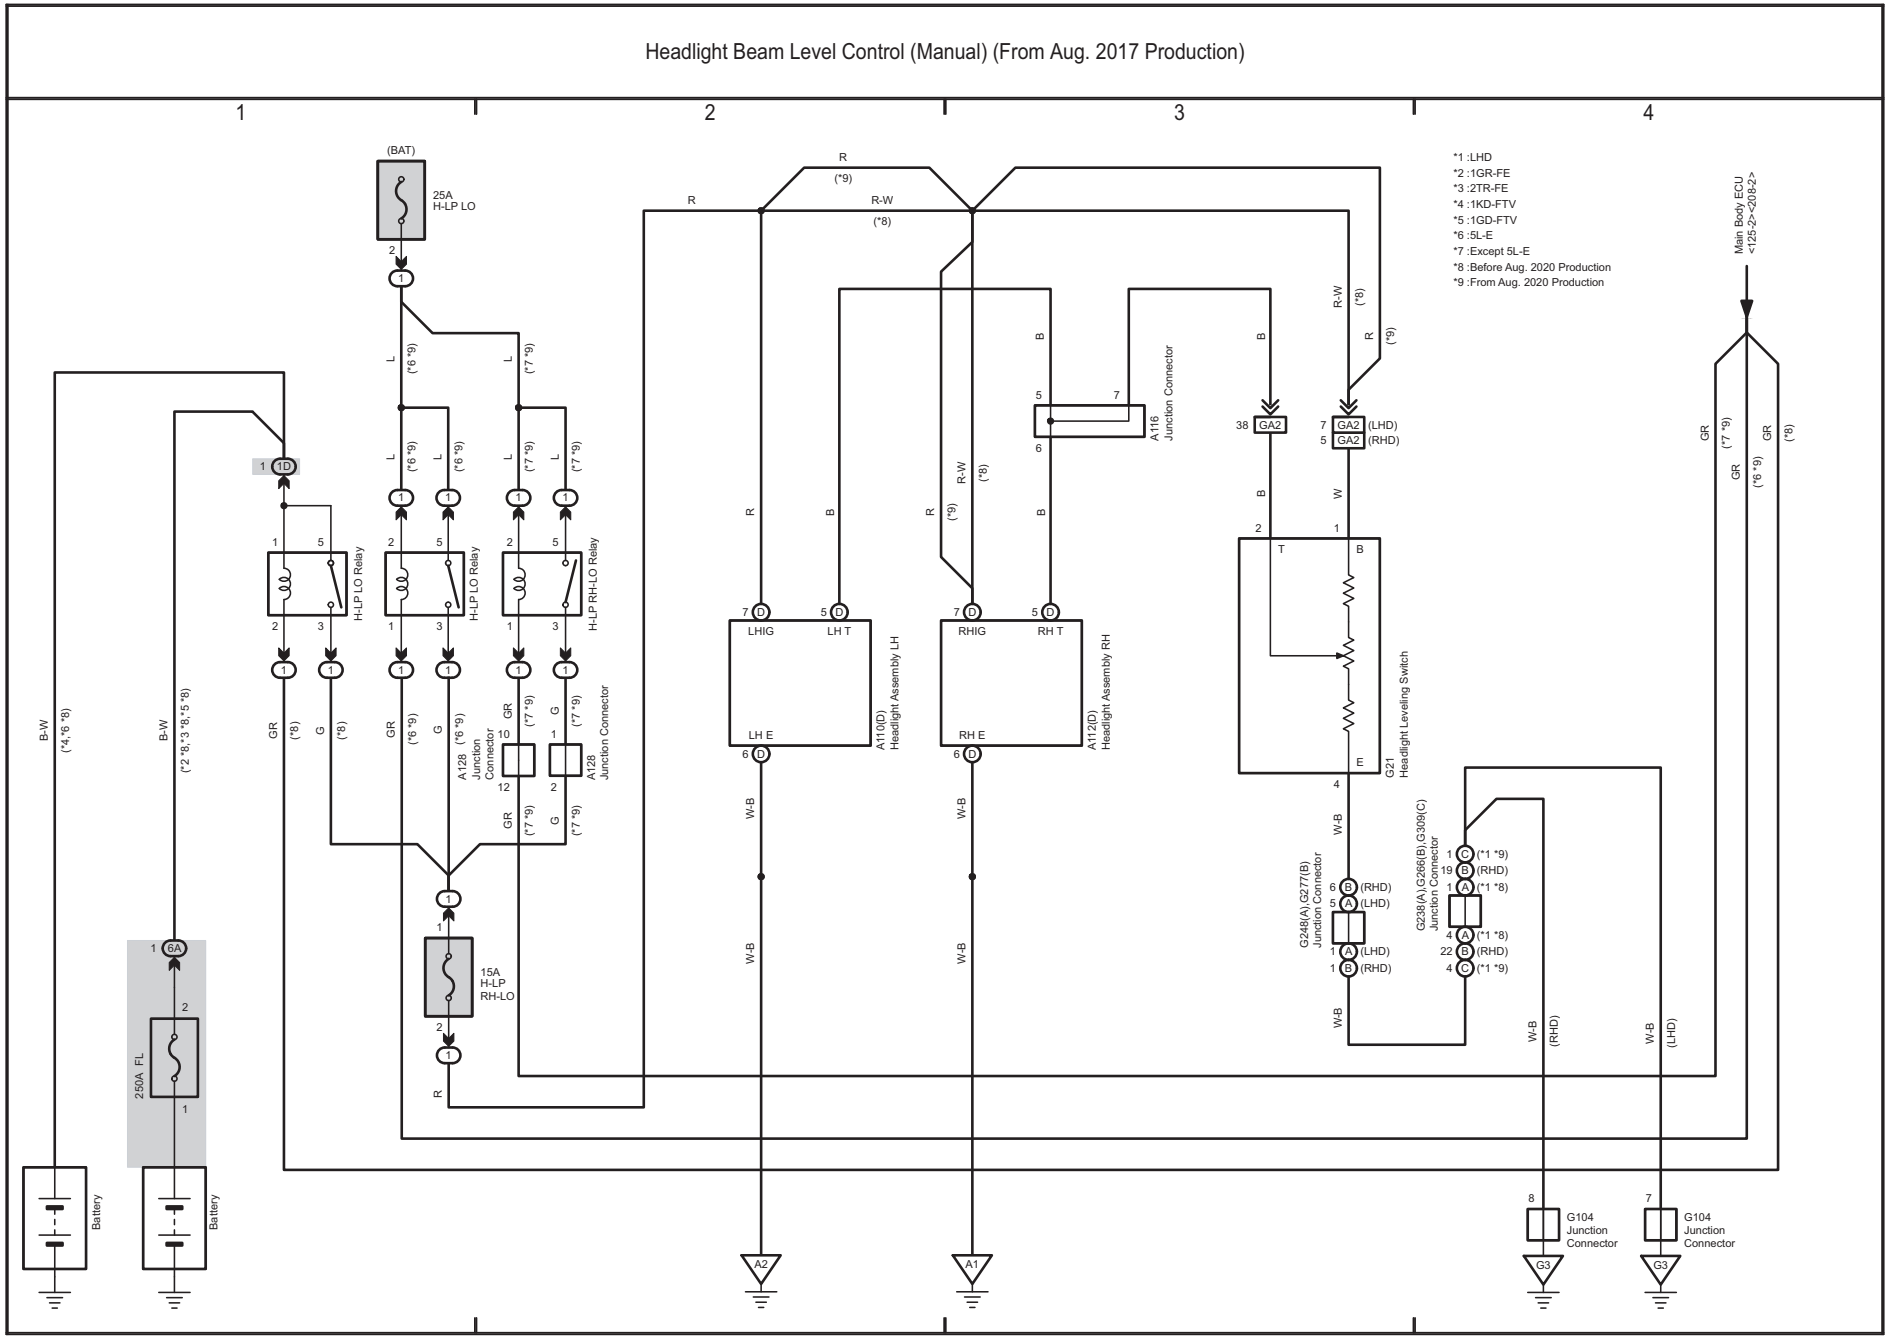

Headlight Beam Level Control (Manual) (From Aug. 2017 Production)
1
2
3
4
*1 :LHD
*2 :1GR-FE
*3 :2TR-FE
*4 :1KD-FTV
*5 :1GD-FTV
*6 :5L-E
*7 :Except 5L-E
*8 :Before Aug. 2020 Production
*9 :From Aug. 2020 Production
(BAT)
25A H-LP LO
H-LP LO Relay
H-LP LO Relay
H-LP RH-LO Relay
15A H-LP RH-LO
250A FL
Battery
Battery
A128 Junction Connector
A128 Junction Connector
A116 Junction Connector
A110(D) Headlight Assembly LH
A112(D) Headlight Assembly RH
G21 Headlight Leveling Switch
G248(A),G277(B) Junction Connector
G238(A),G266(B),G309(C) Junction Connector
G104 Junction Connector
G104 Junction Connector
Main Body ECU <125-2>-<208-2>
LHIG
LH T
LH E
RHIG
RH T
RH E
GA2 (LHD)
GA2 (RHD)
A2
A1
G3
G3