

(Cont. next page)

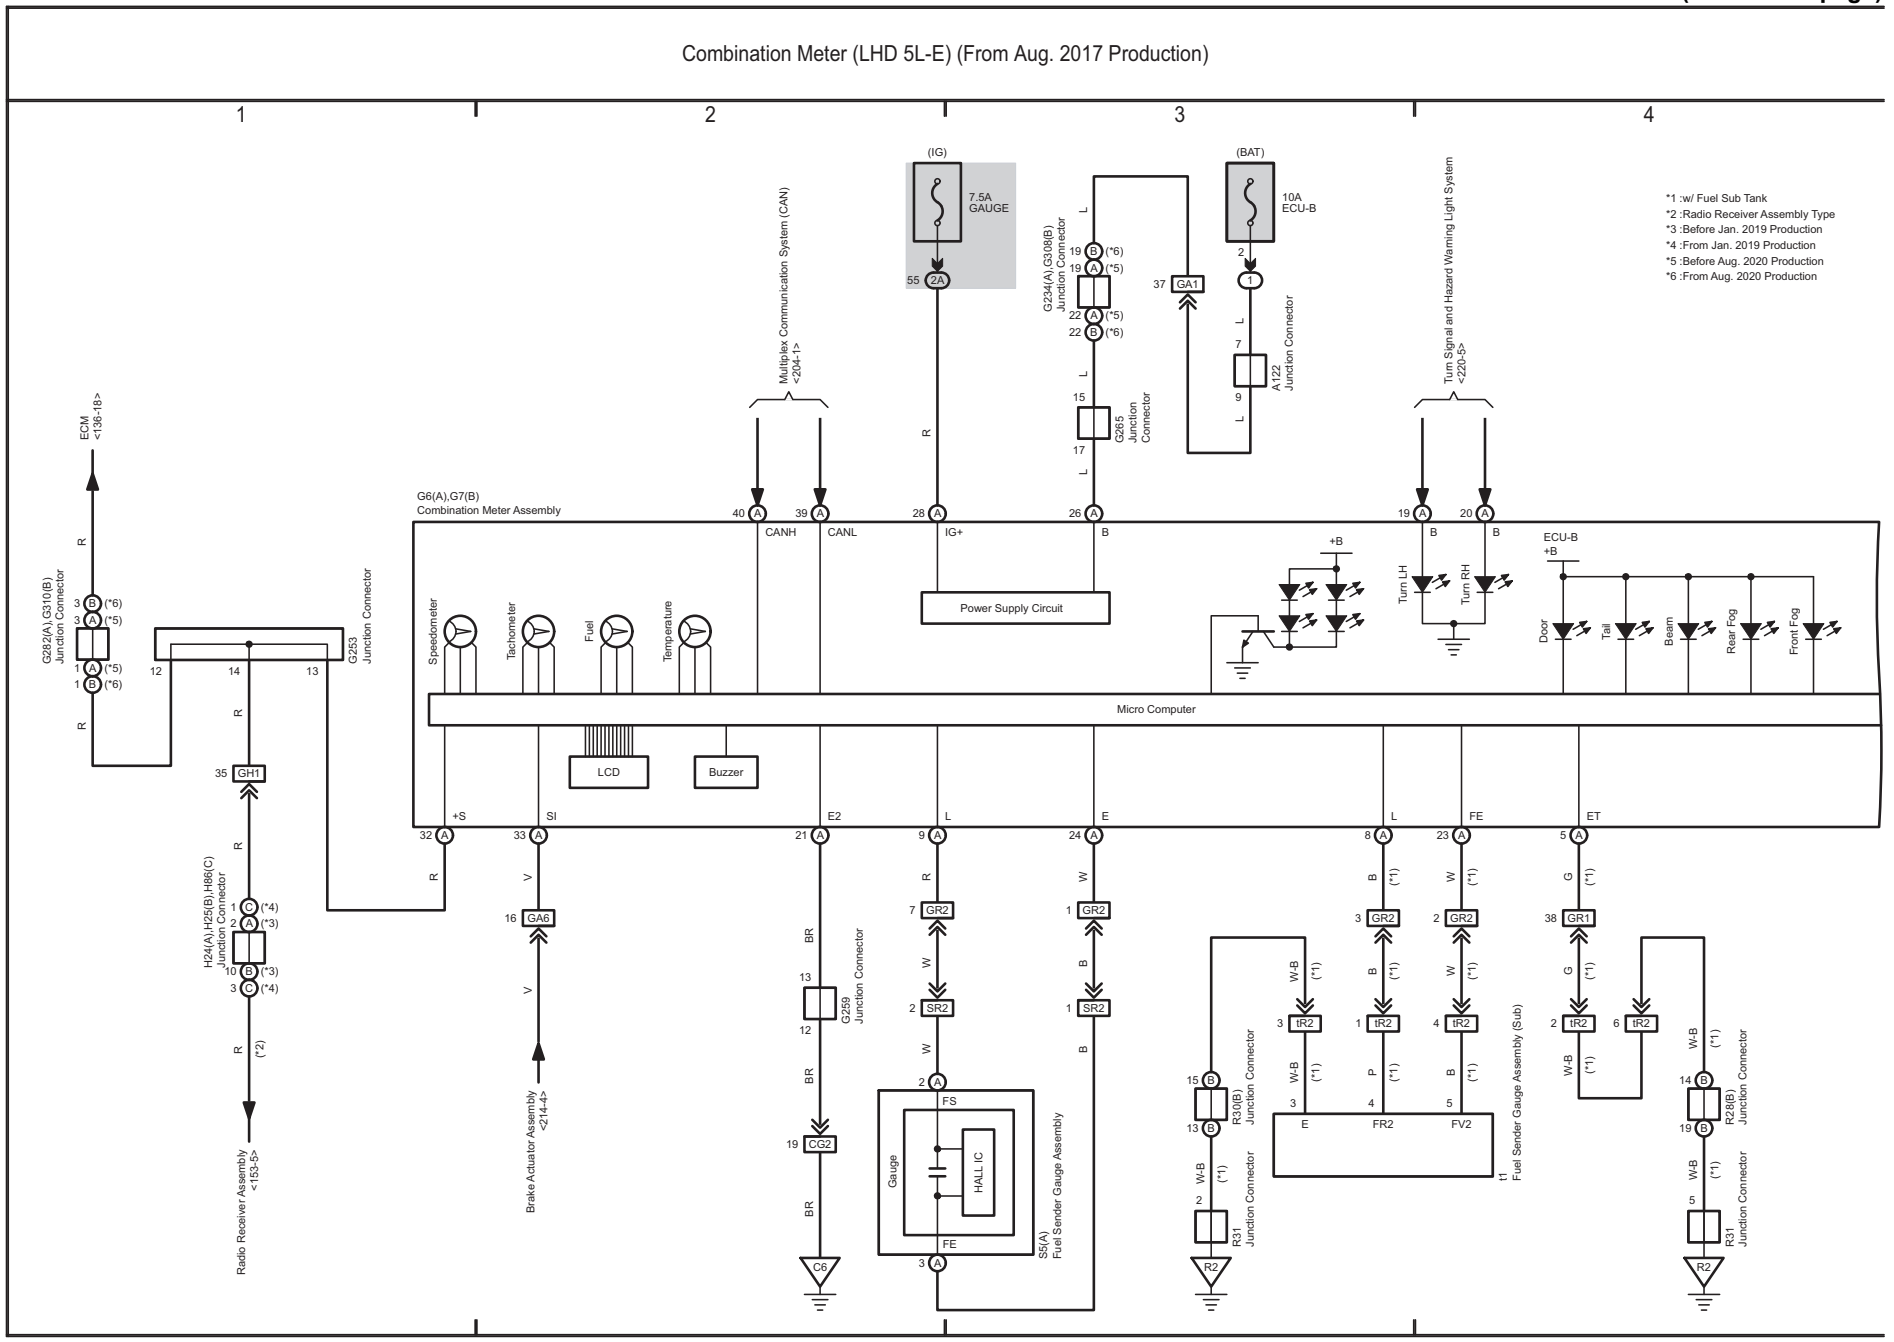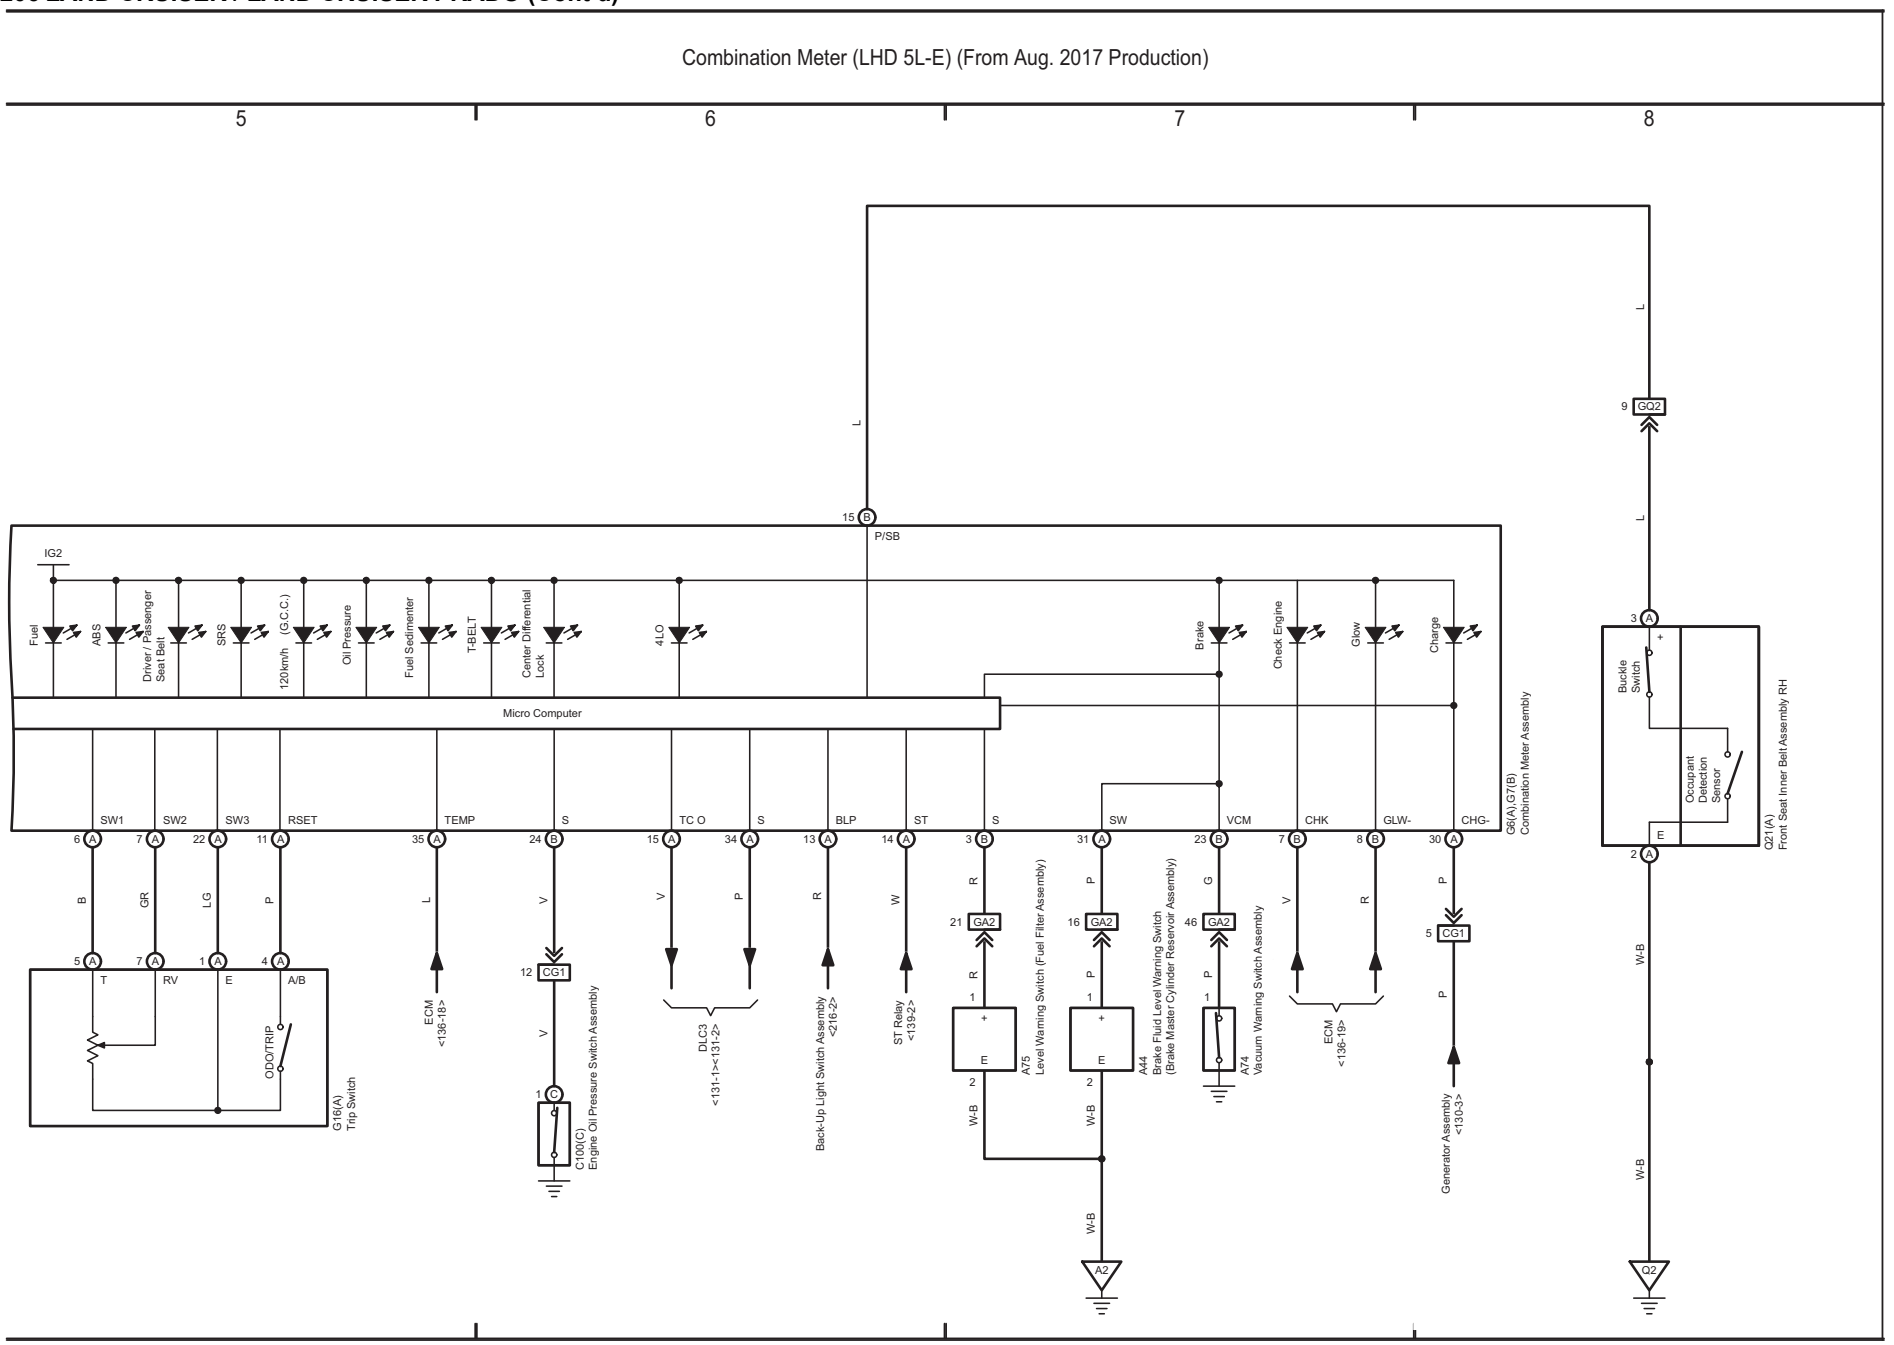


Combination Meter (LHD 5L-E) (From Aug. 2017 Production)
5
6
7
8
IG2
Fuel
ABS
Driver / Passenger Seat Belt
SRS
120km/h (G.C.C.)
Oil Pressure
Fuel Sedimenter
T-BELT
Center Differential Lock
4LO
Brake
Check Engine
Glow
Charge
Micro Computer
P/SB
SW1
SW2
SW3
RSET
TEMP
S
TC O
S
BLP
ST
S
SW
VCM
CHK
GLW-
CHG-
G6(A),G7(B) Combination Meter Assembly
Buckle Switch
Occupant Detection Sensor
E
Q21(A) Front Seat Inner Belt Assembly RH
T
RV
E
A/B
ODO/TRIP
G16(A) Trip Switch
ECM <136-18>
C100(C) Engine Oil Pressure Switch Assembly
DLC3 <131-1><131-2>
Back-Up Light Switch Assembly <216-2>
ST Relay <139-2>
A75 Level Warning Switch (Fuel Filter Assembly)
A44 Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
A74 Vacuum Warning Switch Assembly
ECM <136-19>
Generator Assembly <130-3>
A2
Q2