

(Cont. next page)

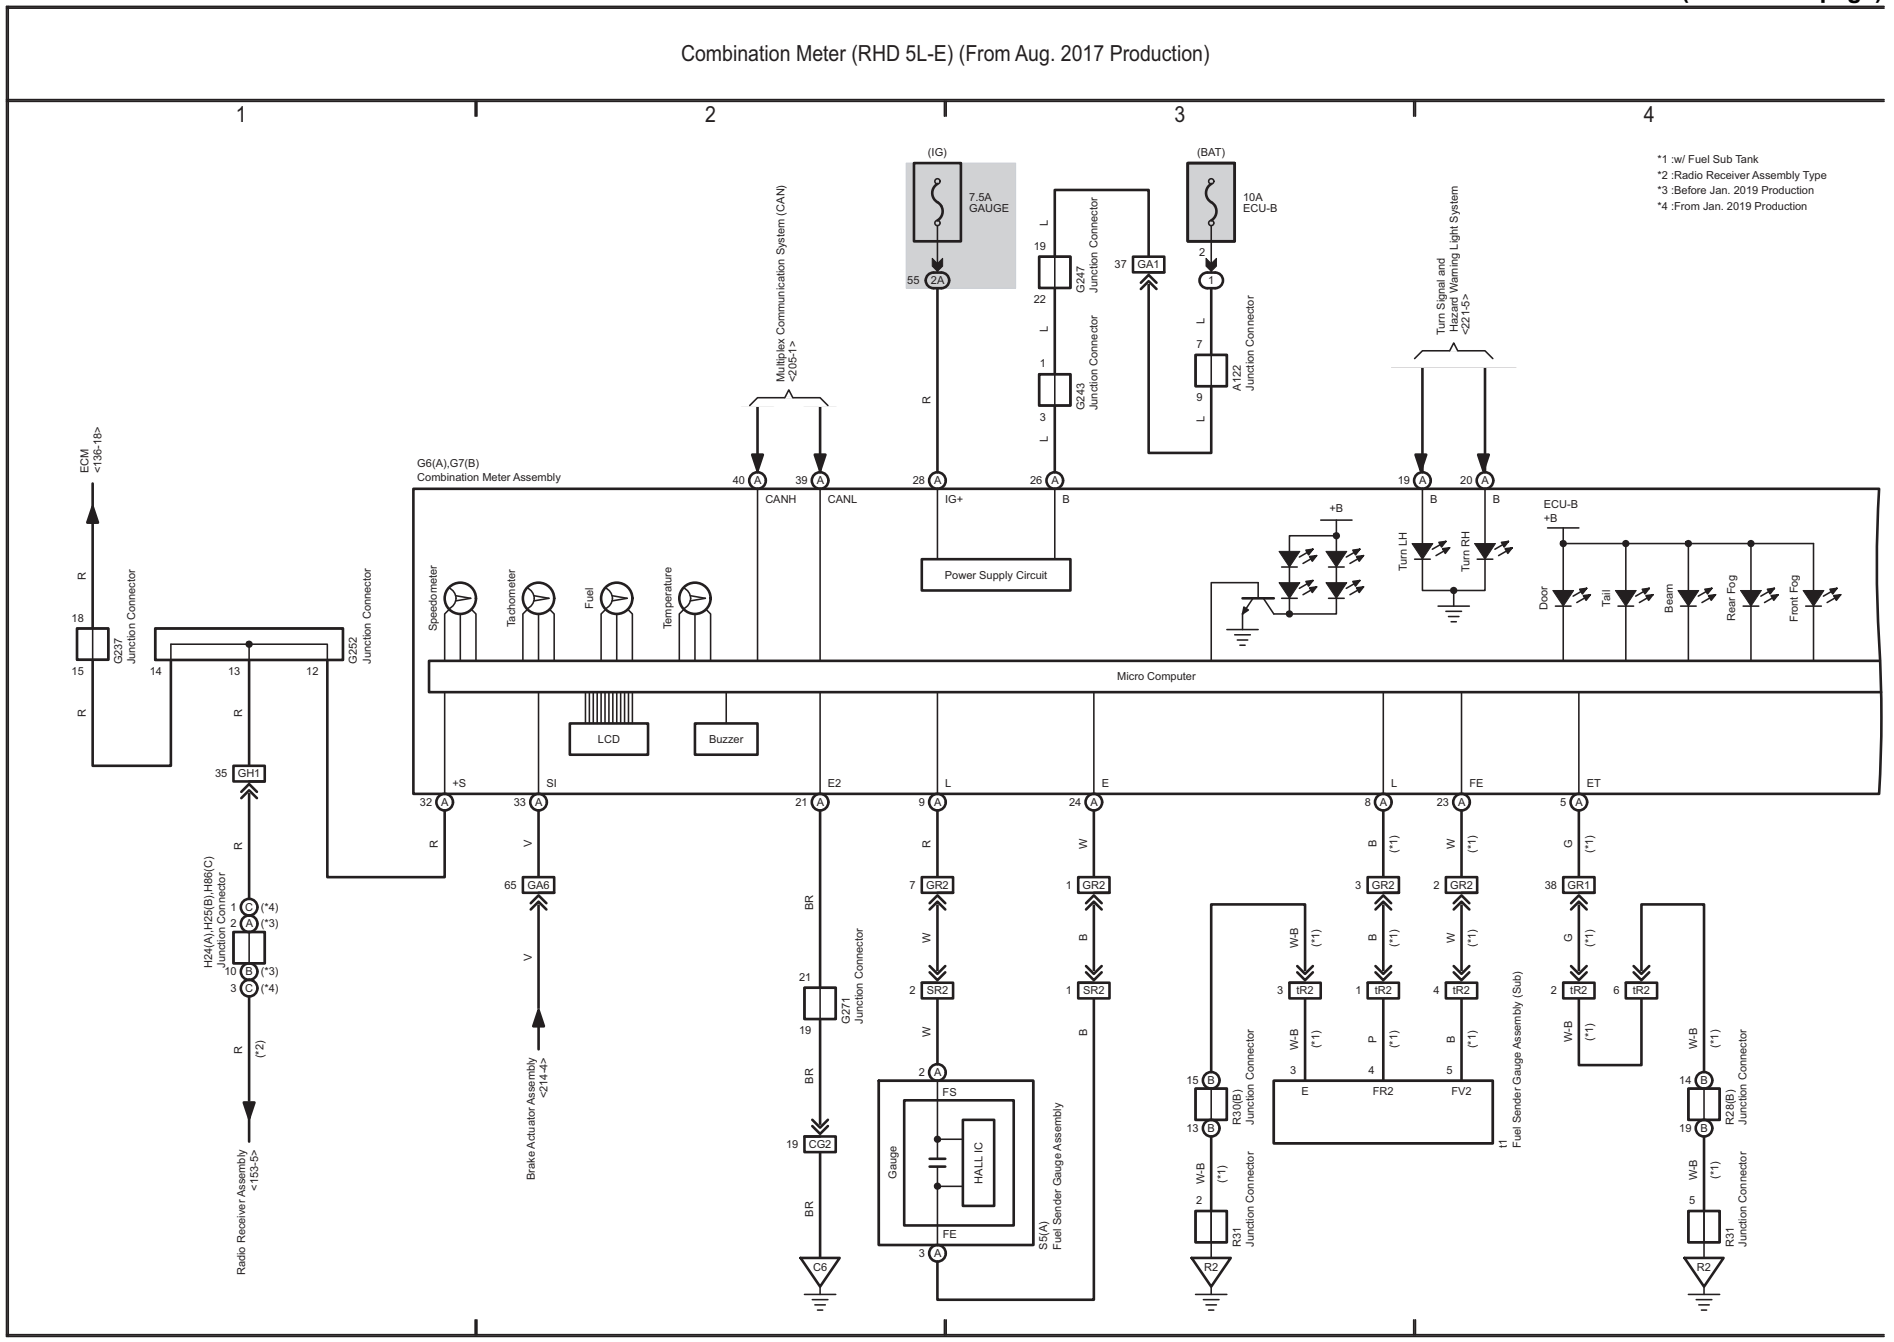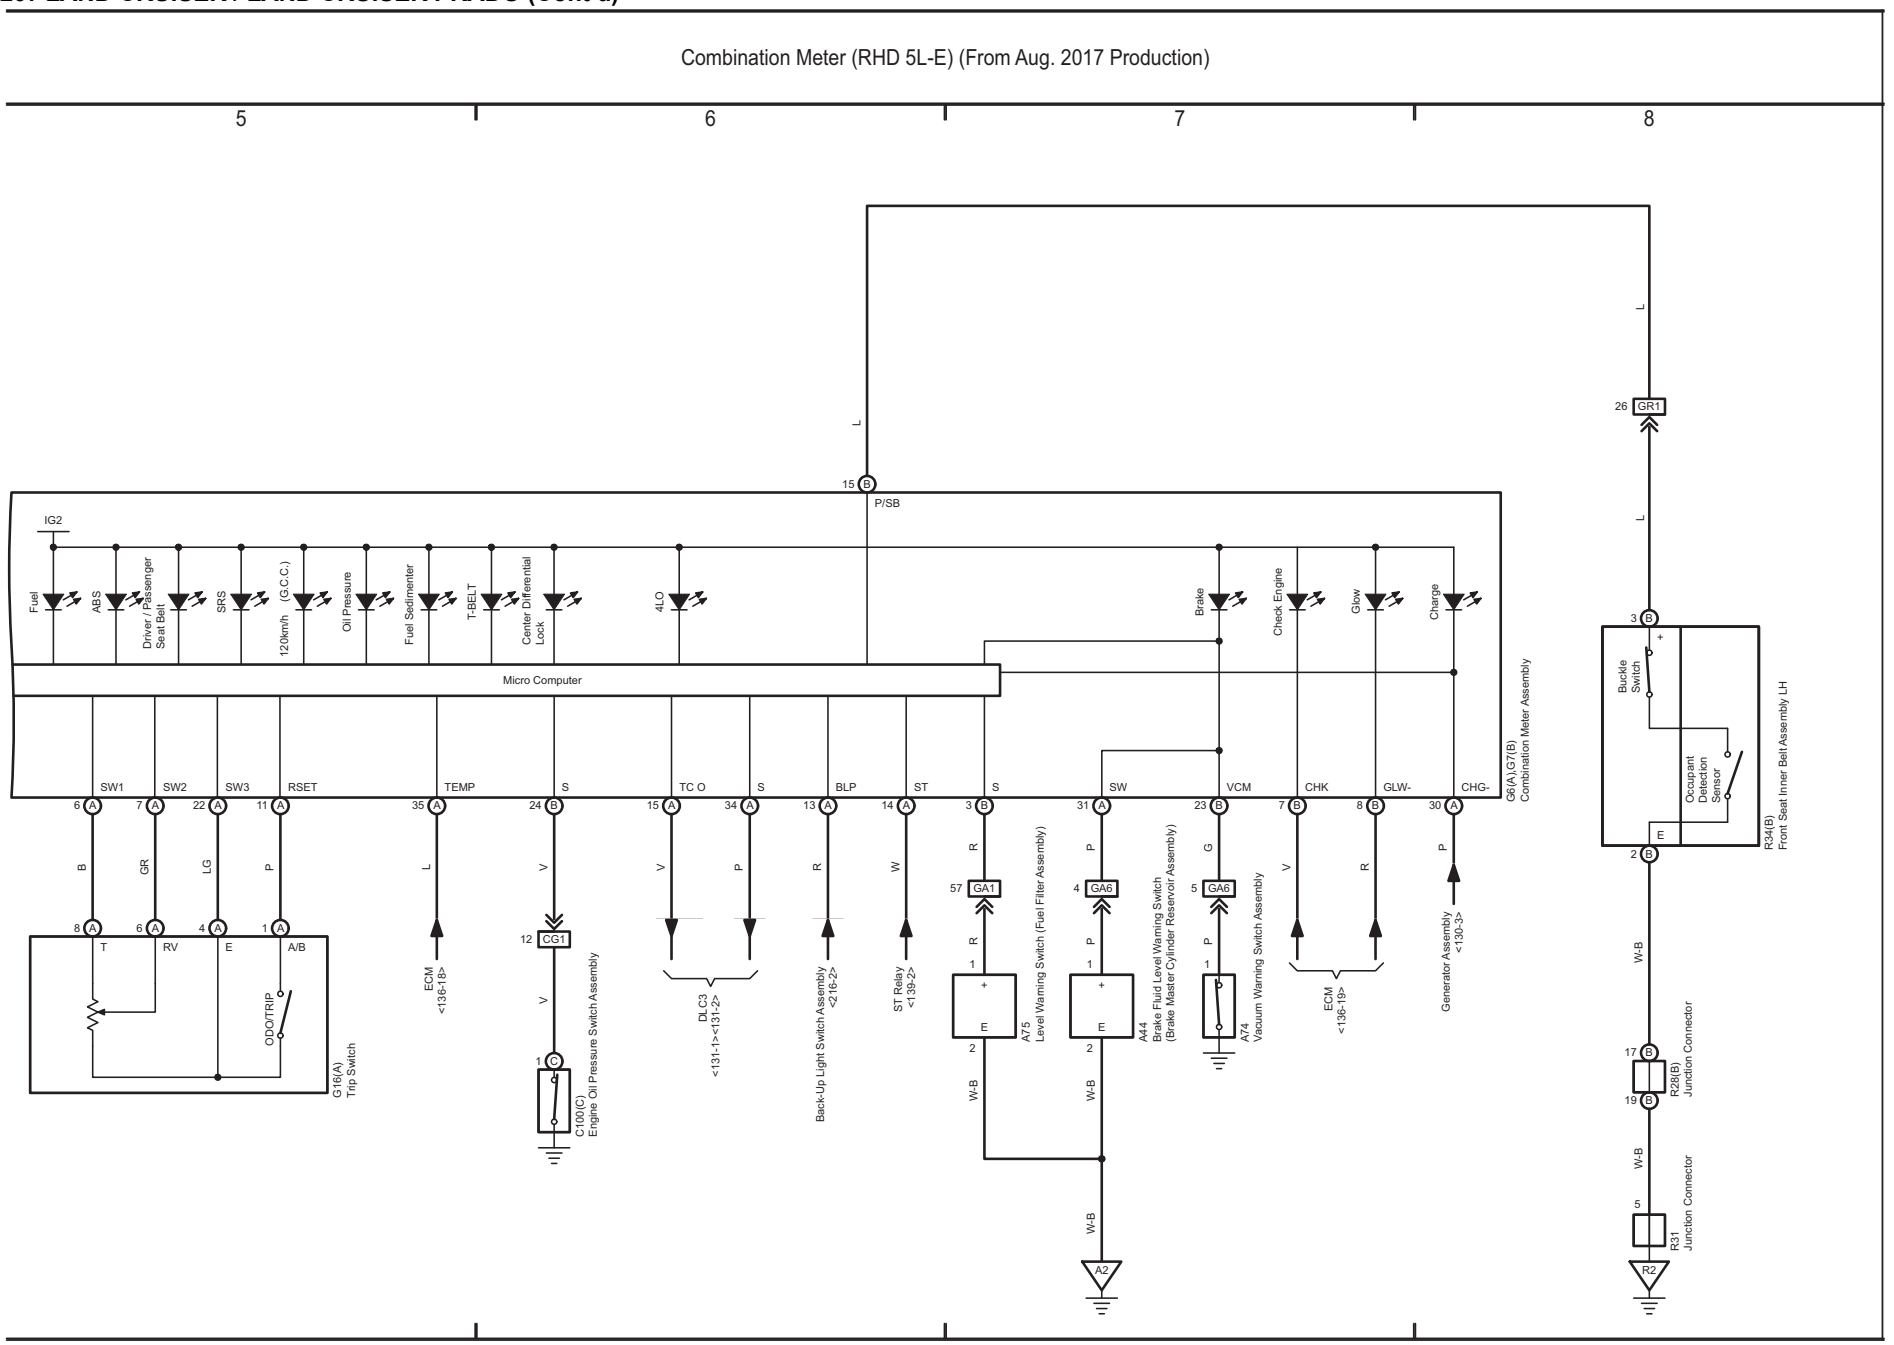


Combination Meter (RHD 5L-E) (From Aug. 2017 Production)
5
6
7
8
IG2
Fuel
ABS
Driver / Passenger Seat Belt
SRS
120km/h (G.C.C.)
Oil Pressure
Fuel Sedimenter
T-BELT
Center Differential Lock
4LO
Brake
Check Engine
Glow
Charge
Micro Computer
15 B P/SB
L
SW1
SW2
SW3
RSET
TEMP
S
TC O
S
BLP
ST
S
SW
VCM
CHK
GLW-
CHG-
G66(A),G71(B) Combination Meter Assembly
B
GR
LG
P
L
V
V
P
R
W
R
P
G
V
R
P
G16(A) Trip Switch
T
RV
E
A/B
ODO/TRIP
ECM <136-18>
CG1
C100(C) Engine Oil Pressure Switch Assembly
DLC3 <131-1><131-2>
Back-Up Light Switch Assembly <216-2>
ST Relay <139-2>
GA1
A75 Level Warning Switch (Fuel Filter Assembly)
GA6
A44 Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
GA6
A74 Vacuum Warning Switch Assembly
ECM <136-19>
Generator Assembly <130-3>
W-B
A2
GR1
Buckle Switch
Occupant Detection Sensor
R34(B) Front Seat Inner Belt Assembly LH
R28(B) Junction Connector
R31 Junction Connector
R2