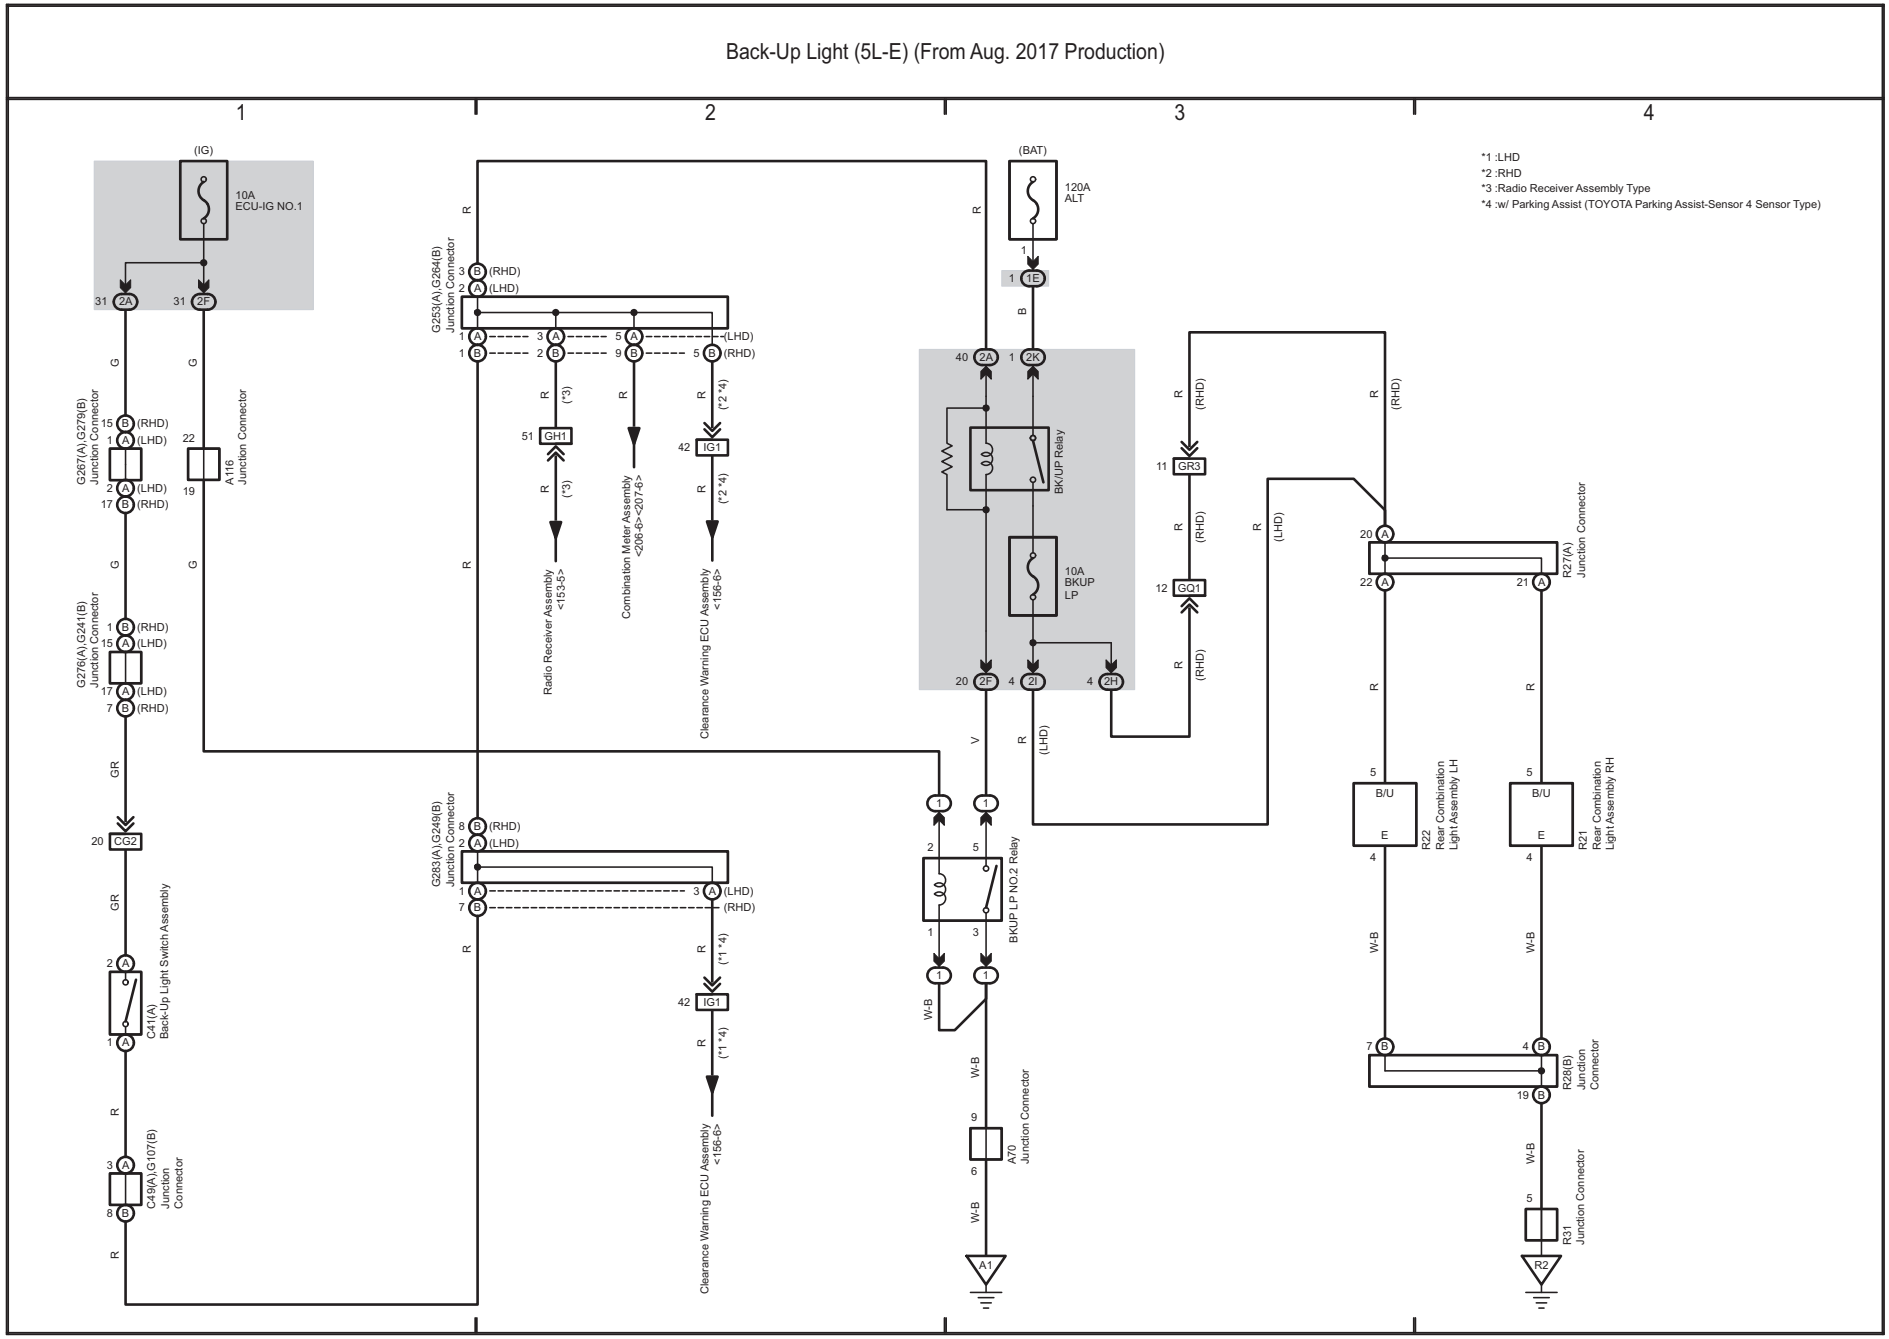

Back-Up Light (5L-E) (From Aug. 2017 Production)
1
2
3
4
*1 :LHD
*2 :RHD
*3 :Radio Receiver Assembly Type
*4 :w/ Parking Assist (TOYOTA Parking Assist-Sensor 4 Sensor Type)
(IG)
10A
ECU-IG NO.1
(BAT)
120A
ALT
BK/UP Relay
10A
BKUP
LP
BKUP LP NO.2 Relay
G267(A),G279(B)
Junction Connector
G276(A),G241(B)
Junction Connector
G253(A),G264(B)
Junction Connector
G283(A),G249(B)
Junction Connector
A116
Junction Connector
A70
Junction Connector
C41(A)
Back-Up Light Switch Assembly
C49(A),G107(B)
Junction
Connector
Radio Receiver Assembly
<153-5>
Combination Meter Assembly
<206-6><207-6>
Clearance Warning ECU Assembly
<156-6>
R27(A)
Junction Connector
R22
Rear Combination
Light Assembly LH
R21
Rear Combination
Light Assembly RH
R28(B)
Junction
Connector
R31
Junction Connector
GH1
IG1
GR3
GQ1
CG2
A1
R2
B/U
(RHD)
(LHD)