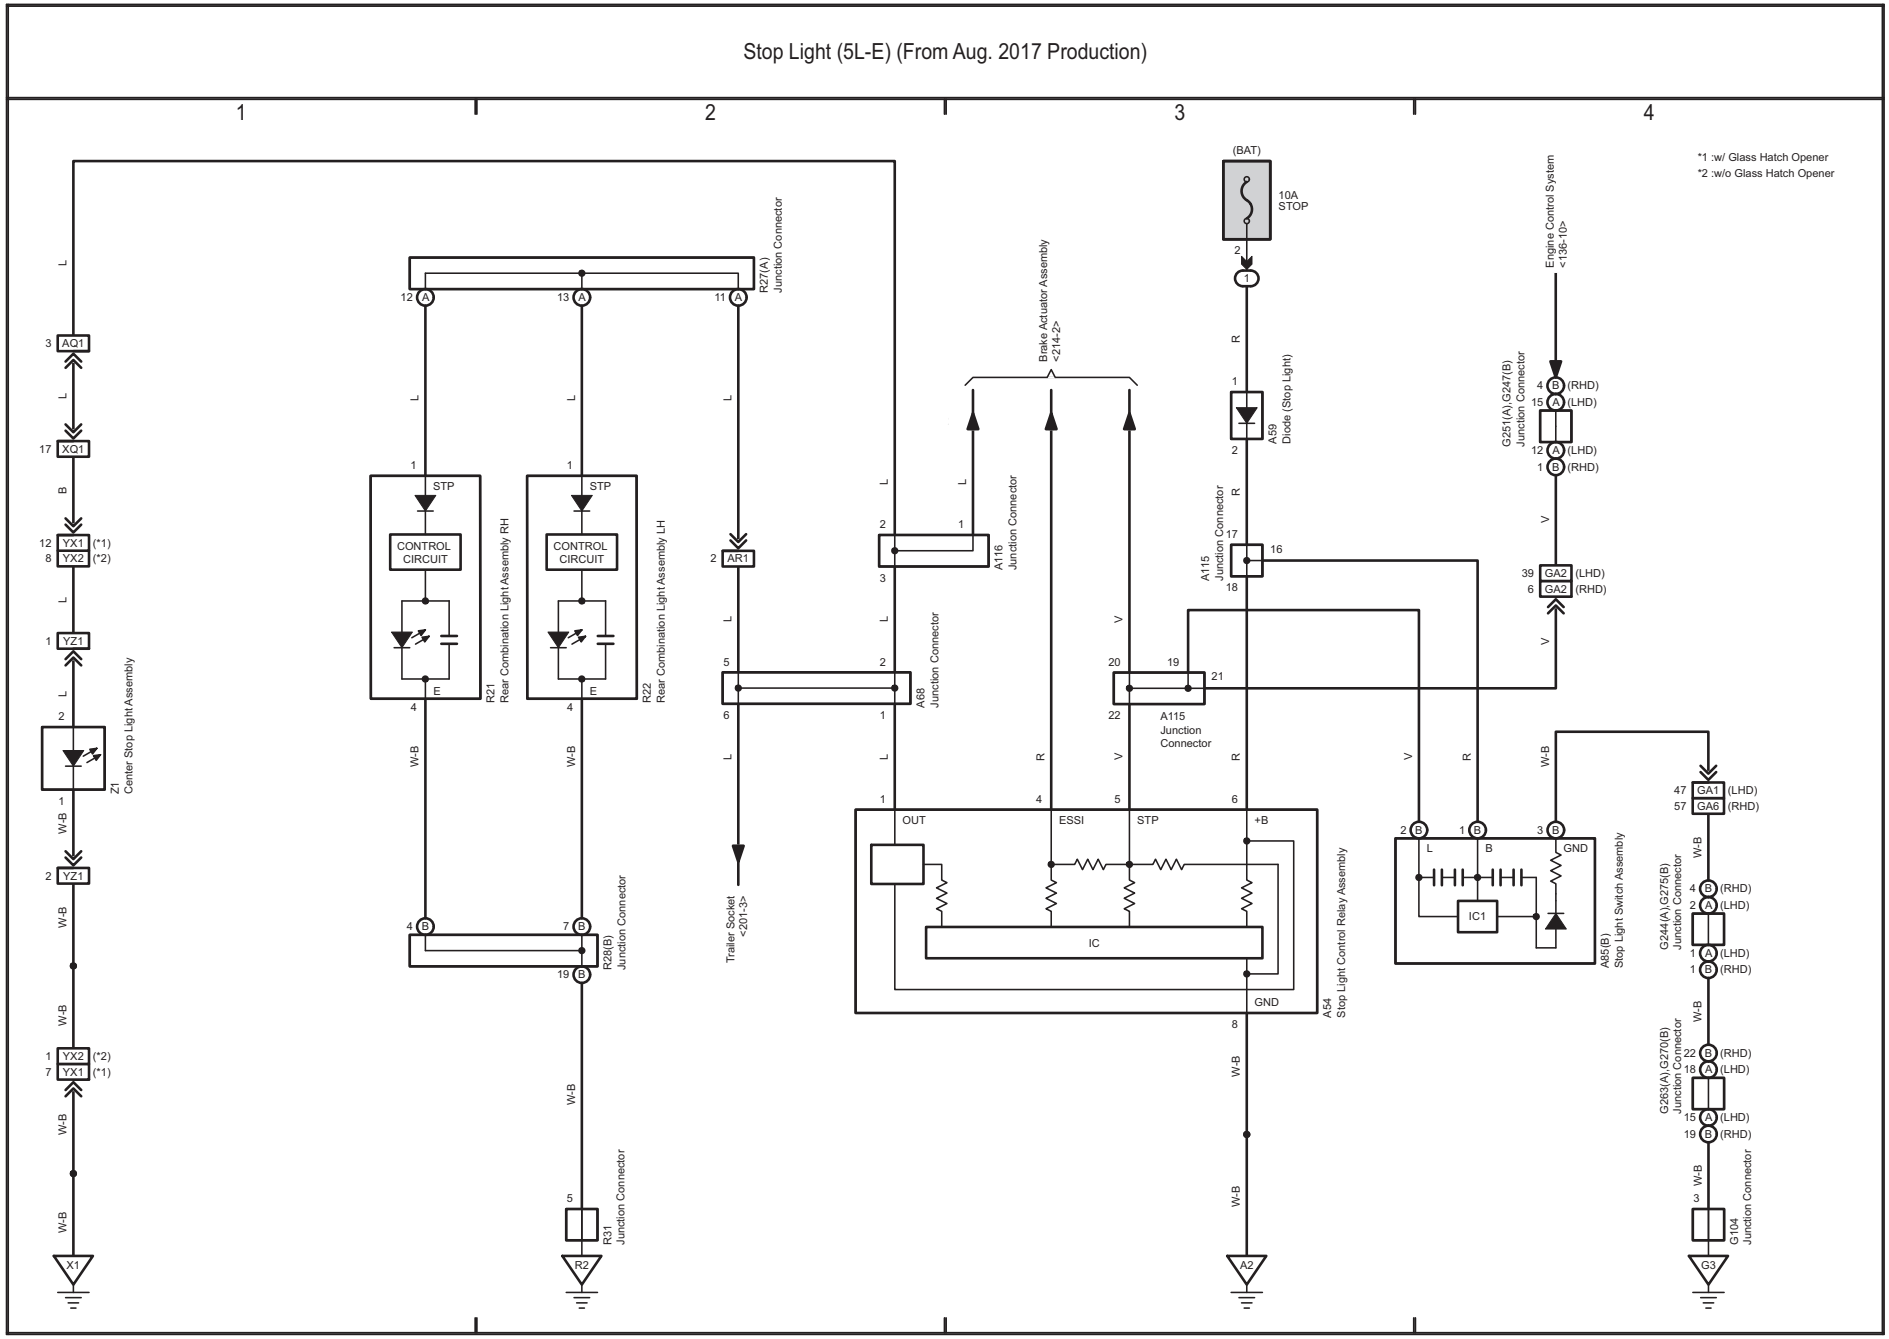

Stop Light (5L-E) (From Aug. 2017 Production)
1
2
3
4
*1 :w/ Glass Hatch Opener
*2 :w/o Glass Hatch Opener
(BAT)
10A STOP
Engine Control System <136-10>
Brake Actuator Assembly <214-2>
A59 Diode (Stop Light)
G251(A),G247(B) Junction Connector
A115 Junction Connector
A116 Junction Connector
A68 Junction Connector
R27(A) Junction Connector
R21 Rear Combination Light Assembly RH
R22 Rear Combination Light Assembly LH
R28(B) Junction Connector
R31 Junction Connector
Z1 Center Stop Light Assembly
Trailer Socket <201-3>
A54 Stop Light Control Relay Assembly
A85(B) Stop Light Switch Assembly
G244(A),G275(B) Junction Connector
G263(A),G270(B) Junction Connector
G104 Junction Connector
CONTROL CIRCUIT
STP
OUT
ESSI
+B
GND
IC
IC1
(LHD)
(RHD)
X1
R2
A2
G3