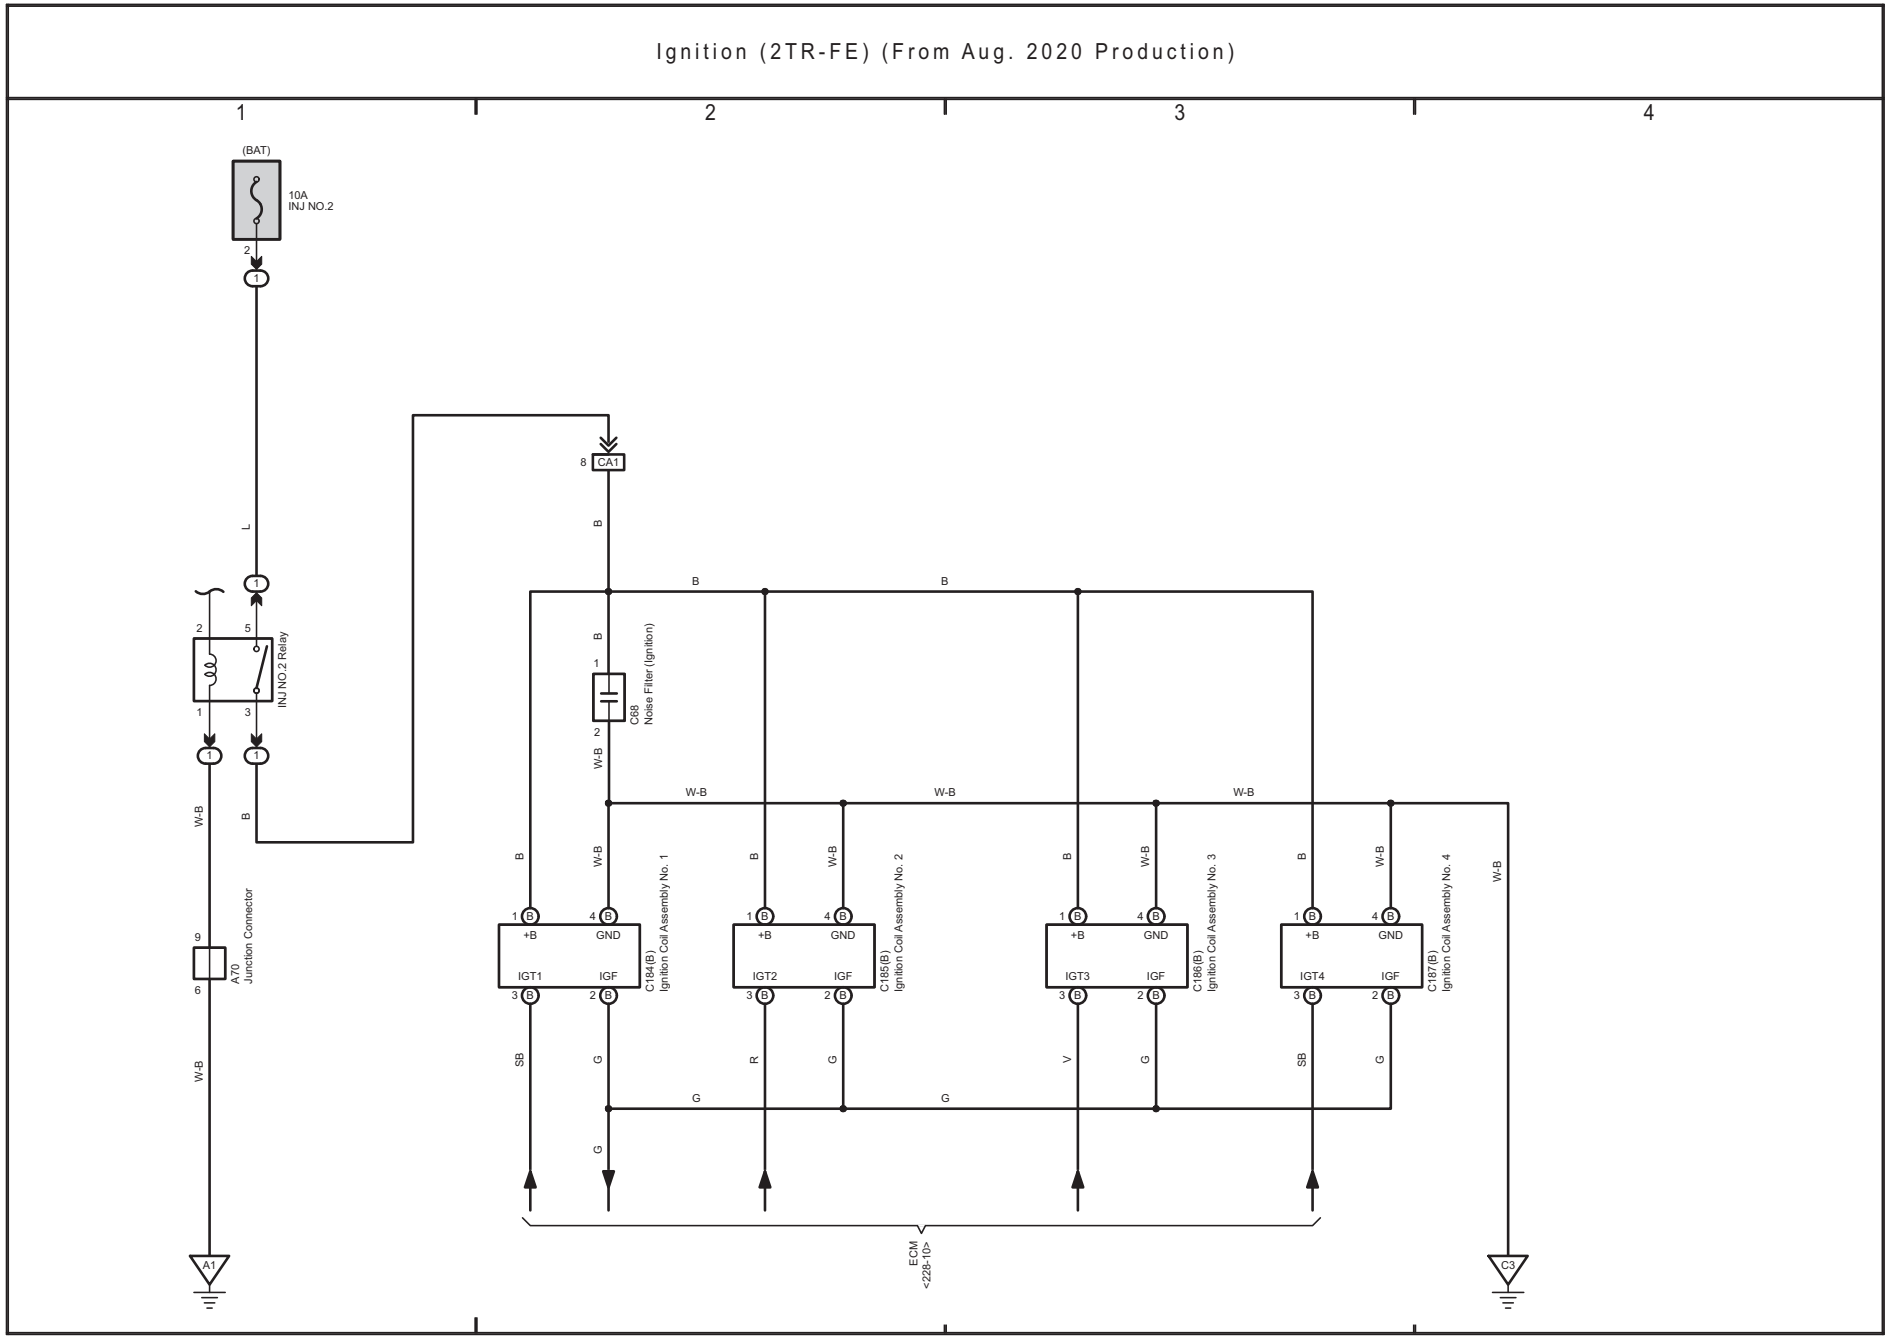

Ignition (2TR-FE) (From Aug. 2020 Production)
1
2
3
4
(BAT)
10A
INJ NO.2
2
1
L
1
2
5
INJ NO.2 Relay
1
3
1
1
W-B
B
9
A70
Junction Connector
6
W-B
A1
8
CA1
B
B
B
B
1
C68
Noise Filter (Ignition)
2
W-B
W-B
W-B
W-B
B
W-B
1
B
+B
4
B
GND
IGT1
IGF
3
B
2
B
C184(B)
Ignition Coil Assembly No. 1
SB
G
B
W-B
C185(B)
Ignition Coil Assembly No. 2
R
G
B
W-B
C186(B)
Ignition Coil Assembly No. 3
V
G
B
W-B
C187(B)
Ignition Coil Assembly No. 4
SB
G
G
G
G
ECM
<228-10>
W-B
C3