

(Cont. next page)

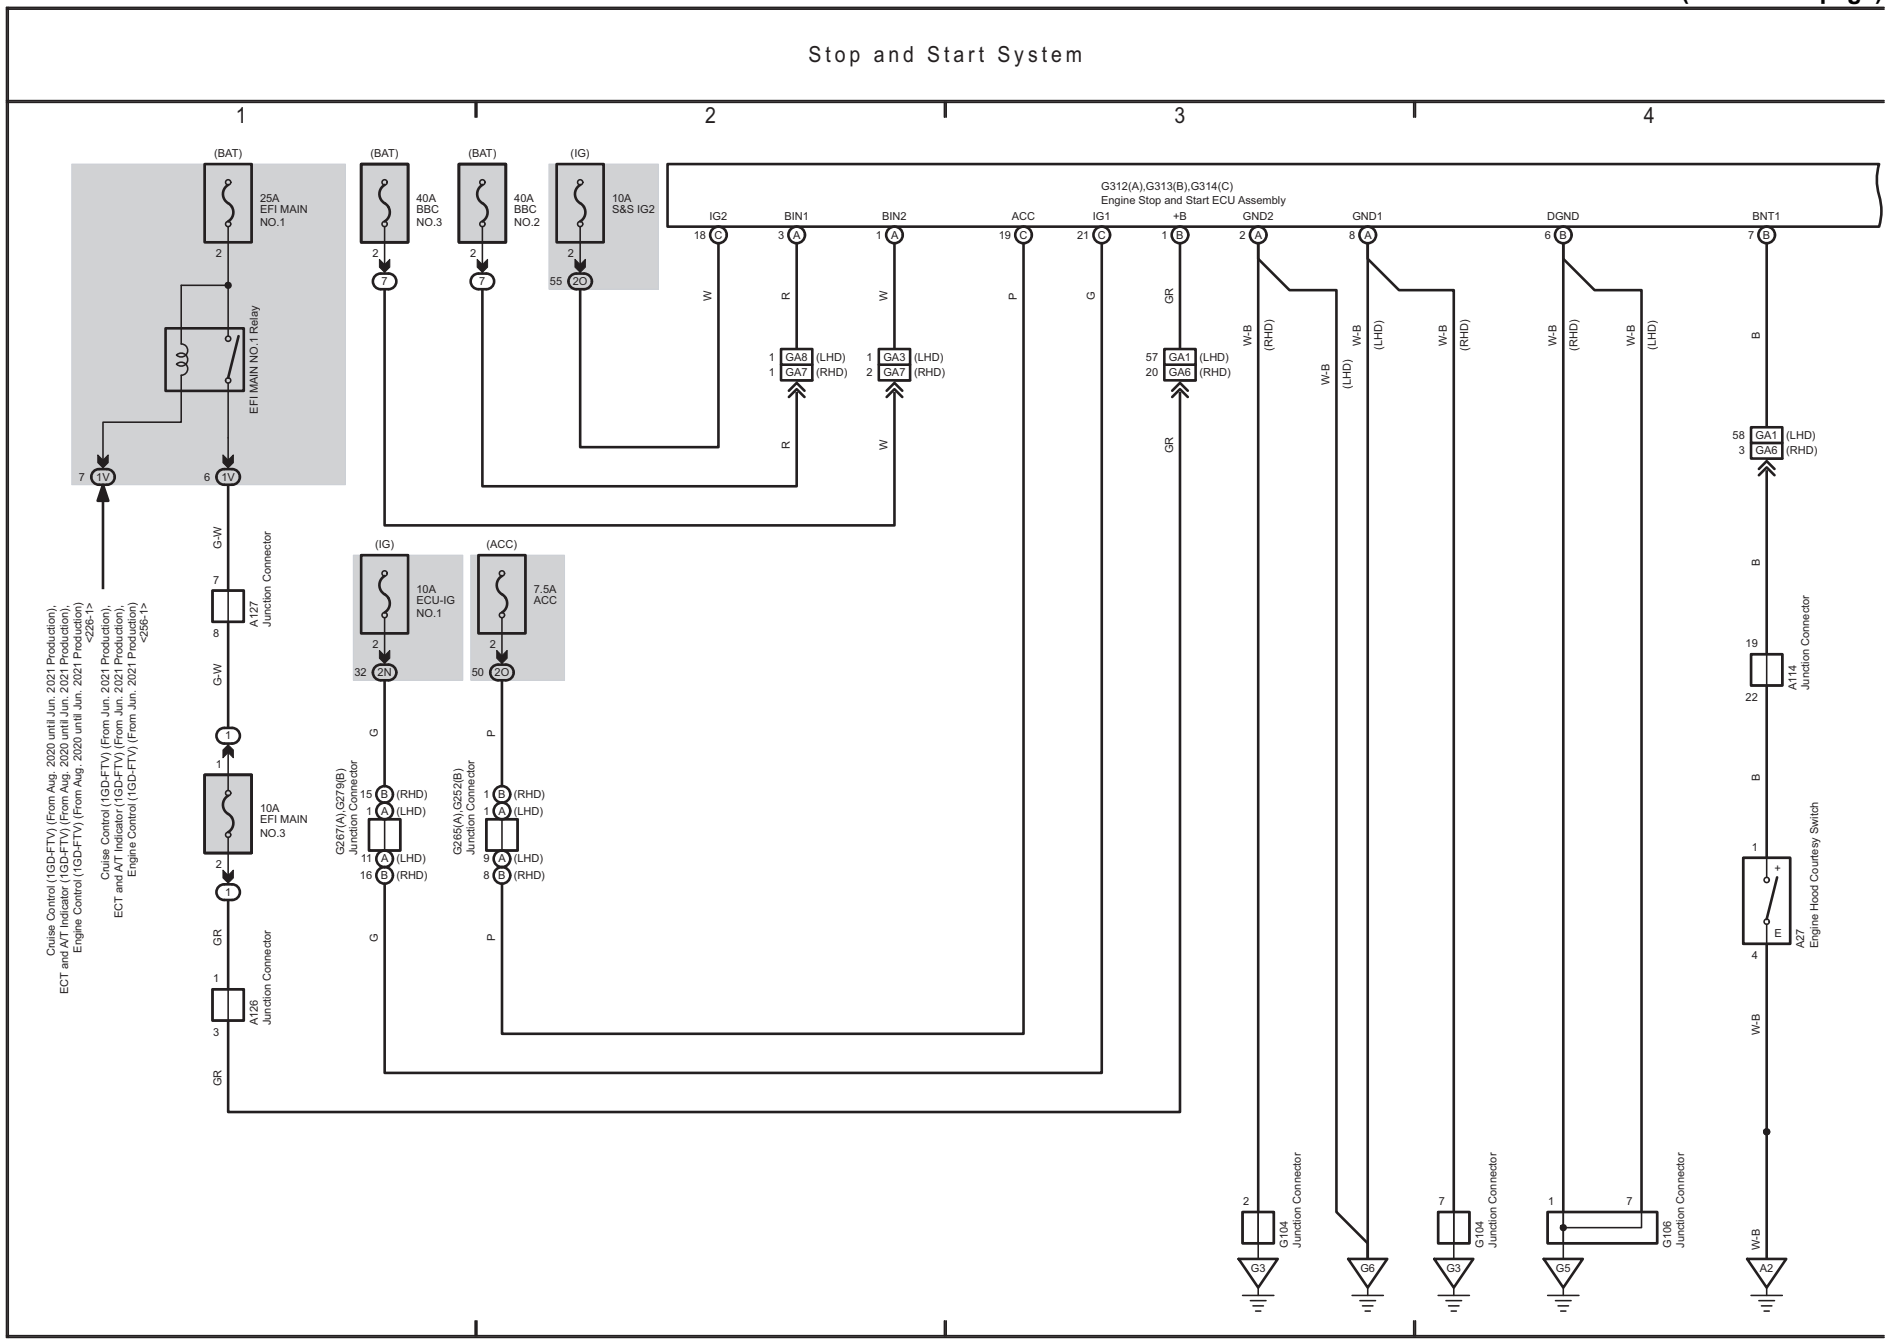


(Cont. next page)


Stop and Start System

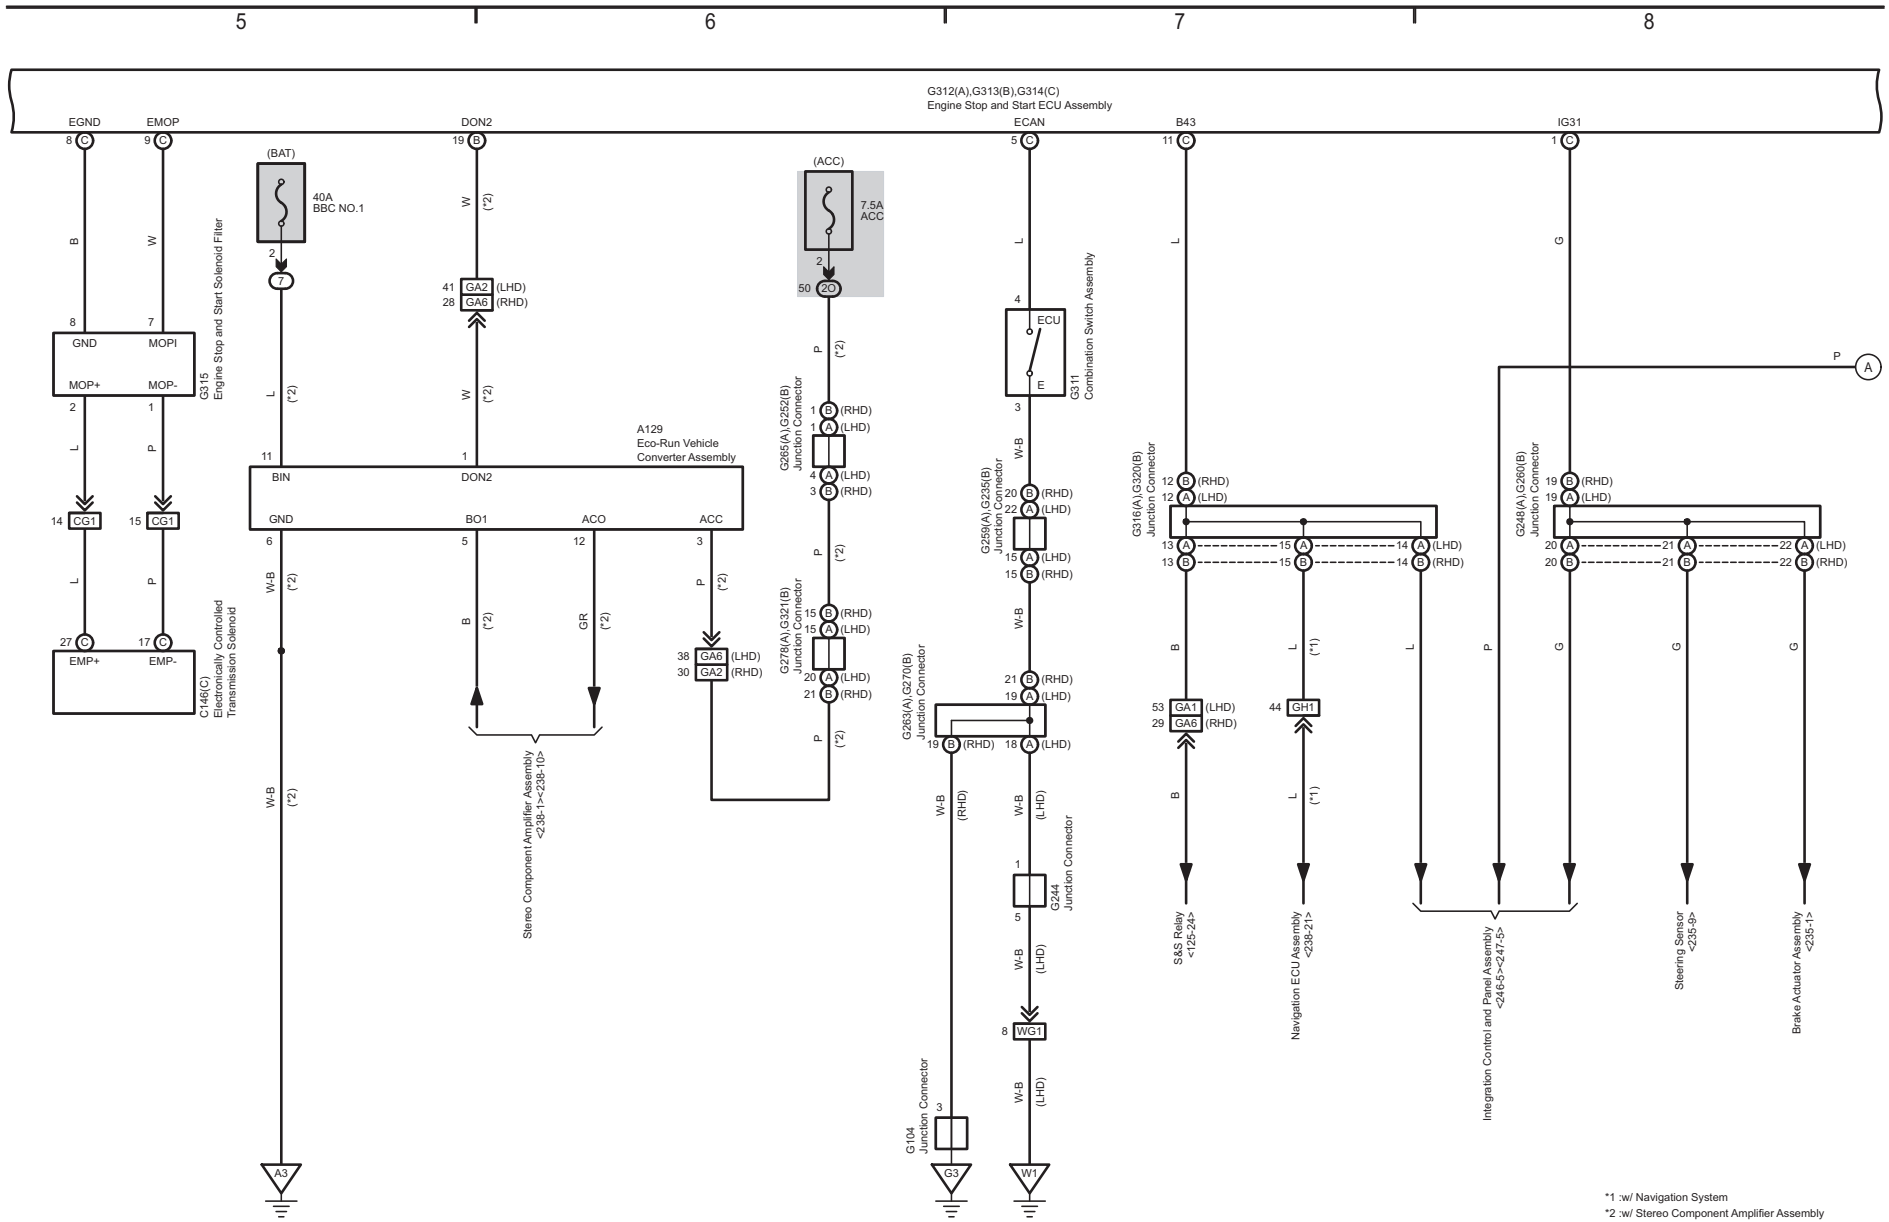

M

(Cont. next page)

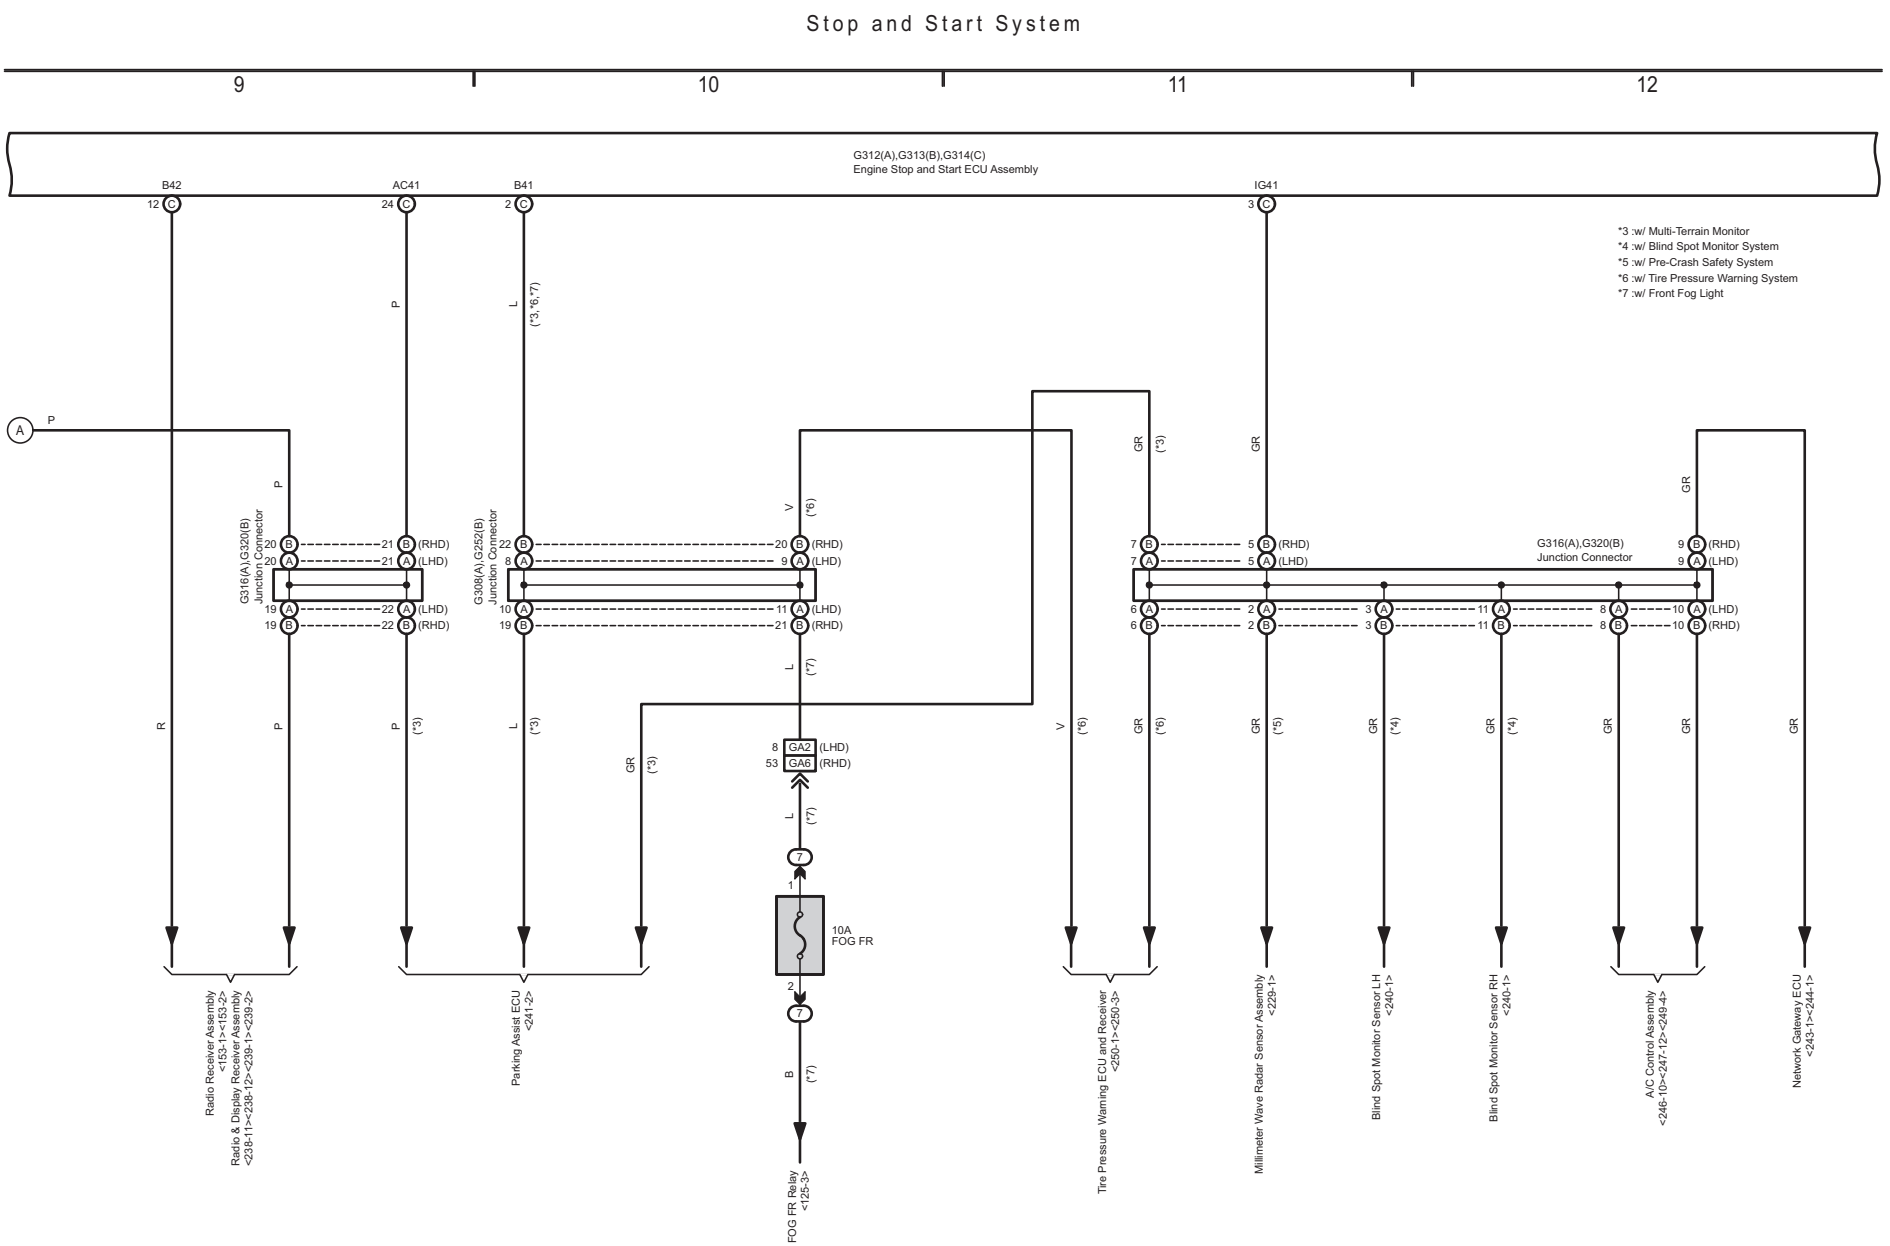

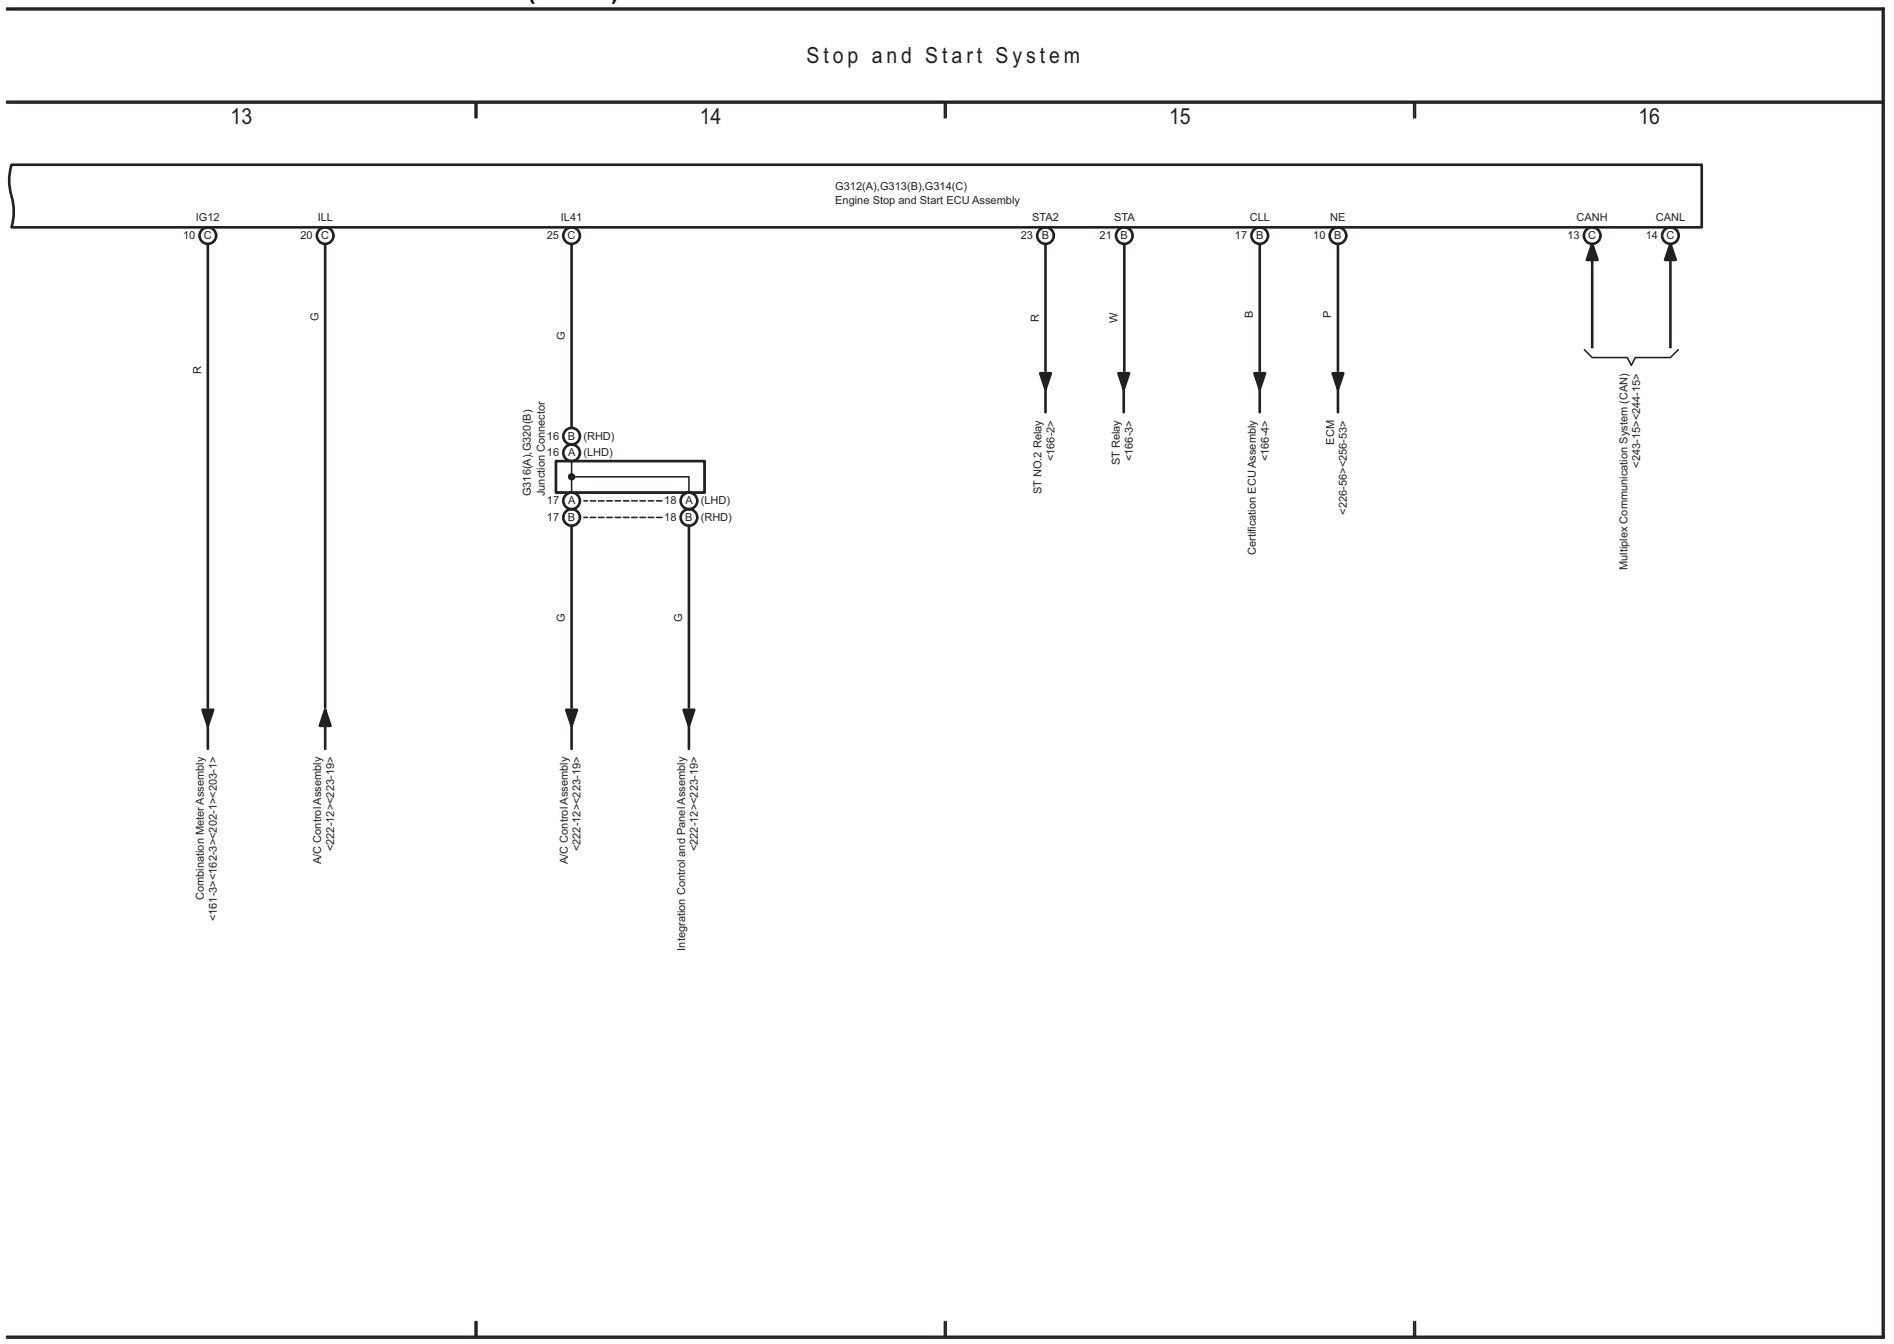
Stop and Start System
13
14
15
16
G312(A),G313(B),G314(C)
Engine Stop and Start ECU Assembly
IG12
10 C
ILL
20 C
IL41
25 C
STA2
23 B
STA
21 B
CLL
17 B
NE
10 B
CANH
13 C
CANL
14 C
R
G
G
R
W
B
P
G316(A),G320(B)
Junction Connector
16 B (RHD)
16 A (LHD)
17 A
18 A (LHD)
17 B
18 B (RHD)
G
G
Combination Meter Assembly
<161-3><162-3><202-1><203-1>
A/C Control Assembly
<222-12><223-19>
A/C Control Assembly
<222-12><223-19>
Integration Control and Panel Assembly
<222-12><223-19>
ST NO.2 Relay
<166-2>
ST Relay
<166-3>
Certification ECU Assembly
<166-4>
ECM
<226-56><256-53>
Multiplex Communication System (CAN)
<243-15><244-15>