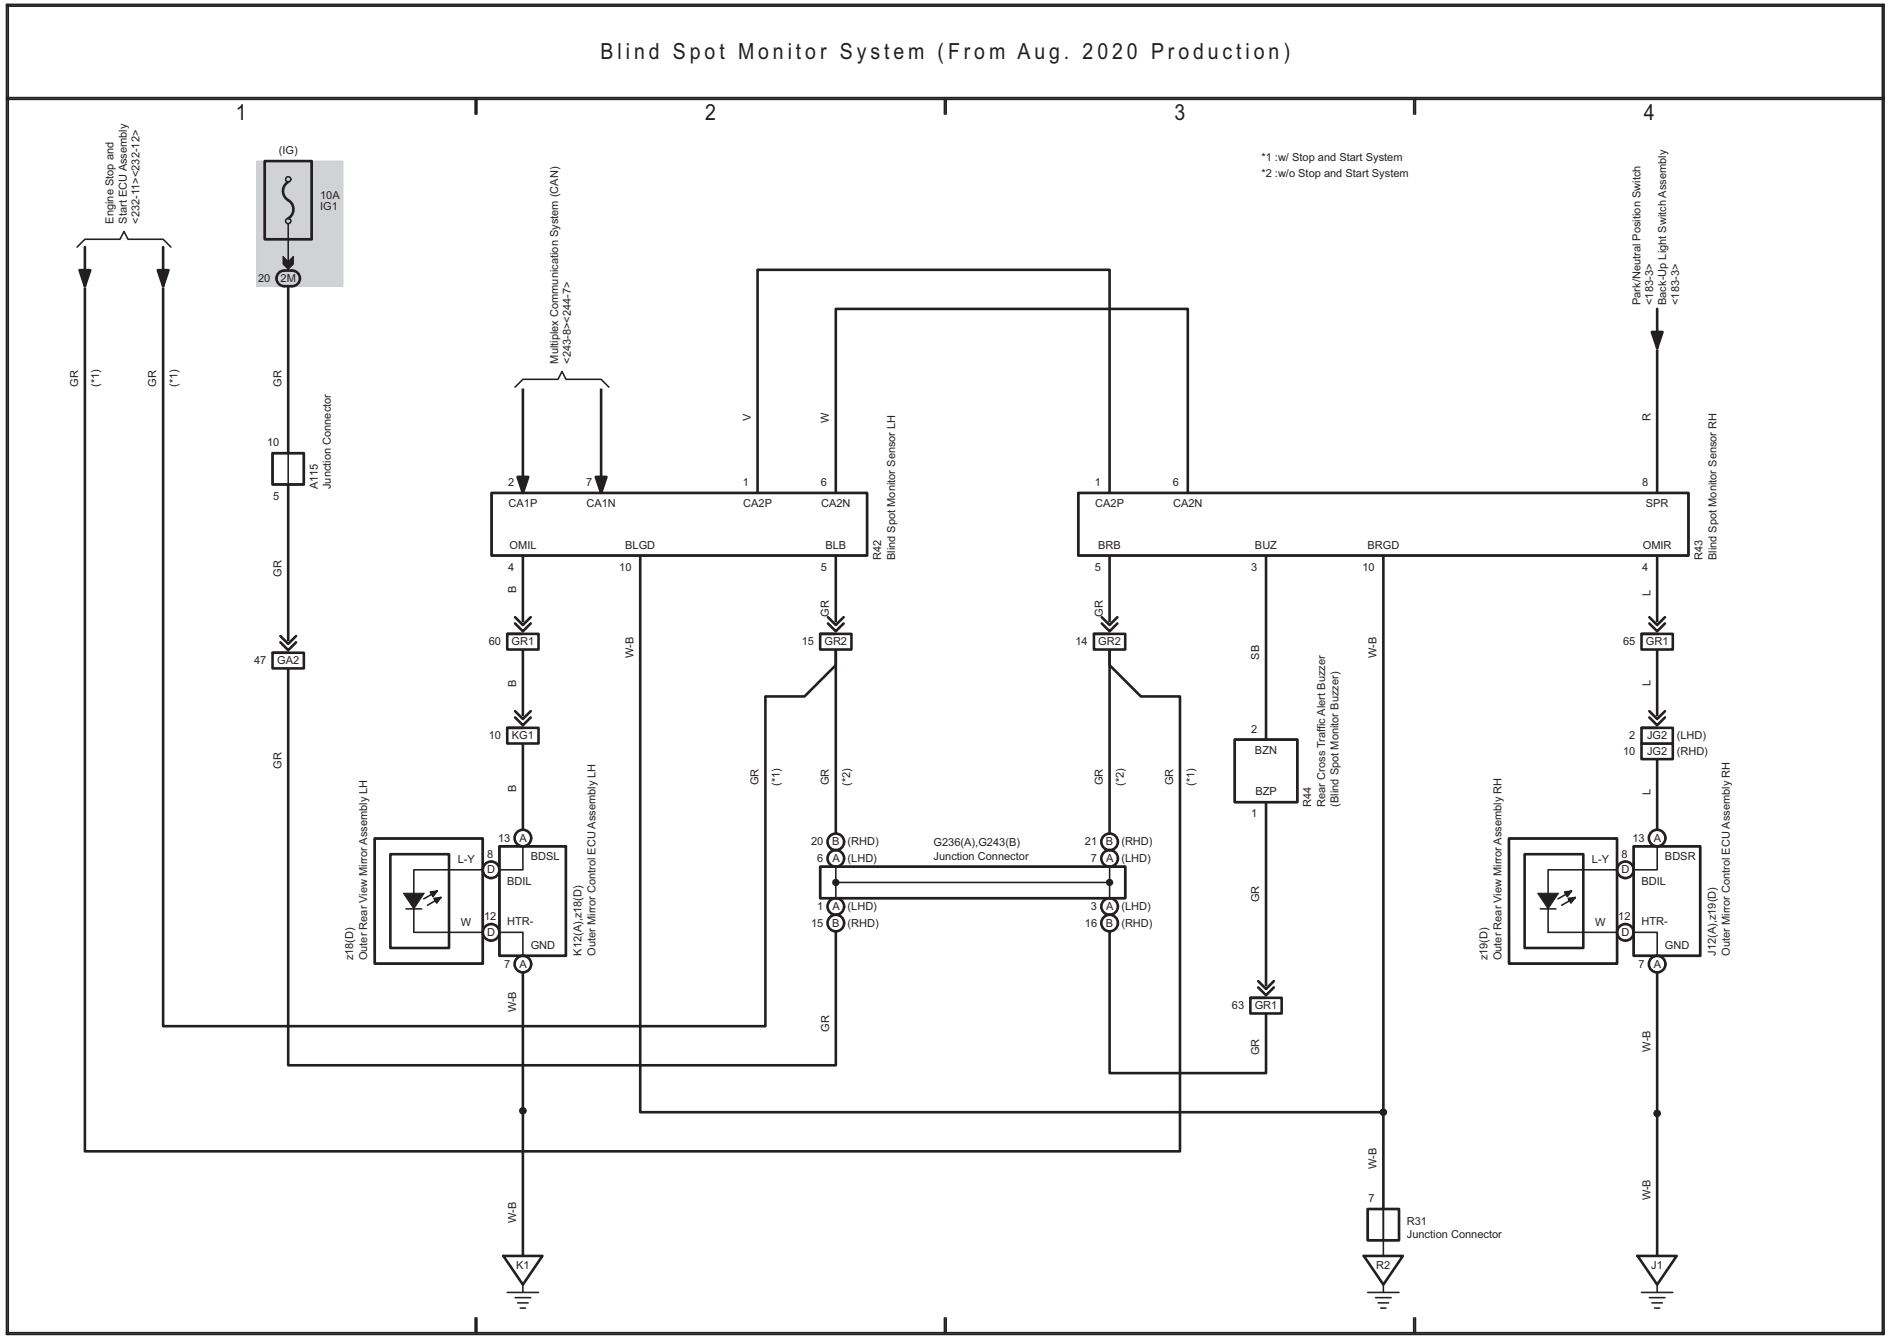

Blind Spot Monitor System (From Aug. 2020 Production)
1
2
3
4
*1 :w/ Stop and Start System
*2 :w/o Stop and Start System
Engine Stop and Start ECU Assembly <232-11><232-12>
(IG)
10A IG1
20 2M
10
5
A115 Junction Connector
47 GA2
Multiplex Communication System (CAN) <243-8><244-7>
2 CA1P
7 CA1N
1 CA2P
6 CA2N
OMIL
BLGD
BLB
R42 Blind Spot Monitor Sensor LH
4
10
5
60 GR1
10 KG1
15 GR2
1 CA2P
6 CA2N
BRB
BUZ
BRGD
5
3
10
14 GR2
2 BZN
BZP
1
R44 Rear Cross Traffic Alert Buzzer (Blind Spot Monitor Buzzer)
63 GR1
R
1 CA2P
8 CA2N
SPR
OMIR
R43 Blind Spot Monitor Sensor RH
4
65 GR1
2 JG2 (LHD)
10 JG2 (RHD)
Park/Neutral Position Switch <183-3> Back-Up Light Switch Assembly <183-3>
z18(D) Outer Rear View Mirror Assembly LH
L-Y
W
13 A
8 D
12 D
7 A
BDSL
BDIL
HTR-
GND
K12(A),z18(D) Outer Mirror Control ECU Assembly LH
20 B (RHD)
6 A (LHD)
1 A (LHD)
15 B (RHD)
G236(A),G243(B) Junction Connector
21 B (RHD)
7 A (LHD)
3 A (LHD)
16 B (RHD)
z19(D) Outer Rear View Mirror Assembly RH
BDSR
J12(A),z19(D) Outer Mirror Control ECU Assembly RH
R31 Junction Connector
K1
R2
J1