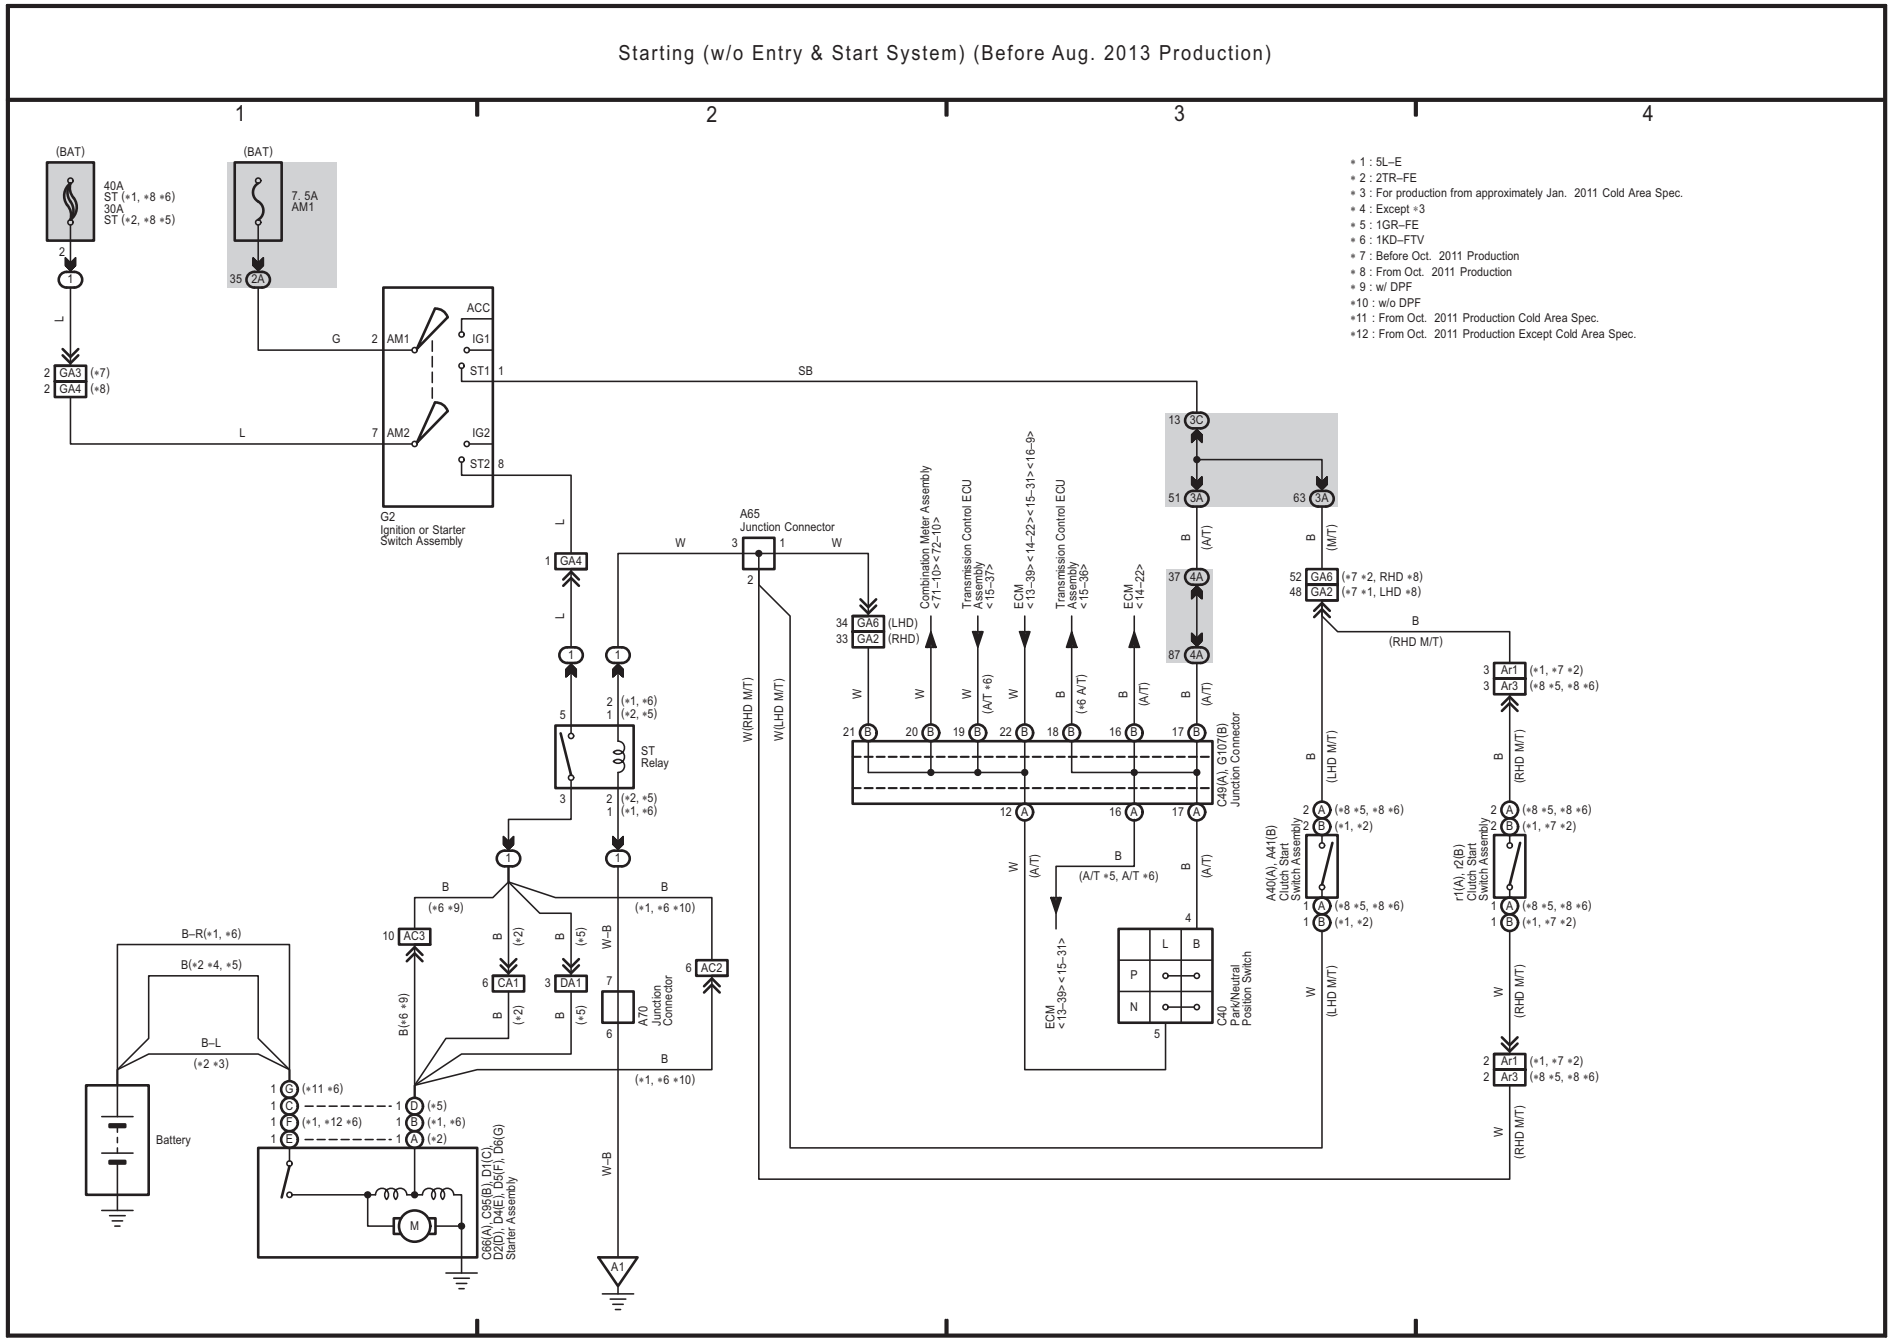

Starting (w/o Entry & Start System) (Before Aug. 2013 Production)
1
2
3
4
∗1 : 5L–E
∗2 : 2TR–FE
∗3 : For production from approximately Jan. 2011 Cold Area Spec.
∗4 : Except ∗3
∗5 : 1GR–FE
∗6 : 1KD–FTV
∗7 : Before Oct. 2011 Production
∗8 : From Oct. 2011 Production
∗9 : w/ DPF
∗10 : w/o DPF
∗11 : From Oct. 2011 Production Cold Area Spec.
∗12 : From Oct. 2011 Production Except Cold Area Spec.
(BAT)
40A ST (∗1, ∗8 ∗6)
30A ST (∗2, ∗8 ∗5)
7. 5A AM1
G2 Ignition or Starter Switch Assembly
ACC
IG1
ST1
IG2
ST2
AM1
AM2
ST Relay
A65 Junction Connector
Combination Meter Assembly <71–10><72–10>
Transmission Control ECU Assembly <15–37>
ECM <13–39><14–22><15–31><16–9>
ECM <14–22>
Transmission Control ECU Assembly <15–36>
C49(A), G107(B) Junction Connector
A40(A), A41(B) Clutch Start Switch Assembly
r1(A), r2(B) Clutch Start Switch Assembly
A/T
M/T
LHD
RHD
A/T ∗5, A/T ∗6
ECM <13–39><15–31>
C40 Park/Neutral Position Switch
A/C Junction Connector
Battery
C66(A), C95(B), D1(C), D2(D), D4(E), D5(F), D6(G) Starter Assembly
M
A1
SB
W–B
B–R(∗1, ∗6)
B(∗2 ∗4, ∗5)
B–L
(∗2 ∗3)
B(∗6 ∗9)
W(RHD M/T)
W(LHD M/T)