

C181
C165
C177
r8
C178
D11
C173
C168
C167
C182
C166
C172
C169
C183
C180
p1
C170
D8
D10
D9
r5
C179
p2
C175
r4
C171
g1
C176
r6
C164

C164 Generator Assembly
C165 Glow Plug Assembly
C166 No. 2 Exhaust Gas Temperature Sensor
C167 No. 3 Exhaust Gas Temperature Sensor
C168 Urea Injector Assembly
C169 No. 1 Exhaust Gas Temperature Sensor
C170 Cam Position Sensor
C171 Engine Oil Level Sensor
C172 Intake Mass Air Flow Meter Sub-Assembly
C173 VSV (for Engine Mounting)
C175 DC Motor
C176 Intake Air Temperature Sensor (Turbo)
C177 Transmission Revolution Sensor (Counter Gear)
C178 Transmission Revolution Sensor (Turbine)
C179 Vane Pump Assembly
C180 Exhaust Fuel Addition Injector Assembly
C181 Nitrogen Oxides Sensor (Intake Side)
C182 Intake Air Temperature Sensor (Intercooler)
C183 E.F.I. Engine Coolant Temperature Sensor (Intercooler)
D 8 Starter Assembly
D 9 Starter Assembly
D 10 Starter Assembly
D 11 Starter Assembly
g 1 Front Television Camera Assembly
p 1 Front Speed Sensor RH
p 2 Front Speed Sensor LH
r 4 Viscous Heater with Magnet Clutch ASSY
r 5 Diesel Throttle Body ASSY
r 6 Injection or Supply Pump Assembly (Suction Control Valve)
r 8 Fuel Pressure Sensor (Common Rail Assembly)

C164

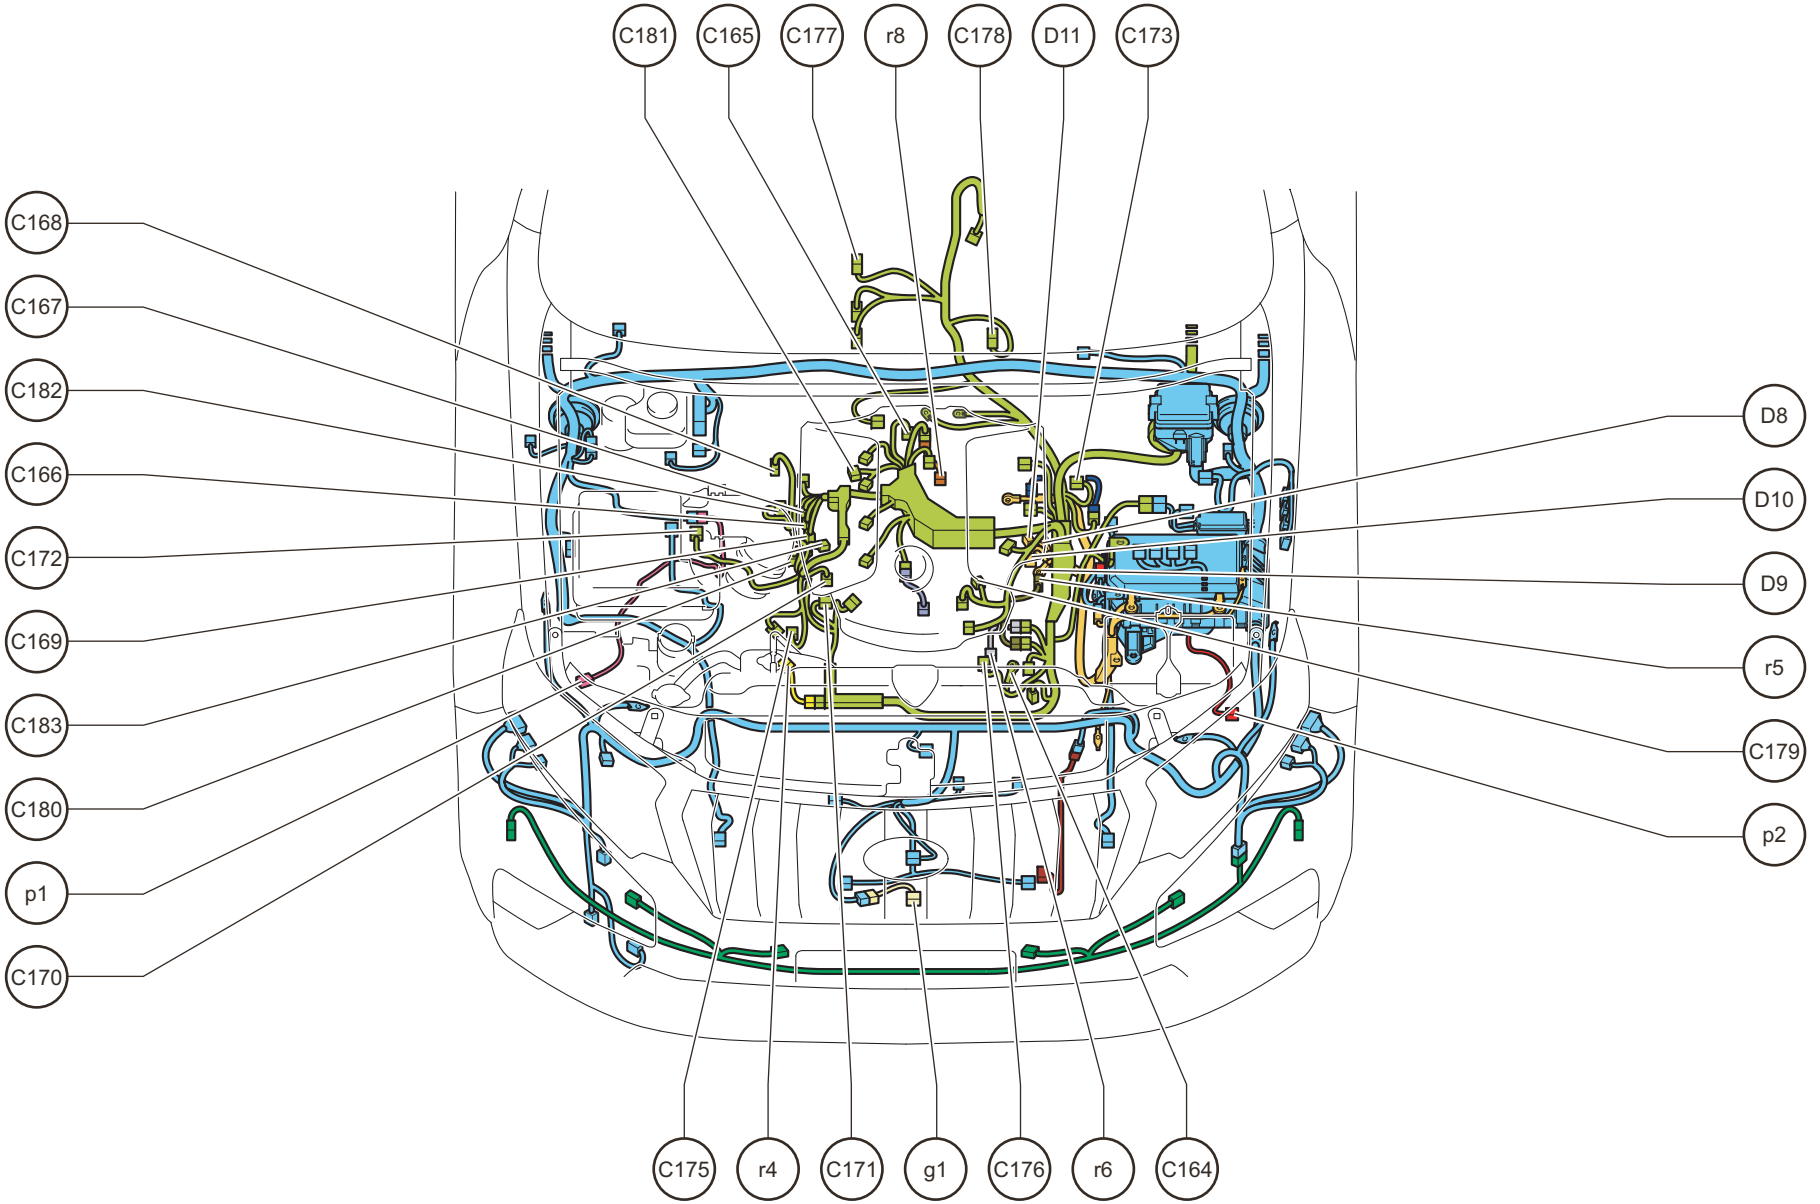

C165
Gray



90980-10942

C166
Black




90980-10949

C167
Gray



90980-10901

C168
Gray




90980-11875

C169
White




90980-10899

C170
Black

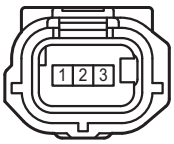

90980-12353

C171
Black

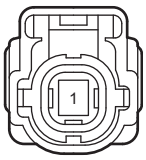


90980-12C20

C172
Black




90980-12A85

C173
Brown

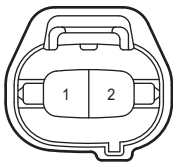


90980-11149

C175
Black

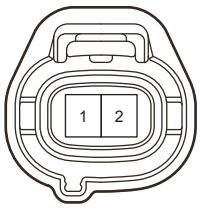


90980-12D34

C176
Black

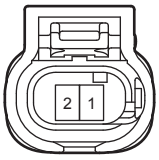


82824-60B40

C177
Black

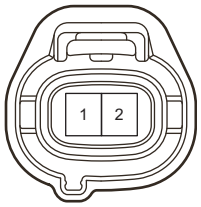


90980-12D34

C178
Black

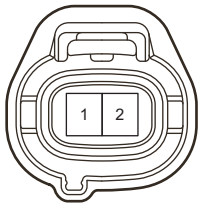


90980-12D34

C179
Black

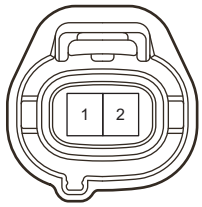


90980-12D34

C180
Gray

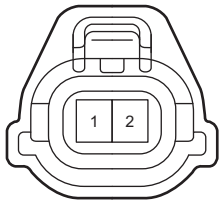


90980-12940

C181
Black

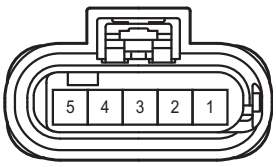

82824-60B00

C182
Black

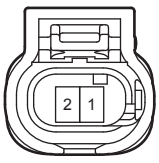

82824-60B40

C183
White



90980-10735

D8



D9



D10
Black



90980-11184

D11
Black




90980-12941

g1
Black




90980-12A59

p1
Black

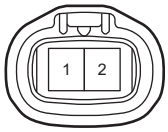

90980-11900

p2
Black

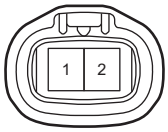


90980-11900

r4
Gray




90980-11271

r5
Black

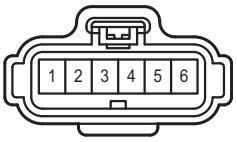

90980-11858

r6
Gray

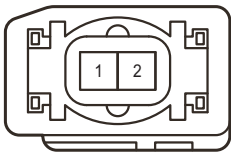

90980-12747

r8
Black



90980-11194