

C159
C146
C147
C41
h1
C43
C148
C138
C45
C44
D1
C33
D7
p1
p2
C156
C46
C42
h2
g1
D12
C39
D3


C 33 Intake Mass Air Flow Meter Sub-Assembly
C 39 Cooler Compressor Assembly
C 41 Back-Up Light Switch Assembly
C 42 Engine Oil Pressure Switch Assembly
C 43 Transfer Shift Actuator Assembly
C 44 Air Pump Assembly (Bank 1)
C 45 Air Pump Assembly (Bank 2)
C 46 Engine Oil Level Sensor
C138 Purge VSV
C146 Electronically Controlled Transmission Solenoid
C147 Transmission Revolution Sensor (Counter Gear)
C148 Transmission Revolution Sensor (Turbine)
C156 Vane Pump Assembly
C159 Park/Neutral Position Switch
D 1 Starter Assembly
D 3 Generator Assembly
D 7 Generator Assembly
D 12 Starter Assembly
g 1 Front Television Camera Assembly
h 1 Knock Control Sensor (Bank 2)
h 2 Knock Control Sensor (Bank 1)
p 1 Front Speed Sensor RH
p 2 Front Speed Sensor LH

C33
Black

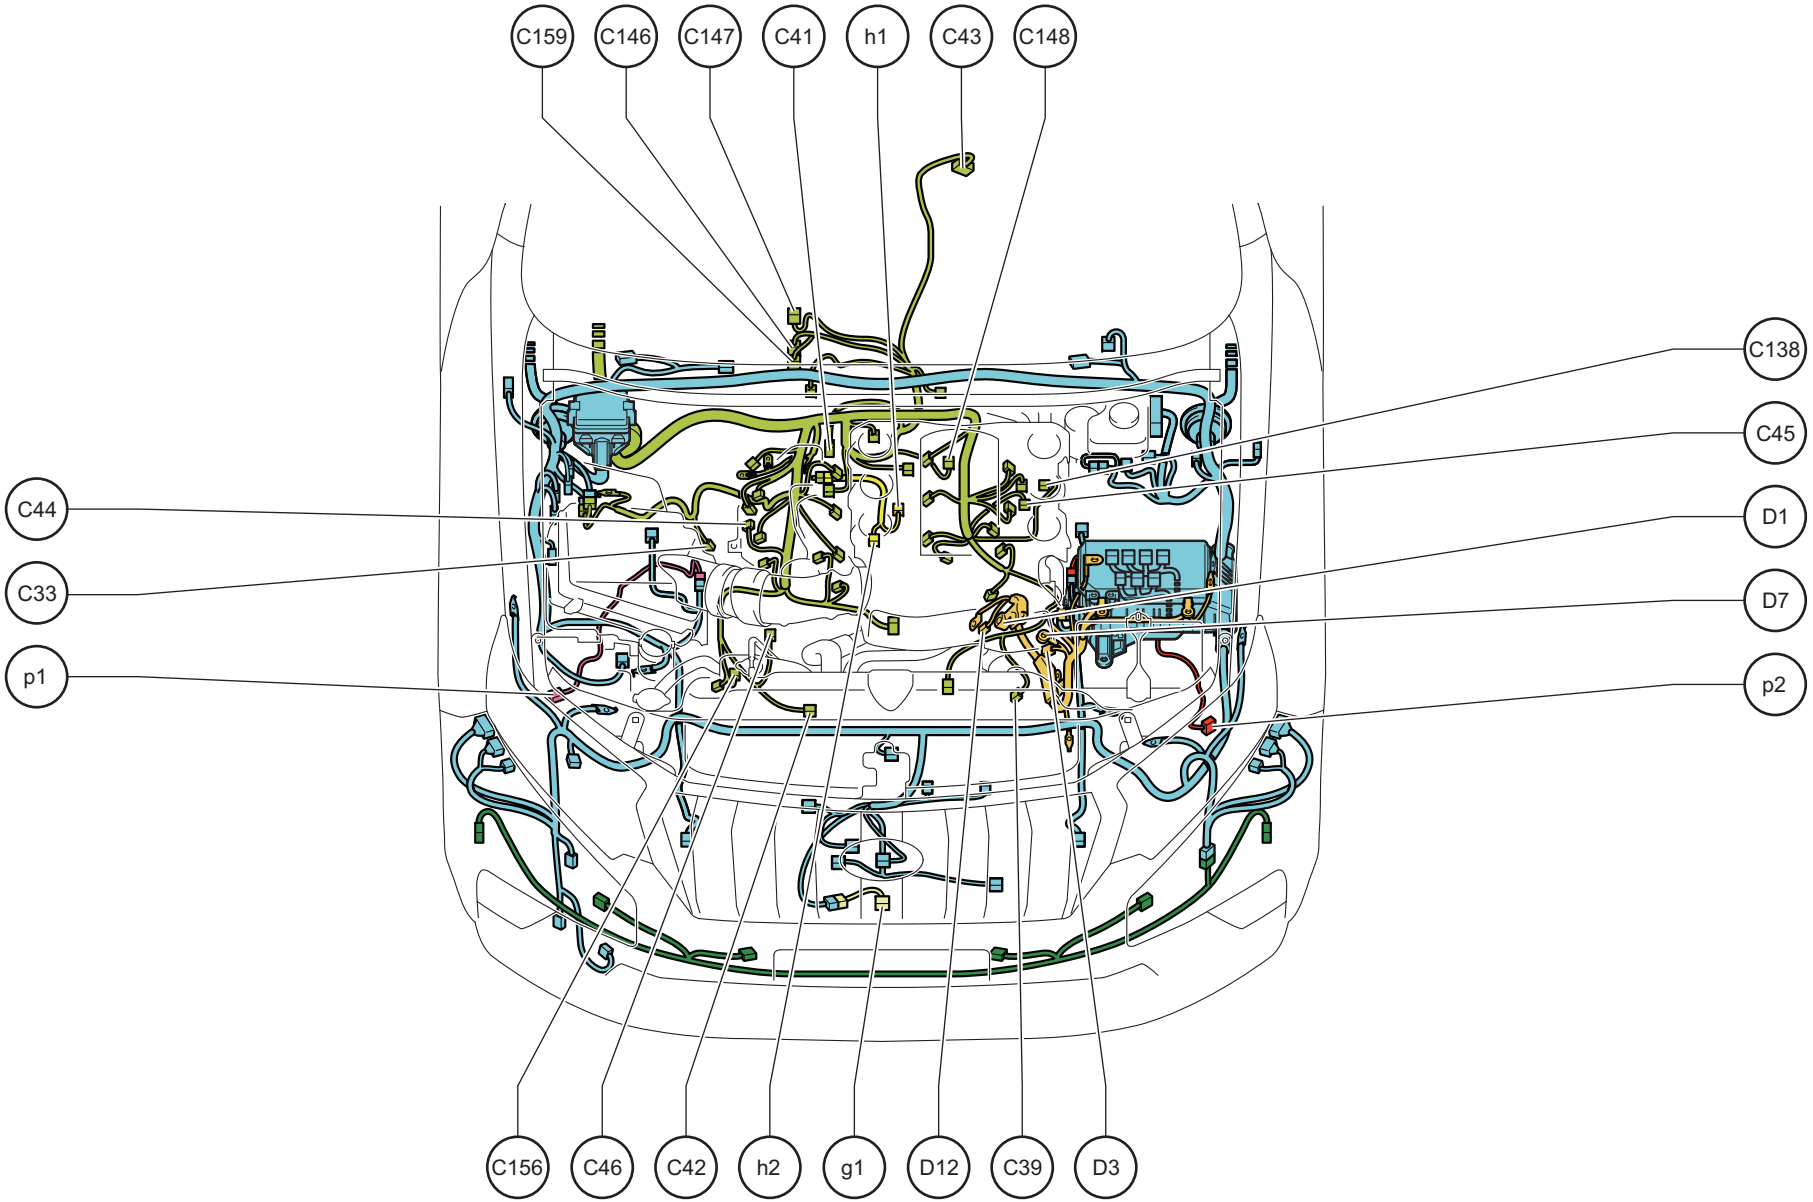


90980-12292

C39
Gray

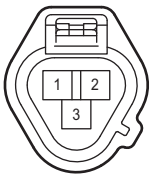

90980-11016

C41
Gray

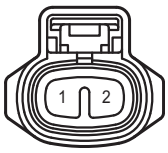


90980-11250

C42
Gray



90980-11363

C43
Black

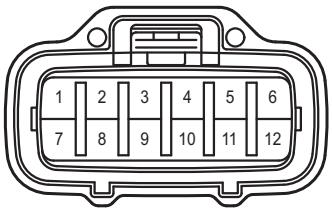

90980-11664

C44
Black



90980-12292

C45
Black



90980-12292

C46
Gray




90980-11235

C138
Black



90980-12B06

C146
Gray

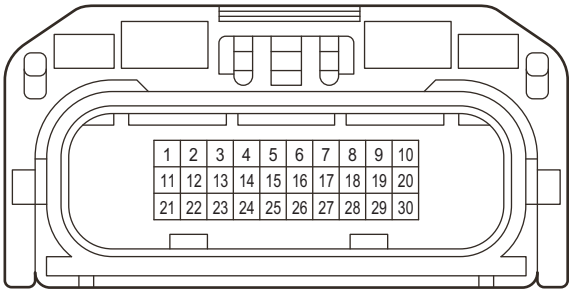

90980-12712

C147
Black



90980-12B06

C148
Black




90980-12B06

C156
Black




90980-12B06

C159
Gray

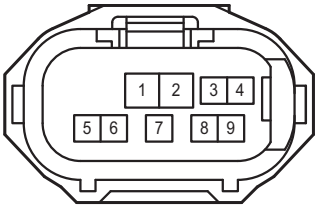


90980-12A23

D1



D3
Black

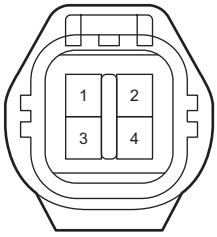

90980-11964

D7



D12
Black




90980-12941

g1
Black




90980-12A59

h1
Black




90980-11875

h2
Black




90980-11875

p1
Black

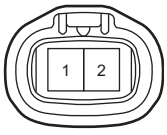

90980-11900

p2
Black

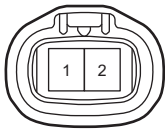

90980-11900