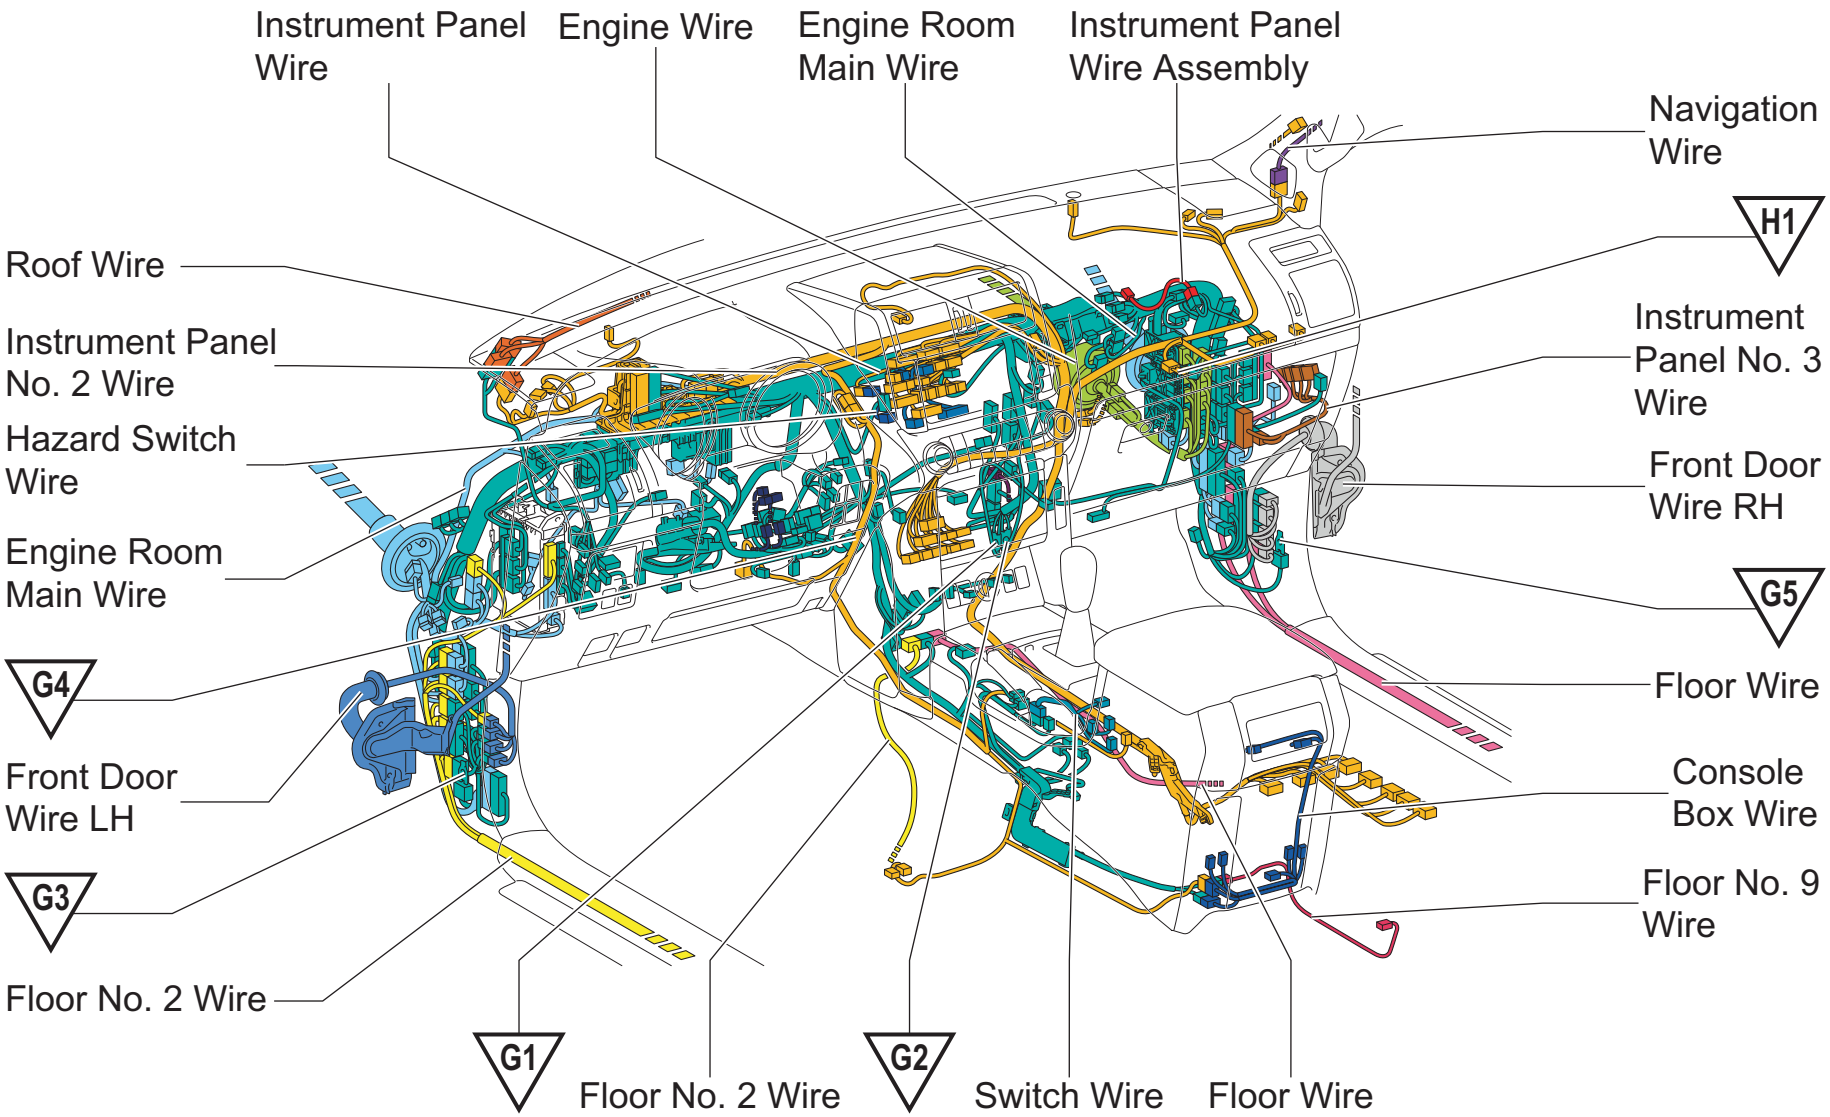

Instrument Panel Wire
Engine Wire
Engine Room Main Wire
Instrument Panel Wire Assembly
Navigation Wire
H1
Roof Wire
Instrument Panel No. 2 Wire
Hazard Switch Wire
Engine Room Main Wire
G4
Front Door Wire LH
G3
Floor No. 2 Wire
Instrument Panel No. 3 Wire
Front Door Wire RH
G5
Floor Wire
Console Box Wire
Floor No. 9 Wire
G1
Floor No. 2 Wire
G2
Switch Wire
Floor Wire