




Seat Back
Seat Cushion
Thermistor
Seat Heater Control
E
THL
SWL
B
b7
Front Seat Heater Assembly LH
(IG)
20A
S/HTR
FR
2H
2I
2A
L(RHD)
L(LHD)
L
(LHD)
(RHD)
GR3
Rb1
Gi1
b16
Junction
Connector
b9(A),b17(B)
Junction
Connector
W-B
(*2 *3)
(*2 *4)
(*1)
(*7)
(*8)
V
R
G
W
L
(*5,*9)
(*6,*10)
L(*6,*10)
L(*5,*9)
* 1 :w/o Power Seat
* 2 :w/ Power Seat
* 3 :Lumbar Support Control Only
* 4 :Except Lumbar Support Control Only
* 5 :Before Aug. 2013 Production w/o Entry & Start System
* 6 :Before Aug. 2013 Production w/ Entry & Start System
* 7 :Before Oct. 2010 Production
* 8 :From Oct. 2010 Production
* 9 :From Aug. 2013 Production M/T
*10 :From Aug. 2013 Production A/T
RV
SW
IG
OFF
ON
Temperature
Adjustment
E
G108(A),i4(B)
Seat Heater Switch LH
W-B(*5,*9)
W-B(*6,*10)
R31
Junction
Connector
R2
G106
Junction
Connector
G5


L(RHD)
L(LHD)
(IG)
10A
ECU-IG
NO.2
39
2D
36
3B
18
3A
14
4A
37
4C
38
4C
L(*6,*10)
L(*5,*9)
a7
Front Seat Heater Assembly RH
Seat Back
Seat Cushion
Thermistor
Seat Heater Control
SWR
THR
E
B1
1
R
5
V
6
4
G
10
Qa1
11
Qa1
28
GQ1
29
GQ1
20
Gi1
19
Gi1
18
Gi1
SB
R
L
(*5,*9)
(*6,*10)
W-B
(*1)
(*2 *4)
(*2 *3)
a9(A),a17(B)
Junction
Connector
a16
Junction
Connector
2
(*7)
2
(*8)
3
(*7)
3
(*8)
1
5
Qa1
6
Qa1
8
GQ1
(RHD)
(LHD)
7
A
7
B
2
A
2
B
5
A
5
B
(*5,*9)
(*6,*10)
IG
SW
RV
OFF
ON
Temperature
Adjustment
E
3
A
3
B
(*5,*9)
(*6,*10)
G109(A),i3(B)
Seat Heater Switch RH
W-B(*5,*9)
W-B(*6,*10)
47
4C
68
4A
48
4C
23
Gi1
W-B
Q1


G106
White

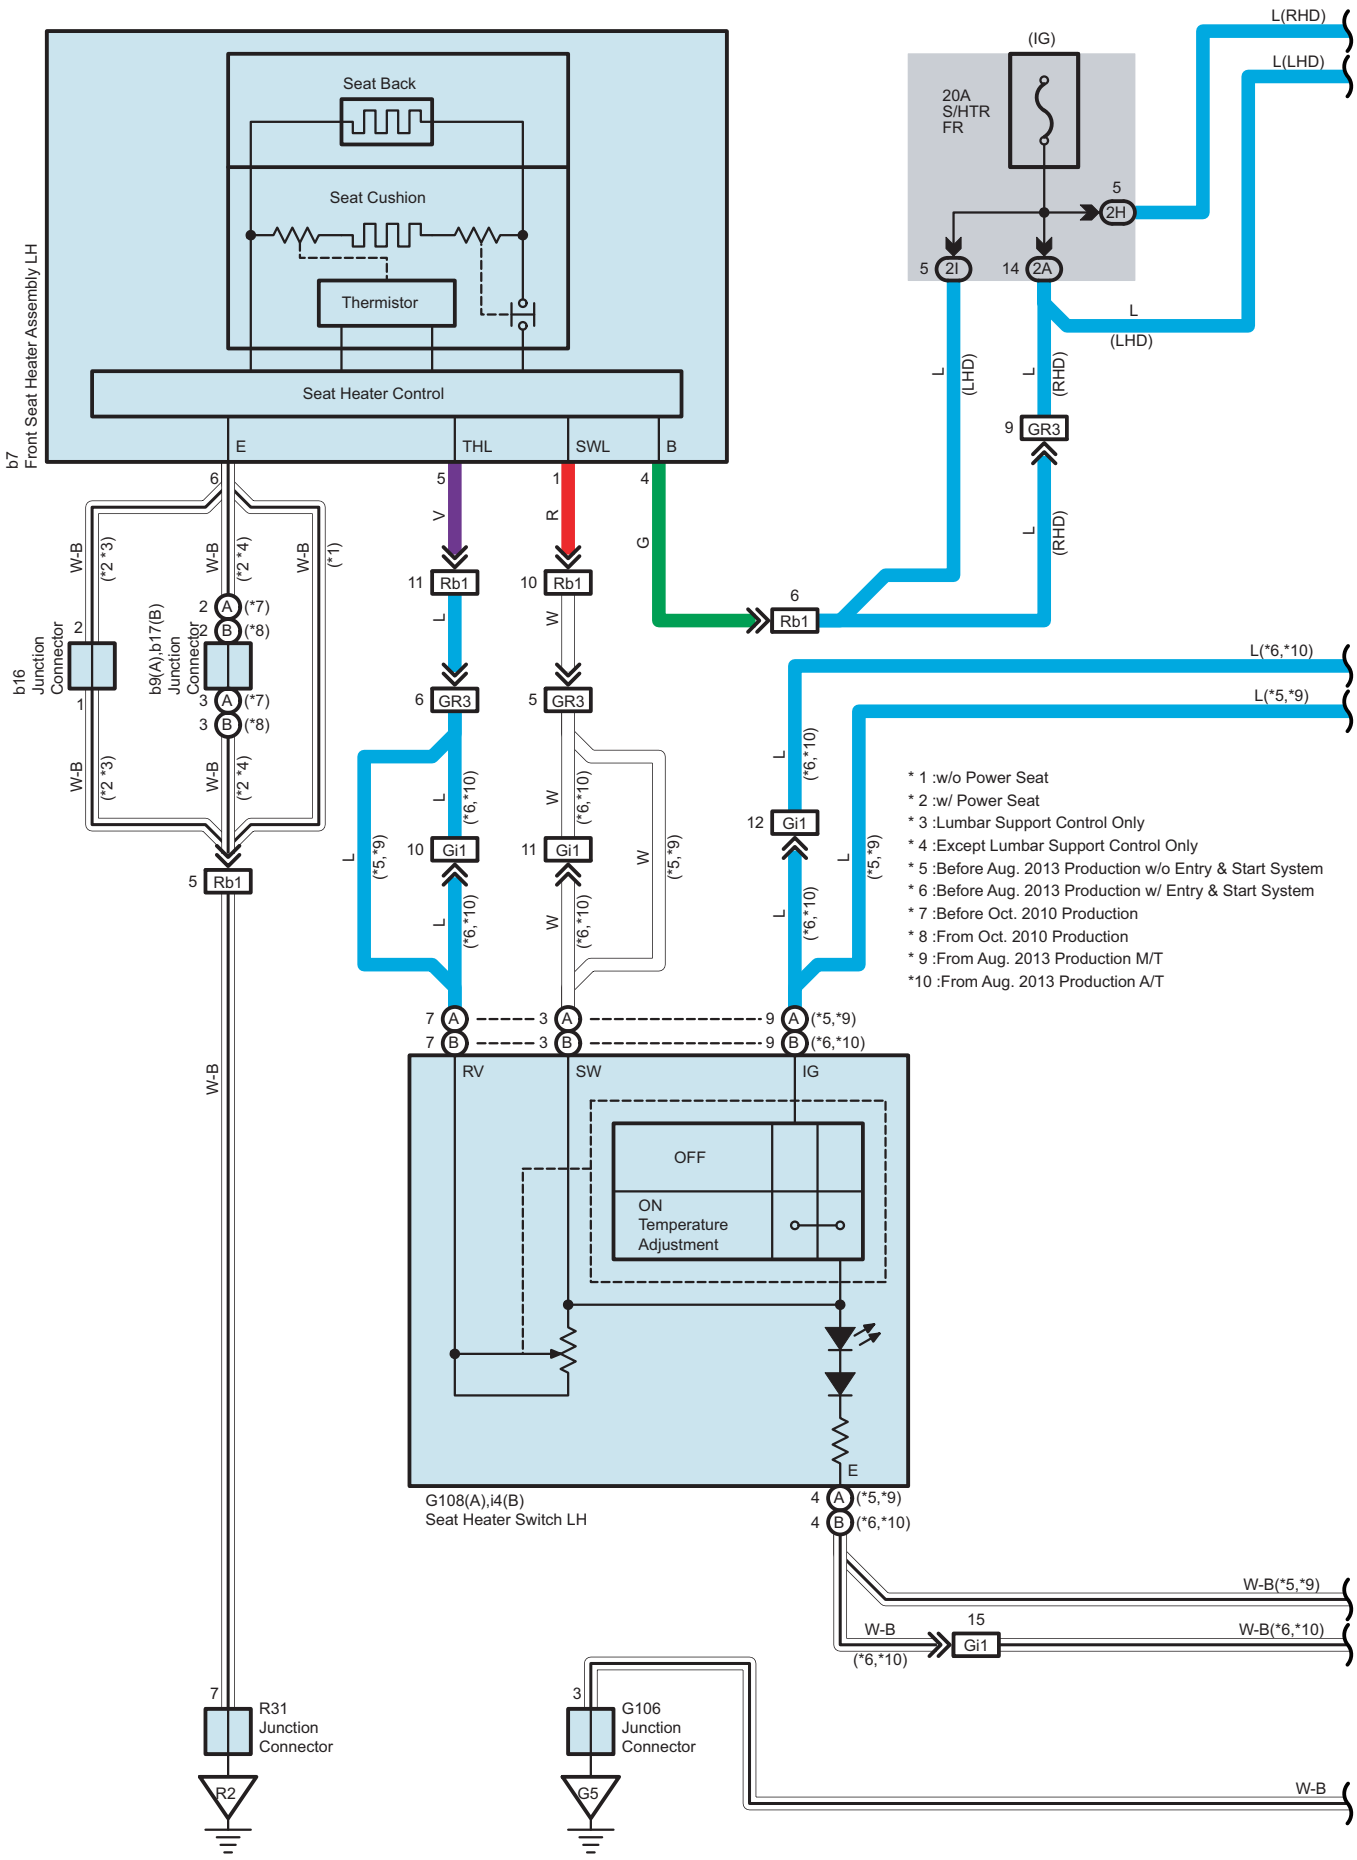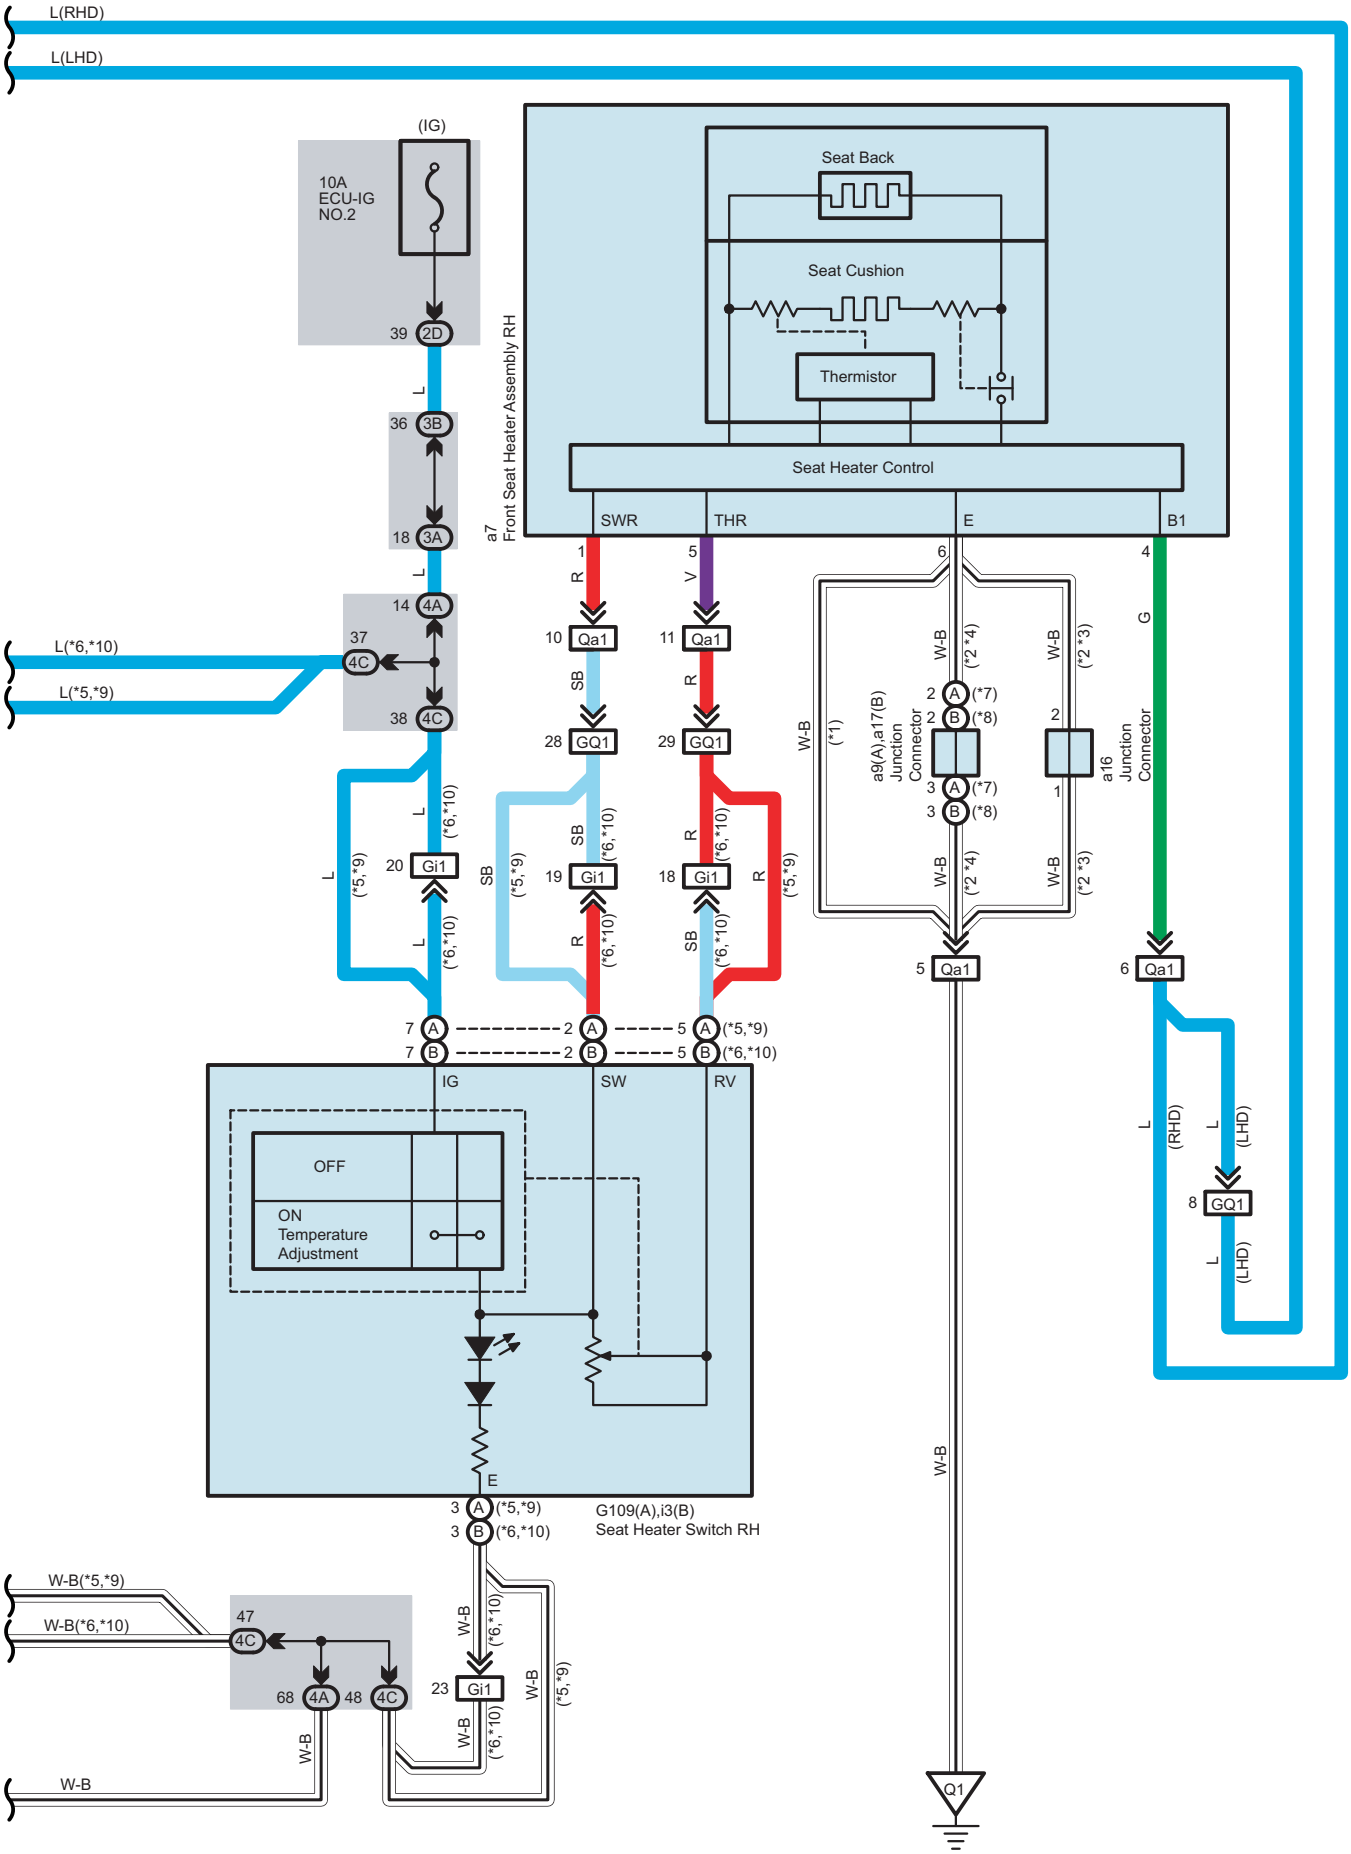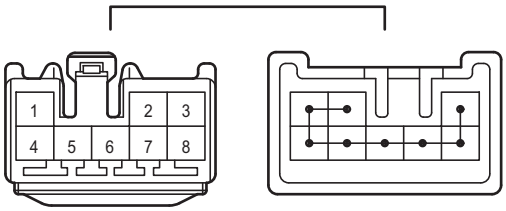


G108
Black

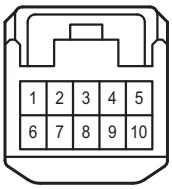

G109
Black

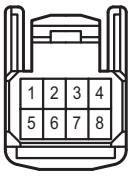


R31
White

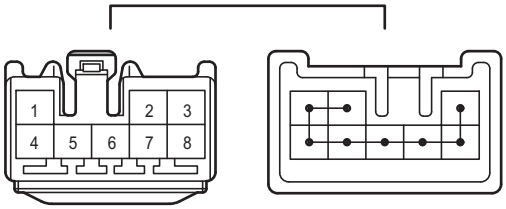


a7
White




a9
Black

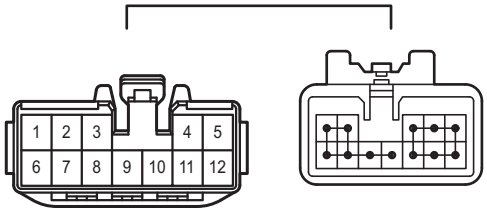

a16
Black

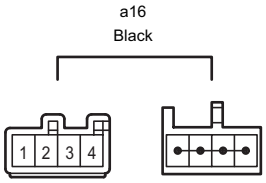


a17
White

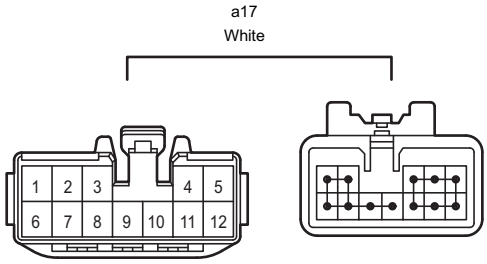


b7
White




b9
Black

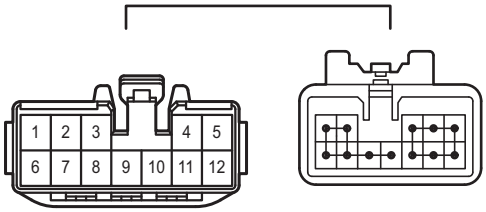


b16
Black

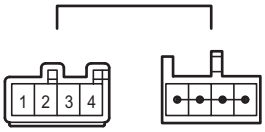


b17
White

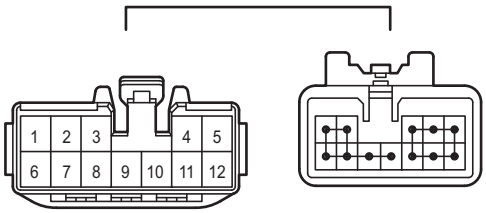


i3
Black

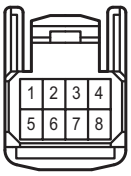


i4
Black

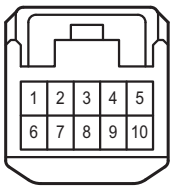


2 A
White

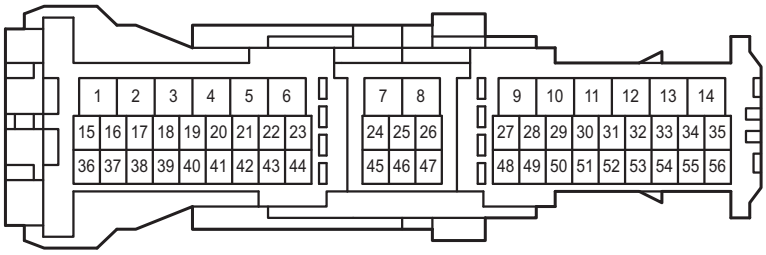


2 D
White

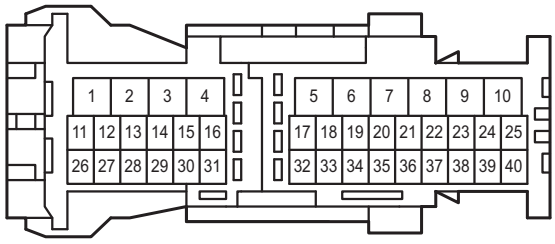


2 H
White

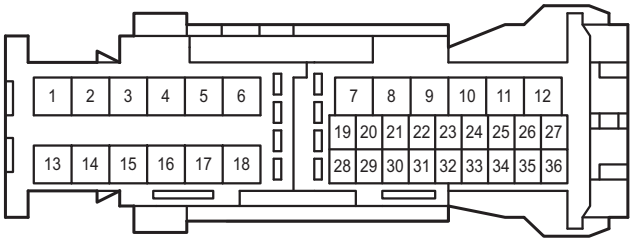


2 I
White

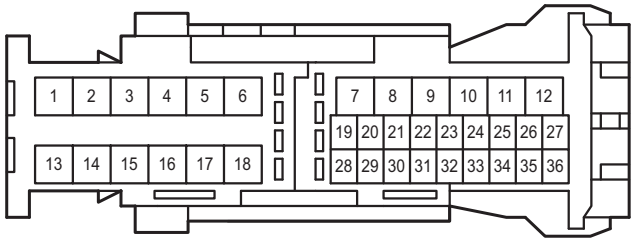


3 A
White

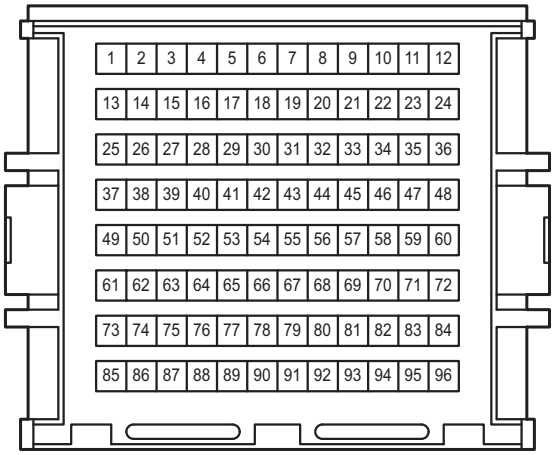


3 B
White

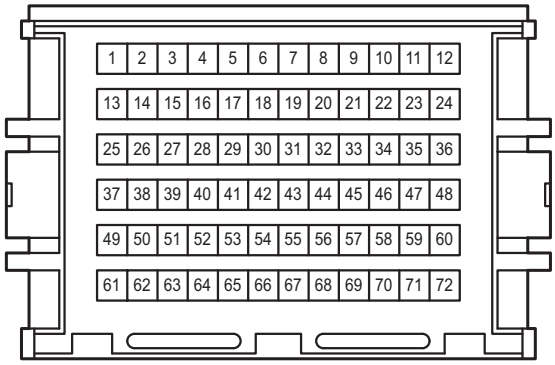

4 A
White

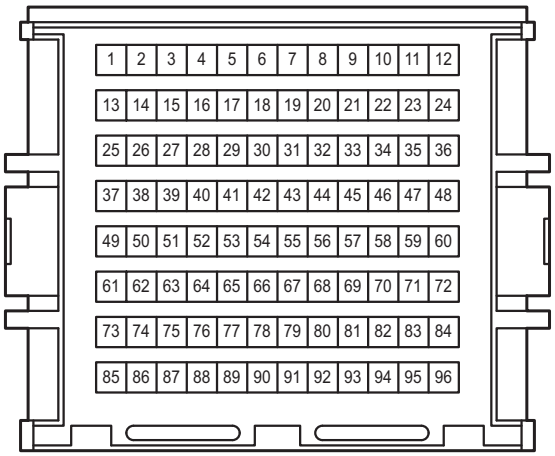


4 C
White

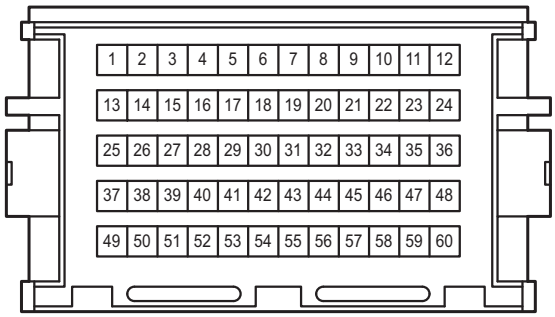


GQ1

White

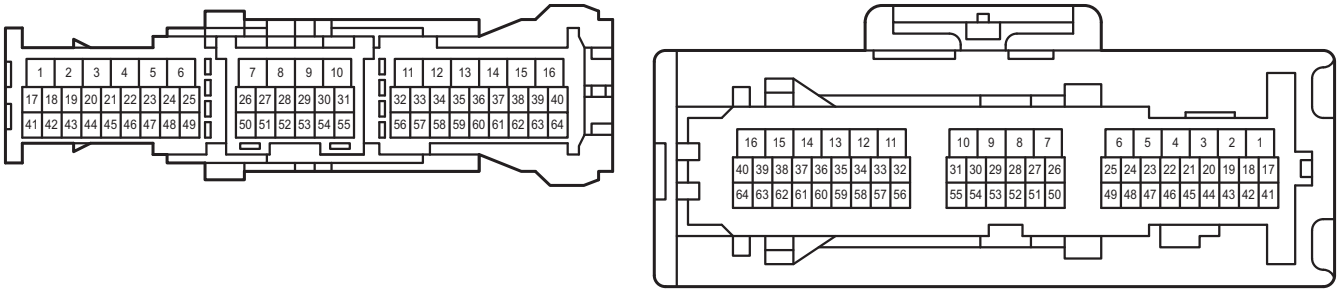


GR3

Blue

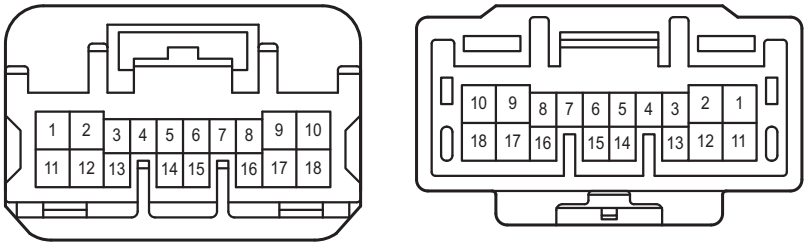


Gi1

White

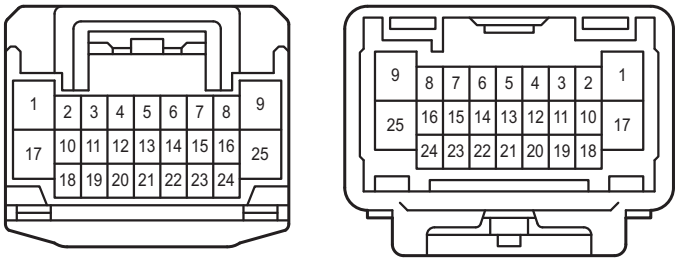

Qa1

White

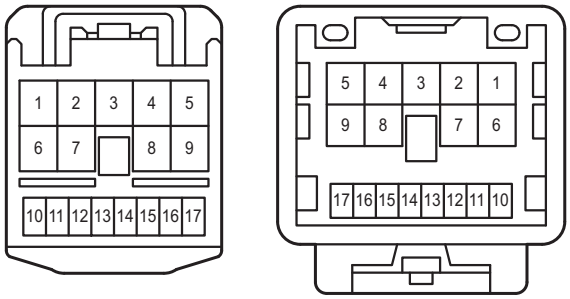

Rb1

White

