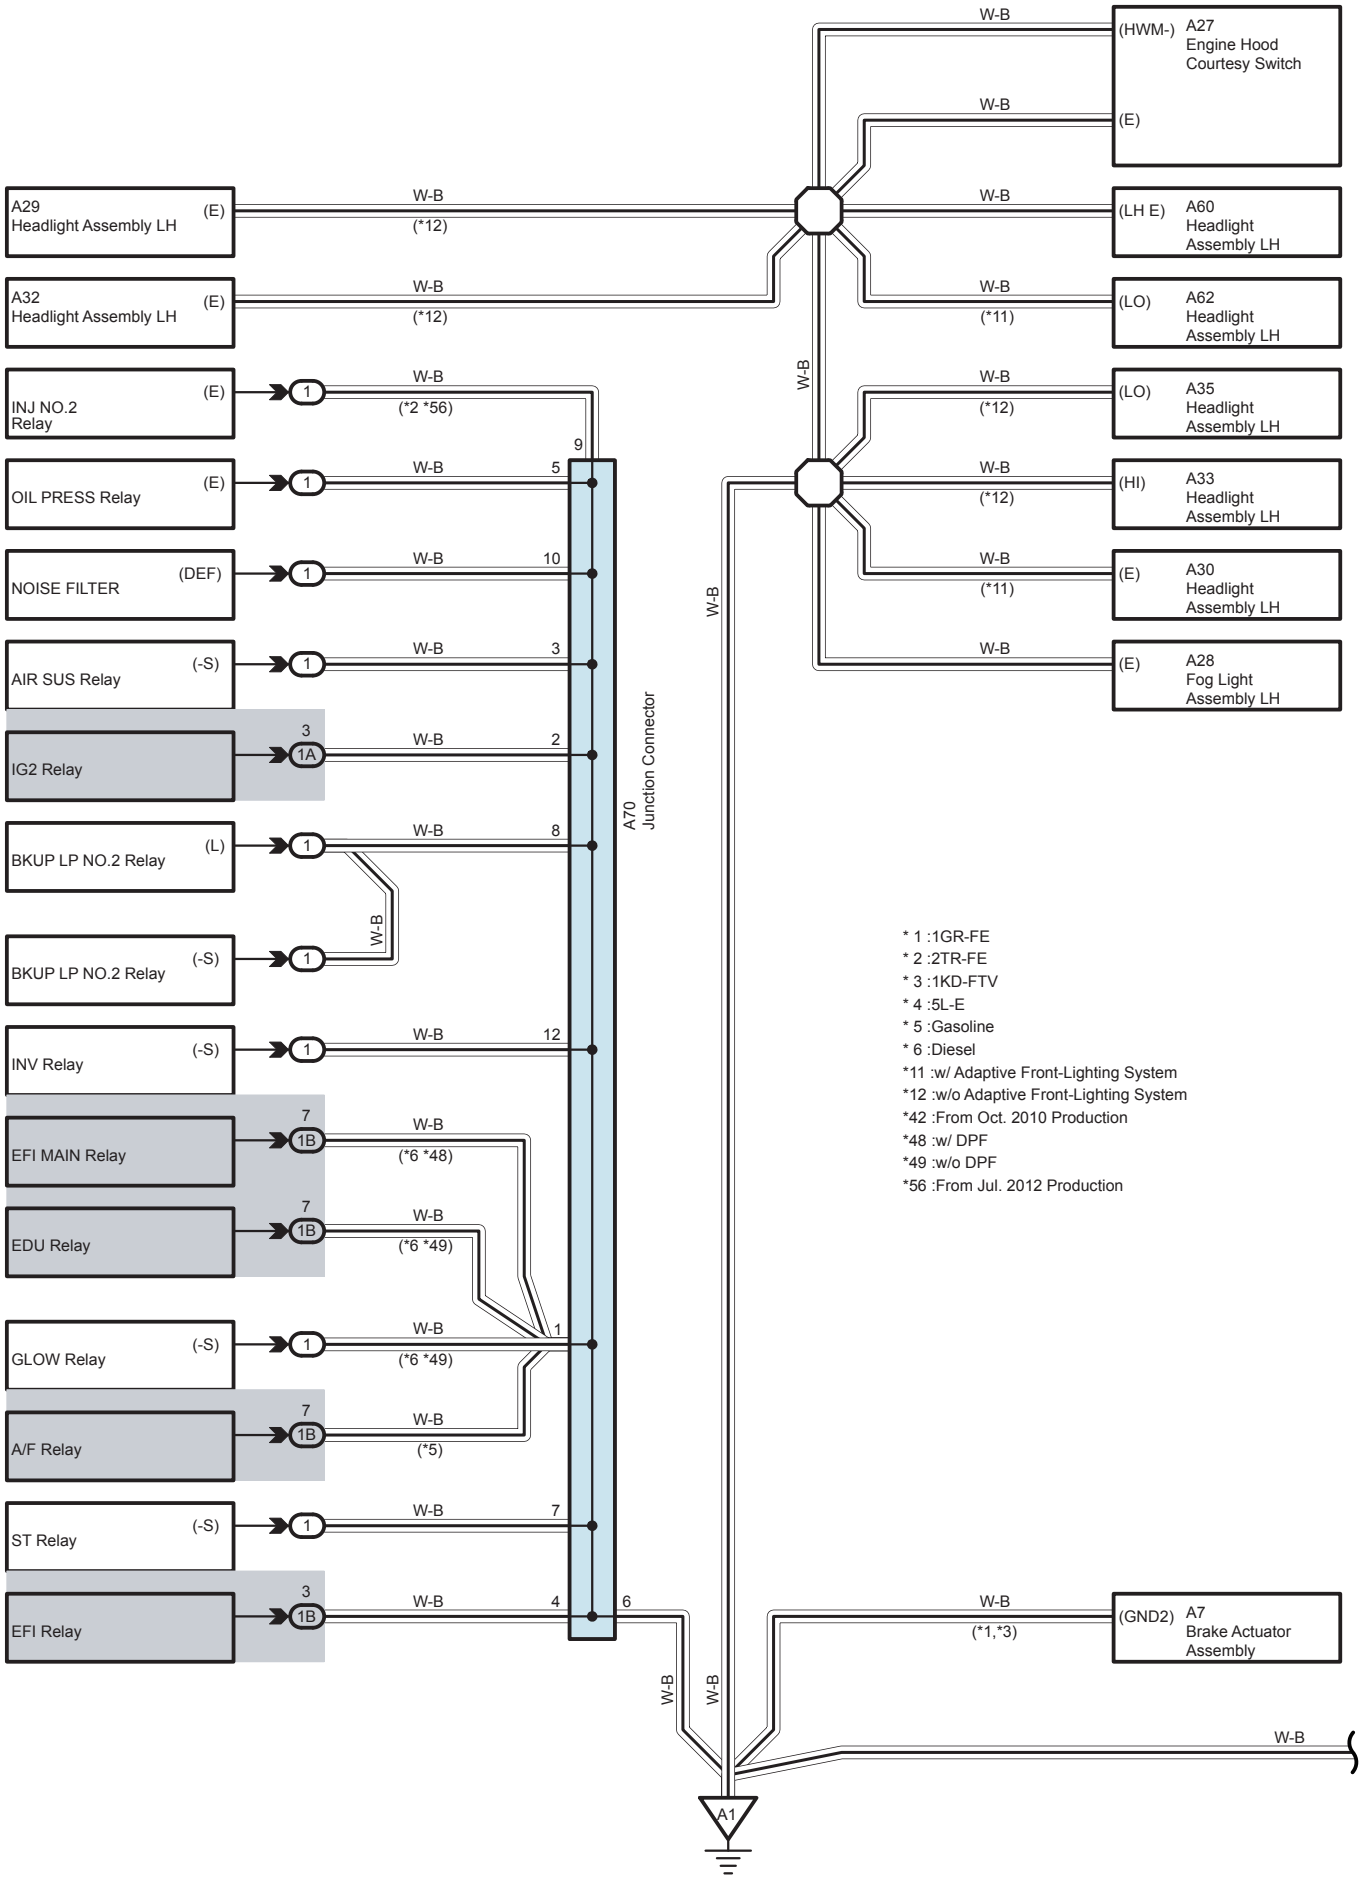
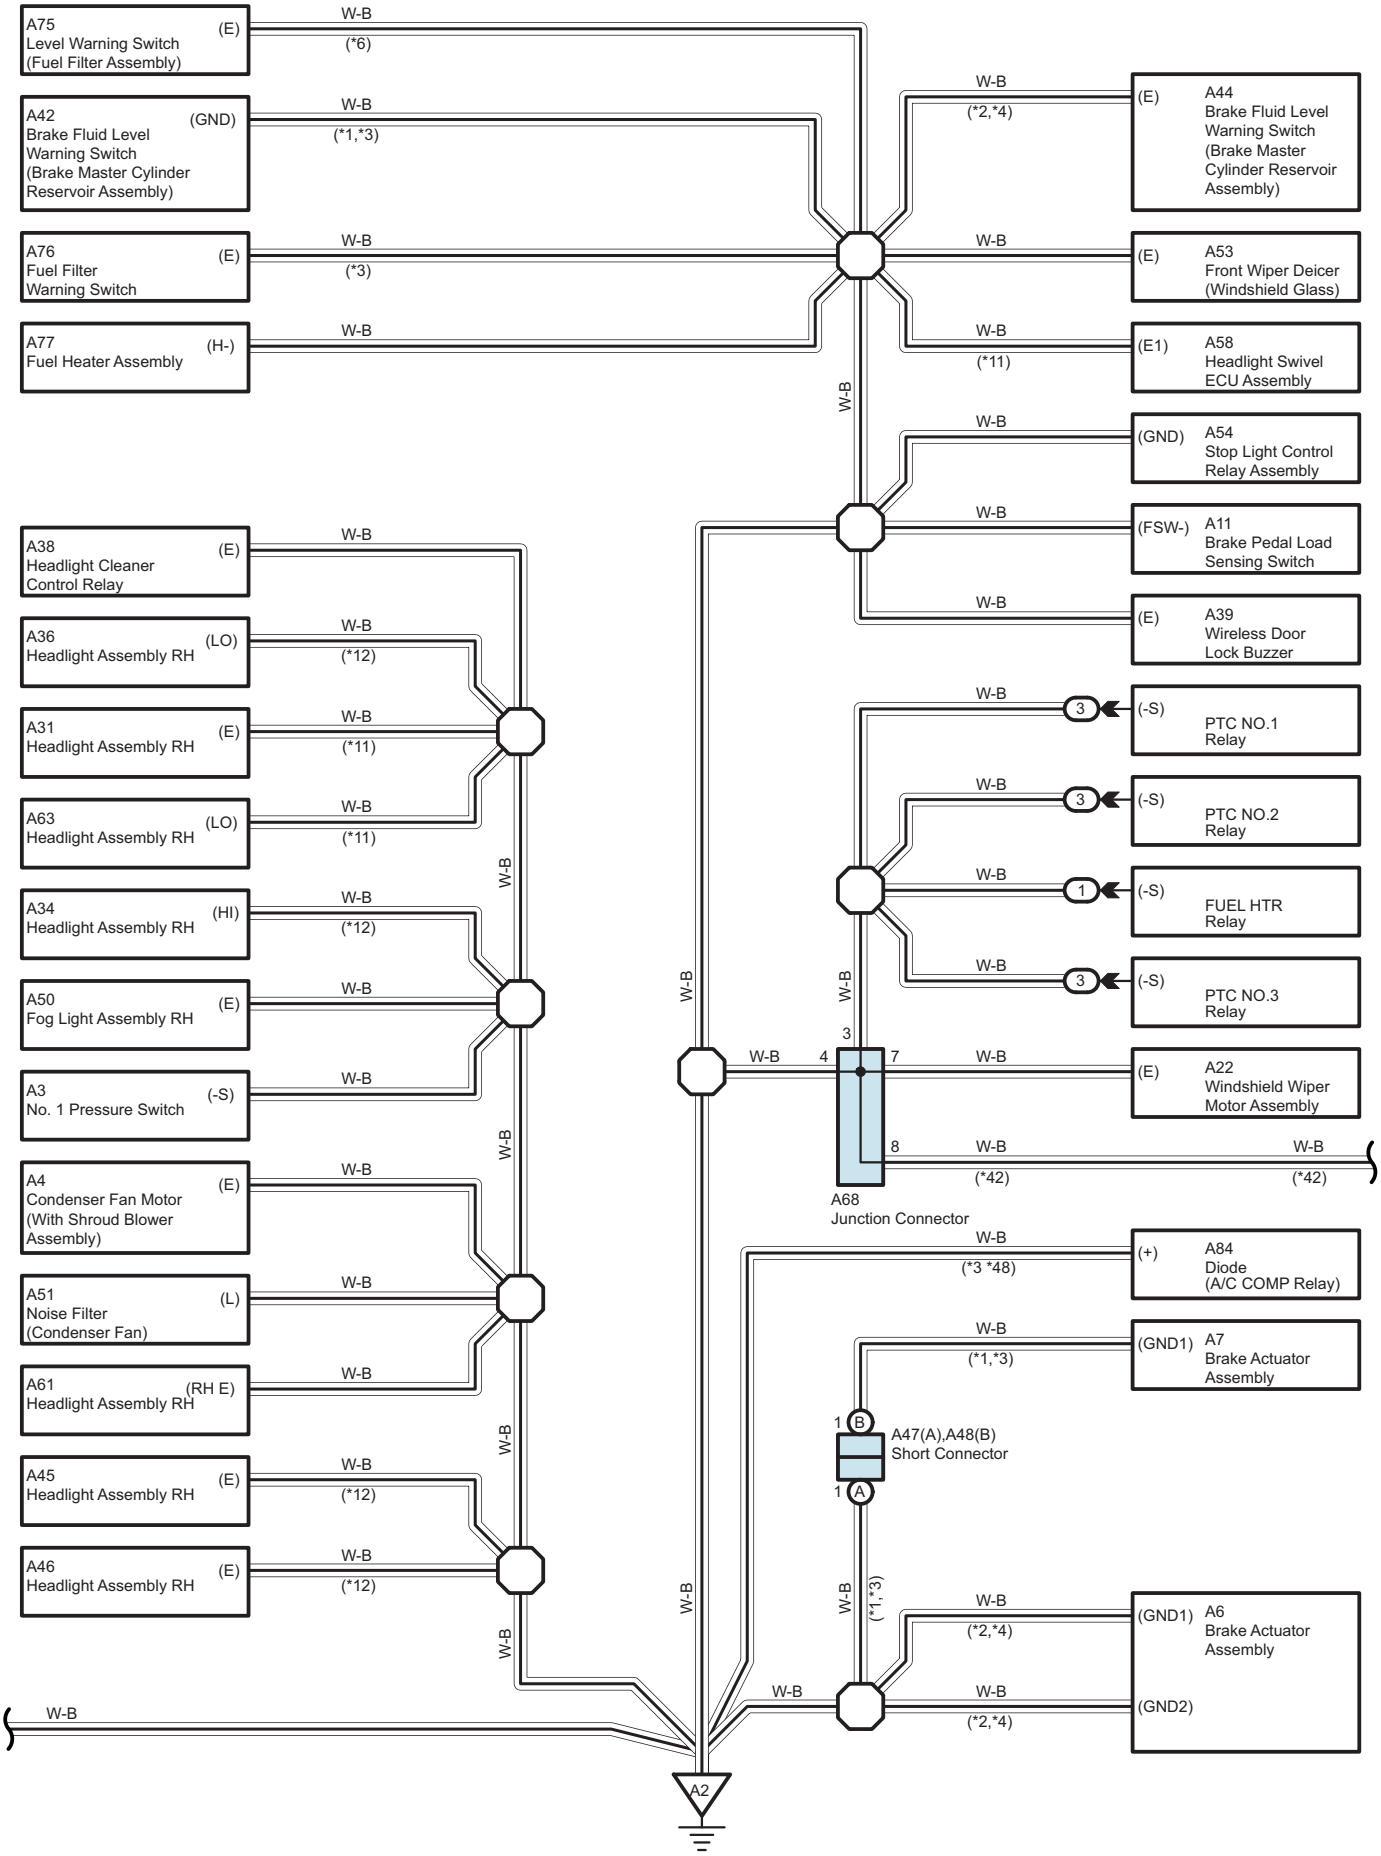
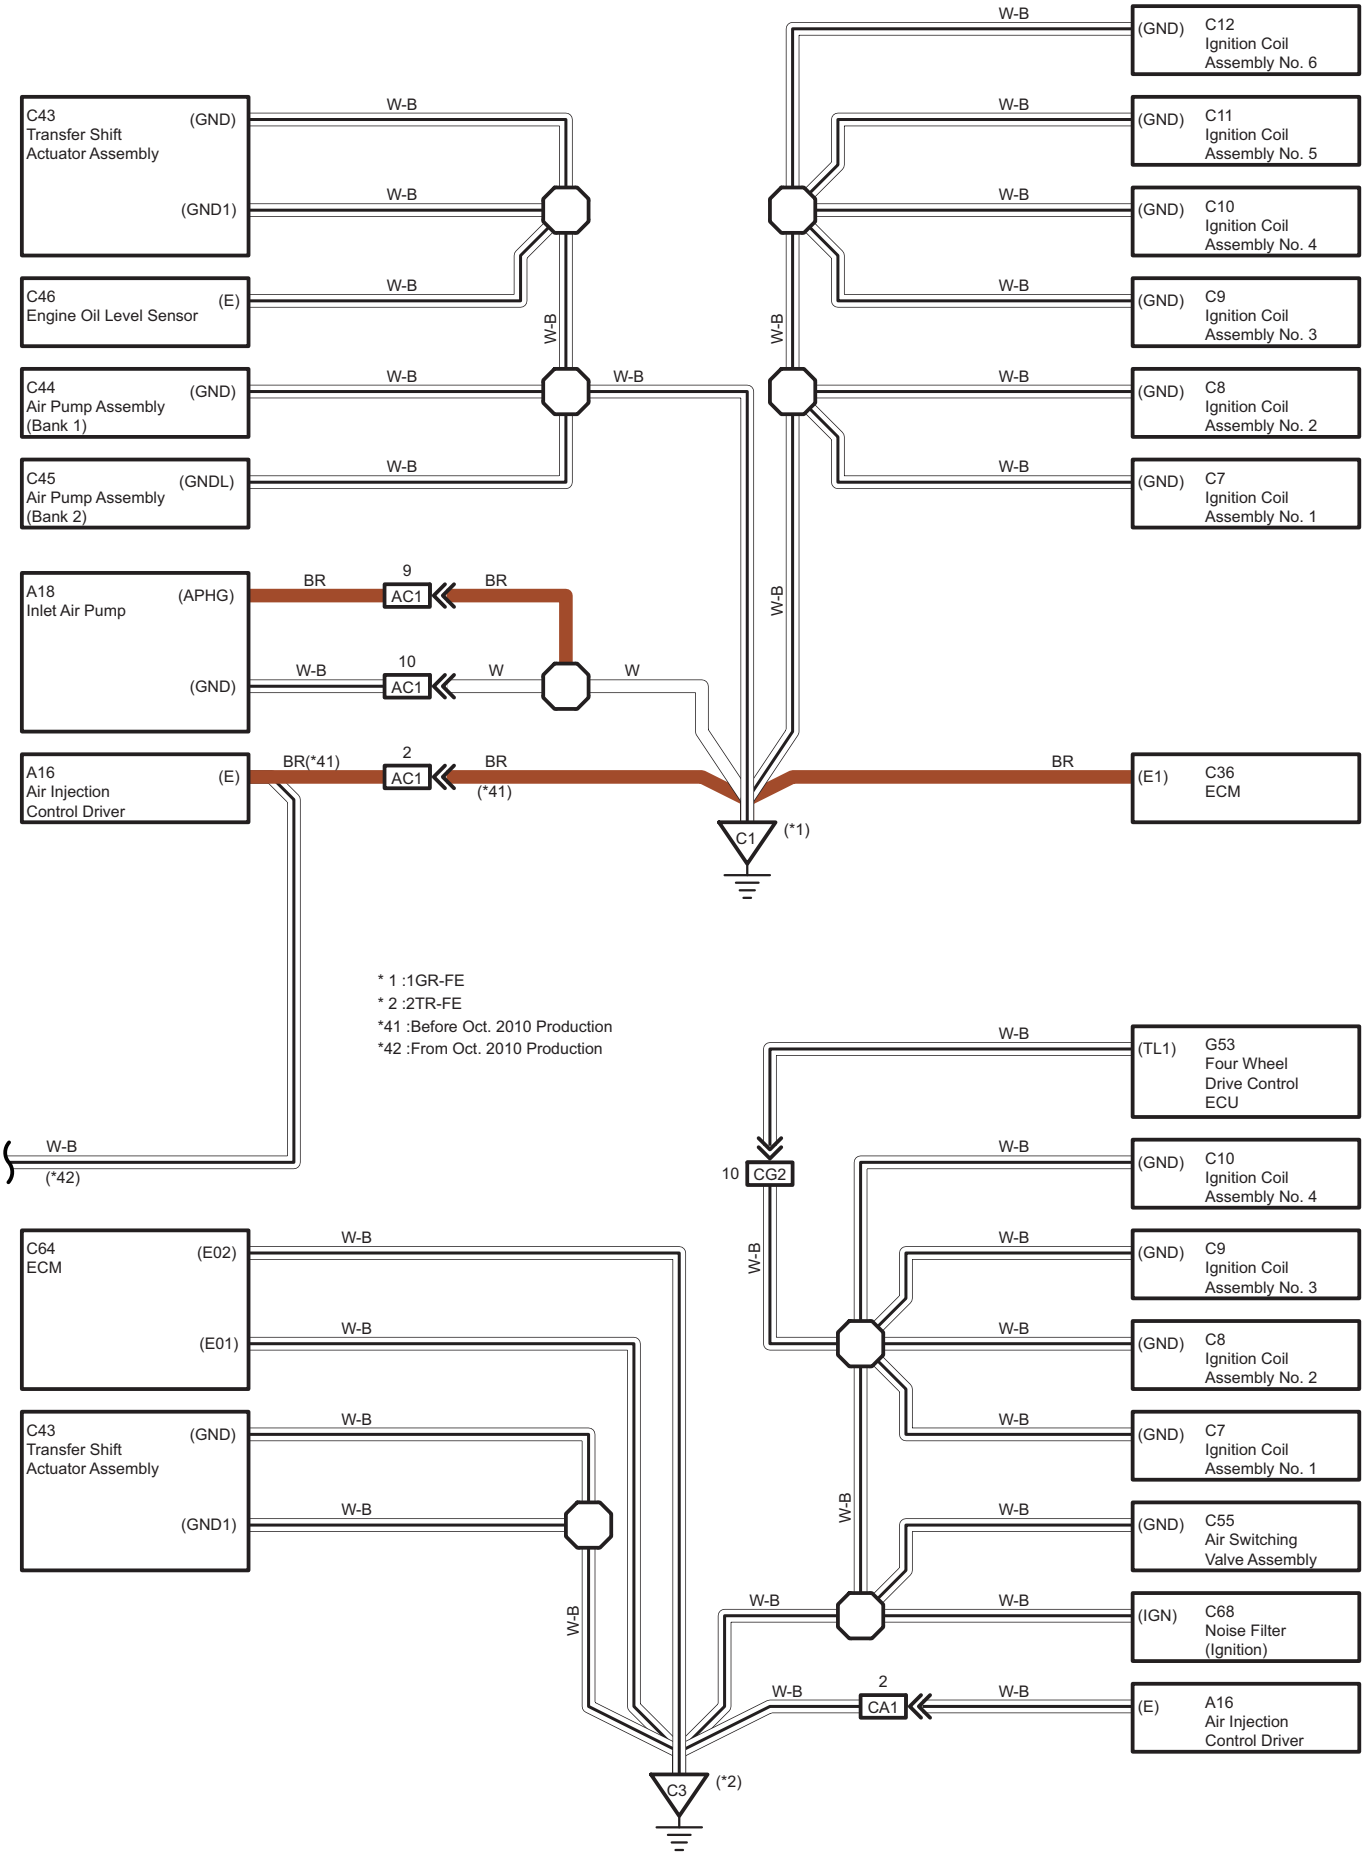
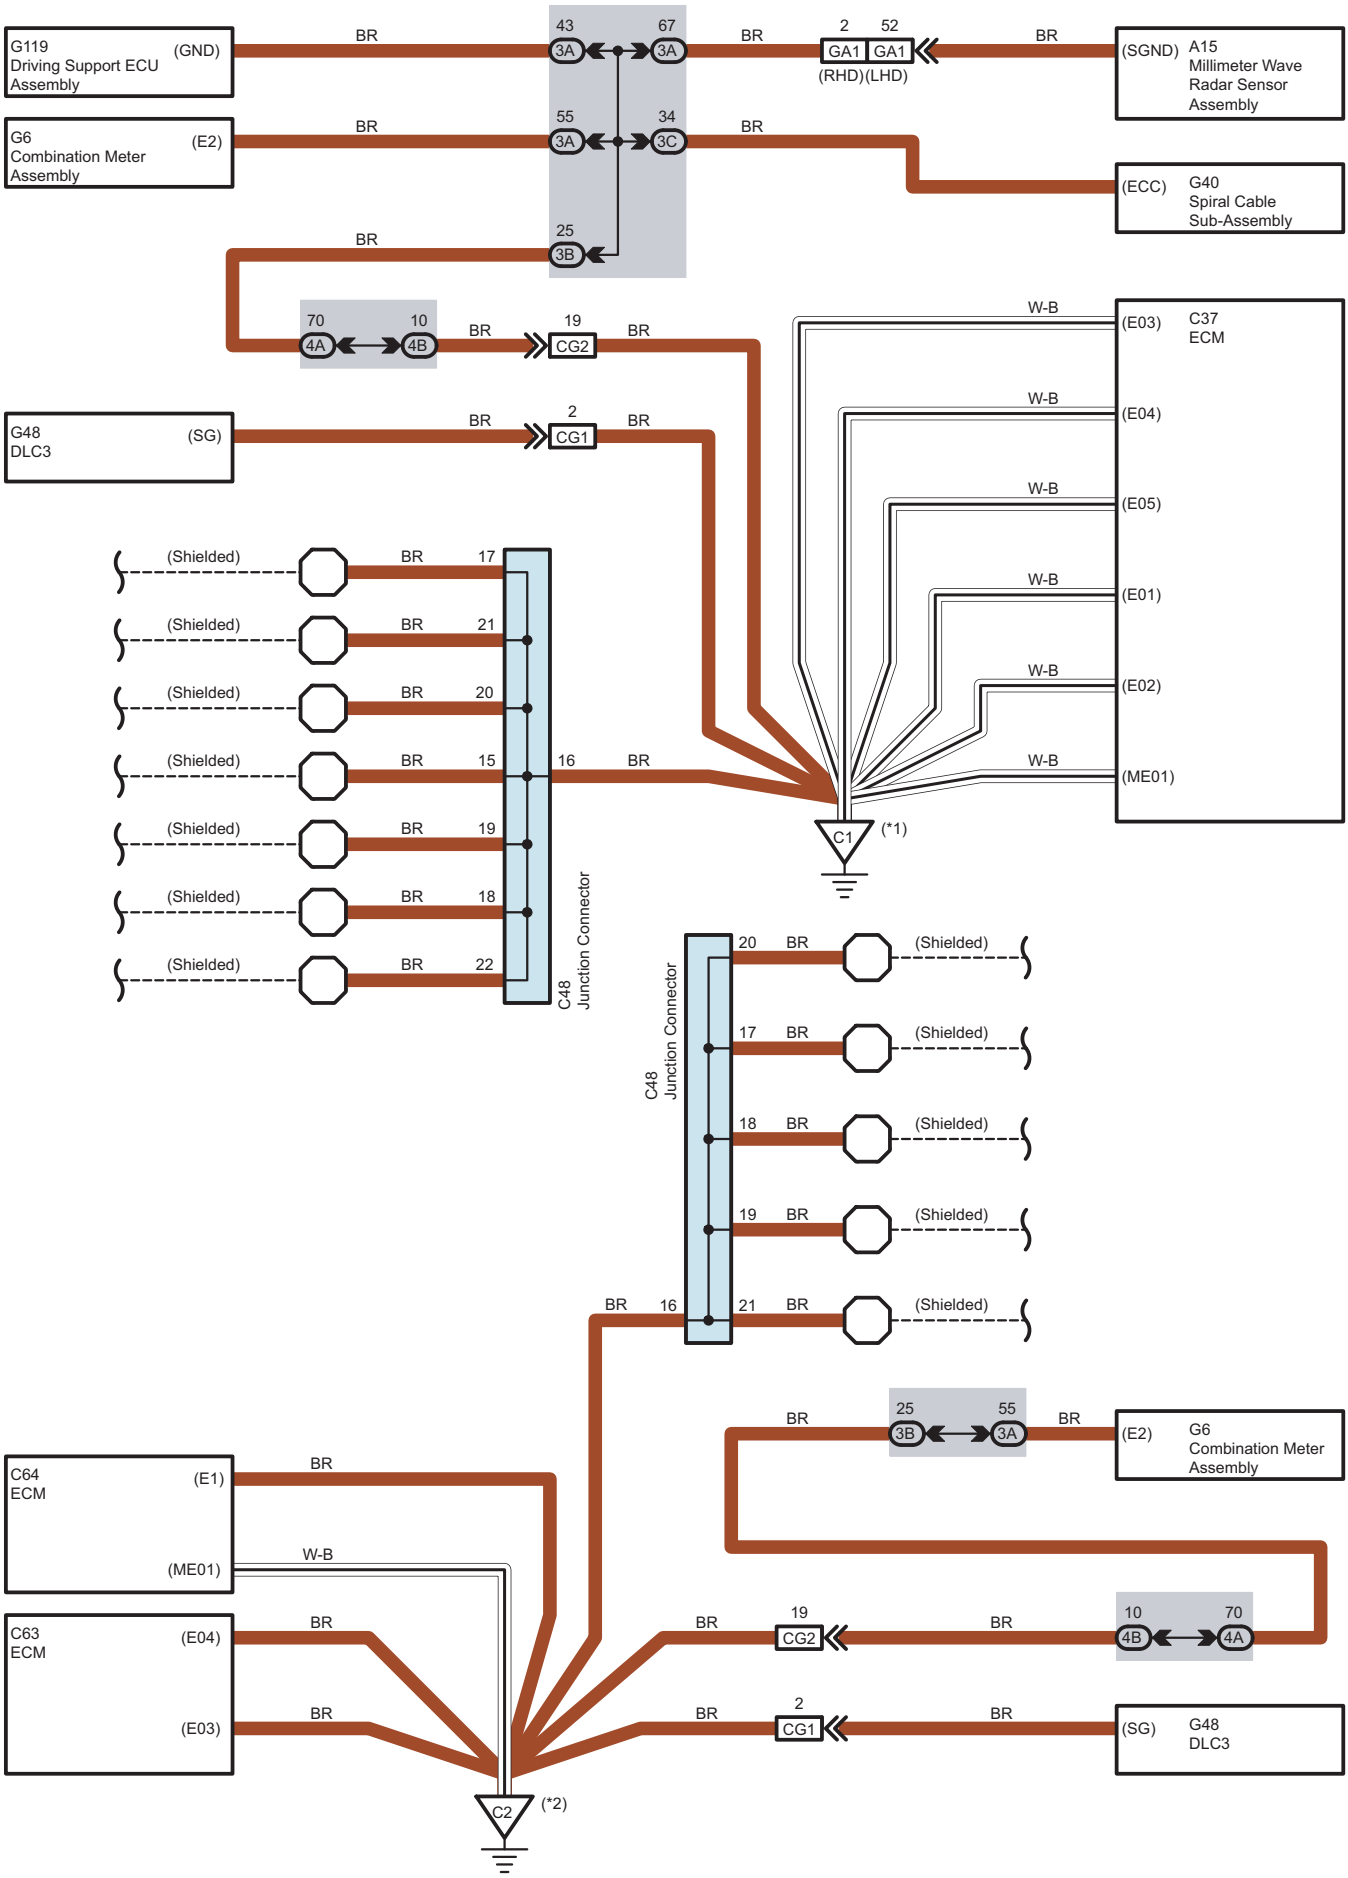
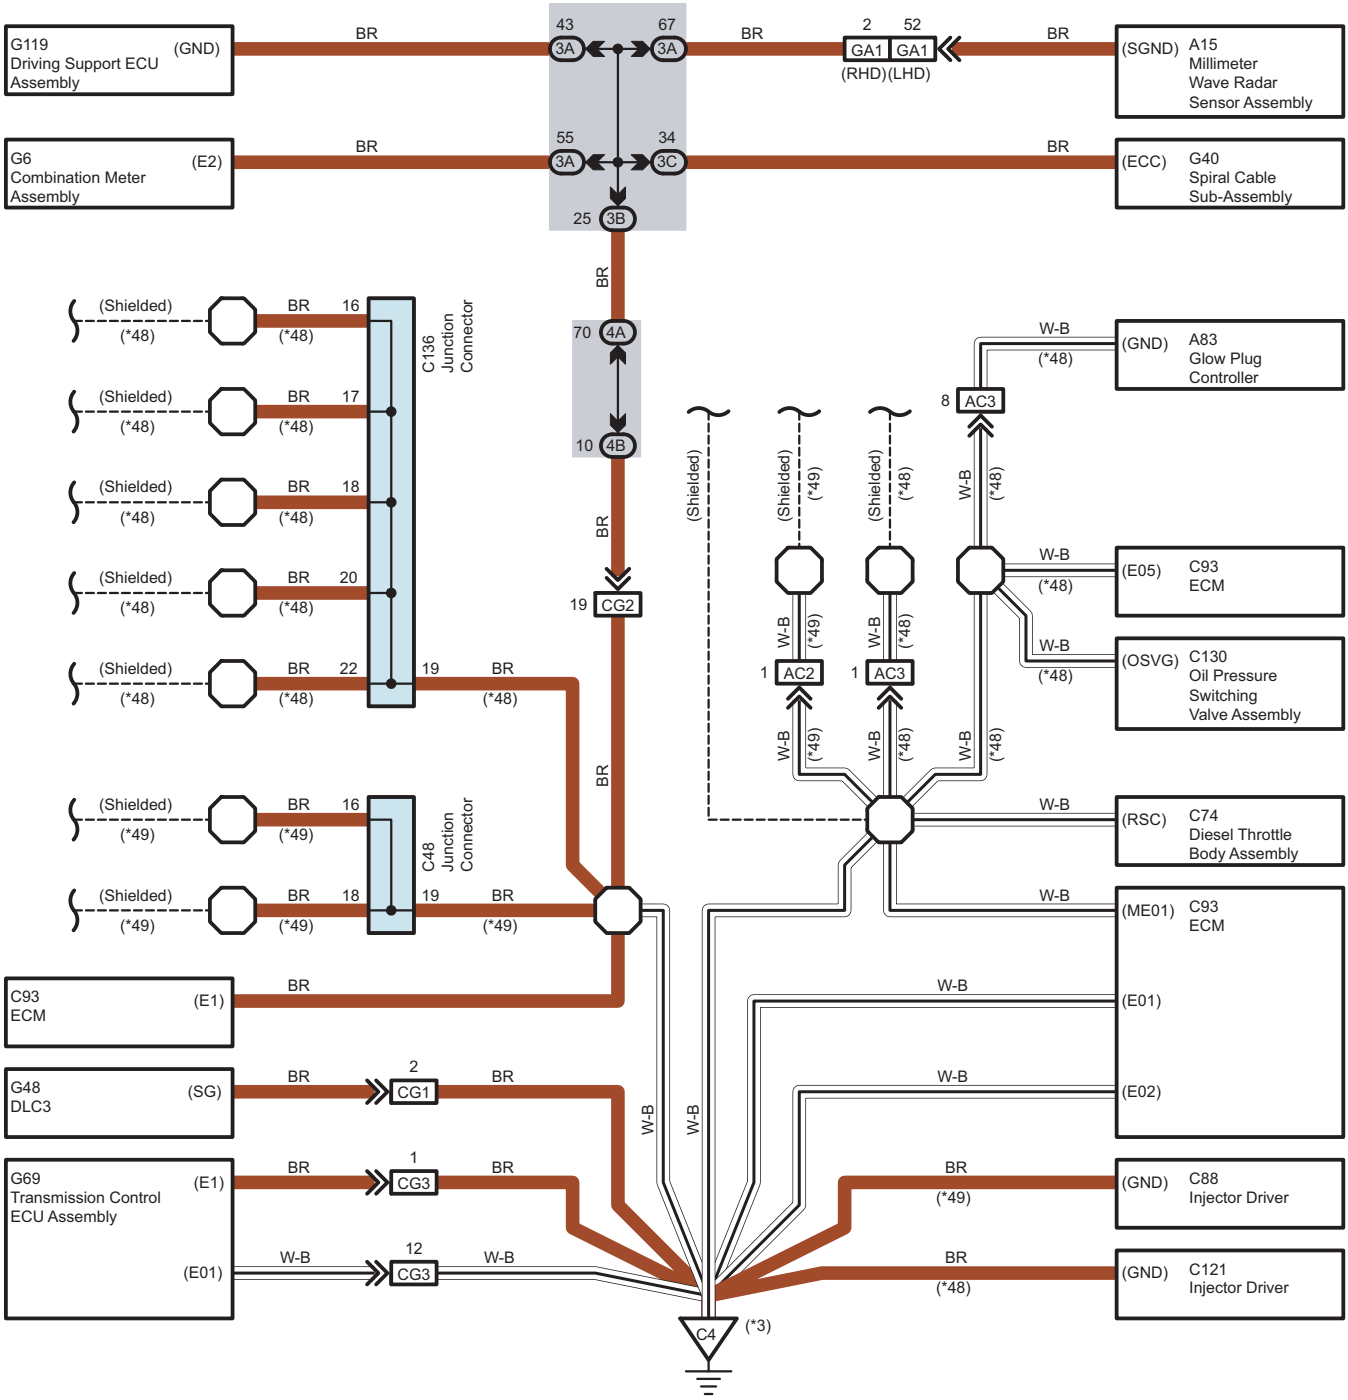

A29
Headlight Assembly LH
(E)
W-B
(*12)
A32
Headlight Assembly LH
(E)
W-B
(*12)
INJ NO.2
Relay
(E)
OIL PRESS Relay
(E)
NOISE FILTER
(DEF)
AIR SUS Relay
(-S)
IG2 Relay
BKUP LP NO.2 Relay
(L)
BKUP LP NO.2 Relay
(-S)
INV Relay
(-S)
EFI MAIN Relay
EDU Relay
GLOW Relay
(-S)
A/F Relay
ST Relay
(-S)
EFI Relay
A70
Junction Connector
(HWM-)
A27
Engine Hood
Courtesy Switch
(E)
(LH E)
A60
Headlight
Assembly LH
(LO)
A62
Headlight
Assembly LH
(*11)
(LO)
A35
Headlight
Assembly LH
(HI)
A33
Headlight
Assembly LH
(E)
A30
Headlight
Assembly LH
(E)
A28
Fog Light
Assembly LH
(GND2)
A7
Brake Actuator
Assembly
(*1,*3)
A1
* 1 :1GR-FE
* 2 :2TR-FE
* 3 :1KD-FTV
* 4 :5L-E
* 5 :Gasoline
* 6 :Diesel
*11 :w/ Adaptive Front-Lighting System
*12 :w/o Adaptive Front-Lighting System
*42 :From Oct. 2010 Production
*48 :w/ DPF
*49 :w/o DPF
*56 :From Jul. 2012 Production



A75
Level Warning Switch
(Fuel Filter Assembly)
(E)
A42
Brake Fluid Level
Warning Switch
(Brake Master Cylinder
Reservoir Assembly)
(GND)
A76
Fuel Filter
Warning Switch
(E)
A77
Fuel Heater Assembly
(H-)
A38
Headlight Cleaner
Control Relay
(E)
A36
Headlight Assembly RH
(LO)
A31
Headlight Assembly RH
(E)
A63
Headlight Assembly RH
(LO)
A34
Headlight Assembly RH
(HI)
A50
Fog Light Assembly RH
(E)
A3
No. 1 Pressure Switch
(-S)
A4
Condenser Fan Motor
(With Shroud Blower
Assembly)
(E)
A51
Noise Filter
(Condenser Fan)
(L)
A61
Headlight Assembly RH
(RH E)
A45
Headlight Assembly RH
(E)
A46
Headlight Assembly RH
(E)
W-B
(*6)
(*1,*3)
(*3)
(*12)
(*11)
(*2,*4)
A44
Brake Fluid Level
Warning Switch
(Brake Master
Cylinder Reservoir
Assembly)
A53
Front Wiper Deicer
(Windshield Glass)
A58
Headlight Swivel
ECU Assembly
A54
Stop Light Control
Relay Assembly
A11
Brake Pedal Load
Sensing Switch
A39
Wireless Door
Lock Buzzer
PTC NO.1
Relay
PTC NO.2
Relay
FUEL HTR
Relay
PTC NO.3
Relay
A22
Windshield Wiper
Motor Assembly
A68
Junction Connector
A84
Diode
(A/C COMP Relay)
(*3 *48)
A7
Brake Actuator
Assembly
A47(A),A48(B)
Short Connector
A6
Brake Actuator
Assembly
(*1, *3)
A2



C43
Transfer Shift
Actuator Assembly
(GND)
(GND1)
C46
Engine Oil Level Sensor
(E)
C44
Air Pump Assembly
(Bank 1)
(GND)
C45
Air Pump Assembly
(Bank 2)
(GNDL)
A18
Inlet Air Pump
(APHG)
(GND)
A16
Air Injection
Control Driver
(E)
W-B
BR
BR(*41)
9
10
2
AC1
W
(*41)
C1
(*1)
(GND)
C12
Ignition Coil
Assembly No. 6
C11
Ignition Coil
Assembly No. 5
C10
Ignition Coil
Assembly No. 4
C9
Ignition Coil
Assembly No. 3
C8
Ignition Coil
Assembly No. 2
C7
Ignition Coil
Assembly No. 1
(E1)
C36
ECM
* 1 :1GR-FE
* 2 :2TR-FE
*41 :Before Oct. 2010 Production
*42 :From Oct. 2010 Production
(*42)
C64
ECM
(E02)
(E01)
(TL1)
G53
Four Wheel
Drive Control
ECU
10
CG2
C55
Air Switching
Valve Assembly
(IGN)
C68
Noise Filter
(Ignition)
CA1
C3
(*2)



G119
Driving Support ECU
Assembly
(GND)
BR
43
3A
67
3A
BR
2
GA1
52
GA1
(RHD)(LHD)
BR
(SGND)
A15
Millimeter Wave
Radar Sensor
Assembly
G6
Combination Meter
Assembly
(E2)
BR
55
3A
34
3C
BR
(ECC)
G40
Spiral Cable
Sub-Assembly
BR
25
3B
70
4A
10
4B
BR
19
CG2
BR
W-B
(E03)
C37
ECM
G48
DLC3
(SG)
BR
2
CG1
BR
W-B
(E04)
W-B
(E05)
W-B
(E01)
W-B
(E02)
W-B
(ME01)
(Shielded)
BR
17
(Shielded)
BR
21
(Shielded)
BR
20
(Shielded)
BR
15
16
BR
(Shielded)
BR
19
(Shielded)
BR
18
(Shielded)
BR
22
C48
Junction Connector
C1
(*1)
C48
Junction Connector
20
BR
(Shielded)
17
BR
(Shielded)
18
BR
(Shielded)
19
BR
(Shielded)
BR
16
21
BR
(Shielded)
BR
25
3B
55
3A
BR
(E2)
G6
Combination Meter
Assembly
C64
ECM
(E1)
BR
(ME01)
W-B
C63
ECM
(E04)
BR
(E03)
BR
BR
19
CG2
BR
10
4B
70
4A
BR
2
CG1
BR
(SG)
G48
DLC3
C2
(*2)



G119
Driving Support ECU
Assembly
(GND)
BR
43
3A
67
3A
BR
2
GA1
52
GA1
(RHD)
(LHD)
BR
(SGND)
A15
Millimeter
Wave Radar
Sensor Assembly
G6
Combination Meter
Assembly
(E2)
BR
55
3A
34
3C
BR
(ECC)
G40
Spiral Cable
Sub-Assembly
25
3B
BR
70
4A
10
4B
BR
19
CG2
(Shielded)
(*48)
BR
16
17
18
20
22
19
C136
Junction
Connector
(Shielded)
(*49)
BR
16
18
19
C48
Junction
Connector
W-B
(*48)
(GND)
A83
Glow Plug
Controller
8
AC3
(E05)
C93
ECM
(OSVG)
C130
Oil Pressure
Switching
Valve Assembly
1
AC2
1
AC3
(RSC)
C74
Diesel Throttle
Body Assembly
(ME01)
C93
ECM
(E01)
(E02)
C93
ECM
(E1)
G48
DLC3
(SG)
2
CG1
G69
Transmission Control
ECU Assembly
(E1)
1
CG3
(E01)
12
CG3
W-B
BR
(*49)
(GND)
C88
Injector Driver
(GND)
C121
Injector Driver
C4
(*3)


* 3 :1KD-FTV
* 4 :5L-E
*48 :w/ DPF
*49 :w/o DPF

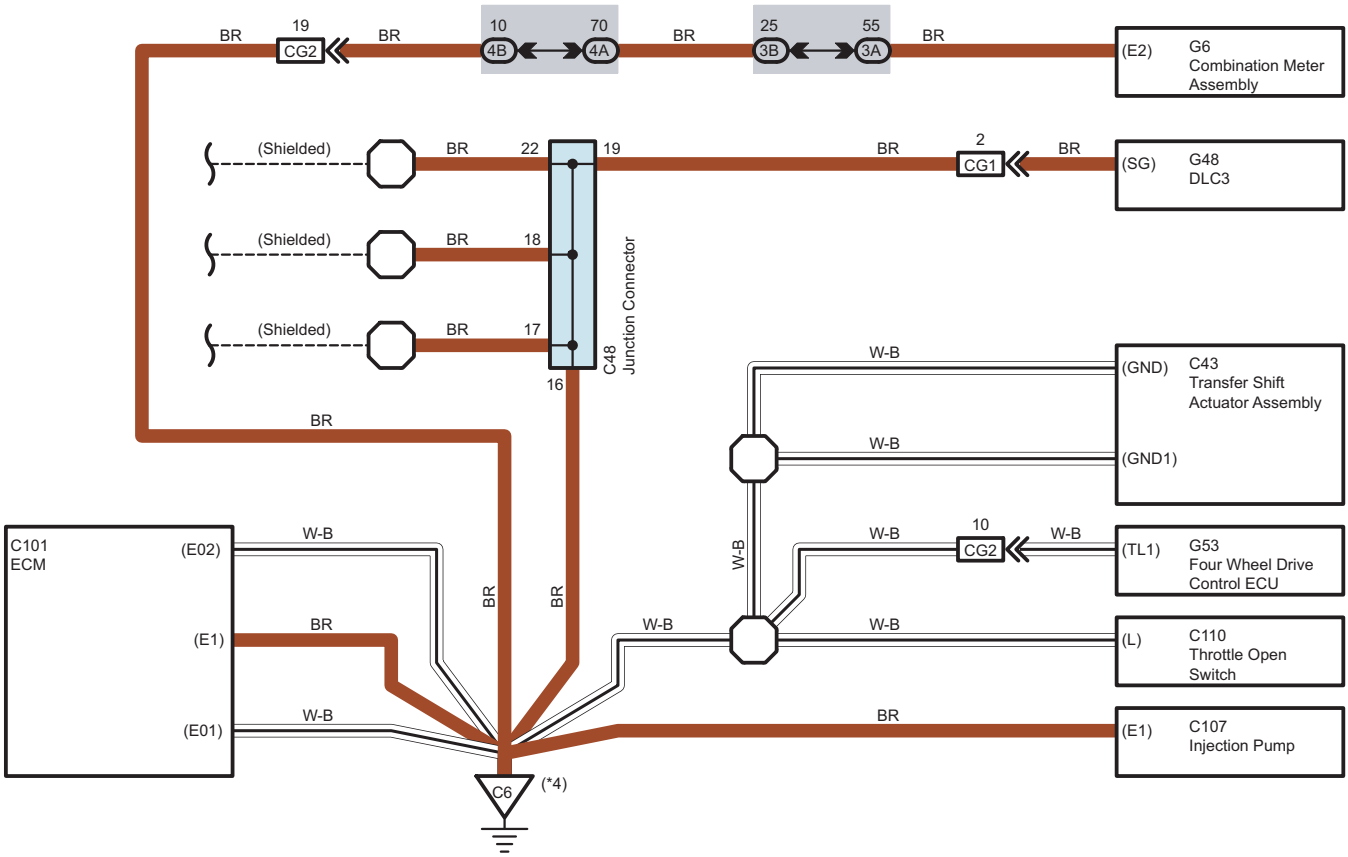


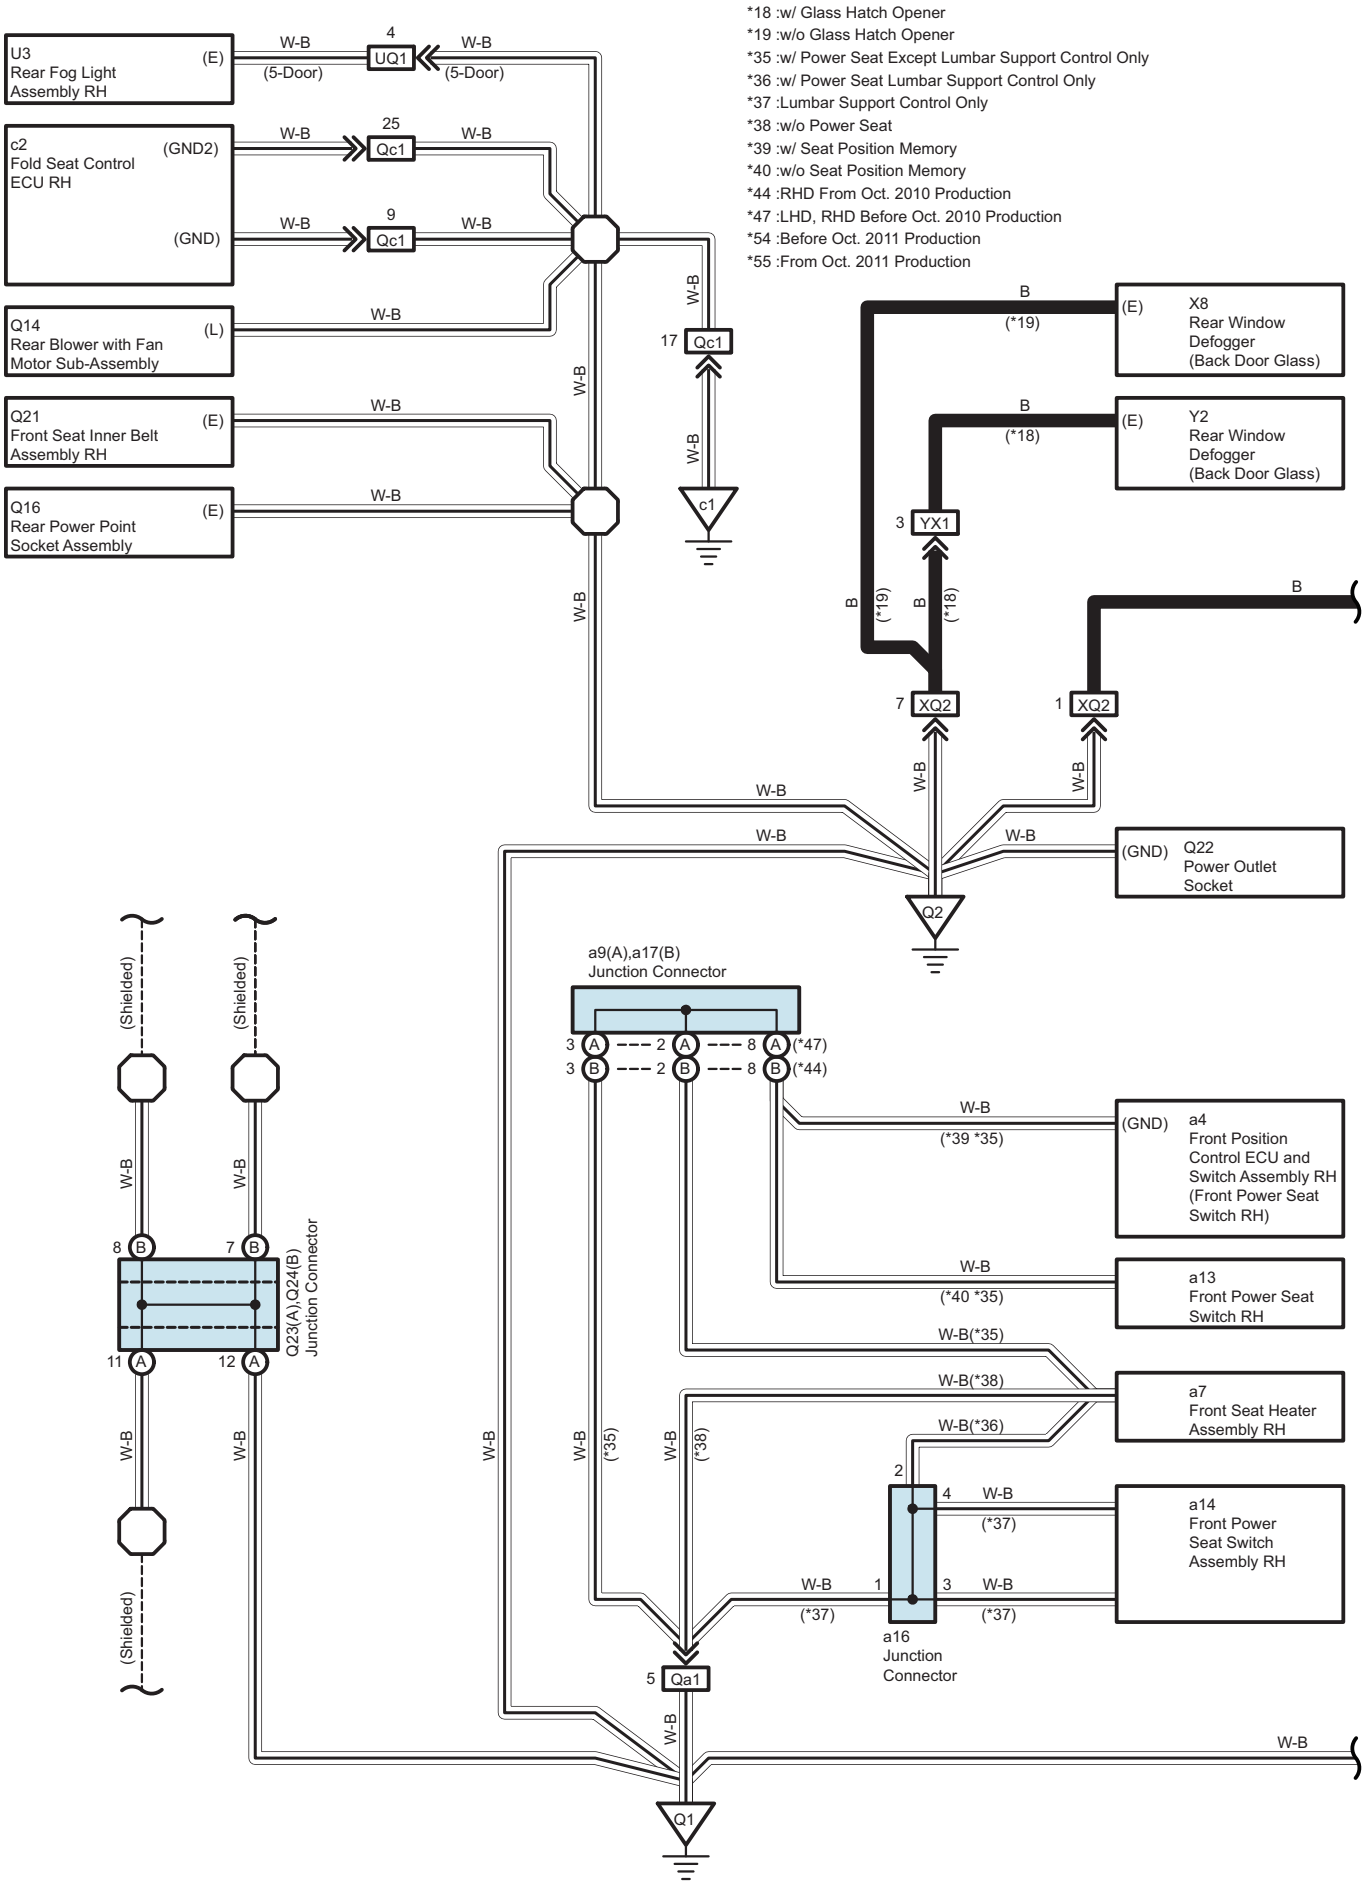

*18 :w/ Glass Hatch Opener
*19 :w/o Glass Hatch Opener
*35 :w/ Power Seat Except Lumbar Support Control Only
*36 :w/ Power Seat Lumbar Support Control Only
*37 :Lumbar Support Control Only
*38 :w/o Power Seat
*39 :w/ Seat Position Memory
*40 :w/o Seat Position Memory
*44 :RHD From Oct. 2010 Production
*47 :LHD, RHD Before Oct. 2010 Production
*54 :Before Oct. 2011 Production
*55 :From Oct. 2011 Production
U3 Rear Fog Light Assembly RH
(E)
(5-Door)
UQ1
c2 Fold Seat Control ECU RH
(GND2)
(GND)
Qc1
Q14 Rear Blower with Fan Motor Sub-Assembly
(L)
Q21 Front Seat Inner Belt Assembly RH
Q16 Rear Power Point Socket Assembly
c1
X8 Rear Window Defogger (Back Door Glass)
Y2 Rear Window Defogger (Back Door Glass)
YX1
XQ2
Q2
Q22 Power Outlet Socket
a9(A),a17(B) Junction Connector
a4 Front Position Control ECU and Switch Assembly RH (Front Power Seat Switch RH)
a13 Front Power Seat Switch RH
a7 Front Seat Heater Assembly RH
a14 Front Power Seat Switch Assembly RH
a16 Junction Connector
Qa1
Q1
Q23(A),Q24(B) Junction Connector
(Shielded)
W-B
B

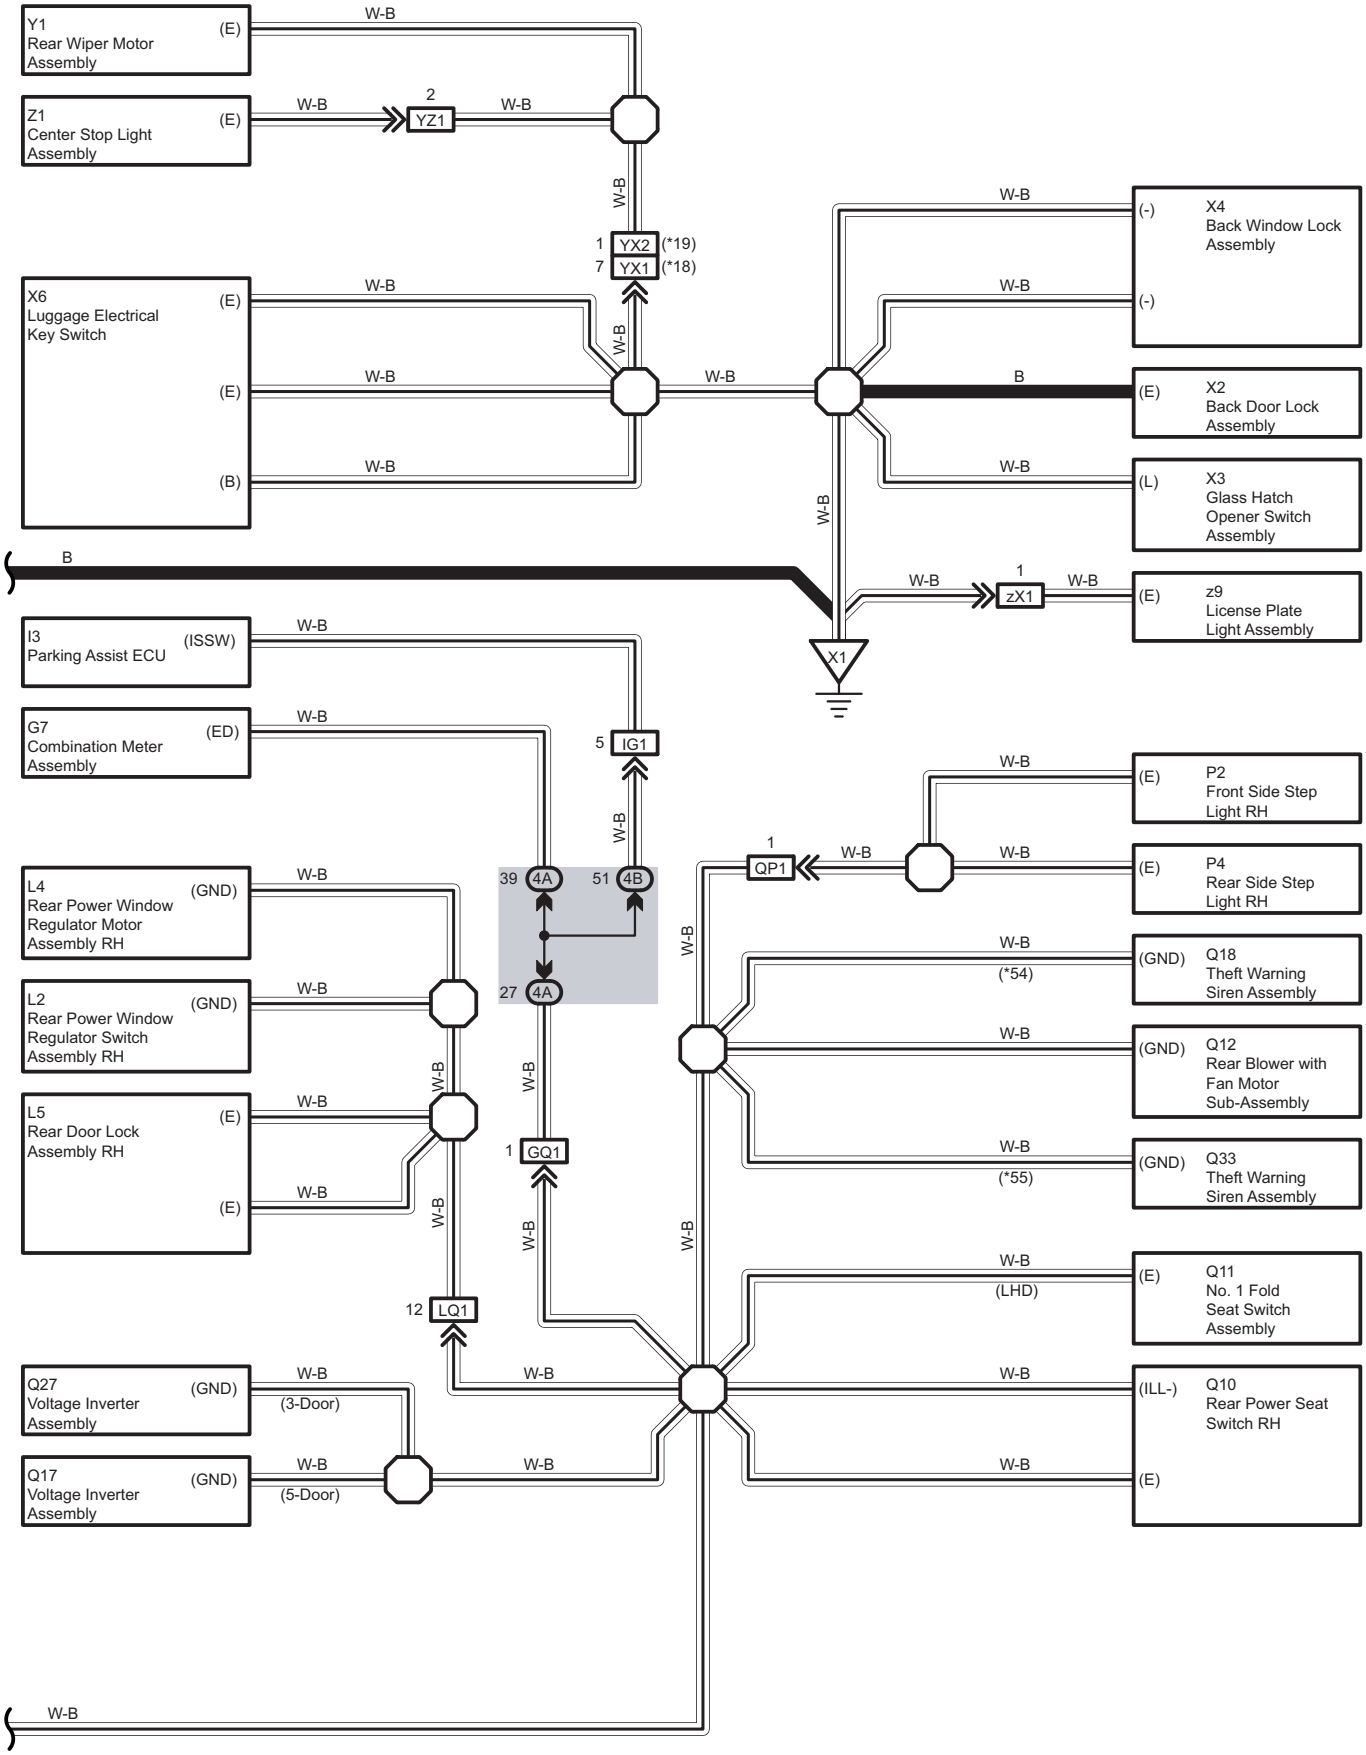

Y1
Rear Wiper Motor Assembly
(E)
Z1
Center Stop Light Assembly
(E)
X6
Luggage Electrical Key Switch
(E)
(E)
(B)
I3
Parking Assist ECU
(ISSW)
G7
Combination Meter Assembly
(ED)
L4
Rear Power Window Regulator Motor Assembly RH
(GND)
L2
Rear Power Window Regulator Switch Assembly RH
(GND)
L5
Rear Door Lock Assembly RH
(E)
(E)
Q27
Voltage Inverter Assembly
(GND)
Q17
Voltage Inverter Assembly
(GND)
W-B
B
2
YZ1
1
YX2
(*19)
7
YX1
(*18)
5
IG1
39
4A
51
4B
27
4A
1
GQ1
12
LQ1
1
QP1
1
zX1
X1
X4
Back Window Lock Assembly
(-)
(-)
X2
Back Door Lock Assembly
(E)
X3
Glass Hatch Opener Switch Assembly
(L)
z9
License Plate Light Assembly
(E)
P2
Front Side Step Light RH
(E)
P4
Rear Side Step Light RH
(E)
Q18
Theft Warning Siren Assembly
(GND)
(*54)
Q12
Rear Blower with Fan Motor Sub-Assembly
(GND)
Q33
Theft Warning Siren Assembly
(GND)
(*55)
Q11
No. 1 Fold Seat Switch Assembly
(E)
(LHD)
Q10
Rear Power Seat Switch RH
(ILL-)
(E)
(3-Door)
(5-Door)

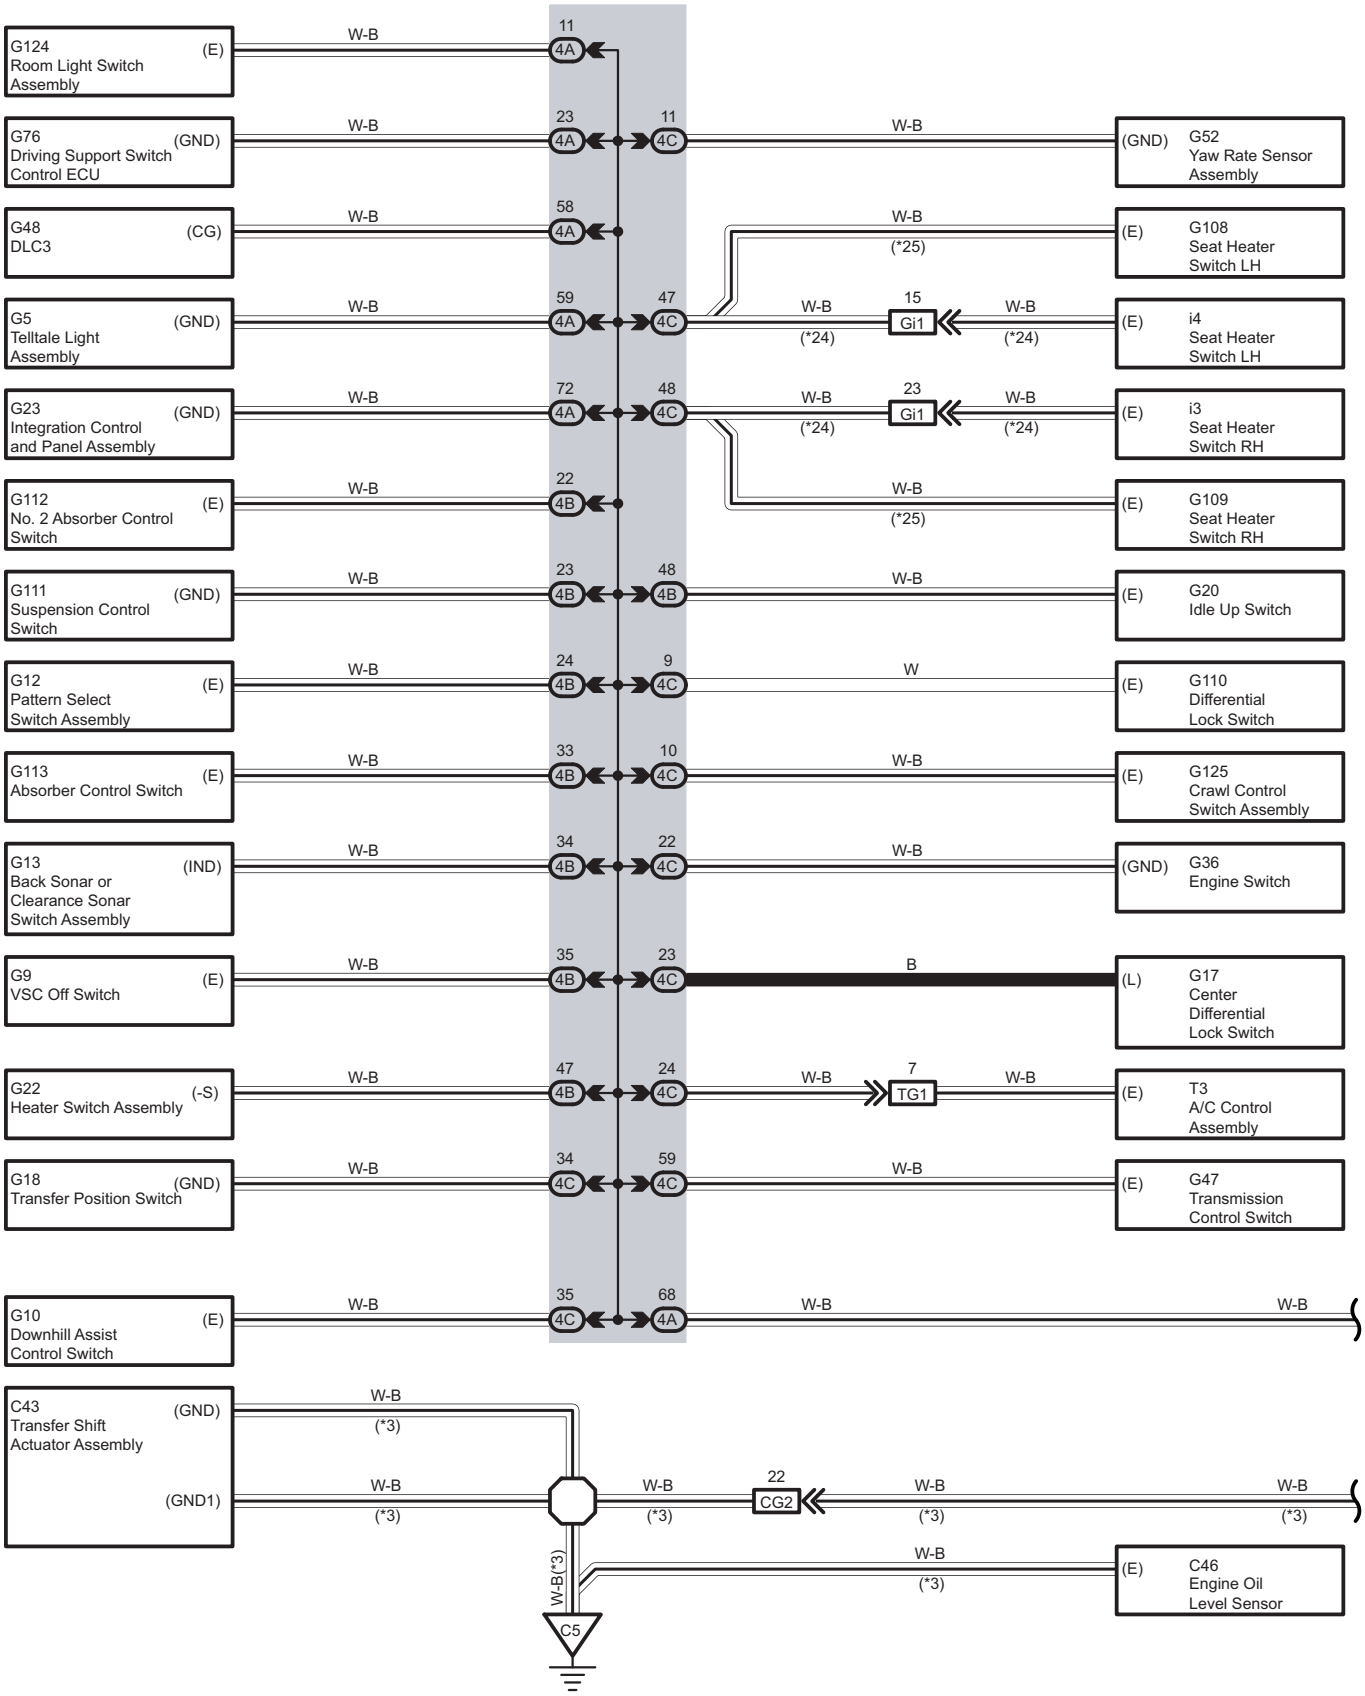

G124
Room Light Switch Assembly
(E)
W-B
11
4A
G76
Driving Support Switch Control ECU
(GND)
23
4A
11
4C
G52
Yaw Rate Sensor Assembly
G48
DLC3
(CG)
58
4A
G108
Seat Heater Switch LH
G5
Telltale Light Assembly
(GND)
59
4A
47
4C
15
Gi1
i4
Seat Heater Switch LH
G23
Integration Control and Panel Assembly
72
4A
48
4C
23
Gi1
i3
Seat Heater Switch RH
G112
No. 2 Absorber Control Switch
22
4B
G109
Seat Heater Switch RH
G111
Suspension Control Switch
23
4B
48
4B
G20
Idle Up Switch
G12
Pattern Select Switch Assembly
24
4B
9
4C
W
G110
Differential Lock Switch
G113
Absorber Control Switch
33
4B
10
4C
G125
Crawl Control Switch Assembly
G13
Back Sonar or Clearance Sonar Switch Assembly
(IND)
34
4B
22
4C
G36
Engine Switch
G9
VSC Off Switch
35
4B
23
4C
B
(L)
G17
Center Differential Lock Switch
G22
Heater Switch Assembly
(-S)
47
4B
24
4C
7
TG1
T3
A/C Control Assembly
G18
Transfer Position Switch
34
4C
59
4C
G47
Transmission Control Switch
G10
Downhill Assist Control Switch
35
4C
68
4A
C43
Transfer Shift Actuator Assembly
(GND)
(GND1)
(*3)
22
CG2
W-B(*3)
C5
C46
Engine Oil Level Sensor
(*24)
(*25)

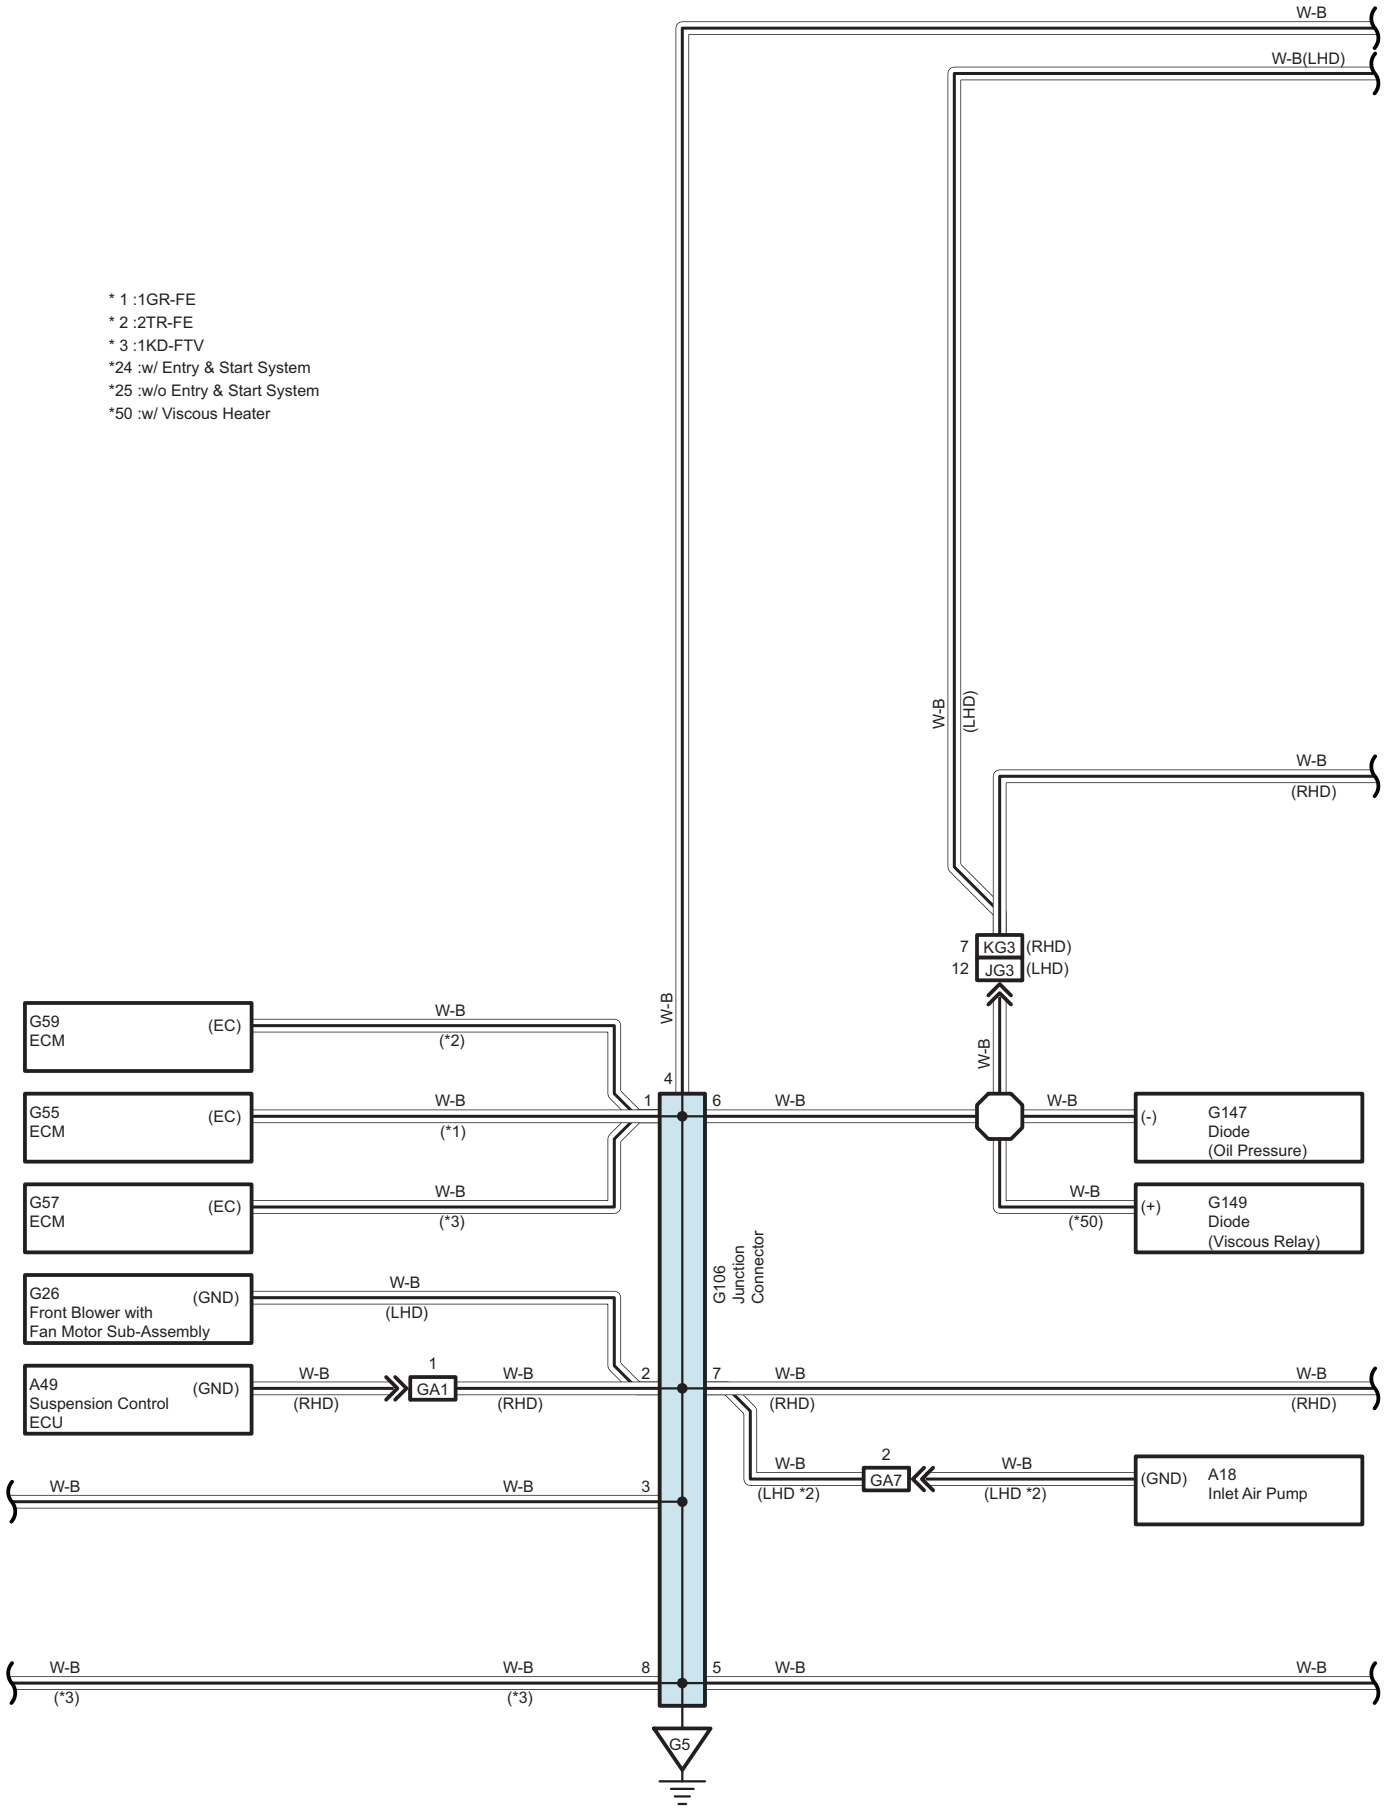

* 1 :1GR-FE
* 2 :2TR-FE
* 3 :1KD-FTV
*24 :w/ Entry & Start System
*25 :w/o Entry & Start System
*50 :w/ Viscous Heater
W-B
W-B(LHD)
W-B (LHD)
W-B (RHD)
7 KG3 (RHD)
12 JG3 (LHD)
W-B
G59 ECM (EC)
G55 ECM (EC)
G57 ECM (EC)
G26 Front Blower with Fan Motor Sub-Assembly (GND)
A49 Suspension Control ECU (GND)
(*2)
(*1)
(*3)
(LHD)
(RHD)
GA1
1
2
3
4
5
6
7
8
G106 Junction Connector
(-) G147 Diode (Oil Pressure)
(+) G149 Diode (Viscous Relay)
(*50)
GA7
(LHD *2)
(GND) A18 Inlet Air Pump
G5

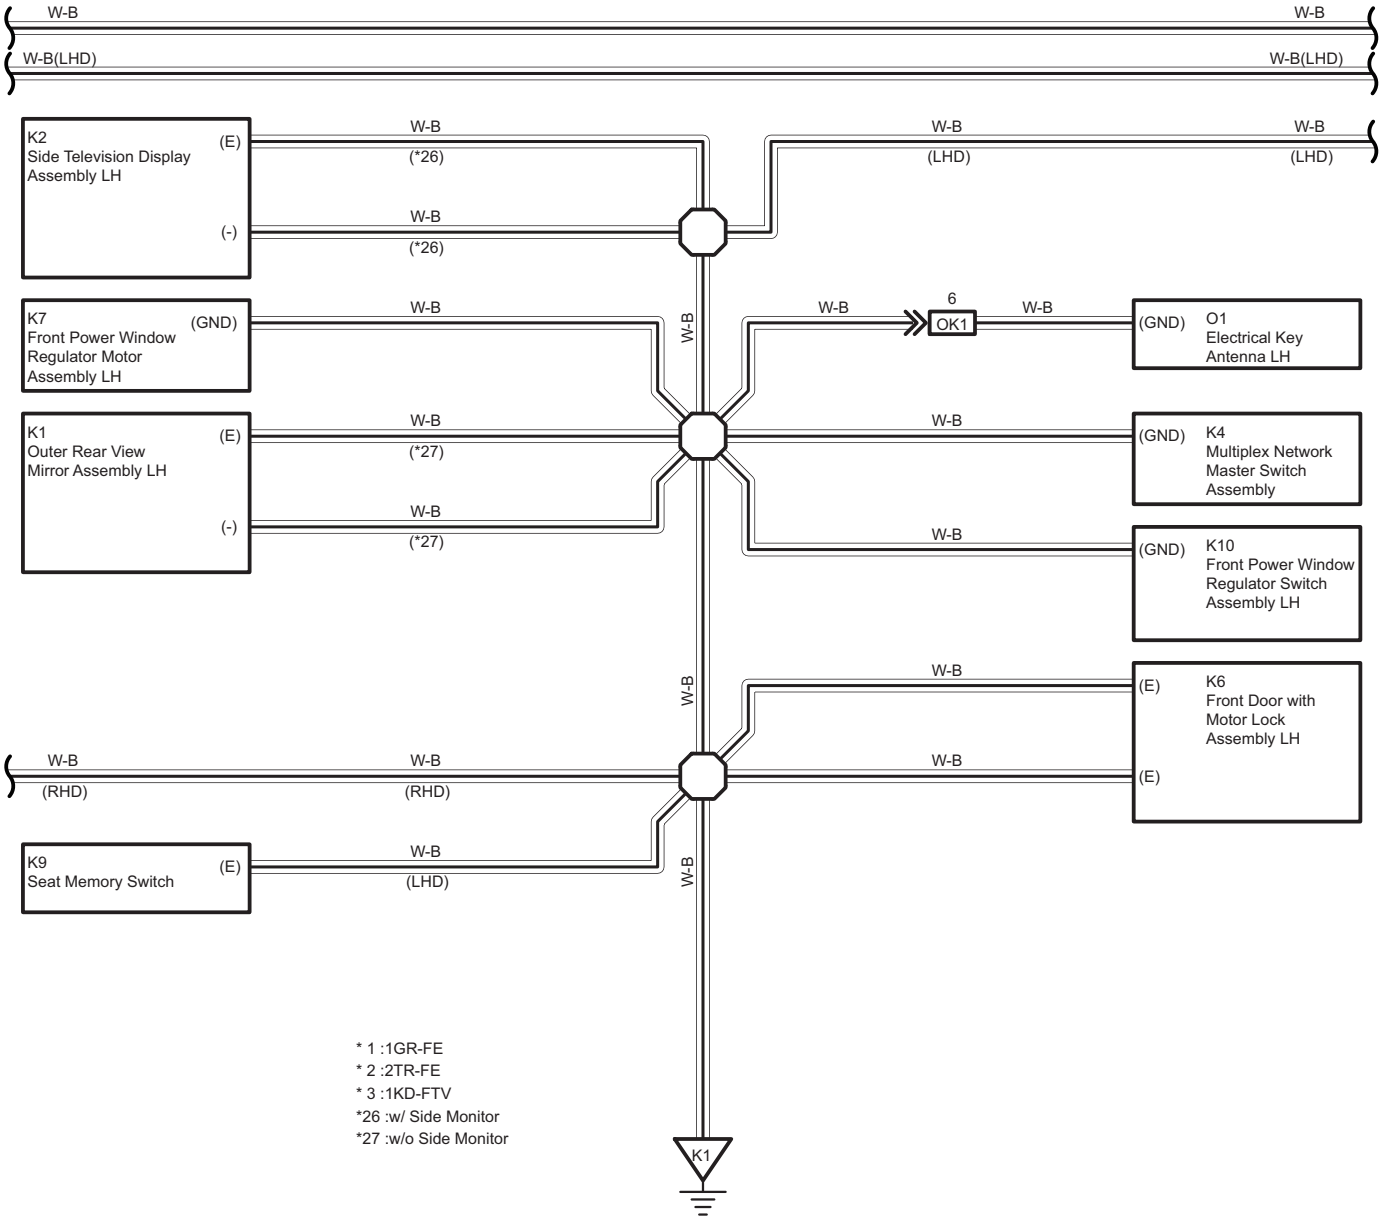
W-B
W-B
W-B(LHD)
W-B(LHD)
K2
Side Television Display Assembly LH
(E)
(-)
W-B
(*26)
W-B
(*26)
W-B
(LHD)
W-B
(LHD)
K7
Front Power Window Regulator Motor Assembly LH
(GND)
W-B
W-B
6
OK1
W-B
(GND)
O1
Electrical Key Antenna LH
K1
Outer Rear View Mirror Assembly LH
(E)
(-)
W-B
(*27)
W-B
(*27)
W-B
W-B
(GND)
K4
Multiplex Network Master Switch Assembly
W-B
(GND)
K10
Front Power Window Regulator Switch Assembly LH
W-B
(E)
K6
Front Door with Motor Lock Assembly LH
(E)
W-B
(RHD)
W-B
(RHD)
W-B
K9
Seat Memory Switch
(E)
W-B
(LHD)
W-B
W-B
W-B
W-B
K1
* 1 :1GR-FE
* 2 :2TR-FE
* 3 :1KD-FTV
*26 :w/ Side Monitor
*27 :w/o Side Monitor

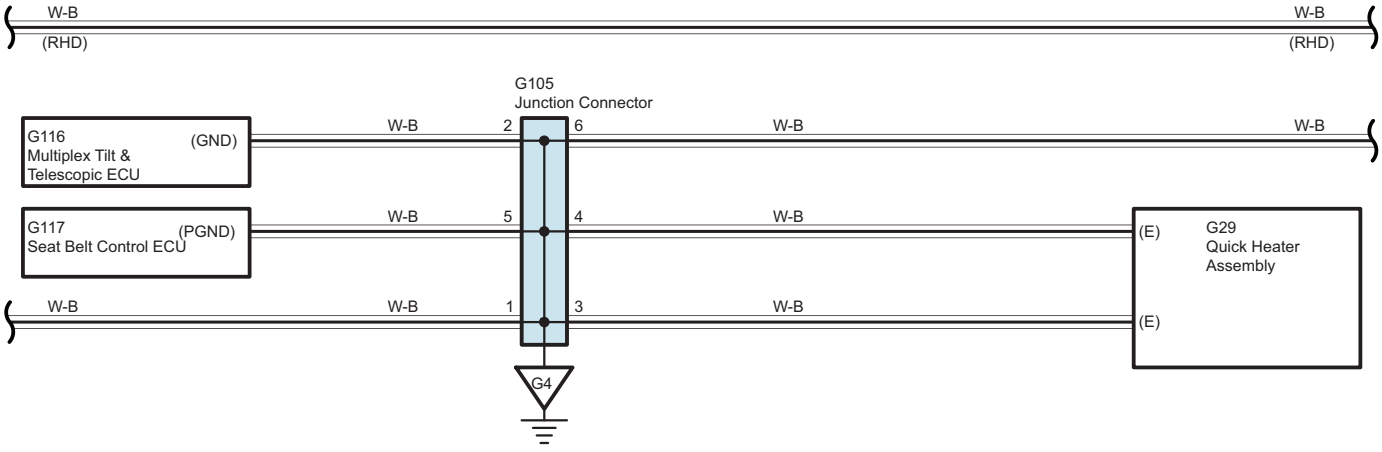

W-B
W-B
(RHD)
(RHD)
G105
Junction Connector
G116
Multiplex Tilt & Telescopic ECU
(GND)
W-B
2
6
W-B
W-B
G117
Seat Belt Control ECU
(PGND)
W-B
5
4
W-B
(E)
G29
Quick Heater Assembly
W-B
W-B
1
3
W-B
(E)
G4

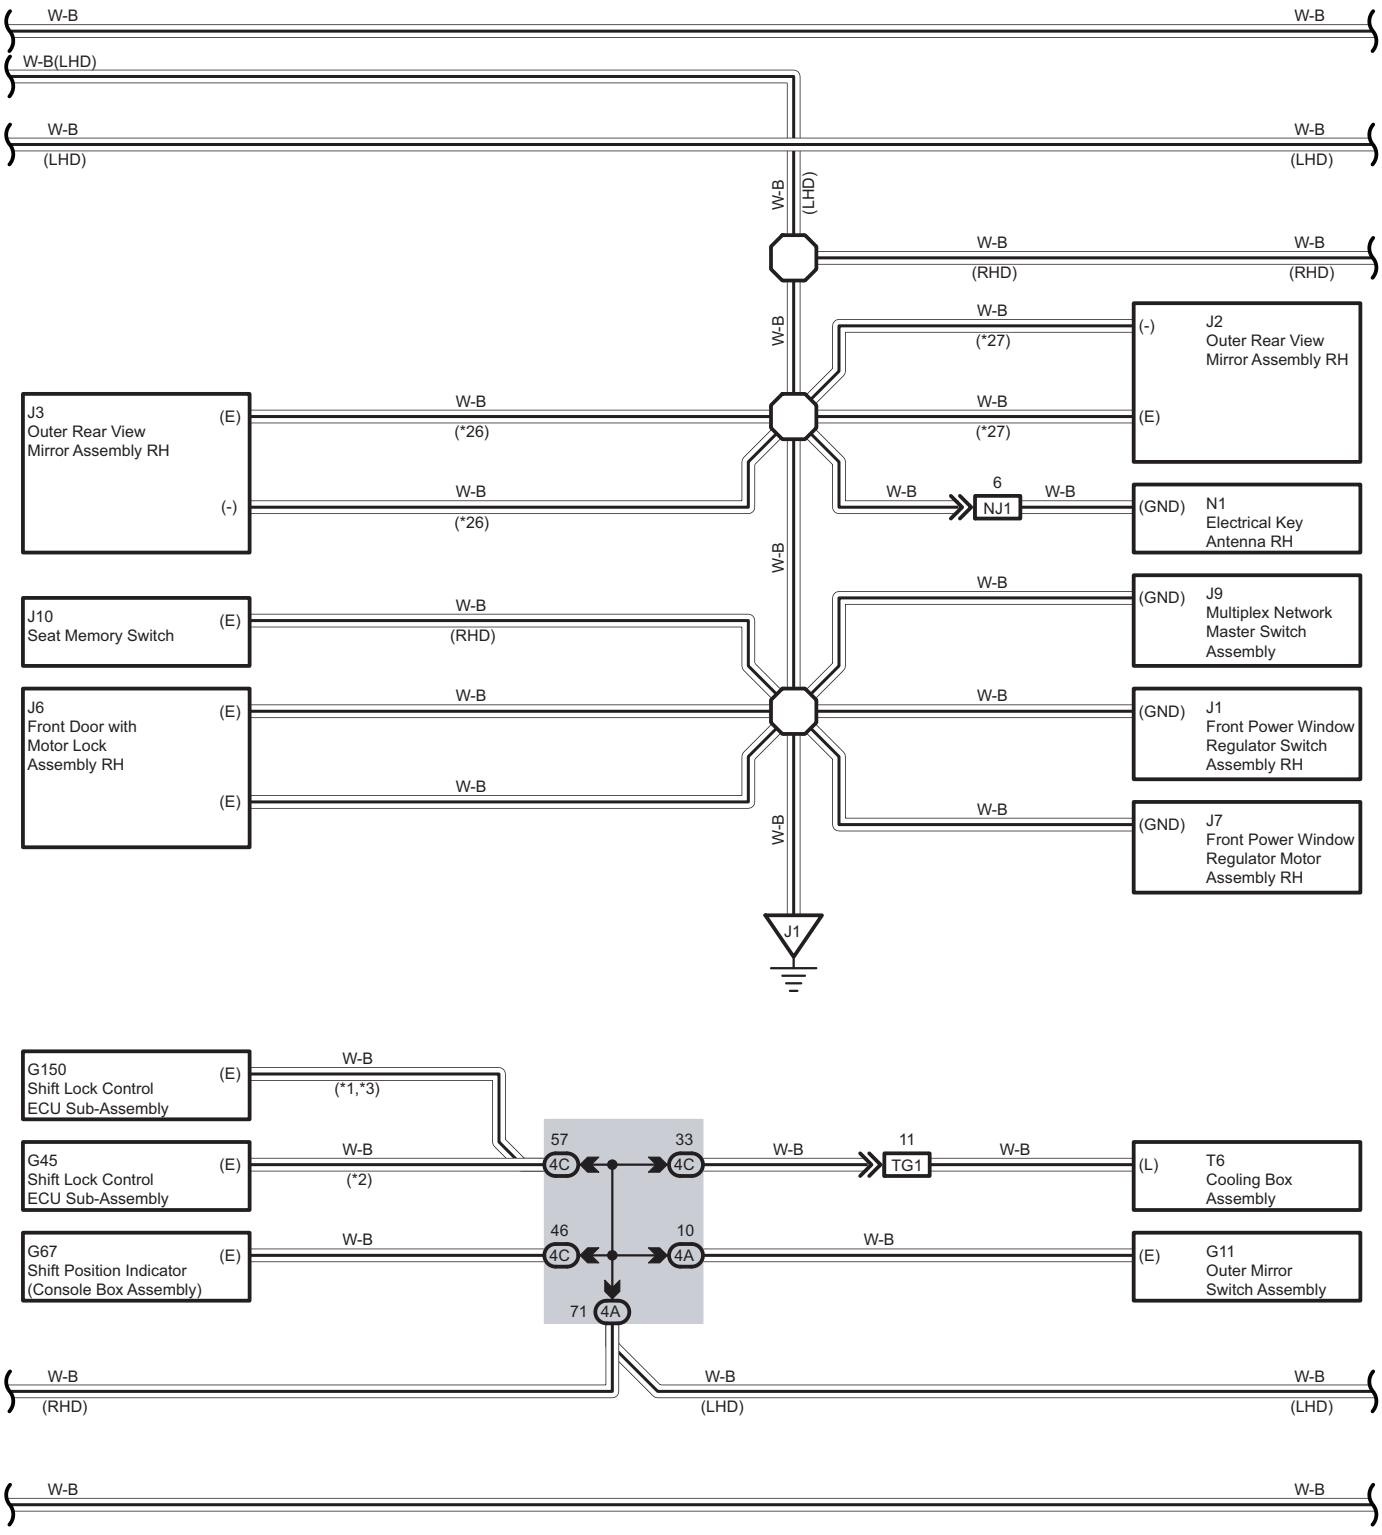

W-B
W-B(LHD)
(LHD)
(RHD)
(*27)
(*26)
(*1,*3)
(*2)
J3
Outer Rear View
Mirror Assembly RH
J10
Seat Memory Switch
J6
Front Door with
Motor Lock
Assembly RH
J2
Outer Rear View
Mirror Assembly RH
N1
Electrical Key
Antenna RH
J9
Multiplex Network
Master Switch
Assembly
J1
Front Power Window
Regulator Switch
Assembly RH
J7
Front Power Window
Regulator Motor
Assembly RH
J1
G150
Shift Lock Control
ECU Sub-Assembly
G45
Shift Lock Control
ECU Sub-Assembly
G67
Shift Position Indicator
(Console Box Assembly)
NJ1
TG1
T6
Cooling Box
Assembly
G11
Outer Mirror
Switch Assembly
4C
4A
57
33
46
10
71
11
6

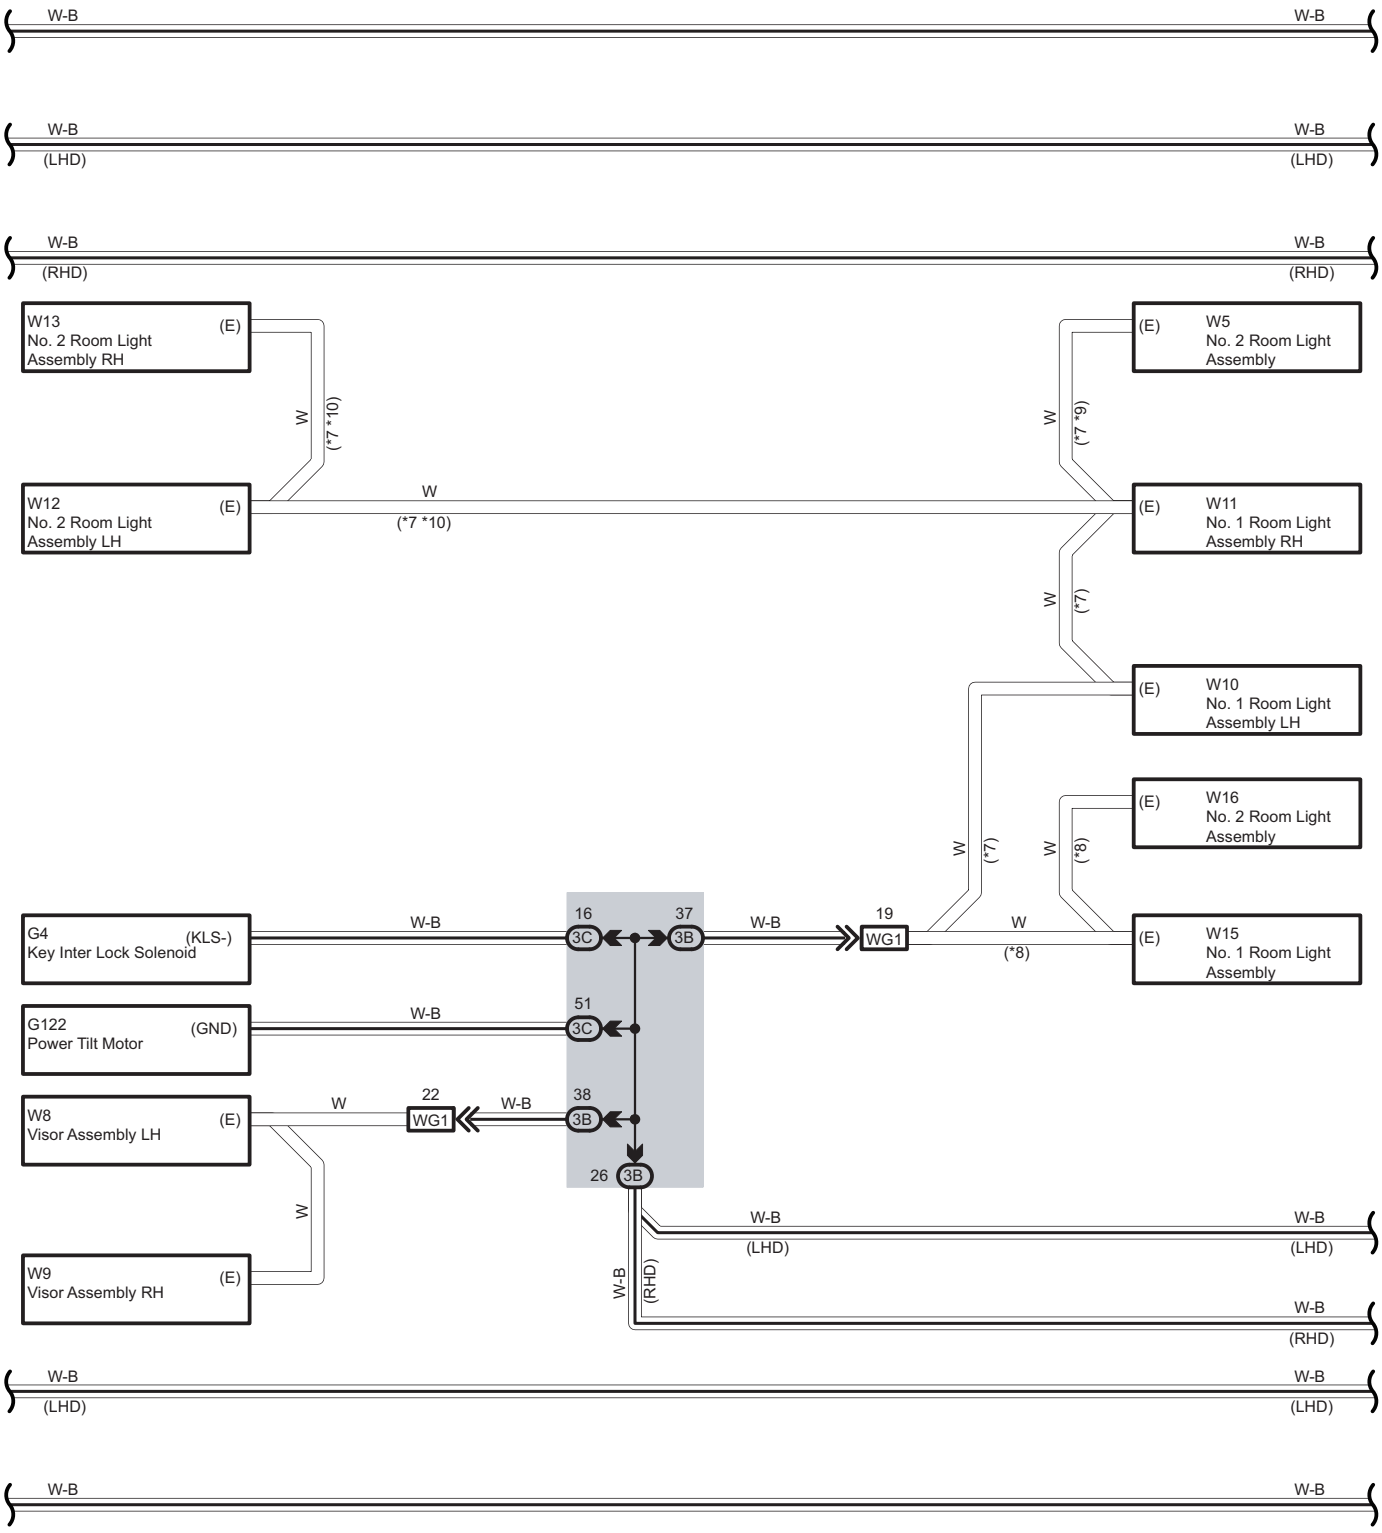

W-B
W-B
W-B
(LHD)
W-B
(LHD)
W-B
(RHD)
W-B
(RHD)
W13
No. 2 Room Light
Assembly RH
(E)
W
(*7 *10)
W12
No. 2 Room Light
Assembly LH
(E)
W
(*7 *10)
(E)
W5
No. 2 Room Light
Assembly
W
(*6 *7)
(E)
W11
No. 1 Room Light
Assembly RH
W
(*7)
(E)
W10
No. 1 Room Light
Assembly LH
W
(*7)
(E)
W16
No. 2 Room Light
Assembly
W
(*8)
(E)
W15
No. 1 Room Light
Assembly
W
(*8)
G4
Key Inter Lock Solenoid
(KLS-)
W-B
16
3C
37
3B
W-B
19
WG1
G122
Power Tilt Motor
(GND)
W-B
51
3C
W8
Visor Assembly LH
(E)
W
22
WG1
W-B
38
3B
26
3B
W9
Visor Assembly RH
(E)
W
W-B
(LHD)
W-B
(LHD)
W-B
(RHD)
W-B
(RHD)
W-B
(LHD)
W-B
(LHD)
W-B
W-B

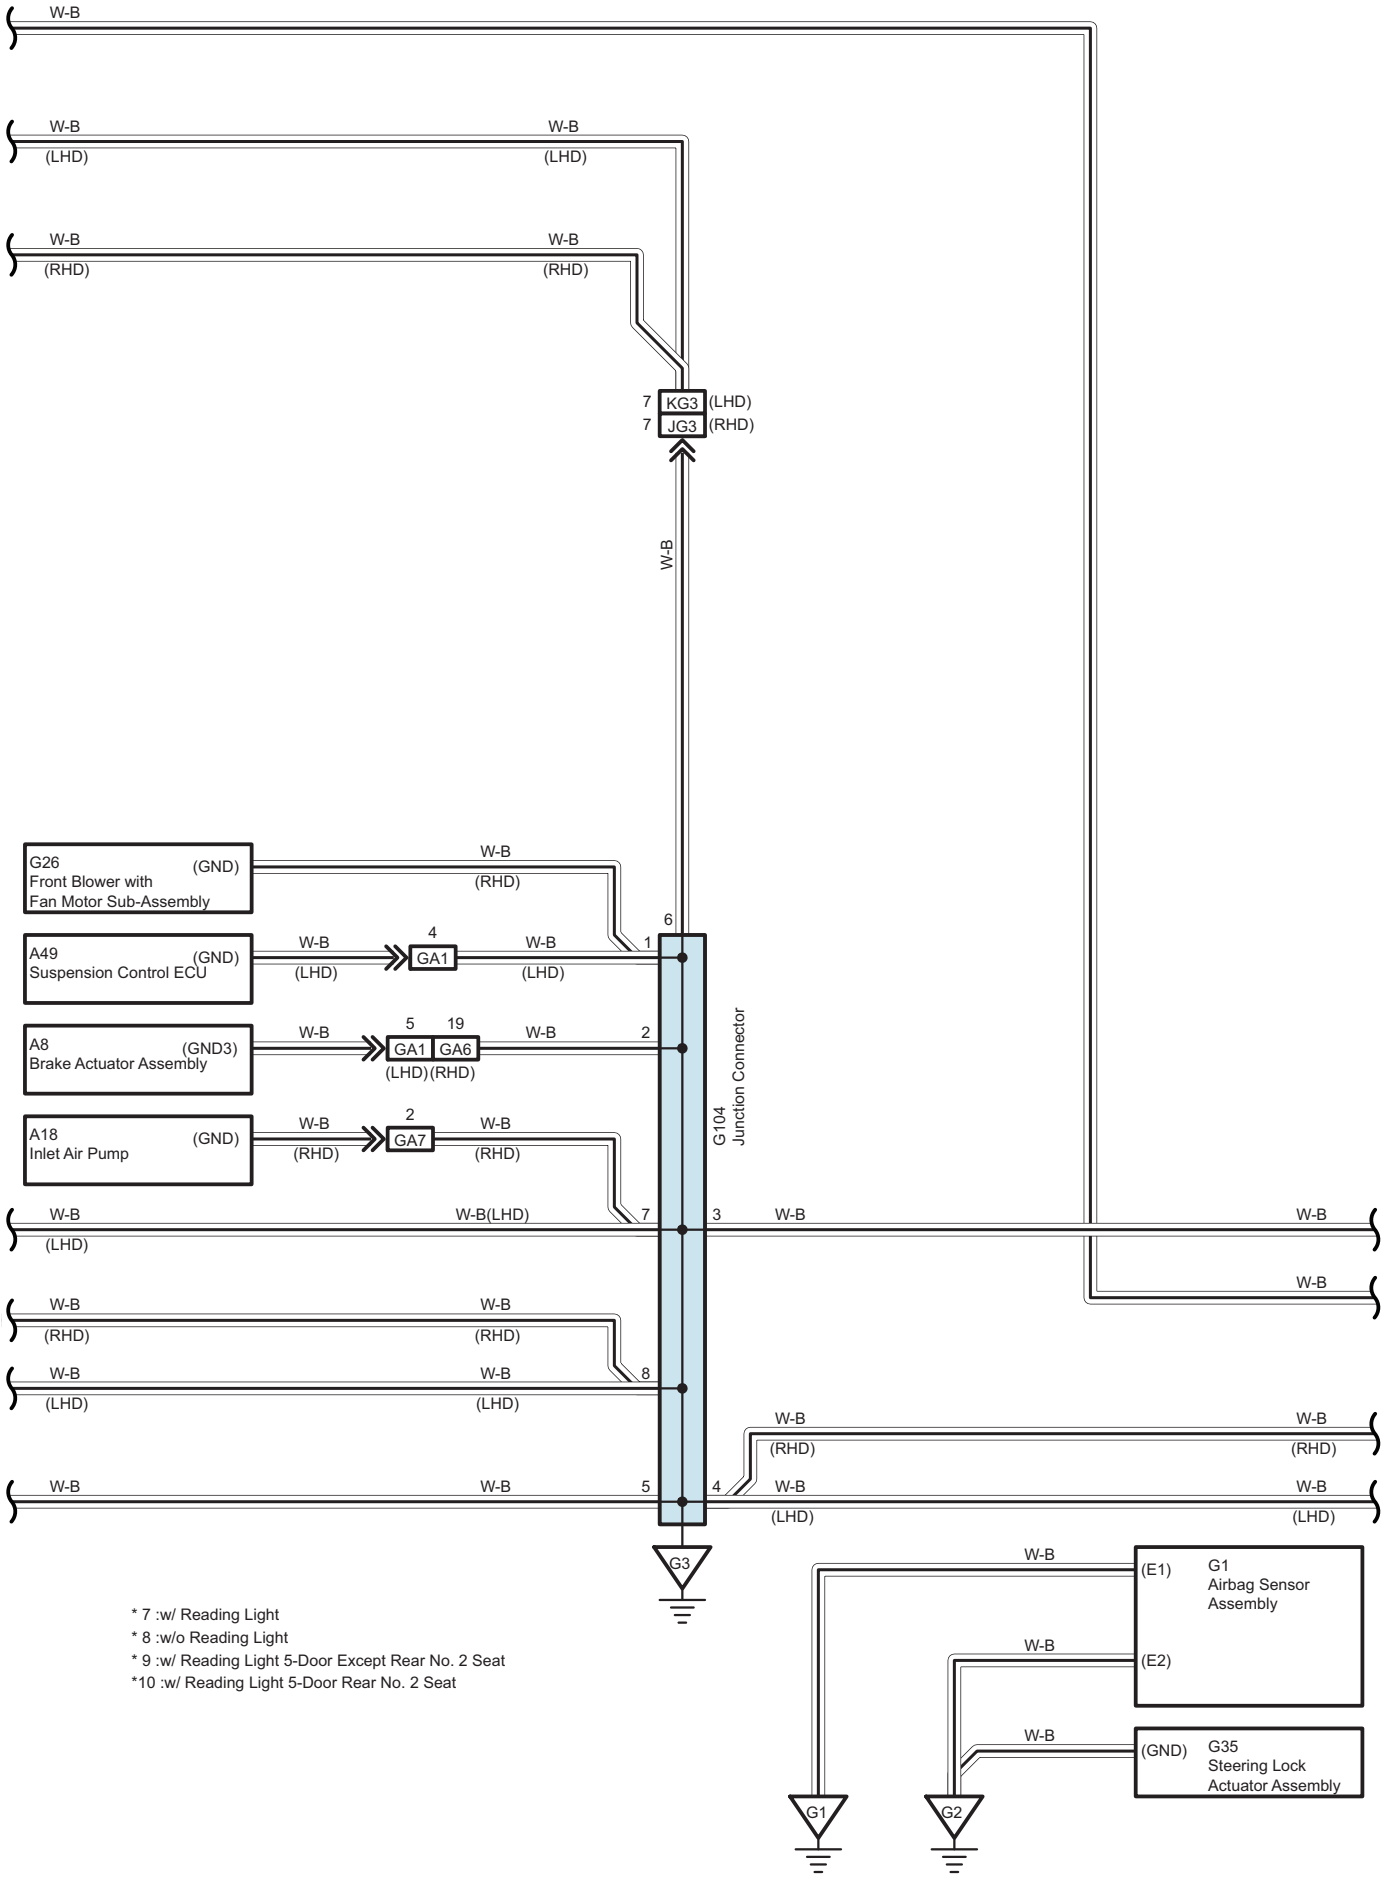
W-B
(LHD)
(RHD)
7 KG3 (LHD)
7 JG3 (RHD)
G26
Front Blower with
Fan Motor Sub-Assembly
(GND)
A49
Suspension Control ECU
(GND)
A8
Brake Actuator Assembly
(GND3)
A18
Inlet Air Pump
(GND)
GA1
GA6
GA7
G104
Junction Connector
W-B(LHD)
G3
G1
G2
(E1)
(E2)
(GND)
G1
Airbag Sensor
Assembly
G35
Steering Lock
Actuator Assembly
* 7 :w/ Reading Light
* 8 :w/o Reading Light
* 9 :w/ Reading Light 5-Door Except Rear No. 2 Seat
*10 :w/ Reading Light 5-Door Rear No. 2 Seat


* 4 :5L-E
*24 :w/ Entry & Start System
*25 :w/o Entry & Start System
*28 :w/ Parking Assist (TOYOTA Parking Assist-Sensor) (4 Sensor Type)
*29 :w/o Parking Assist (TOYOTA Parking Assist-Sensor) (4 Sensor Type)
*41 :Before Oct. 2010 Production
*42 :From Oct. 2010 Production
*59 :Except 5L-E

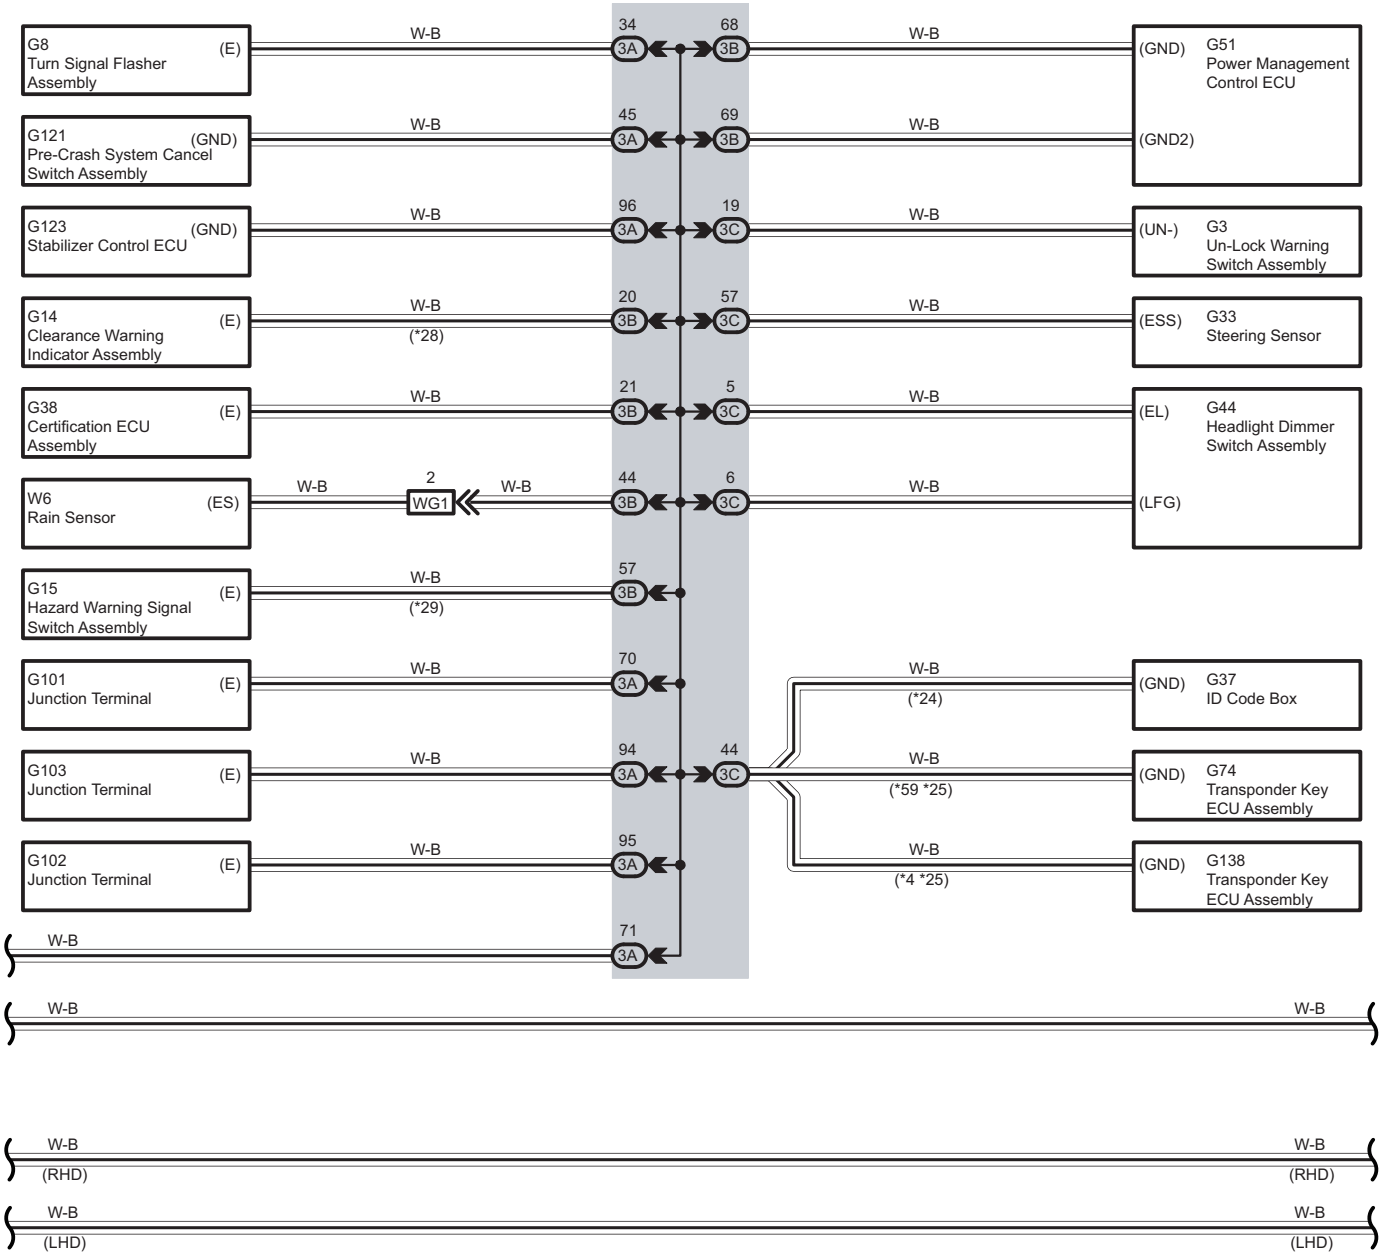

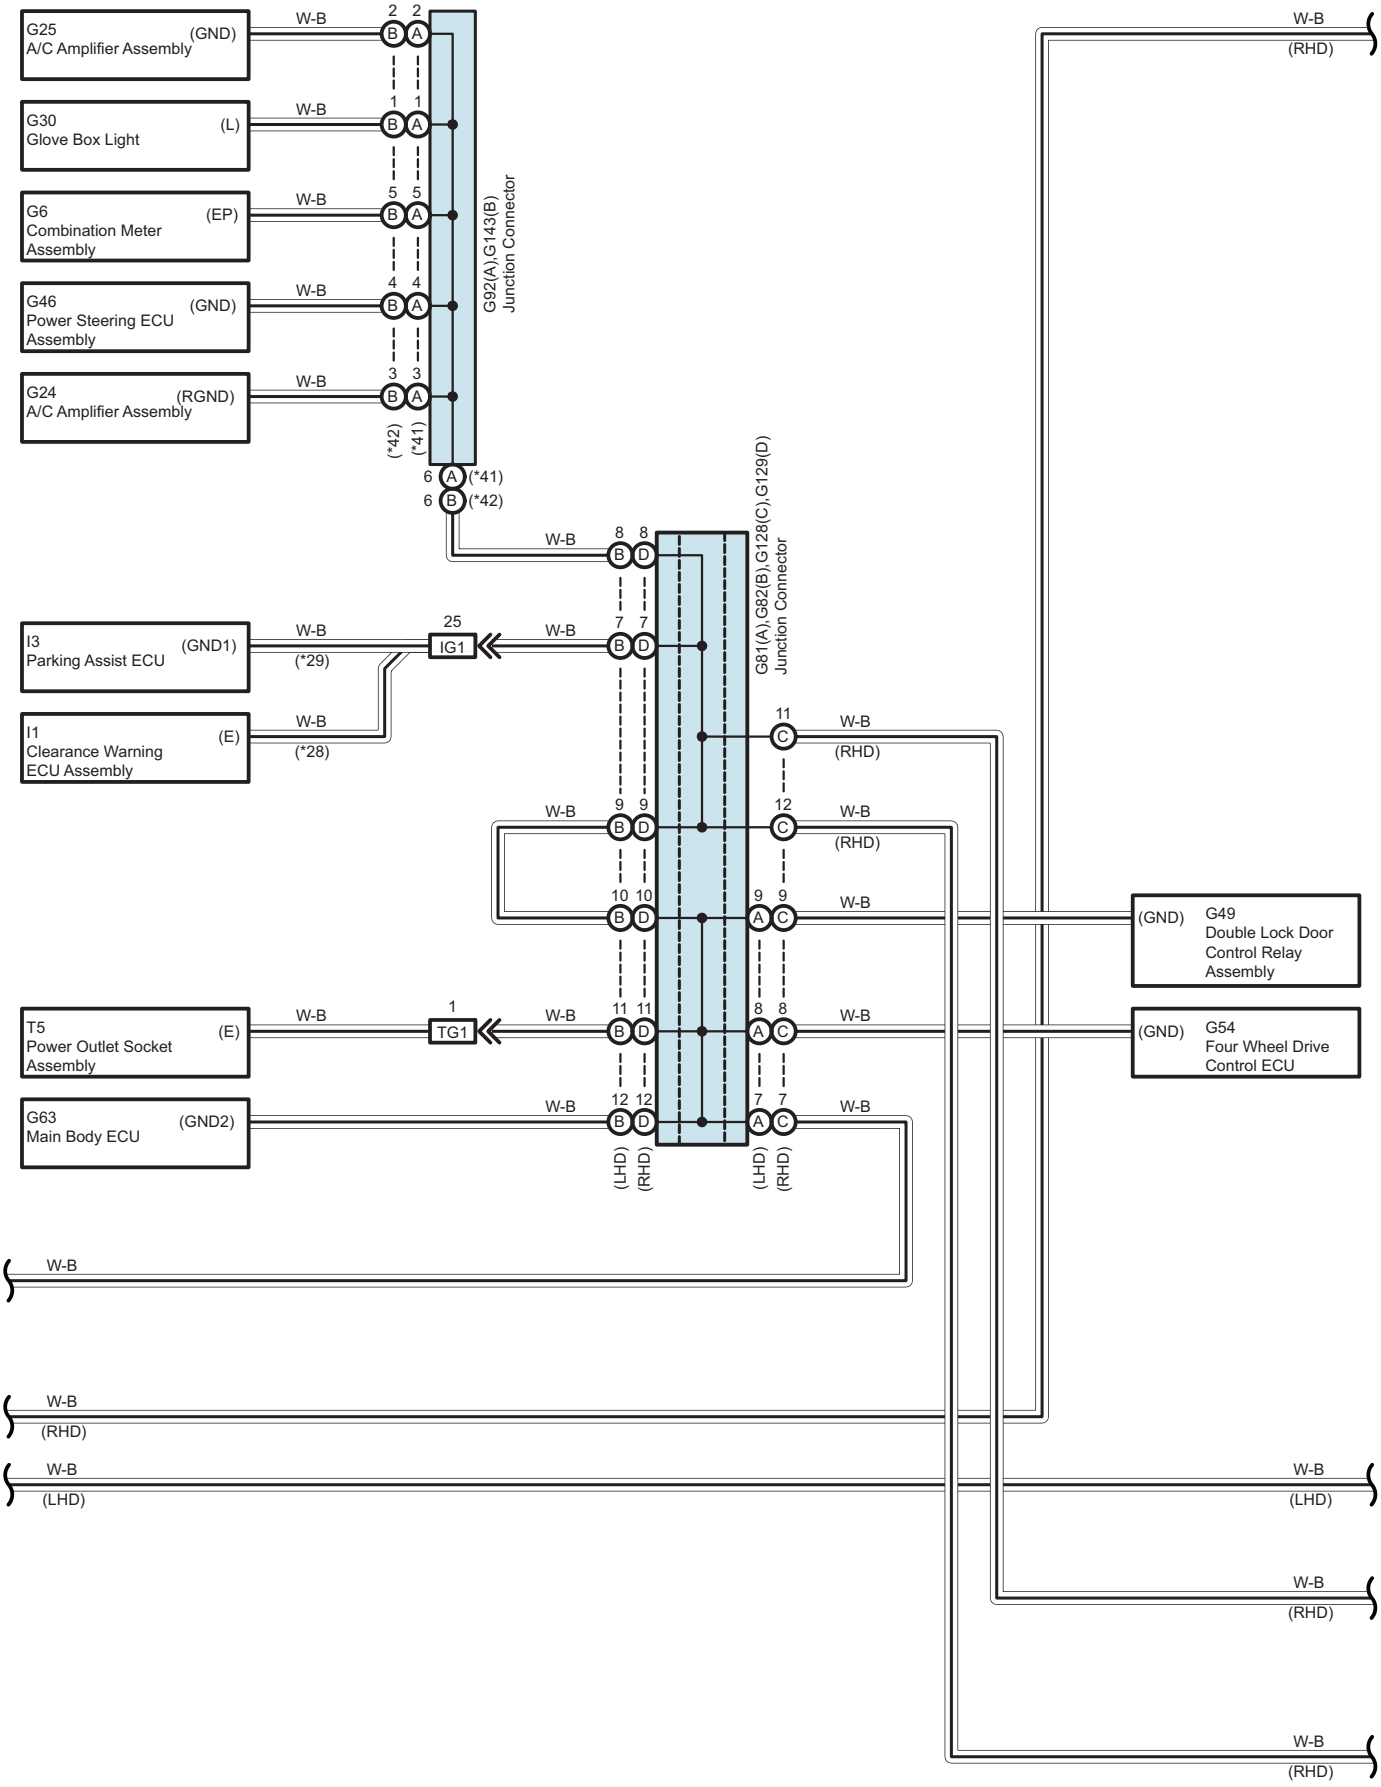

G25
A/C Amplifier Assembly
(GND)
G30
Glove Box Light
(L)
G6
Combination Meter Assembly
(EP)
G46
Power Steering ECU Assembly
(GND)
G24
A/C Amplifier Assembly
(RGND)
W-B
G92(A),G143(B) Junction Connector
G81(A),G82(B),G128(C),G129(D) Junction Connector
(*41)
(*42)
I3
Parking Assist ECU
(GND1)
I1
Clearance Warning ECU Assembly
(E)
IG1
TG1
(*28)
(*29)
T5
Power Outlet Socket Assembly
(E)
G63
Main Body ECU
(GND2)
(LHD)
(RHD)
(RHD)
G49
Double Lock Door Control Relay Assembly
(GND)
G54
Four Wheel Drive Control ECU
(GND)
(RHD)
(LHD)

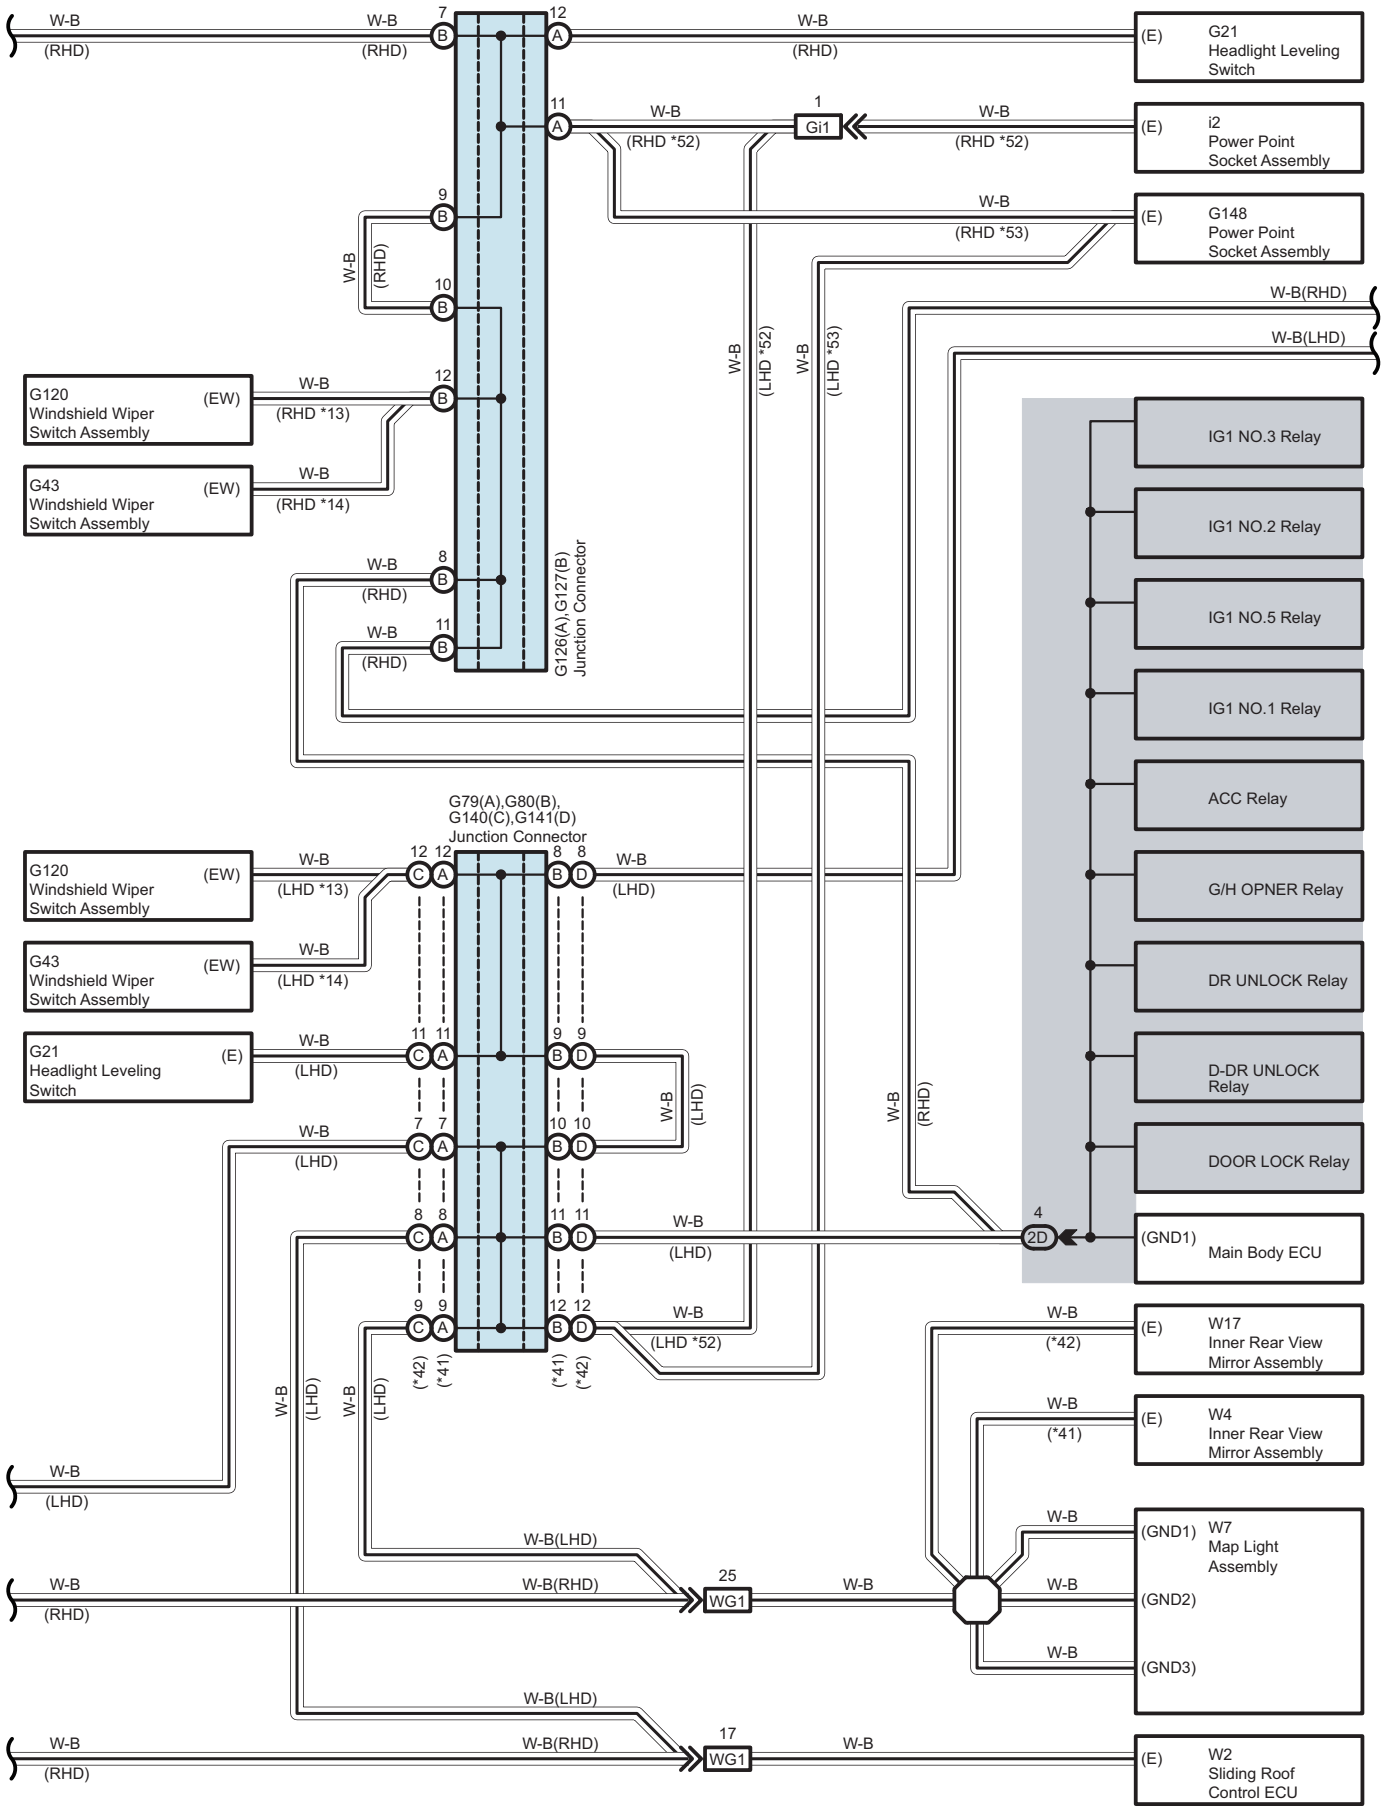

G21
Headlight Leveling
Switch
i2
Power Point
Socket Assembly
G148
Power Point
Socket Assembly
G120
Windshield Wiper
Switch Assembly
G43
Windshield Wiper
Switch Assembly
G126(A),G127(B)
Junction Connector
G79(A),G80(B),
G140(C),G141(D)
Junction Connector
IG1 NO.3 Relay
IG1 NO.2 Relay
IG1 NO.5 Relay
IG1 NO.1 Relay
ACC Relay
G/H OPNER Relay
DR UNLOCK Relay
D-DR UNLOCK
Relay
DOOR LOCK Relay
Main Body ECU
W17
Inner Rear View
Mirror Assembly
W4
Inner Rear View
Mirror Assembly
W7
Map Light
Assembly
W2
Sliding Roof
Control ECU
W-B
W-B(RHD)
W-B(LHD)
(RHD)
(LHD)
(RHD *52)
(RHD *53)
(LHD *52)
(LHD *53)
(RHD *13)
(RHD *14)
(LHD *13)
(LHD *14)
(*41)
(*42)
WG1
Gi1
(E)
(EW)
(GND1)
(GND2)
(GND3)

*13 :w/ Auto Wiper System
*14 :w/o Auto Wiper System
*20 :6 Speaker
*21 :9 Speaker
*24 :w/ Entry & Start System
*25 :w/o Entry & Start System
*28 :w/ Parking Assist (TOYOTA Parking Assist-Sensor) (4 Sensor Type)
*29 :w/o Parking Assist (TOYOTA Parking Assist-Sensor) (4 Sensor Type)
*41 :Before Oct. 2010 Production
*42 :From Oct. 2010 Production
*52 :Separate Seat
*53 :Bench Seat

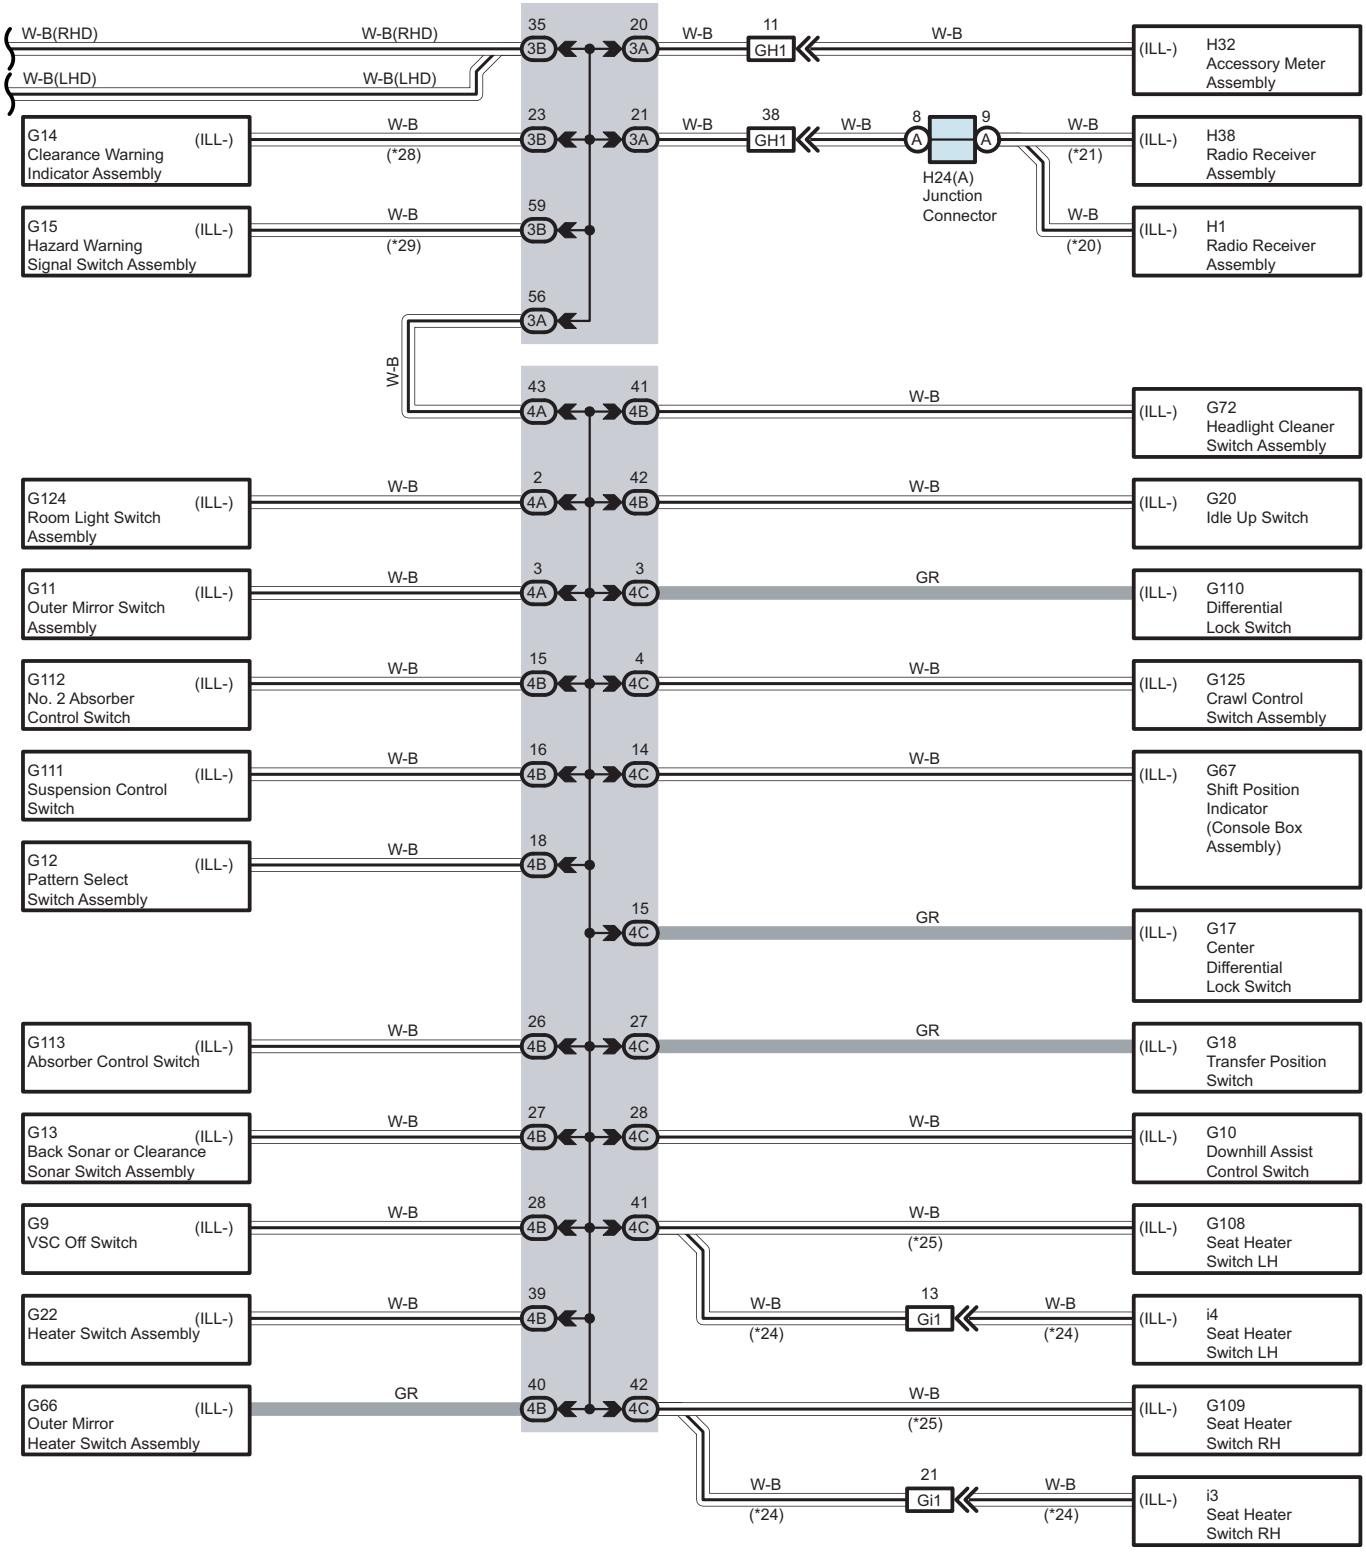



* 1 :1GR-FE
* 2 :2TR-FE
*15 :w/ Stowing Function
*23 :w/ Rear Differential Lock 3-Door
*35 :w/ Power Seat Except Lumbar Support Control Only
*36 :w/ Power Seat Lumbar Support Control Only
*37 :Lumbar Support Control Only
*38 :w/o Power Seat
*39 :w/ Seat Position Memory
*40 :w/o Seat Position Memory
*43 :RHD Before Oct. 2010 Production
*44 :RHD From Oct. 2010 Production
*45 :LHD Except *46
*46 :LHD w/ Seat Position Memory From Oct. 2010 Production
*57 :w/ Seat Heater
*58 :w/o Seat Heater

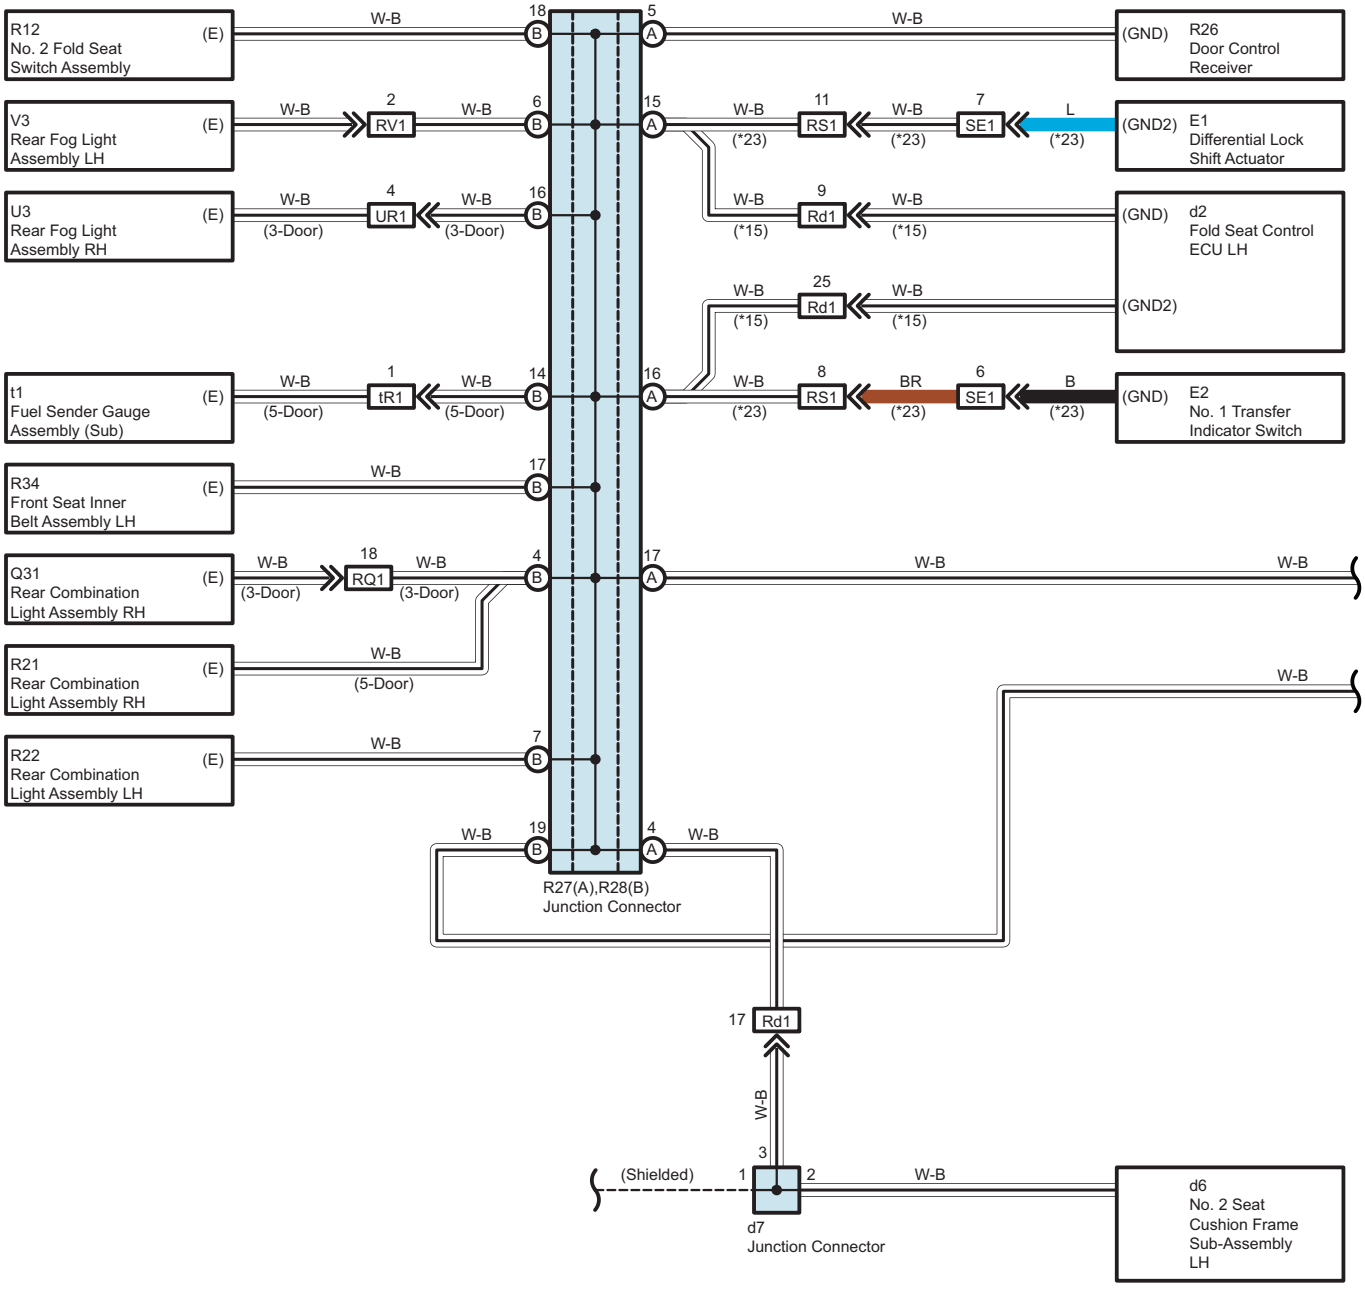


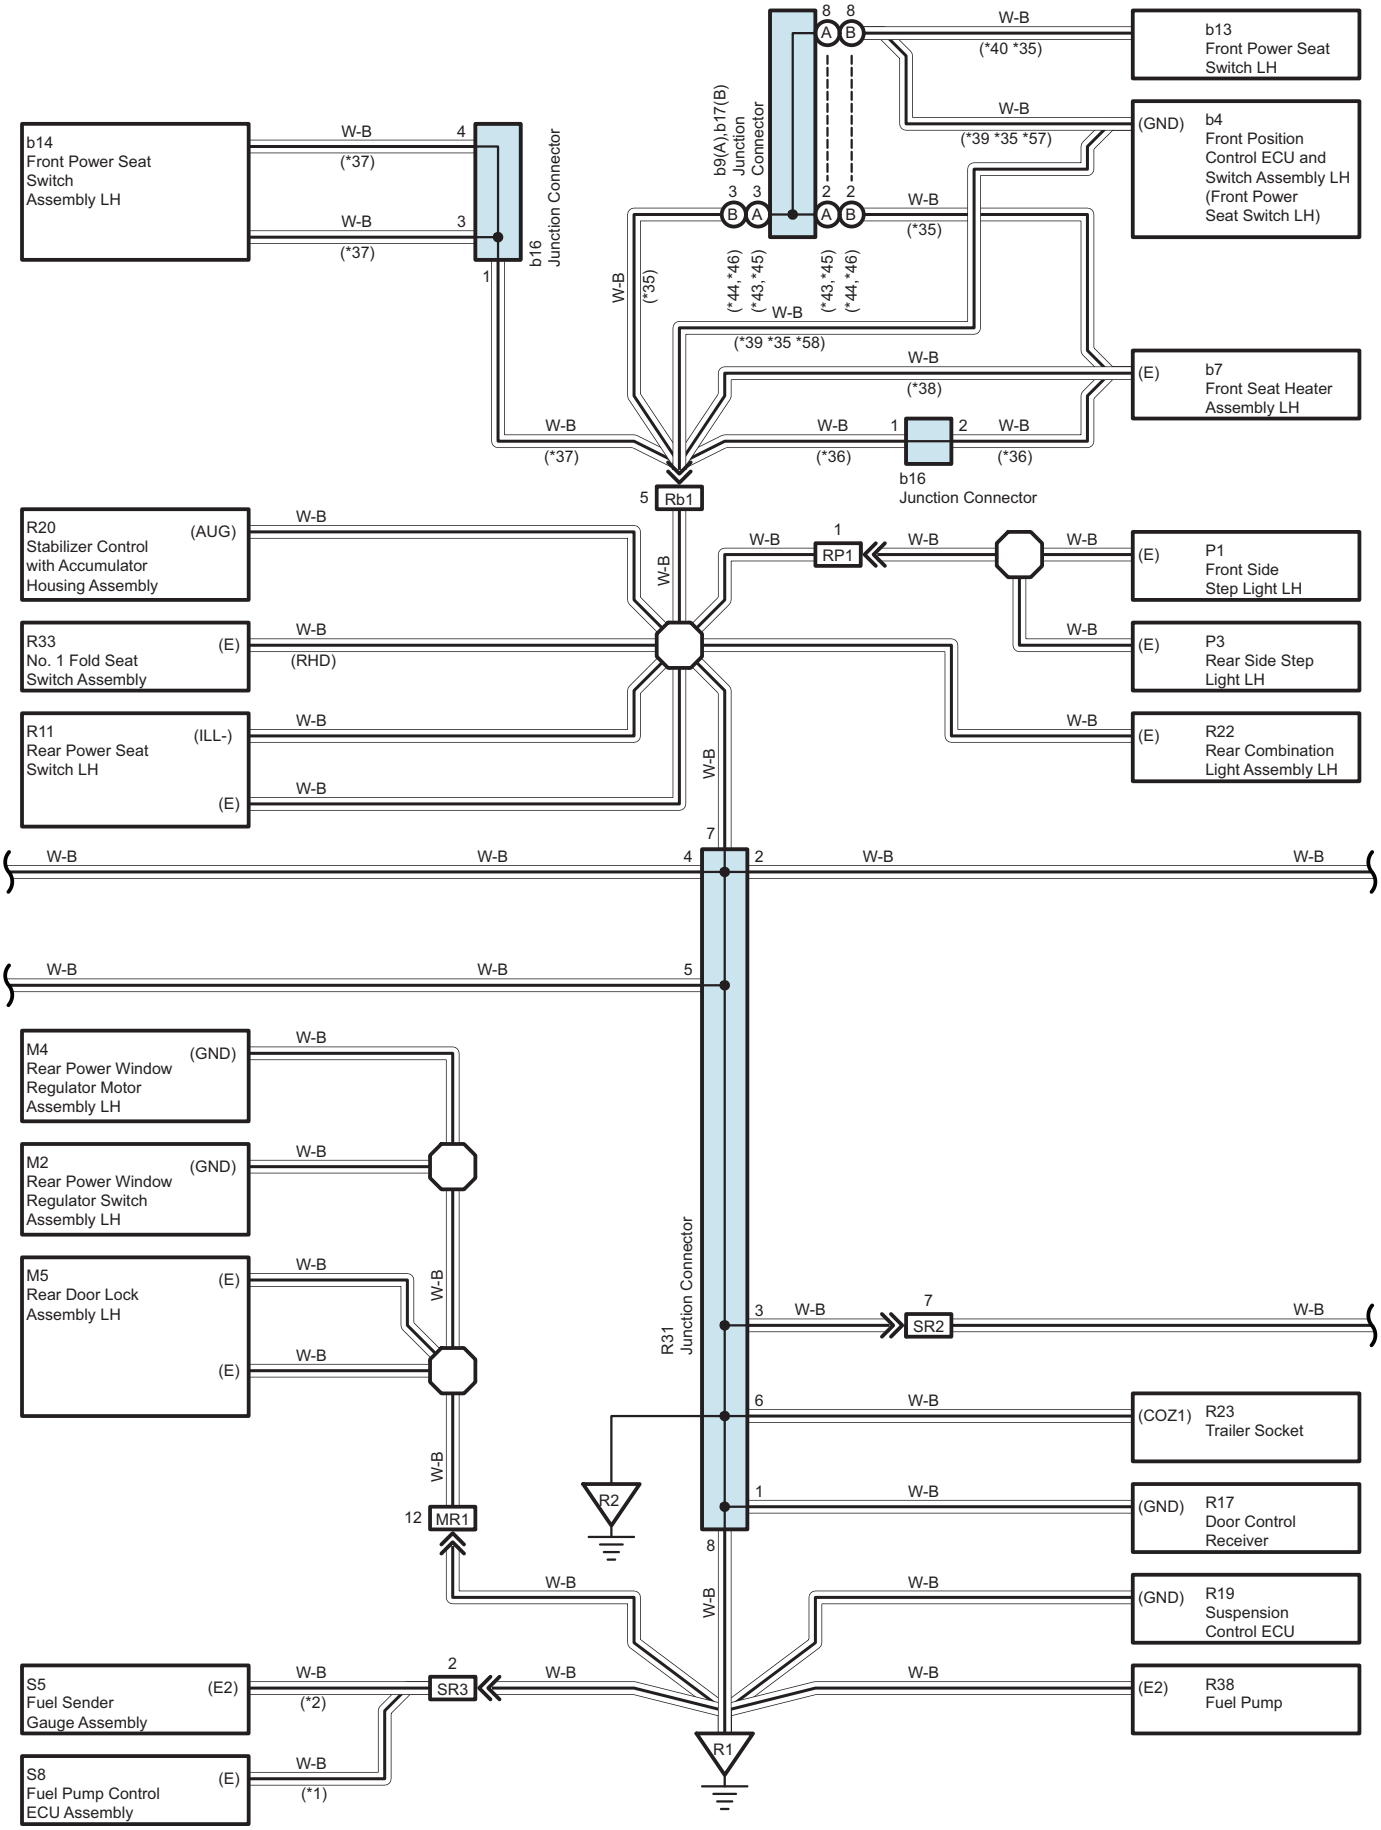
b14
Front Power Seat
Switch
Assembly LH
W-B
(*37)
4
3
1
b16
Junction Connector
b9(A),b17(B)
Junction
Connector
8 8
A B
3 3
B A
2 2
A B
W-B
(*40 *35)
b13
Front Power Seat
Switch LH
W-B
(*39 *35 *57)
(GND)
b4
Front Position
Control ECU and
Switch Assembly LH
(Front Power
Seat Switch LH)
W-B
(*35)
(*44, *46)
(*43, *45)
(*43, *45)
(*44, *46)
W-B
(*39 *35 *58)
W-B
(*38)
(E)
b7
Front Seat Heater
Assembly LH
W-B
(*37)
W-B
(*36)
1
2
W-B
(*36)
b16
Junction Connector
5
Rb1
R20
Stabilizer Control
with Accumulator
Housing Assembly
(AUG)
W-B
W-B
1
RP1
W-B
W-B
(E)
P1
Front Side
Step Light LH
R33
No. 1 Fold Seat
Switch Assembly
(E)
W-B
(RHD)
W-B
(E)
P3
Rear Side Step
Light LH
R11
Rear Power Seat
Switch LH
(ILL-)
(E)
W-B
W-B
W-B
(E)
R22
Rear Combination
Light Assembly LH
7
W-B
W-B
4
2
W-B
W-B
W-B
W-B
5
M4
Rear Power Window
Regulator Motor
Assembly LH
(GND)
W-B
M2
Rear Power Window
Regulator Switch
Assembly LH
(GND)
W-B
M5
Rear Door Lock
Assembly LH
(E)
W-B
(E)
W-B
R31
Junction Connector
3
W-B
7
SR2
W-B
6
W-B
(COZ1)
R23
Trailer Socket
1
W-B
(GND)
R17
Door Control
Receiver
12
MR1
R2
8
W-B
W-B
(GND)
R19
Suspension
Control ECU
S5
Fuel Sender
Gauge Assembly
(E2)
W-B
(*2)
2
SR3
W-B
W-B
(E2)
R38
Fuel Pump
S8
Fuel Pump Control
ECU Assembly
(E)
W-B
(*1)
R1

*20 :6 Speaker
*21 :9 Speaker
*22 :w/ Rear Differential Lock 5-Door
*30 :w/ Navigation System
*31 :w/o Navigation System
*32 :w/ Rear Seat Entertainment System
*33 :RHD 6 Speaker w/o Multi-Media Interface ECU

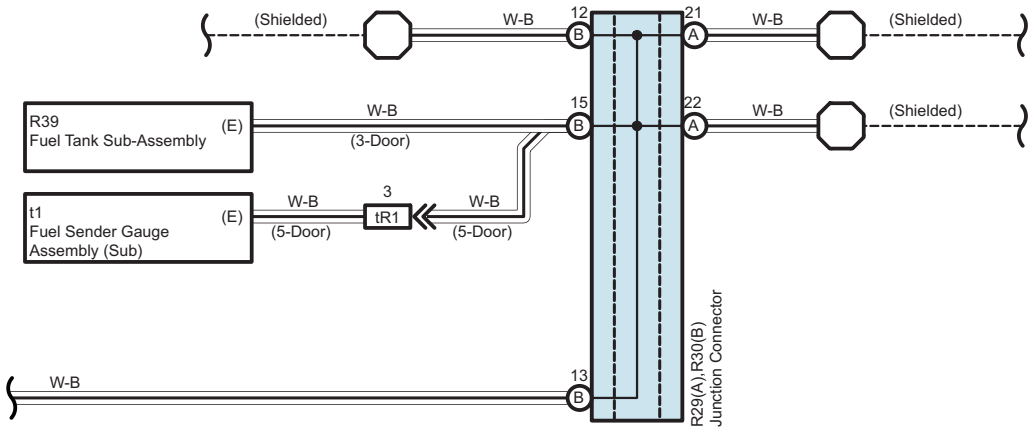

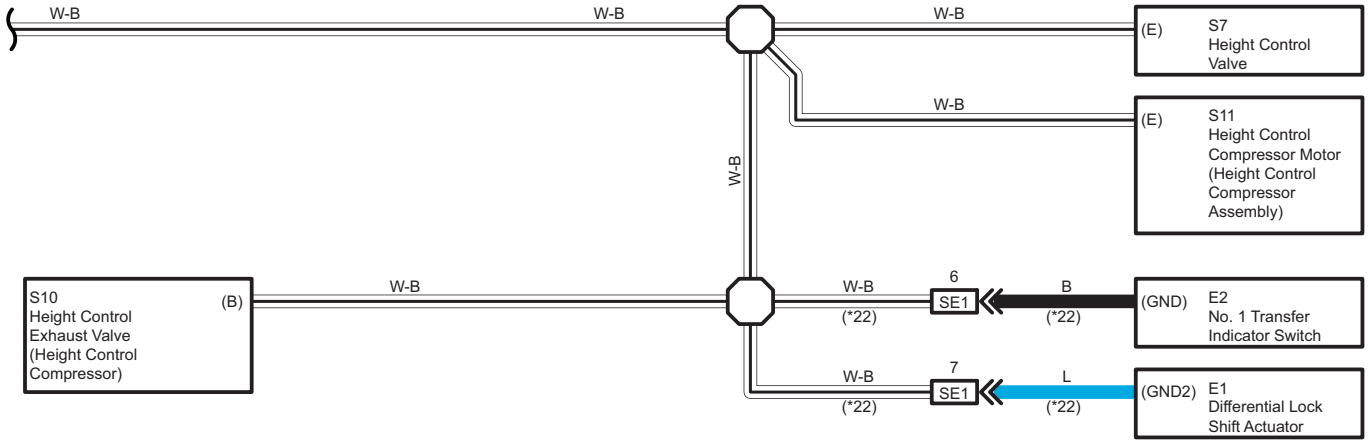

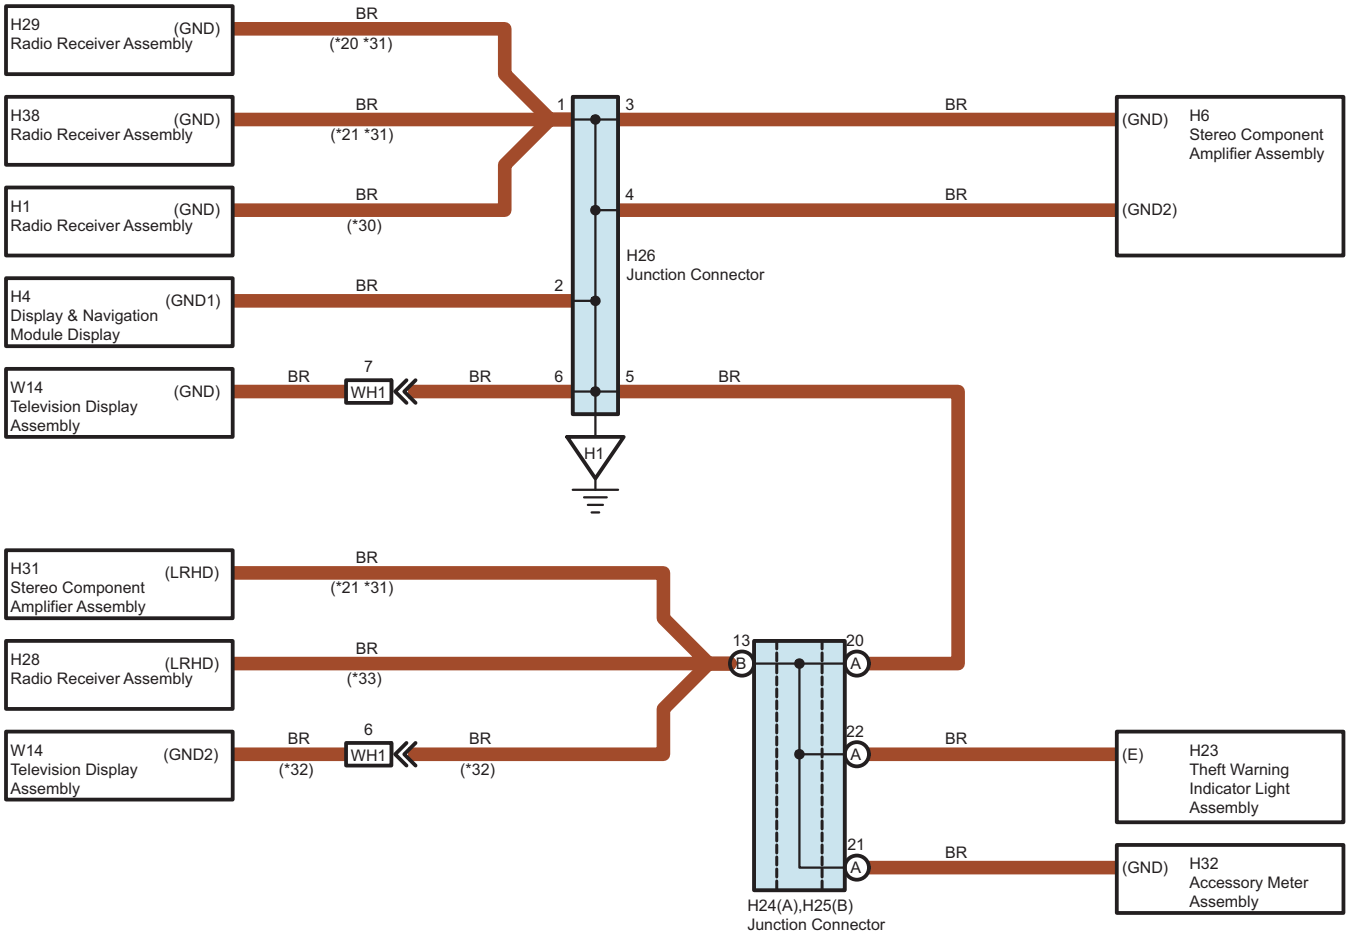
H29
(GND)
Radio Receiver Assembly
BR
(*20 *31)
H38
(GND)
Radio Receiver Assembly
BR
(*21 *31)
H1
(GND)
Radio Receiver Assembly
BR
(*30)
H4
(GND1)
Display & Navigation Module Display
BR
W14
(GND)
Television Display Assembly
BR
7
WH1
BR
6
1
2
3
4
5
BR
BR
BR
H26
Junction Connector
H1
(GND)
H6
Stereo Component Amplifier Assembly
(GND2)
H31
(LRHD)
Stereo Component Amplifier Assembly
BR
(*21 *31)
H28
(LRHD)
Radio Receiver Assembly
BR
(*33)
W14
(GND2)
BR
(*32)
6
WH1
BR
(*32)
13
B
20
A
22
A
21
A
BR
BR
(E)
H23
Theft Warning Indicator Light Assembly
(GND)
H32
Accessory Meter Assembly
H24(A),H25(B)
Junction Connector

A47
Gray




90980-10945

A48
Gray




90980-10946

A68
Dark Gray

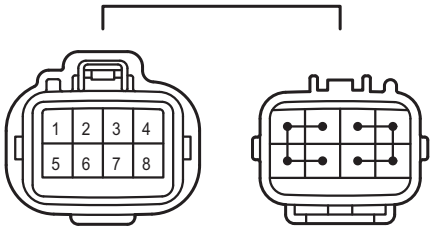


90980-10891

A70
White

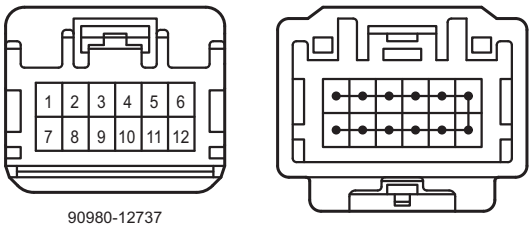


90980-12737

C48
White

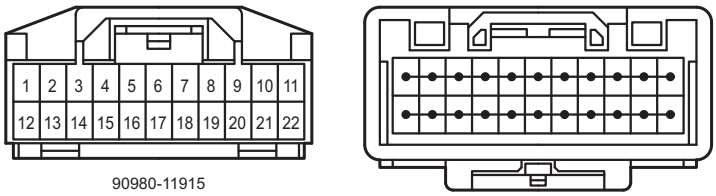


90980-11915

C136
White

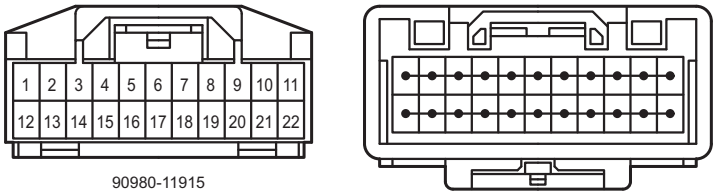


90980-11915

G79
White

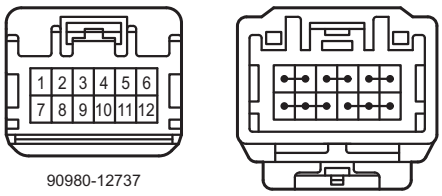


90980-12737

G80
White

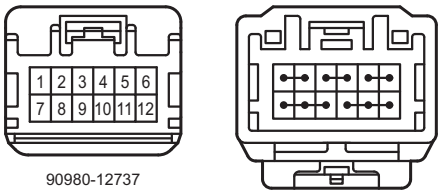


90980-12737

G81
White

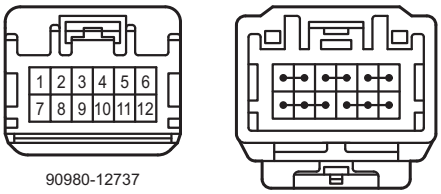


90980-12737

G82
White

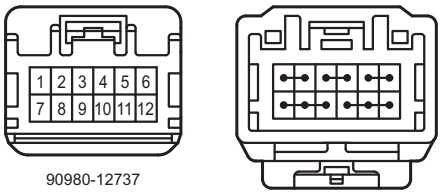


90980-12737

G92
White

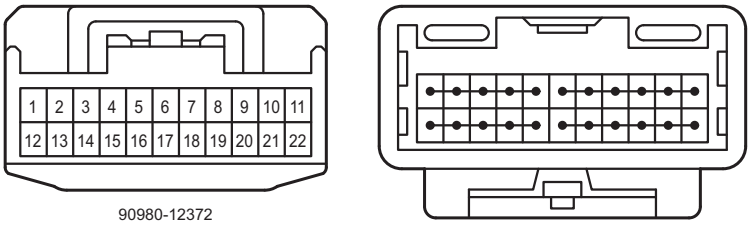


90980-12372

G104
White

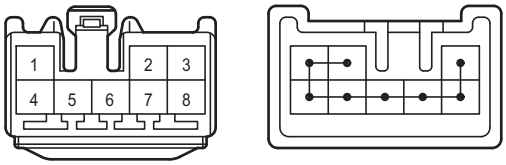


90980-11686

G105
White

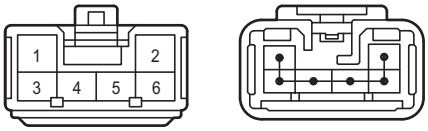


90980-10976

G106
White

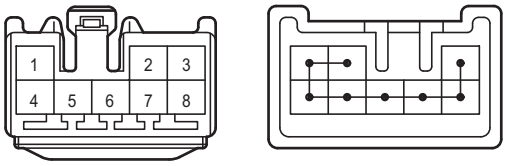


90980-11686

G126
Black

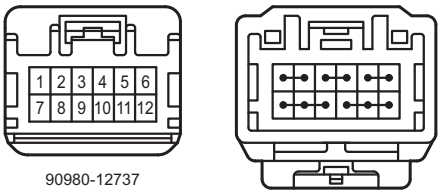


90980-12737

G127
Black

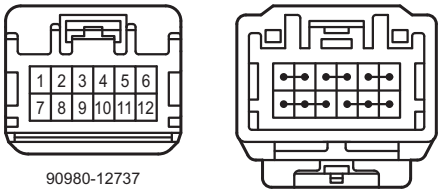


90980-12737

G128
Black

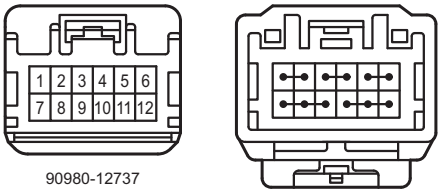


90980-12737

G129
Black

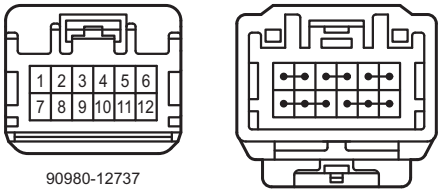


90980-12737

G140
Black

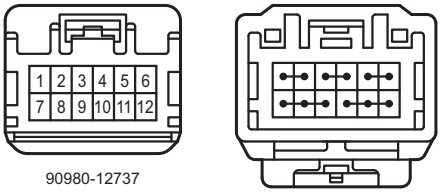


90980-12737

G141
Black

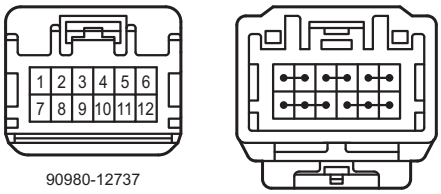


90980-12737

G143
Black

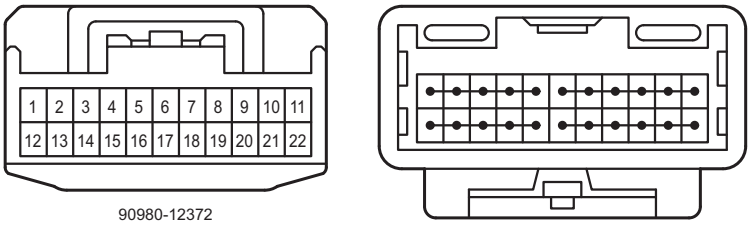


90980-12372

H24
White

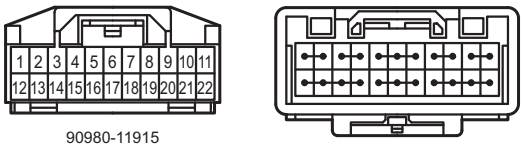


90980-11915

H25
White

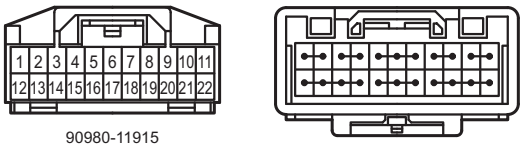


90980-11915

H26
White

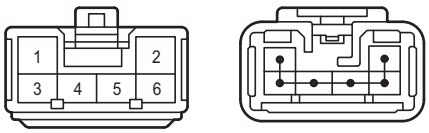


90980-10976

Q23
White

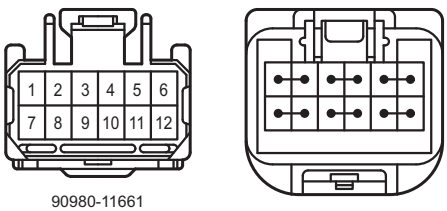


90980-11661

Q24
White

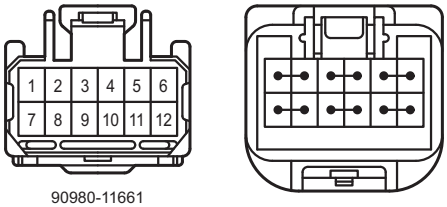


90980-11661

R27
Dark Gray

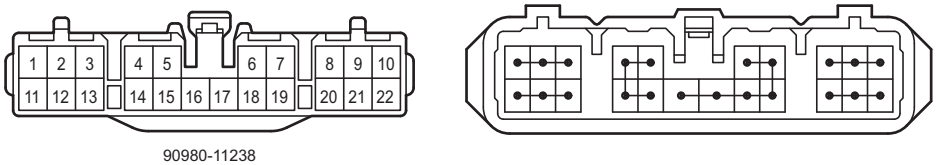


90980-11238

R28
White

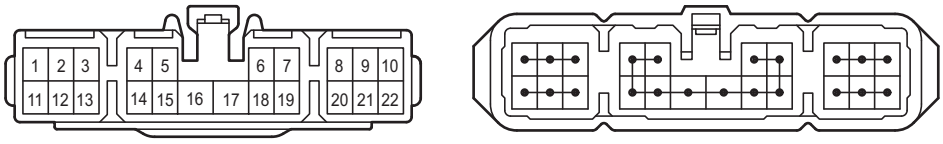


90980-10875

R29
Blue

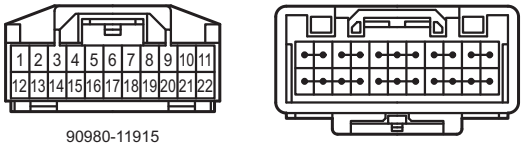


90980-11915

R30
Blue

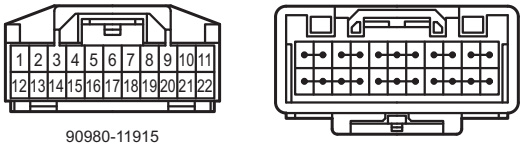


90980-11915

R31
White

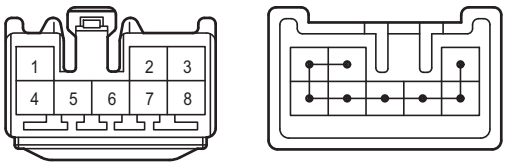

90980-11686

a9
Black

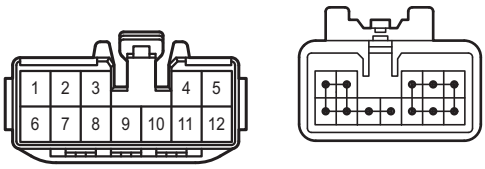


90980-11782

a16
Black




90980-11398

a17
White

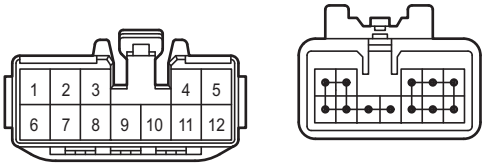

90980-12346

b9
Black

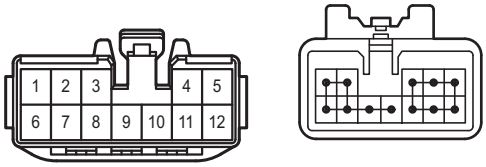


90980-11782

b16
Black




90980-11398

b17
White

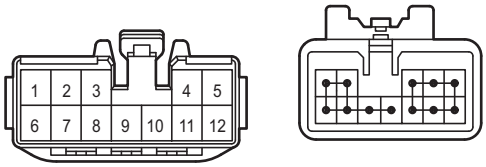


90980-12346

d7
Black

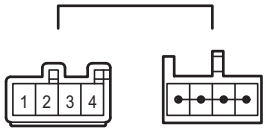


90980-11398

1 A
White

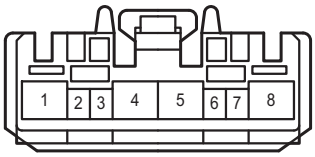


90980-12485

1 B
White

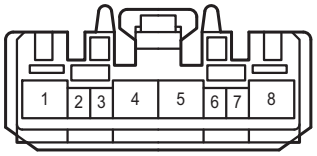


90980-12486

2 D
White

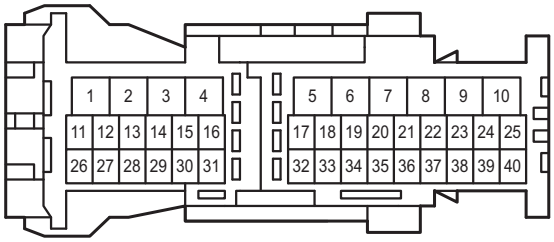


90980-12818

3 A
White

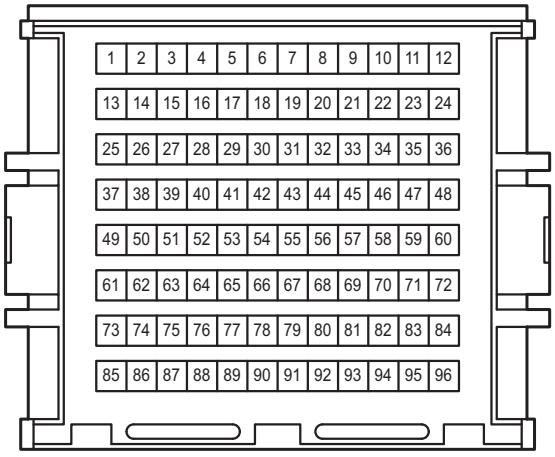


82890-12030

3 B
White

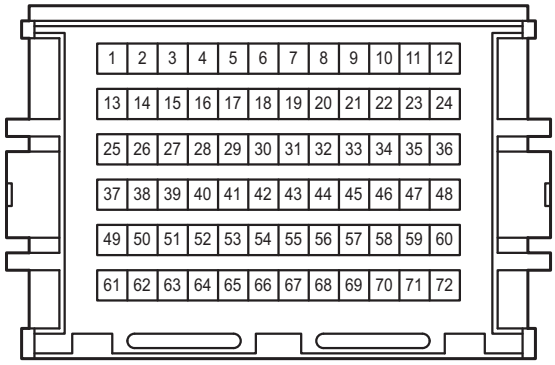


82890-42010

3 C
White

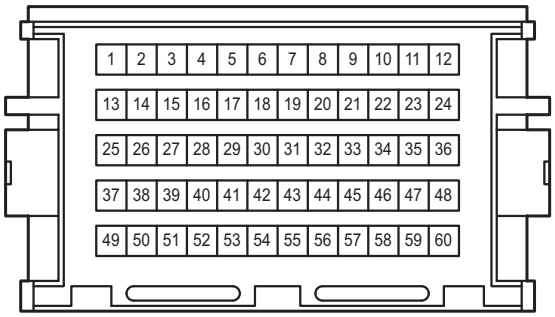


82890-12020

4 A
White

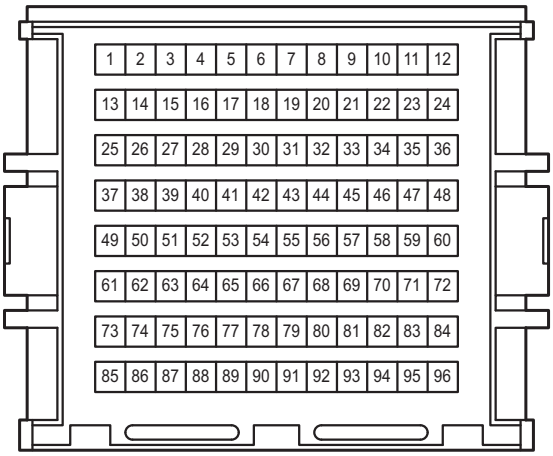


82890-12030

4 B
White

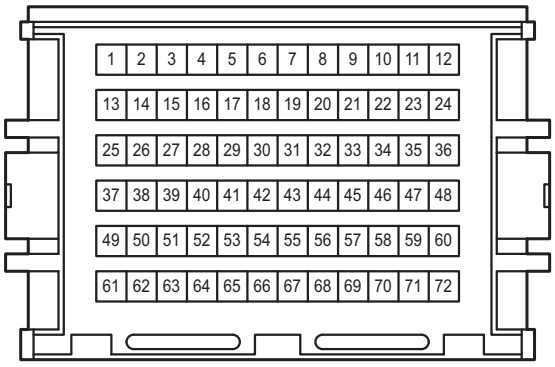


82890-42010

4 C
White

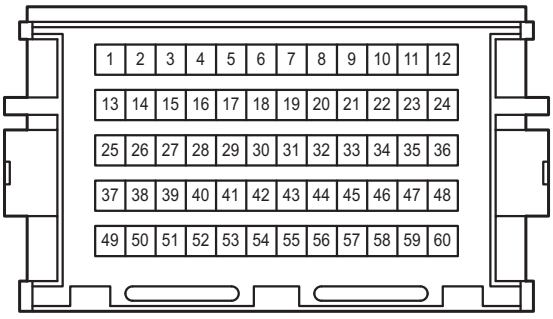


82890-12020

AC1
Black

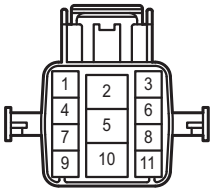

90980-11612

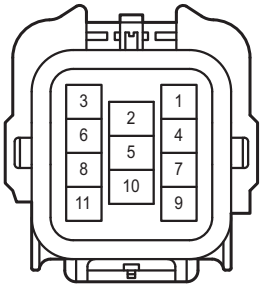

90980-11609

AC2
Dark Gray




90980-11242




90980-11241

AC3

Black

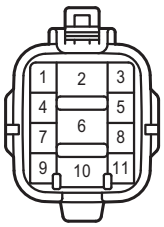


90980-11240

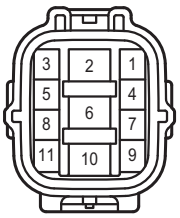


90980-11239

CA1

Black

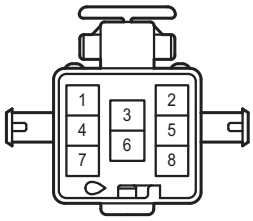


90980-11461

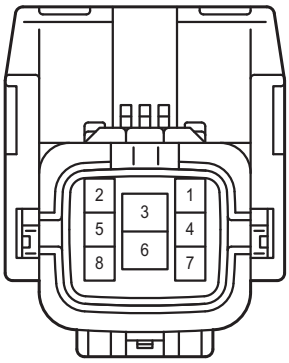


90980-11460

CG1

White

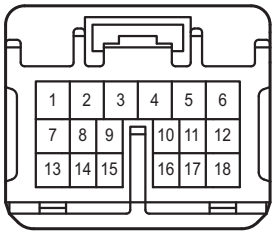


90980-12745

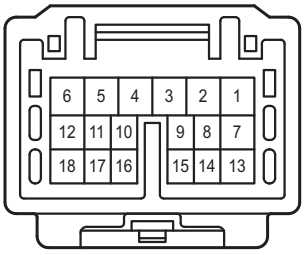


90980-12744

CG2

White

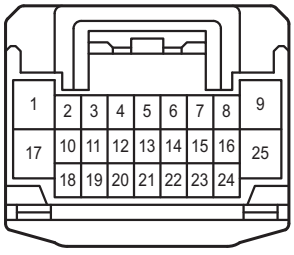


90980-12414

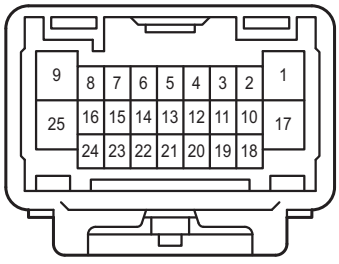


90980-12413

CG3

White

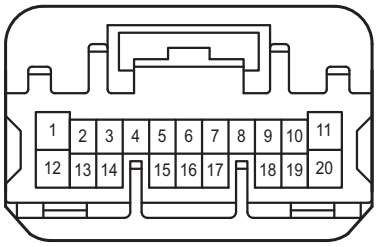


90980-12741

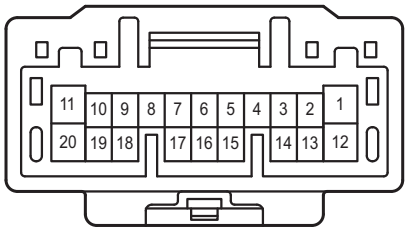


90980-12740

GA1

White

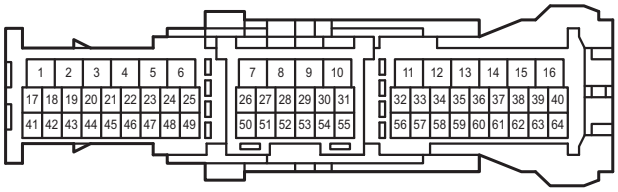


90980-12774

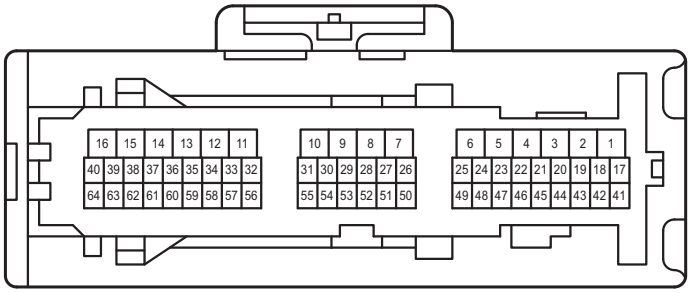


90980-12798

GA6

White

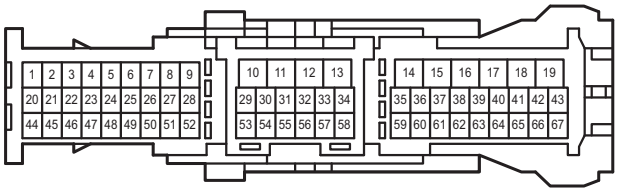


90980-12783

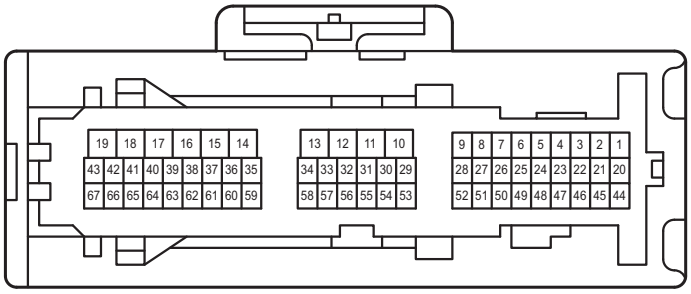


90980-12800

GA7

Black

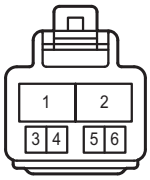


90980-10910

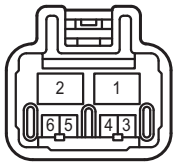


90980-10909

GH1

White

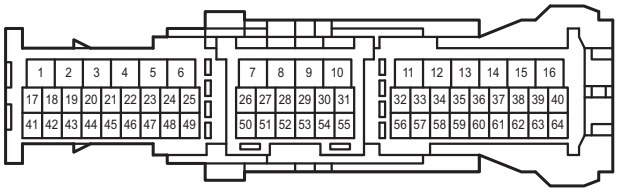


90980-12774

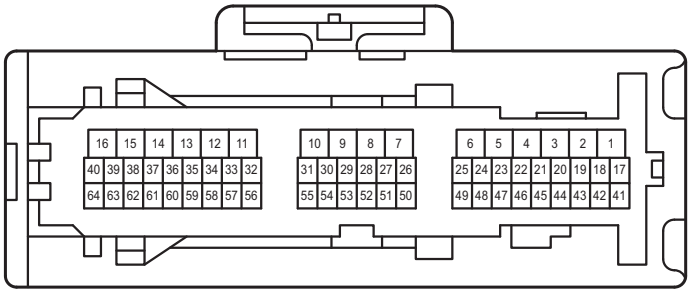


90980-12798

GQ1

White

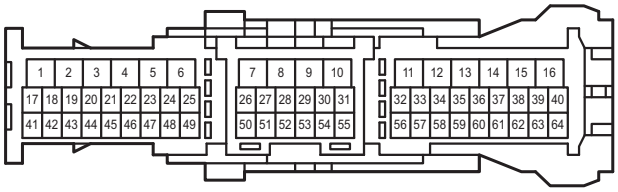


90980-12774

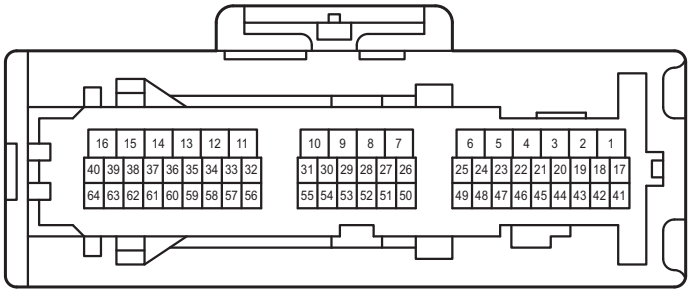


90980-12798

Gi1

White

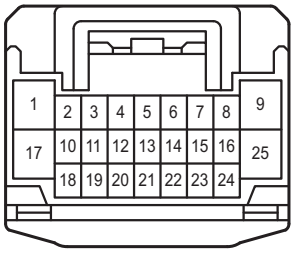


90980-12414

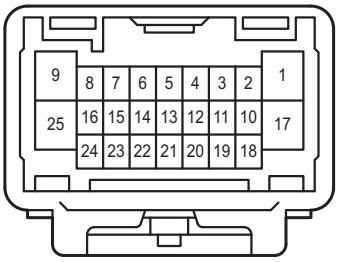


90980-12413

IG1

White

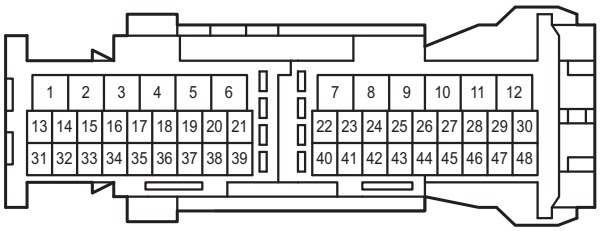


90980-12779

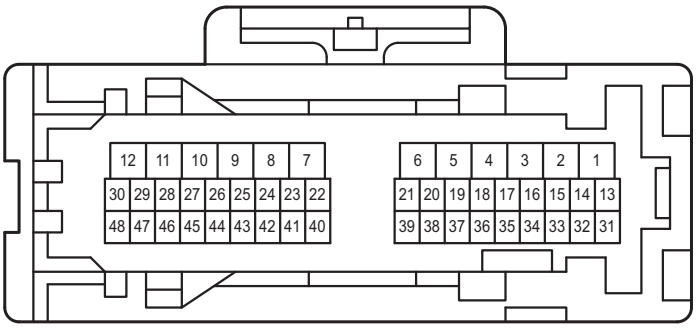


90980-12799

JG3

Black

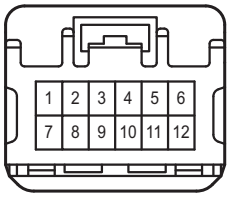


90980-12737

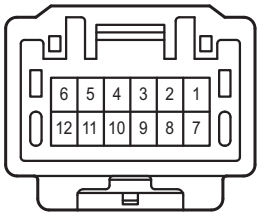


90980-12736

KG3

Black

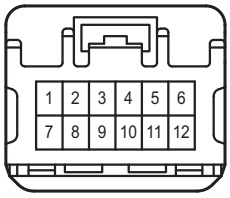


90980-12737

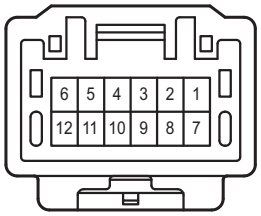


90980-12736

LQ1

White

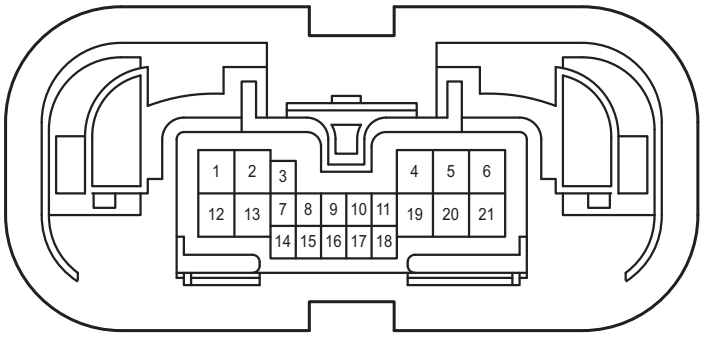


90980-12671

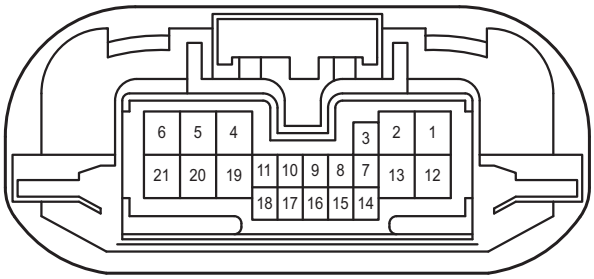


90980-12670

MR1

White

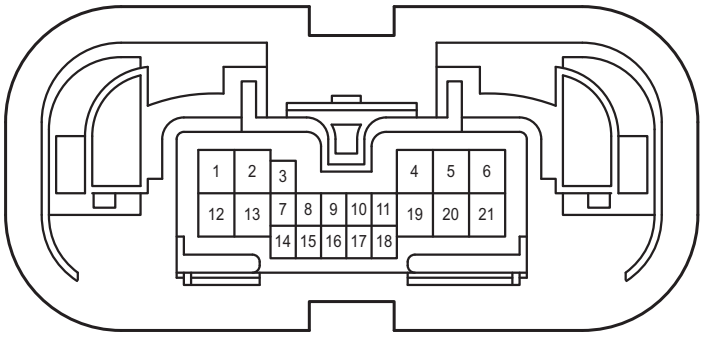

90980-12671

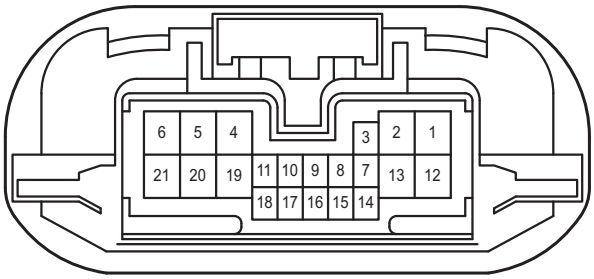


90980-12670

NJ1

White



90980-12368

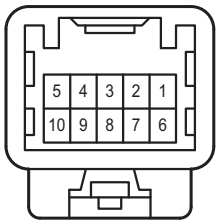


90980-12367

OK1

White



90980-12368

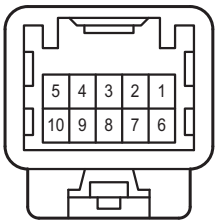

90980-12367

QP1

Gray




90980-11075




90980-11073

Qa1

White

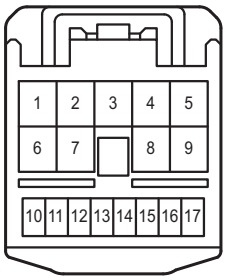


90980-12374

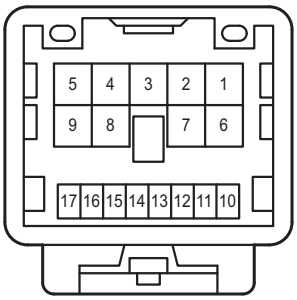


90980-12373

Qc1

White

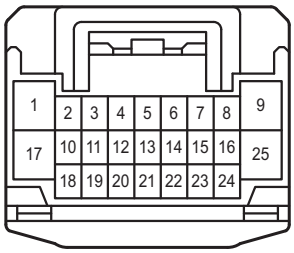

90980-12414

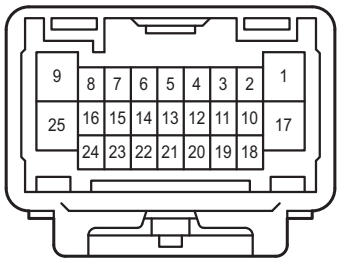

90980-12413

RP1

Gray




90980-11075




90980-11073

RQ1

White

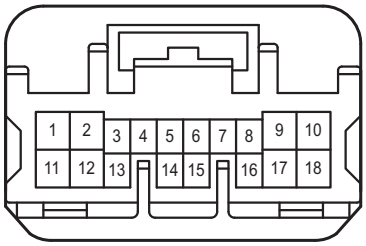


90980-12739

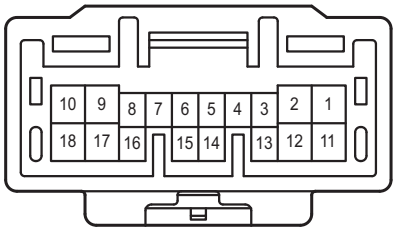


90980-12738

RS1

Black

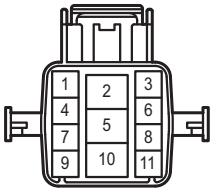

90980-11612

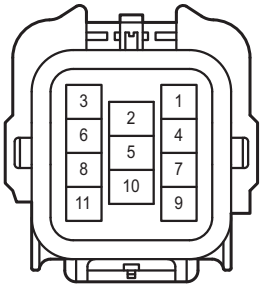

90980-11609

RV1

White




90980-10869



90980-10868

Rb1

White

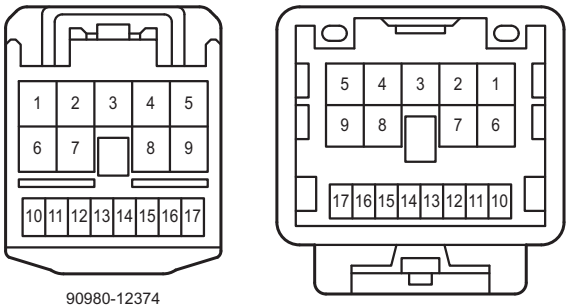


90980-12374

90980-12373

Rd1

White

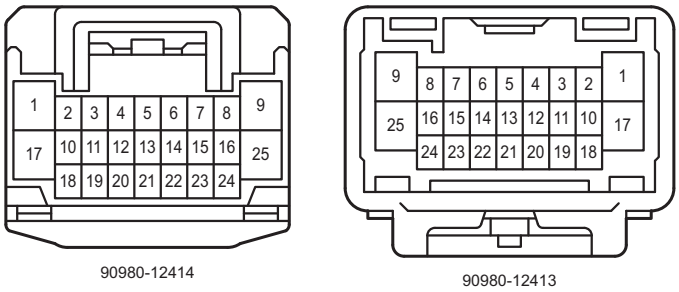


90980-12414

90980-12413

SE1

Gray

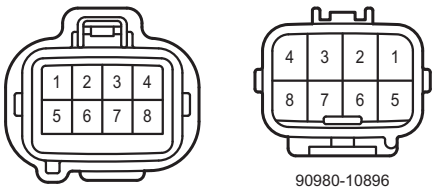


90980-10897

90980-10896

SR2

White

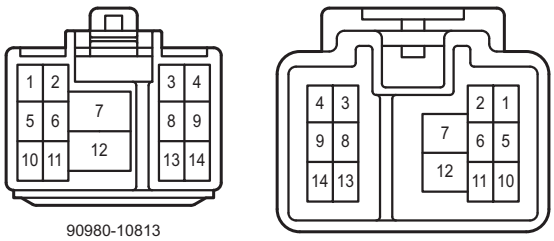


90980-10813

90980-10812

SR3

White

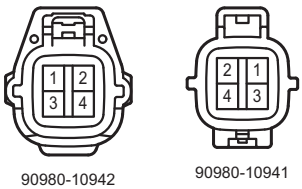


90980-10942

90980-10941

TG1

White

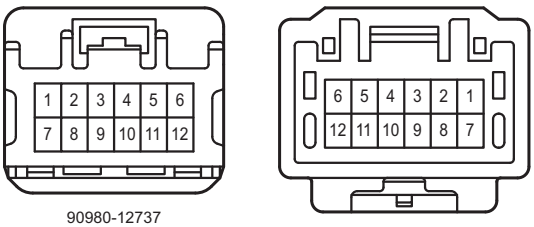


90980-12737

90980-12736

UQ1

Gray

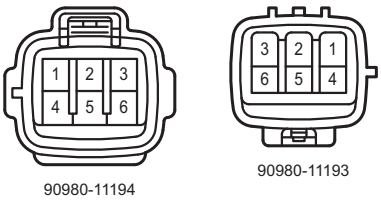


90980-11194

90980-11193

UR1

Gray

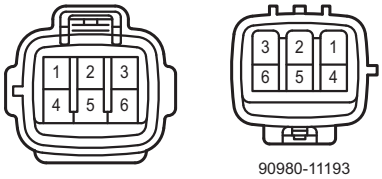


90980-11194

90980-11193

WG1

White

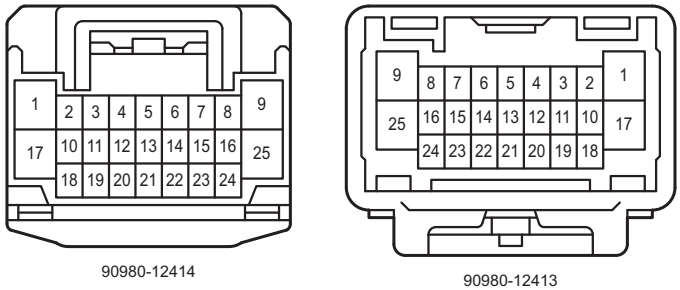


90980-12414


90980-12413

WH1

Gray

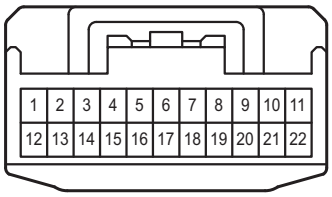


90980-12372

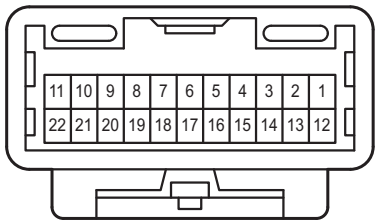


90980-12371

XQ2

White

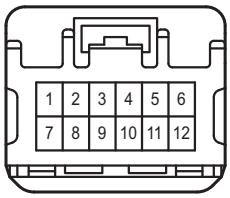


90980-12737

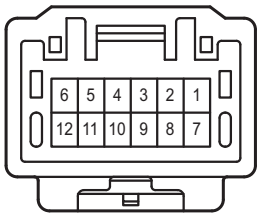


90980-12736

YX1

White

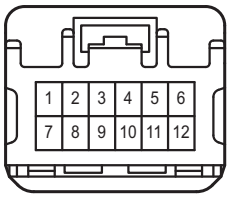


90980-12737

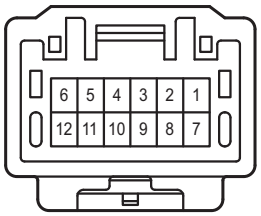


90980-12736

YX2

White

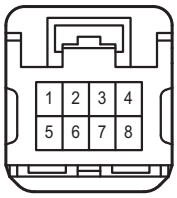

90980-12735

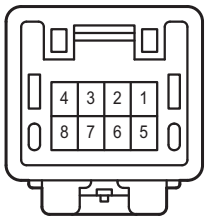


90980-12734

YZ1

White



90980-11003

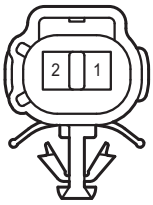

90980-11002

tR1

Gray



90980-11599



90980-11598

zX1

Dark Gray



90980-11194



90980-11193