






A29 Headlight Assembly LH (E)
A32 Headlight Assembly LH (E)
INJ NO.2 Relay (E)
OIL PRESS Relay (-S)
NOISE FILTER (DEF)
AIR SUS Relay (-S)
IG2 Relay
BKUP LP NO.2 Relay (L)
BKUP LP NO.2 Relay (-S)
INV Relay (-S)
EFI MAIN Relay
EDU Relay
GLOW Relay (-S)
A/F Relay
ST Relay (-S)
EFI Relay
STRG HTR Relay (HTR-)
A70 Junction Connector
W-B
(*1)
(*2)
(*6 *3)
(*6 *4)
(*5)
(*7)
(*8 *9)
(*8)
(*8 *10)
(*11,*12)
A27 Engine Hood Courtesy Switch (HWM-) (E)
A60 Headlight Assembly LH (LH E)
A30 Headlight Assembly LH (HI) (E)
A31 Headlight Assembly RH (HI)
A33 Headlight Assembly LH (HI)
A36 Headlight Assembly RH (LO)
A86 Headlight Assembly LH (LO) (E)
B5 Fog Light Assembly LH (E)
A7 Brake Actuator Assembly (GND2)
BA2
A1
* 1 :Except LED Type
* 2 :2TR-FE
* 3 :w/ DPF
* 4 :w/o DPF
* 5 :Gasolin
* 6 :Diesel
* 7 :w/ Heated Steering Wheel System
* 8 :LED Type
* 9 :Except 1GR-FE Australia
*10 :1GR-FE Australia
*11 :1GR-FE
*12 :1KD-FTV
*13 :w/ Front Fog Light
*14 :Cold Area Spec.
*15 :5L-E


A38
Headlight Cleaner Control Relay
(E)
A30
Headlight Assembly LH
(HI)
A31
Headlight Assembly RH
(HI)
(E)
A34
Headlight Assembly RH
(HI)
A35
Headlight Assembly LH
(LO)
A87
Headlight Assembly RH
(LO)
(E)
B6
Fog Light Assembly RH
(E)
A3
No. 1 Pressure Switch
(-S)
A4
Condenser Fan Motor (With Shroud Blower Assembly)
(E)
A51
Noise Filter (Condenser Fan)
(L)
A61
Headlight Assembly RH
(RH E)
A45
Headlight Assembly RH
(E)
A46
Headlight Assembly RH
(E)
W-B
(*8 *10)
(*8 *9)
(*8)
(*1)
(*13)
BA2
7
A23
Windshield Washer Motor and Pump Assembly
(*14)
A88
Diode (A/C COMP Relay
(*12 *3)
DOME Relay
A54
Stop Light Control Relay Assembly
A11
Brake Pedal Load Sensing Switch
A39
Wireless Door Lock Buzzer
(*7)
S/HTR Relay
PTC NO.1 Relay
PTC NO.2 Relay
FUEL HTR Relay
PTC NO.3 Relay
A22
Windshield Wiper Motor Assembly
(*2)
A68
Junction Connector
(*11,*12)
A47(A),A48(B)
Short Connector
A7
Brake Actuator Assembly
A6
Brake Actuator Assembly
(*2,*15)
(GND1)
(GND2)
A2



A75
Level Warning Switch
(Fuel Filter Assembly)
(E)
W-B
(*6)
A42
Brake Fluid Level
Warning Switch
(Brake Master Cylinder
Reservoir Assembly)
(GND)
W-B
(*11,*12)
A76
Fuel Filter
Warning Switch
(E)
W-B
(*12)
A77
Fuel Heater Assembly
(H-)
W-B
(*75)
W-B
W-B
(*2,*15)
(E)
A44
Brake Fluid Level
Warning Switch
(Brake Master
Cylinder Reservoir
Assembly)
W-B
(E)
A53
Front Wiper Deicer
(Windshield Glass)
W-B
(*16)
(E1)
A58
Headlight Swivel
ECU Assembly
W-B
C43
Transfer Shift
Actuator Assembly
(GND)
(GND1)
W-B
C46
Engine Oil Level Sensor
(E)
C44
Air Pump Assembly
(Bank 1)
(GND)
C45
Air Pump Assembly
(Bank 2)
(GNDL)
A18
Inlet Air Pump
(APHG)
(GND)
BR
9
AC1
BR
W-B
10
AC1
W
W
A16
Air Injection
Control Driver
(E)
BR
2
AC1
BR
(*11)
(*11)
C1
(*11)
(GND)
C12
Ignition Coil
Assembly No. 6
(GND)
C11
Ignition Coil
Assembly No. 5
(GND)
C10
Ignition Coil
Assembly No. 4
(GND)
C9
Ignition Coil
Assembly No. 3
(GND)
C8
Ignition Coil
Assembly No. 2
(GND)
C7
Ignition Coil
Assembly No. 1
BR
(E1)
C36
ECM
(GND)
C10
Ignition Coil
Assembly No. 4
(GND)
C9
Ignition Coil
Assembly No. 3
(GND)
C8
Ignition Coil
Assembly No. 2
(GND)
C7
Ignition Coil
Assembly No. 1
(GND)
C55
Air Switching
Valve Assembly
(IGN)
C68
Noise Filter
(Ignition)
W-B
(*2)
C64
ECM
(E02)
(E01)
C43
Transfer Shift
Actuator Assembly
(GND)
(GND1)
G53
Four Wheel
Drive Control ECU
(TL1)
10
CG2
C3
(*2)



G119
Driving Support ECU Assembly
(GND)
G6
Combination Meter Assembly
(E2)
G48
DLC3
(SG)
C64
ECM
(E1)
(ME01)
C63
ECM
(E04)
(E03)
(SGND)
A15
Millimeter Wave Radar Sensor Assembly
(ECC)
G40
Spiral Cable Sub-Assembly
(GND)
R41
Tire Pressure Warning ECU and Receiver
(E03)
C37
ECM
(E04)
(E05)
(E01)
(E02)
(ME01)
(Shielded)
C48
Junction Connector
C1
C2
(*11)
(*2)
(RHD)(LHD)
(*17)
(*18)
BR
W-B
* 2 :2TR-FE
* 6 :Diesel
*11 :1GR-FE
*12 :1KD-FTV
*15 :5L-E
*16 :w/ Adaptive Front-Lighting System
*17 :w/ Tire Pressure Warning System
*18 :w/ Steering Switch
*75 :w/ Stowing Function


G119
Driving Support ECU Assembly
(GND)
BR
43
3A
67
3A
BR
2
GA1
52
GA1
(RHD)
(LHD)
BR
(SGND)
A15
Millimeter Wave Radar Sensor Assembly
G6
Combination Meter Assembly
(E2)
BR
55
3A
34
3C
BR
(ECC)
G40
Spiral Cable Sub-Assembly
25
3B
BR
70
4A
59
4B
10
4B
BR
(*17)
3
GR3
25
GR1
(RHD)
(LHD)
BR
(*17)
(GND)
R41
Tire Pressure Warning ECU and Receiver
(Shielded)
(*3)
BR
16
17
18
20
22
19
C136
Junction Connector
19
CG2
BR
(Shielded)
(*4)
(*3)
8
AC3
W-B
(*3)
(GND)
A83
Glow Plug Controller
W-B
(E05)
C93
ECM
W-B
(OSVG)
C130
Oil Pressure Switching Valve Assembly
1
AC2
1
AC3
(Shielded)
(*4)
16
18
19
C48
Junction Connector
W-B
(RSC)
C74
Diesel Throttle Body Assembly
W-B
(ME01)
C93
ECM
C93
ECM
(E1)
BR
W-B
(E01)
W-B
(E02)
G48
DLC3
(SG)
BR
2
CG1
BR
W-B
W-B
G69
Transmission Control ECU Assembly
(E1)
BR
1
CG3
BR
BR
(*4)
(GND)
C88
Injector Driver
(E01)
W-B
12
CG3
W-B
BR
(*3)
(GND)
C121
Injector Driver
C4
(*12)

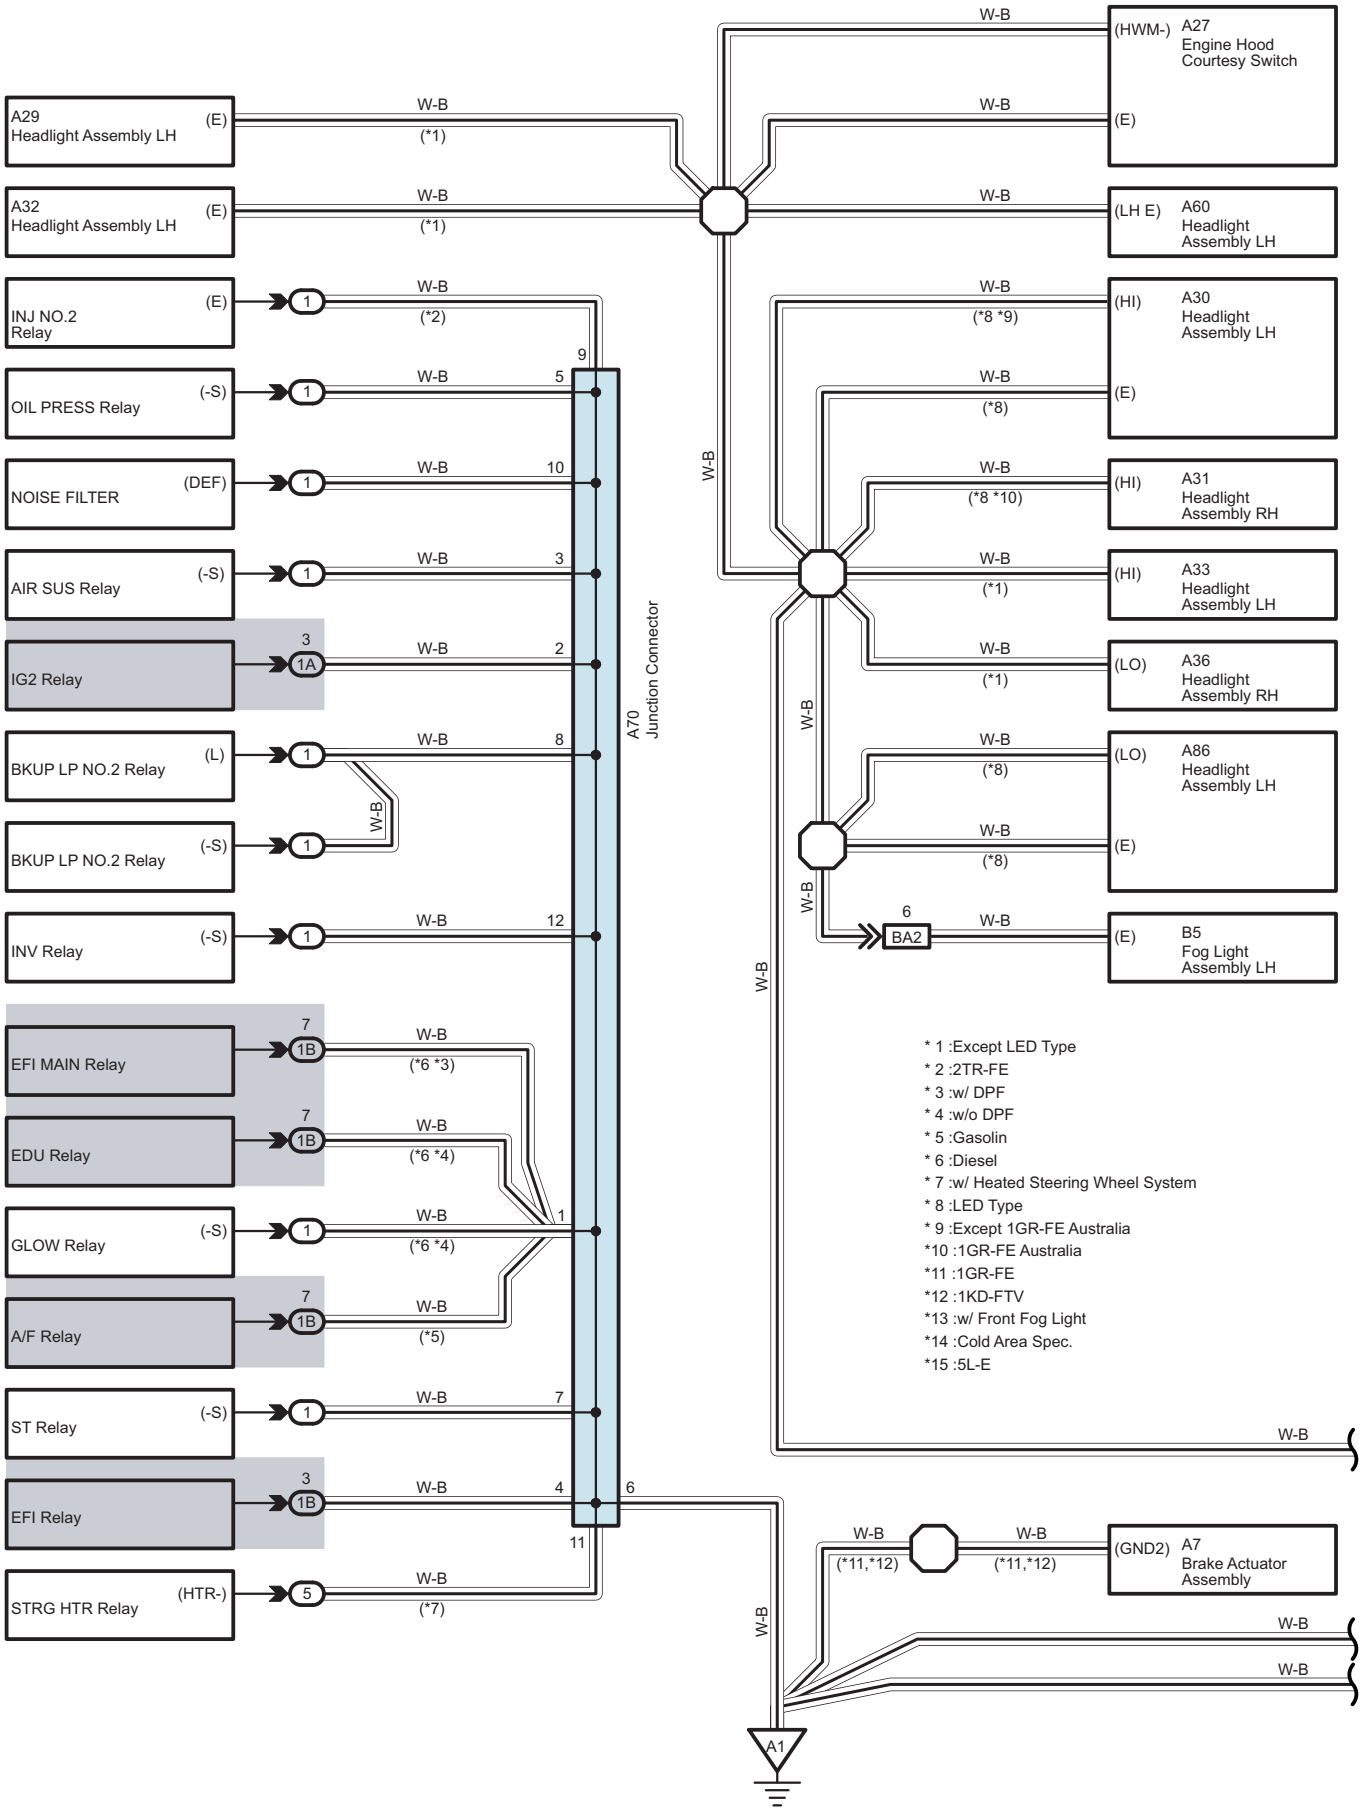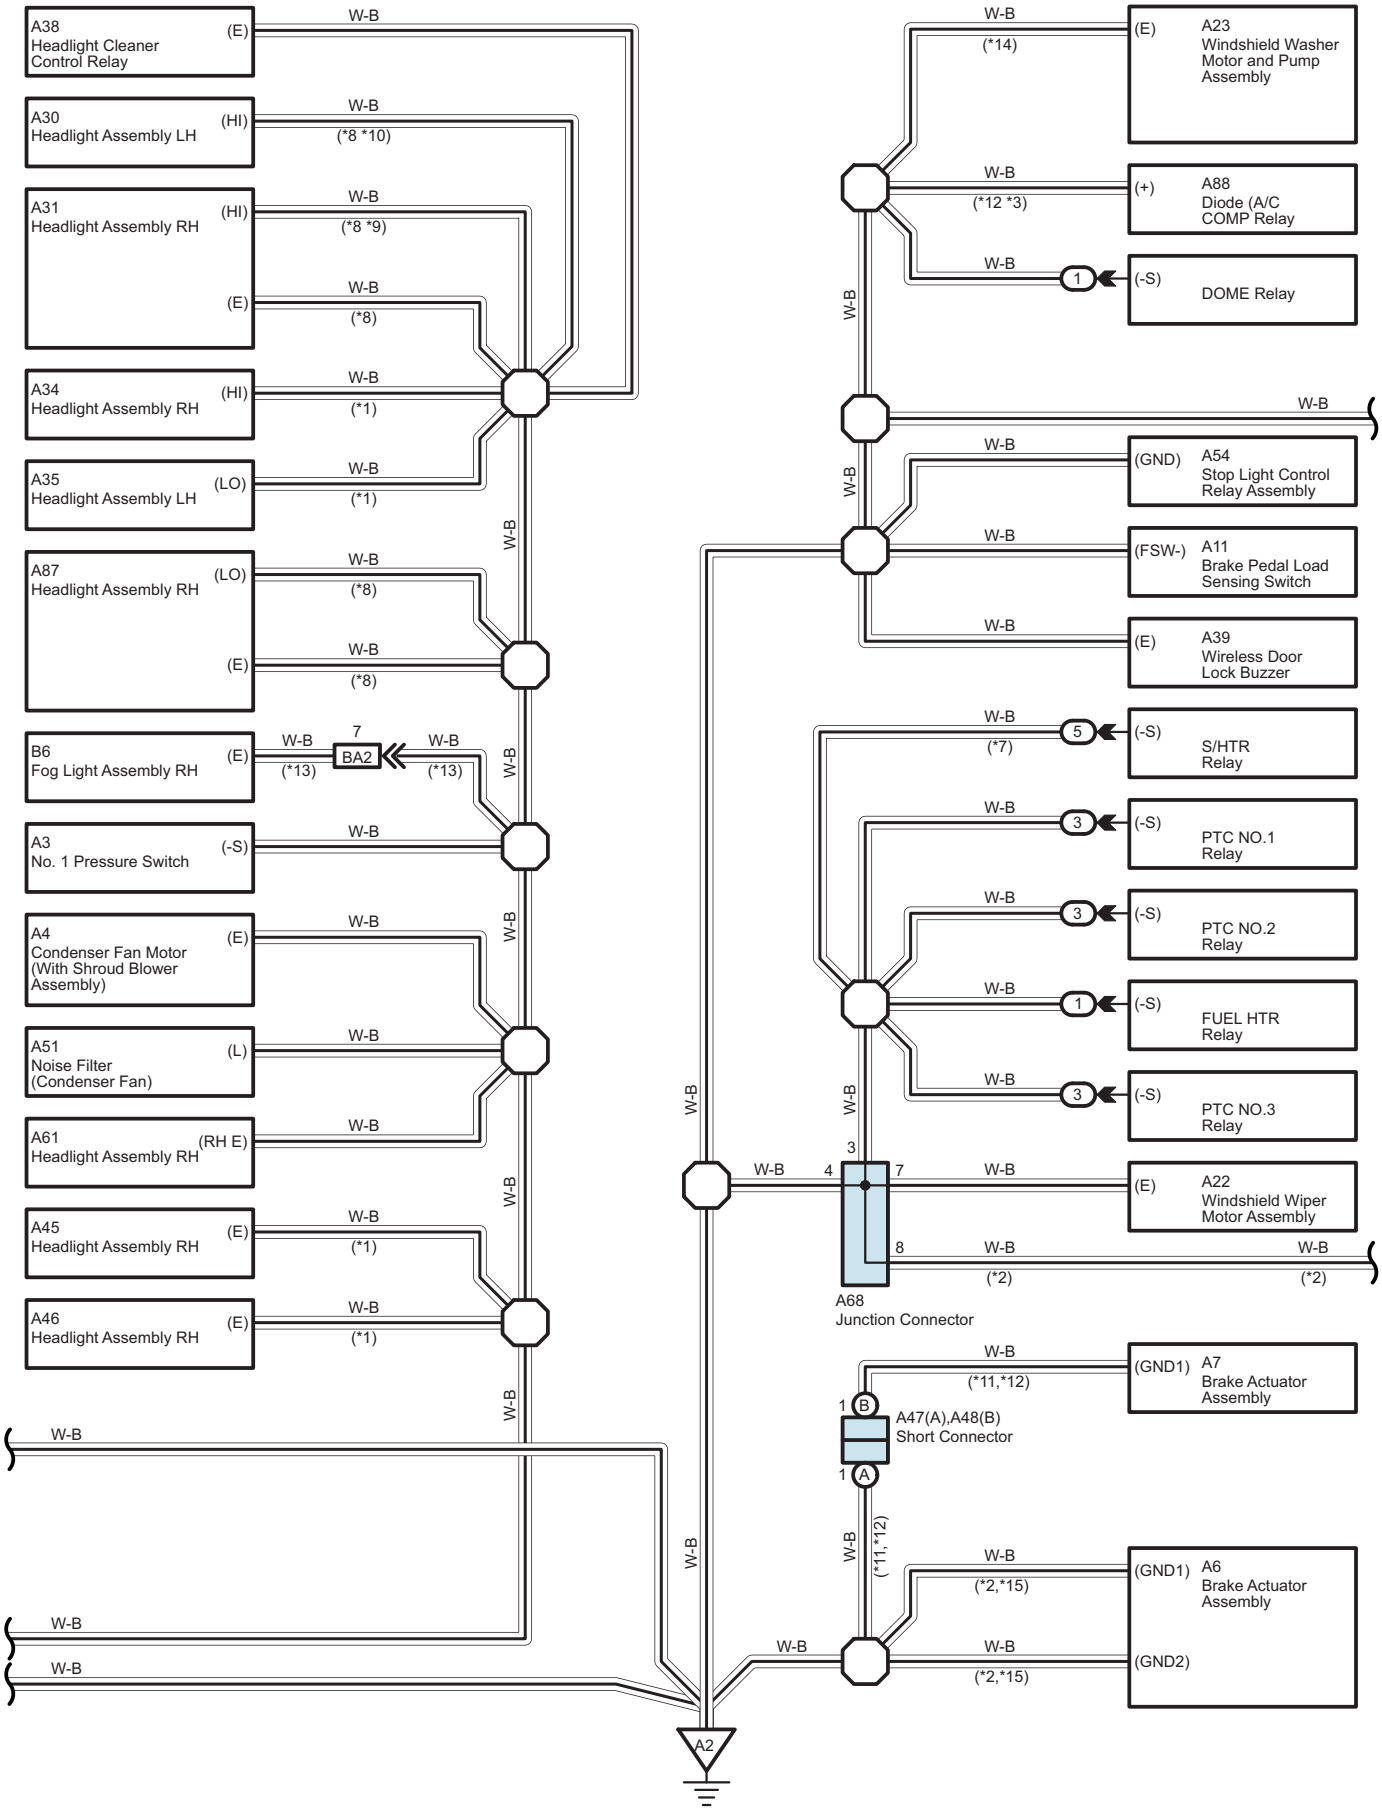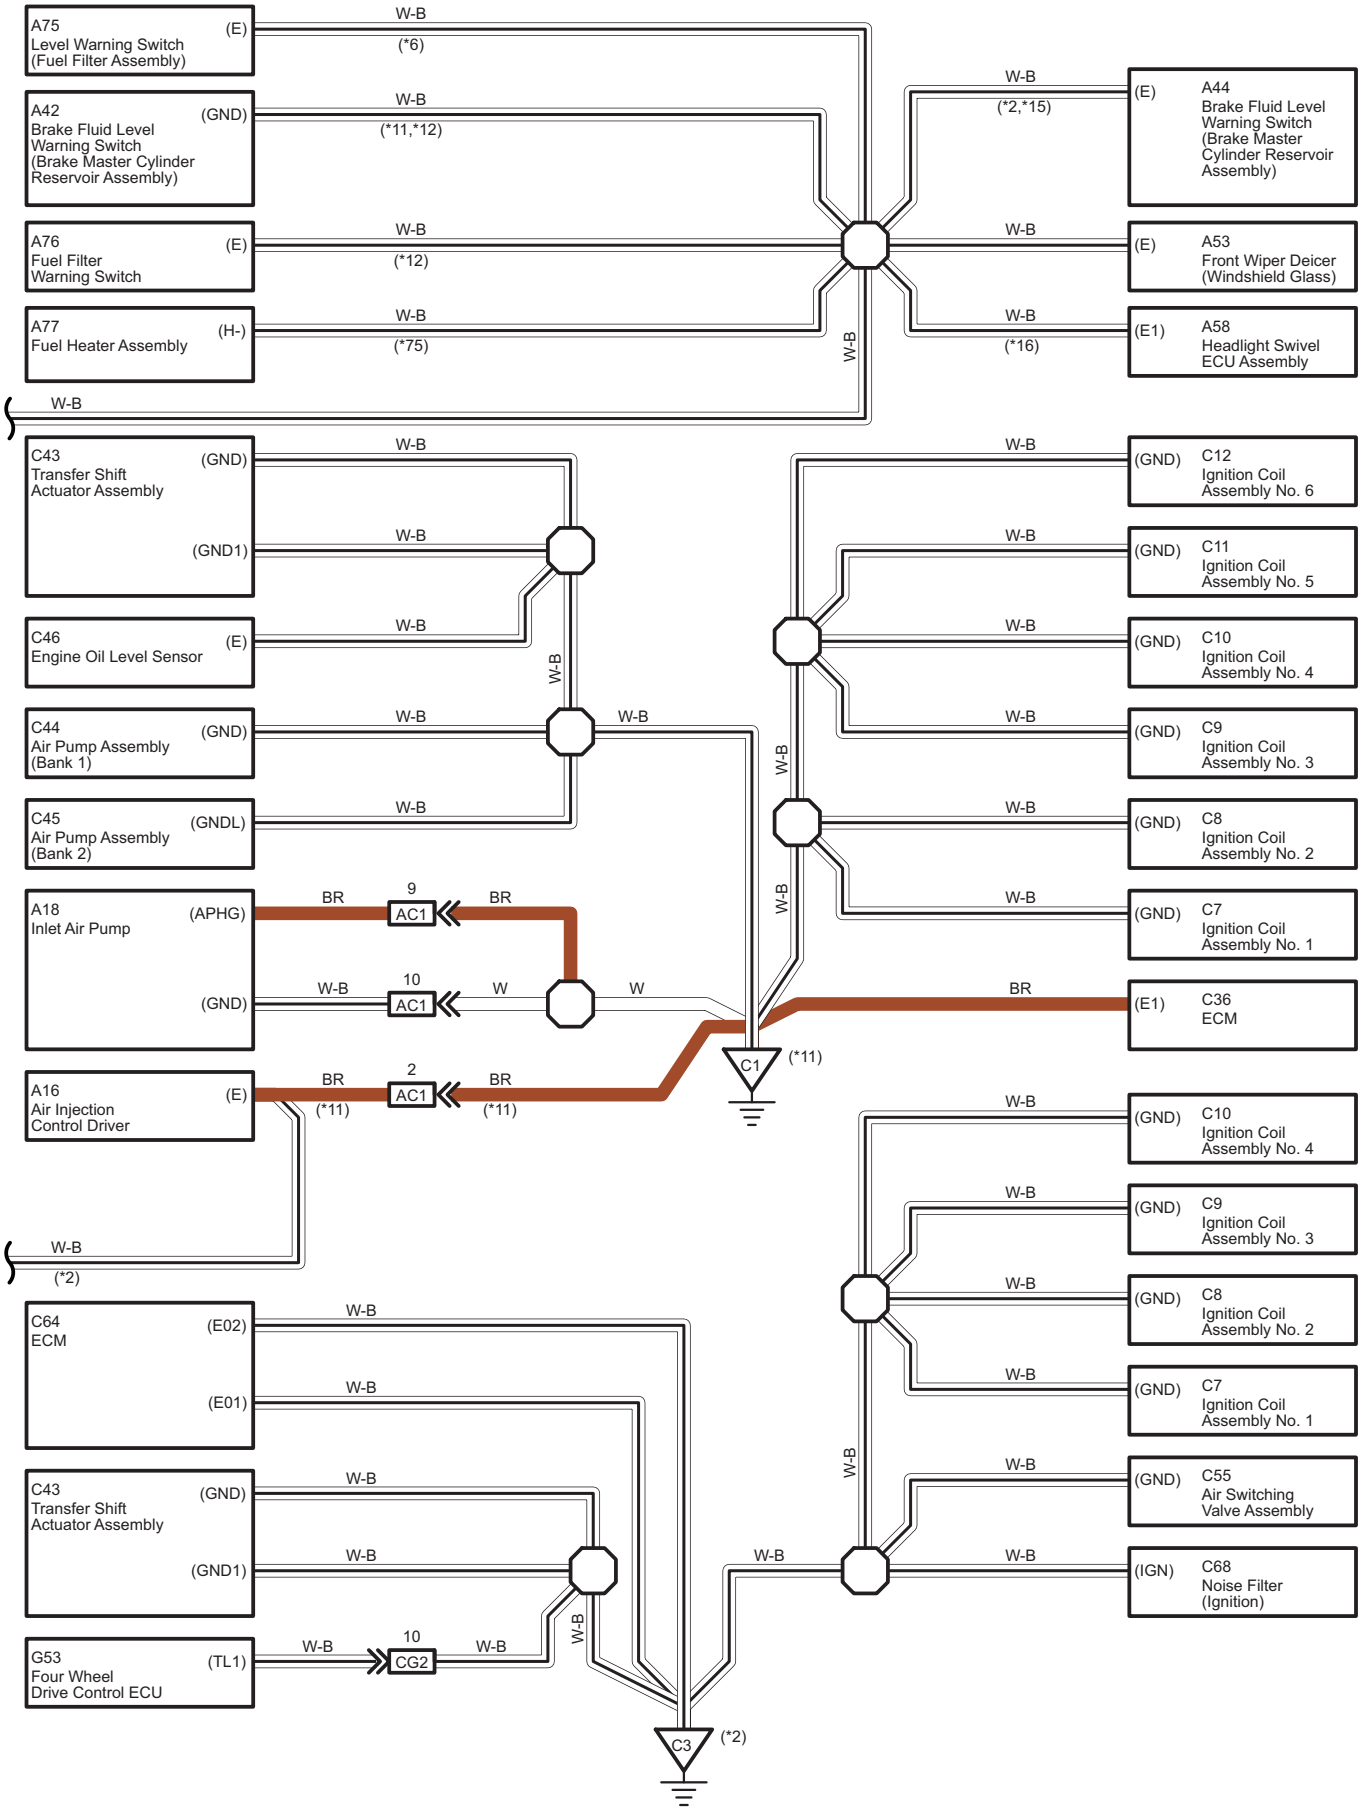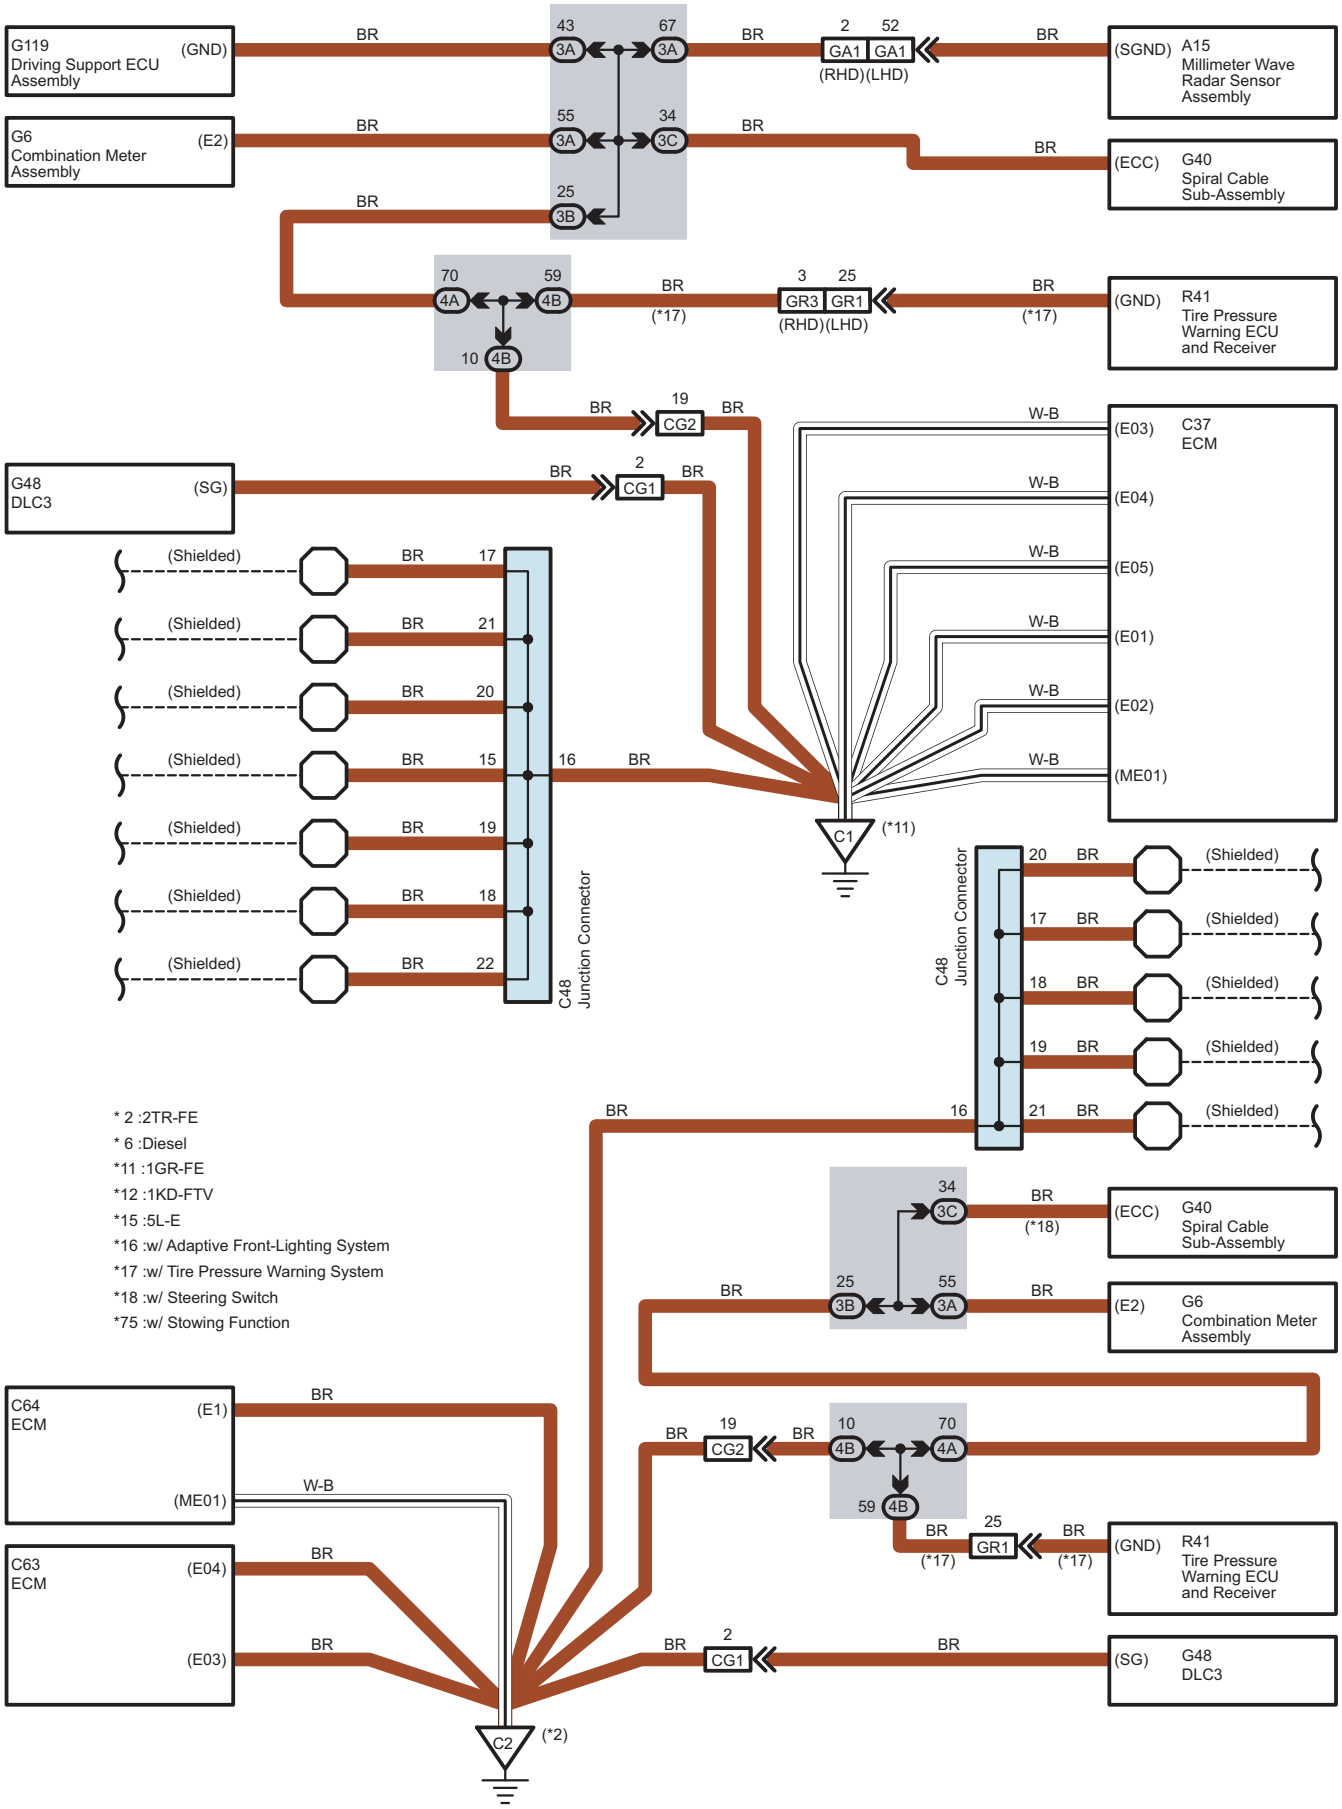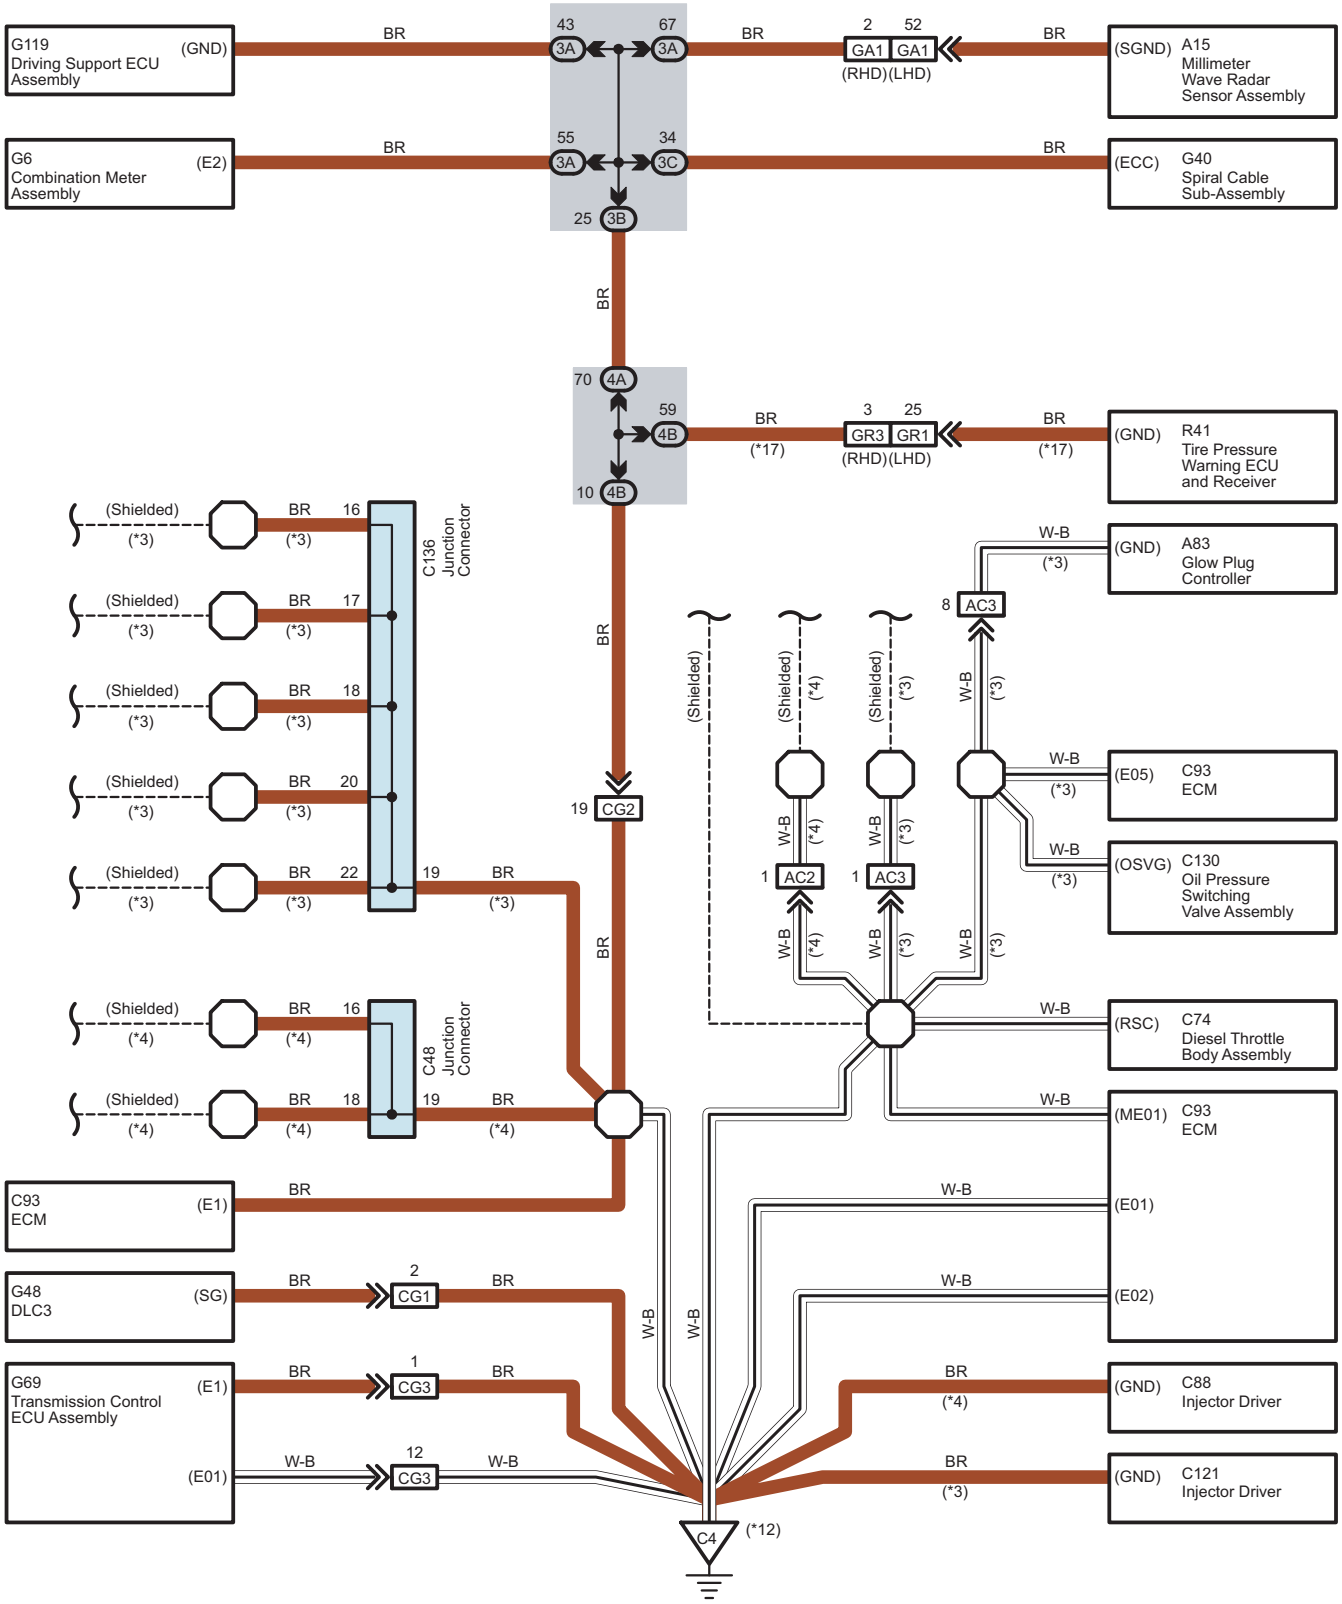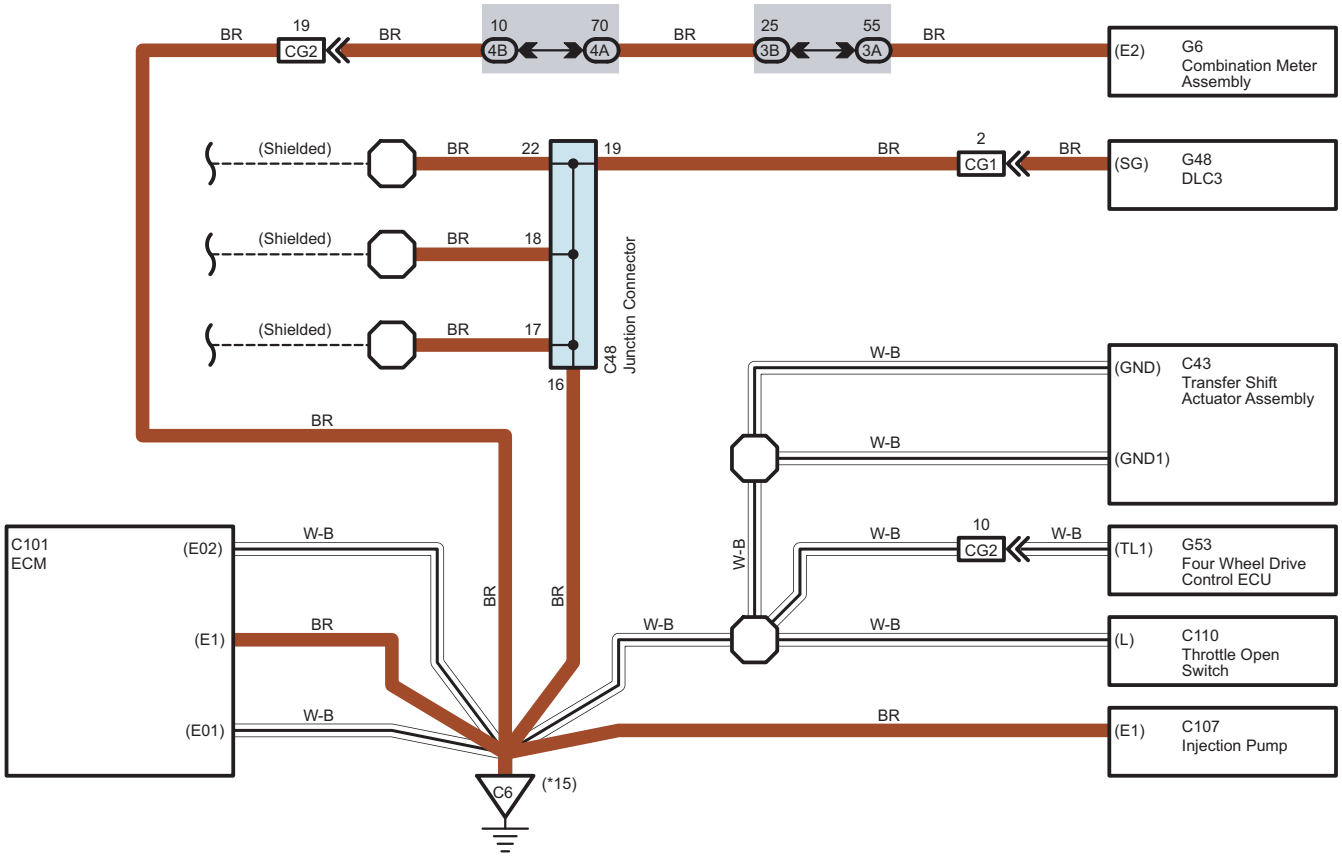



* 3 :w/ DPF
* 4 :w/o DPF
*12 :1KD-FTV
*15 :5L-E
*17 :w/ Tire Pressure Warning System

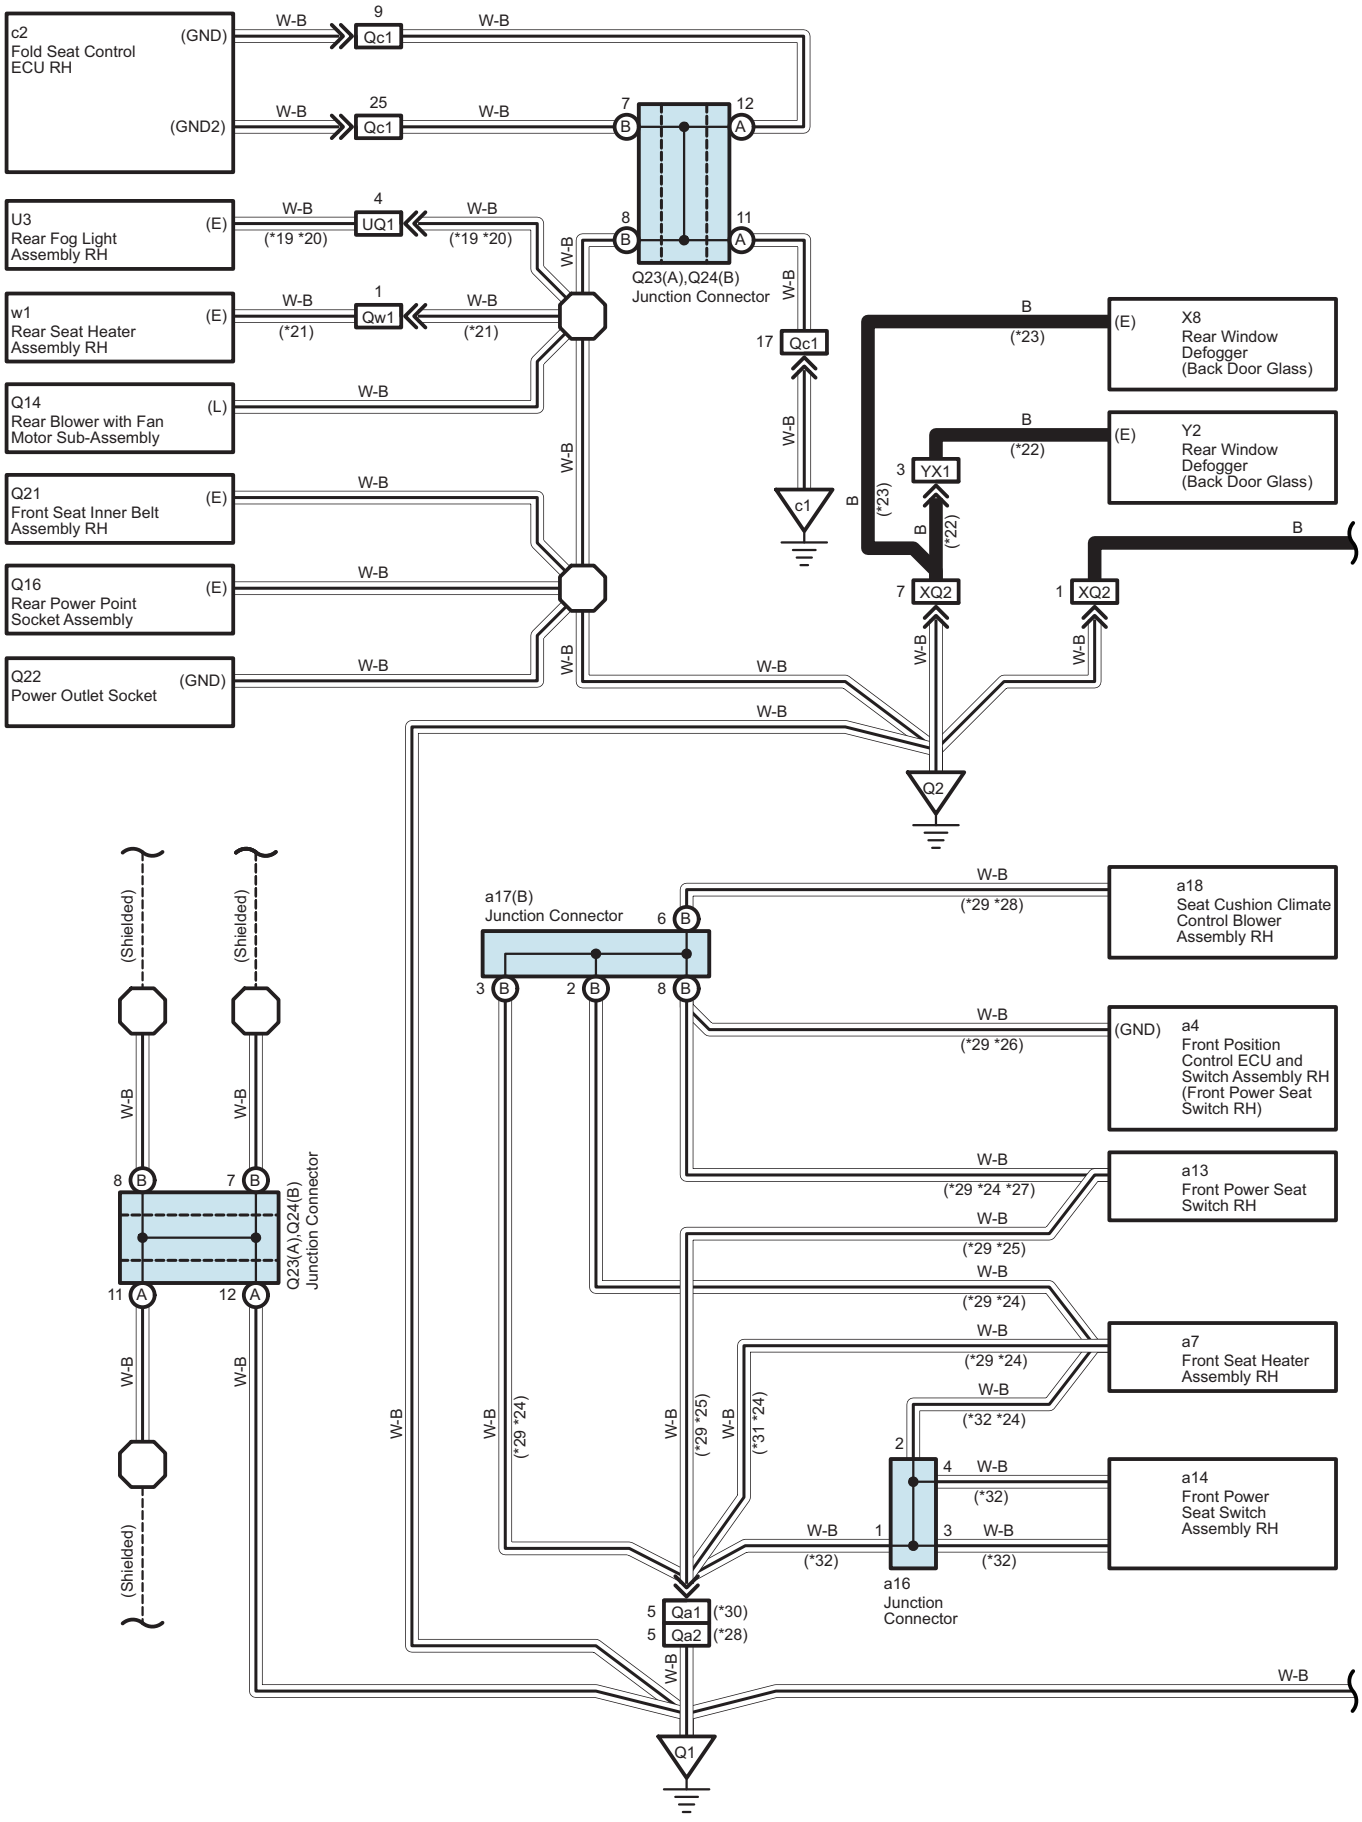

c2
Fold Seat Control ECU RH
(GND)
(GND2)
U3
Rear Fog Light Assembly RH
(E)
w1
Rear Seat Heater Assembly RH
(E)
Q14
Rear Blower with Fan Motor Sub-Assembly
(L)
Q21
Front Seat Inner Belt Assembly RH
(E)
Q16
Rear Power Point Socket Assembly
(E)
Q22
Power Outlet Socket
(GND)
W-B
Qc1
UQ1
Qw1
(*19 *20)
(*21)
Q23(A),Q24(B) Junction Connector
c1
Q2
Q1
XQ2
YX1
B
(*23)
(*22)
(E)
X8
Rear Window Defogger (Back Door Glass)
Y2
Rear Window Defogger (Back Door Glass)
(Shielded)
a17(B) Junction Connector
(*29 *28)
a18
Seat Cushion Climate Control Blower Assembly RH
(*29 *26)
(GND)
a4
Front Position Control ECU and Switch Assembly RH (Front Power Seat Switch RH)
(*29 *24 *27)
a13
Front Power Seat Switch RH
(*29 *25)
(*29 *24)
a7
Front Seat Heater Assembly RH
(*32 *24)
(*32)
a14
Front Power Seat Switch Assembly RH
a16 Junction Connector
Qa1
Qa2
(*30)
(*28)
(*29 *24)
(*29 *25)
(*31 *24)

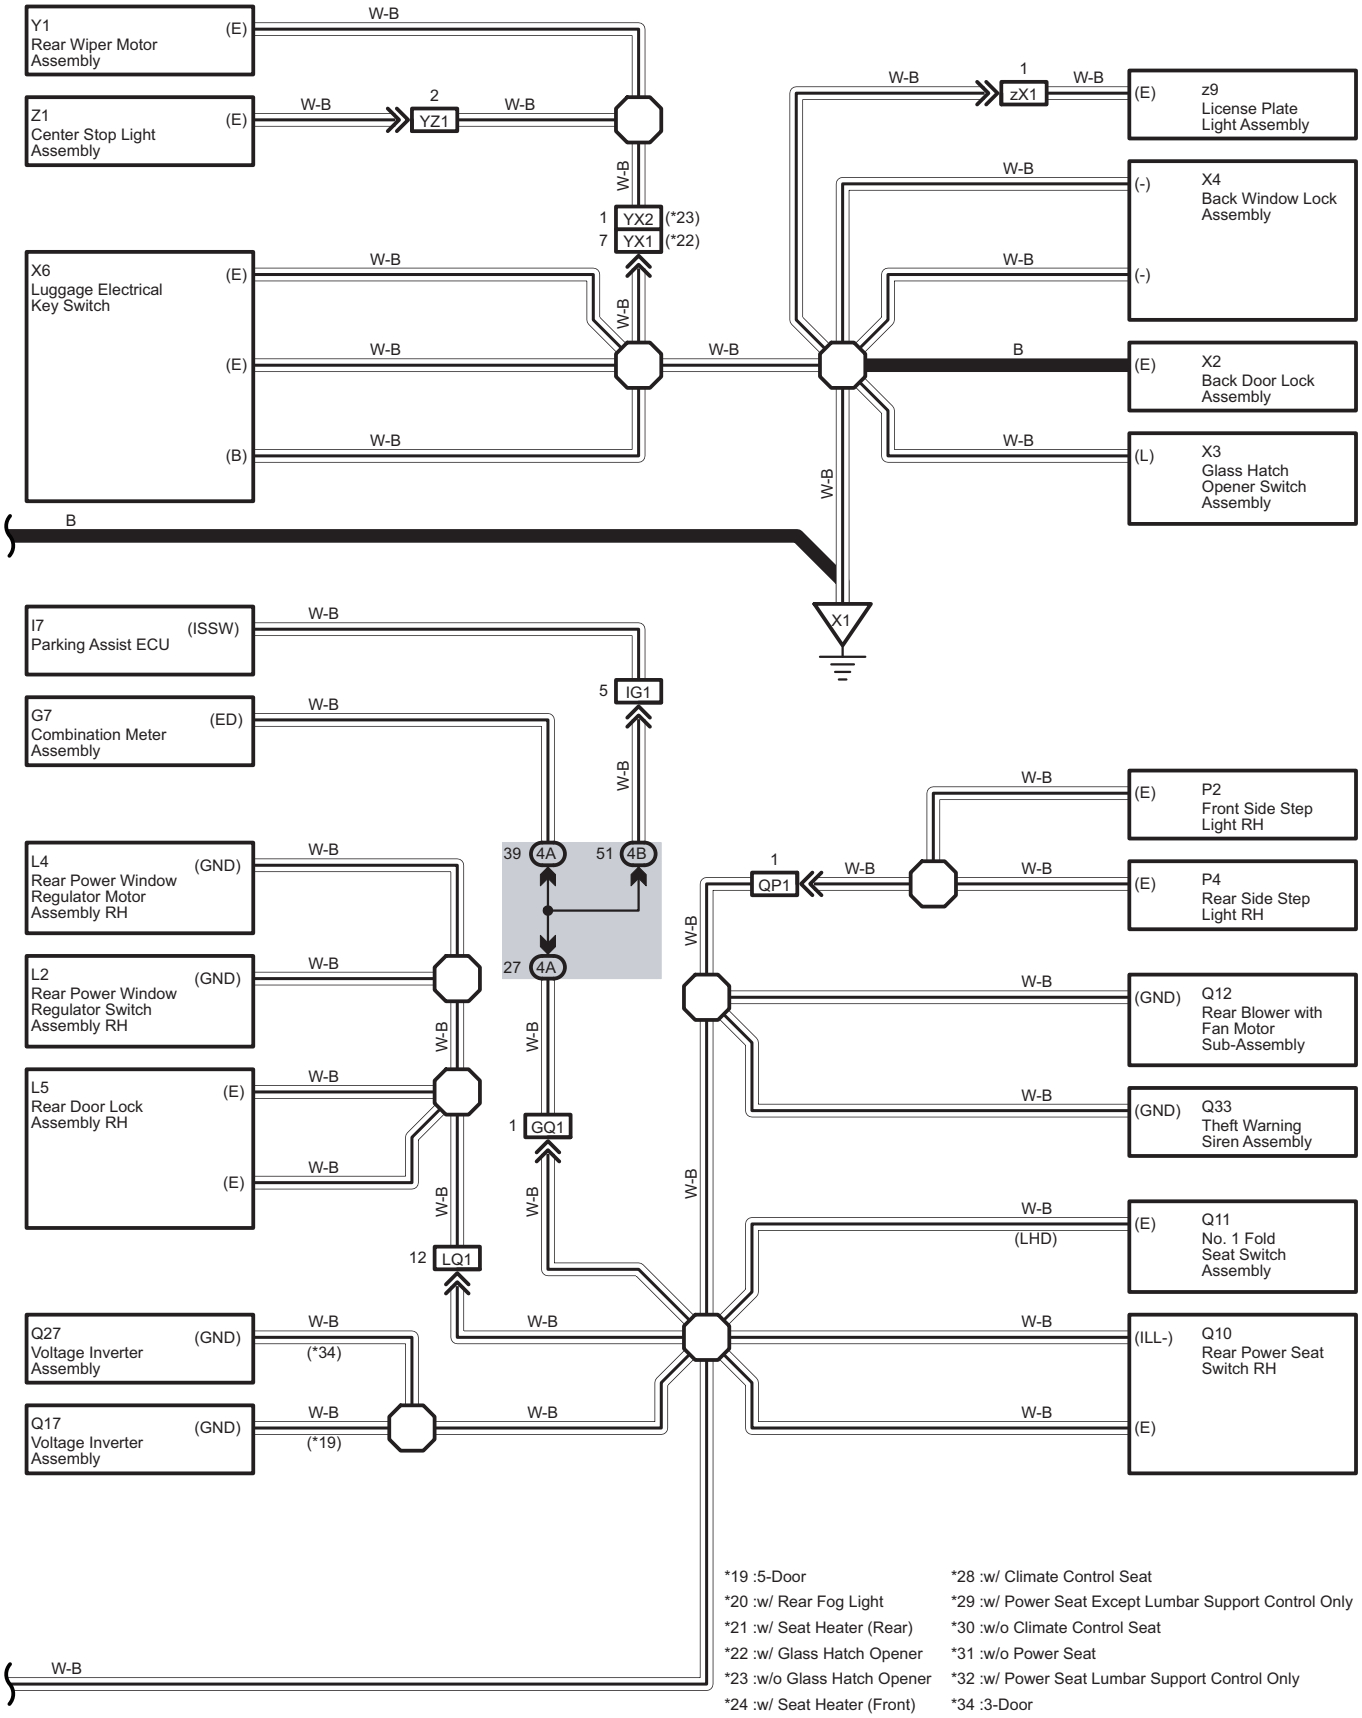



*19 :5-Door
*20 :w/ Rear Fog Light
*21 :w/ Seat Heater (Rear)
*22 :w/ Glass Hatch Opener
*23 :w/o Glass Hatch Opener
*24 :w/ Seat Heater (Front)
*25 :w/o Seat Heater (Front)
*26 :w/ Seat Position Memory
*27 :w/o Seat Position Memory
*28 :w/ Climate Control Seat
*29 :w/ Power Seat Except Lumbar Support Control Only
*30 :w/o Climate Control Seat
*31 :w/o Power Seat
*32 :w/ Power Seat Lumbar Support Control Only
*34 :3-Door
*35 :w/ Multi-Terrain Monitor

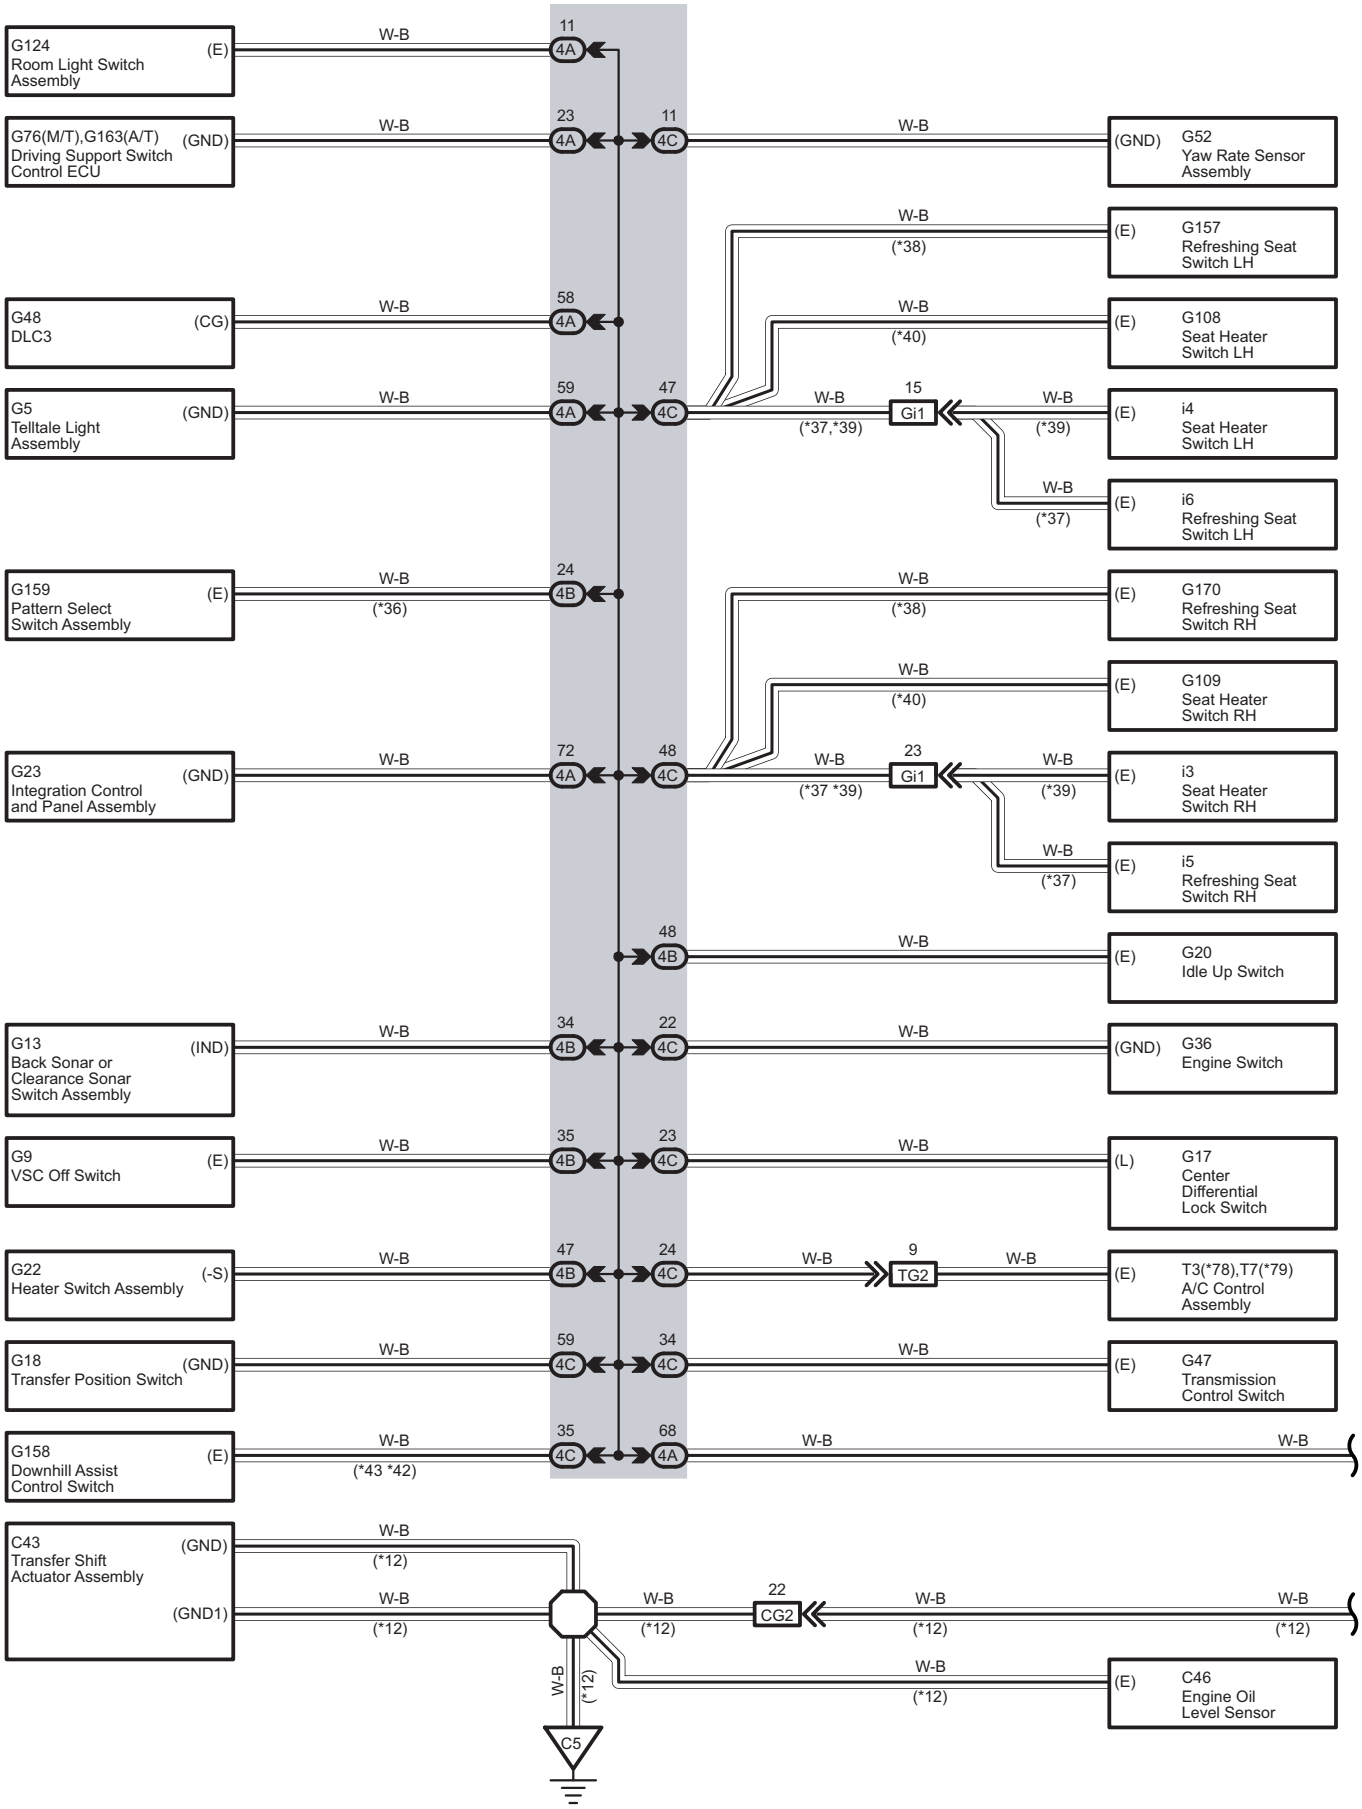
G124
Room Light Switch Assembly
(E)
W-B
11
4A
G76(M/T),G163(A/T)
Driving Support Switch Control ECU
(GND)
23
11
4C
(GND)
G52
Yaw Rate Sensor Assembly
(E)
G157
Refreshing Seat Switch LH
(*38)
G48
DLC3
(CG)
58
(E)
G108
Seat Heater Switch LH
(*40)
G5
Telltale Light Assembly
(GND)
59
47
15
Gi1
(*37,*39)
(E)
i4
Seat Heater Switch LH
(*39)
(E)
i6
Refreshing Seat Switch LH
(*37)
G159
Pattern Select Switch Assembly
(E)
24
4B
(*36)
(E)
G170
Refreshing Seat Switch RH
(*38)
(E)
G109
Seat Heater Switch RH
(*40)
G23
Integration Control and Panel Assembly
(GND)
72
48
23
Gi1
(*37 *39)
(E)
i3
Seat Heater Switch RH
(*39)
(E)
i5
Refreshing Seat Switch RH
(*37)
(E)
G20
Idle Up Switch
G13
Back Sonar or Clearance Sonar Switch Assembly
(IND)
34
22
(GND)
G36
Engine Switch
G9
VSC Off Switch
(E)
35
23
(L)
G17
Center Differential Lock Switch
G22
Heater Switch Assembly
(-S)
47
24
9
TG2
(E)
T3(*78),T7(*79)
A/C Control Assembly
G18
Transfer Position Switch
(GND)
59
34
(E)
G47
Transmission Control Switch
G158
Downhill Assist Control Switch
(E)
35
68
(*43 *42)
C43
Transfer Shift Actuator Assembly
(GND)
(GND1)
(*12)
22
CG2
(E)
C46
Engine Oil Level Sensor
C5

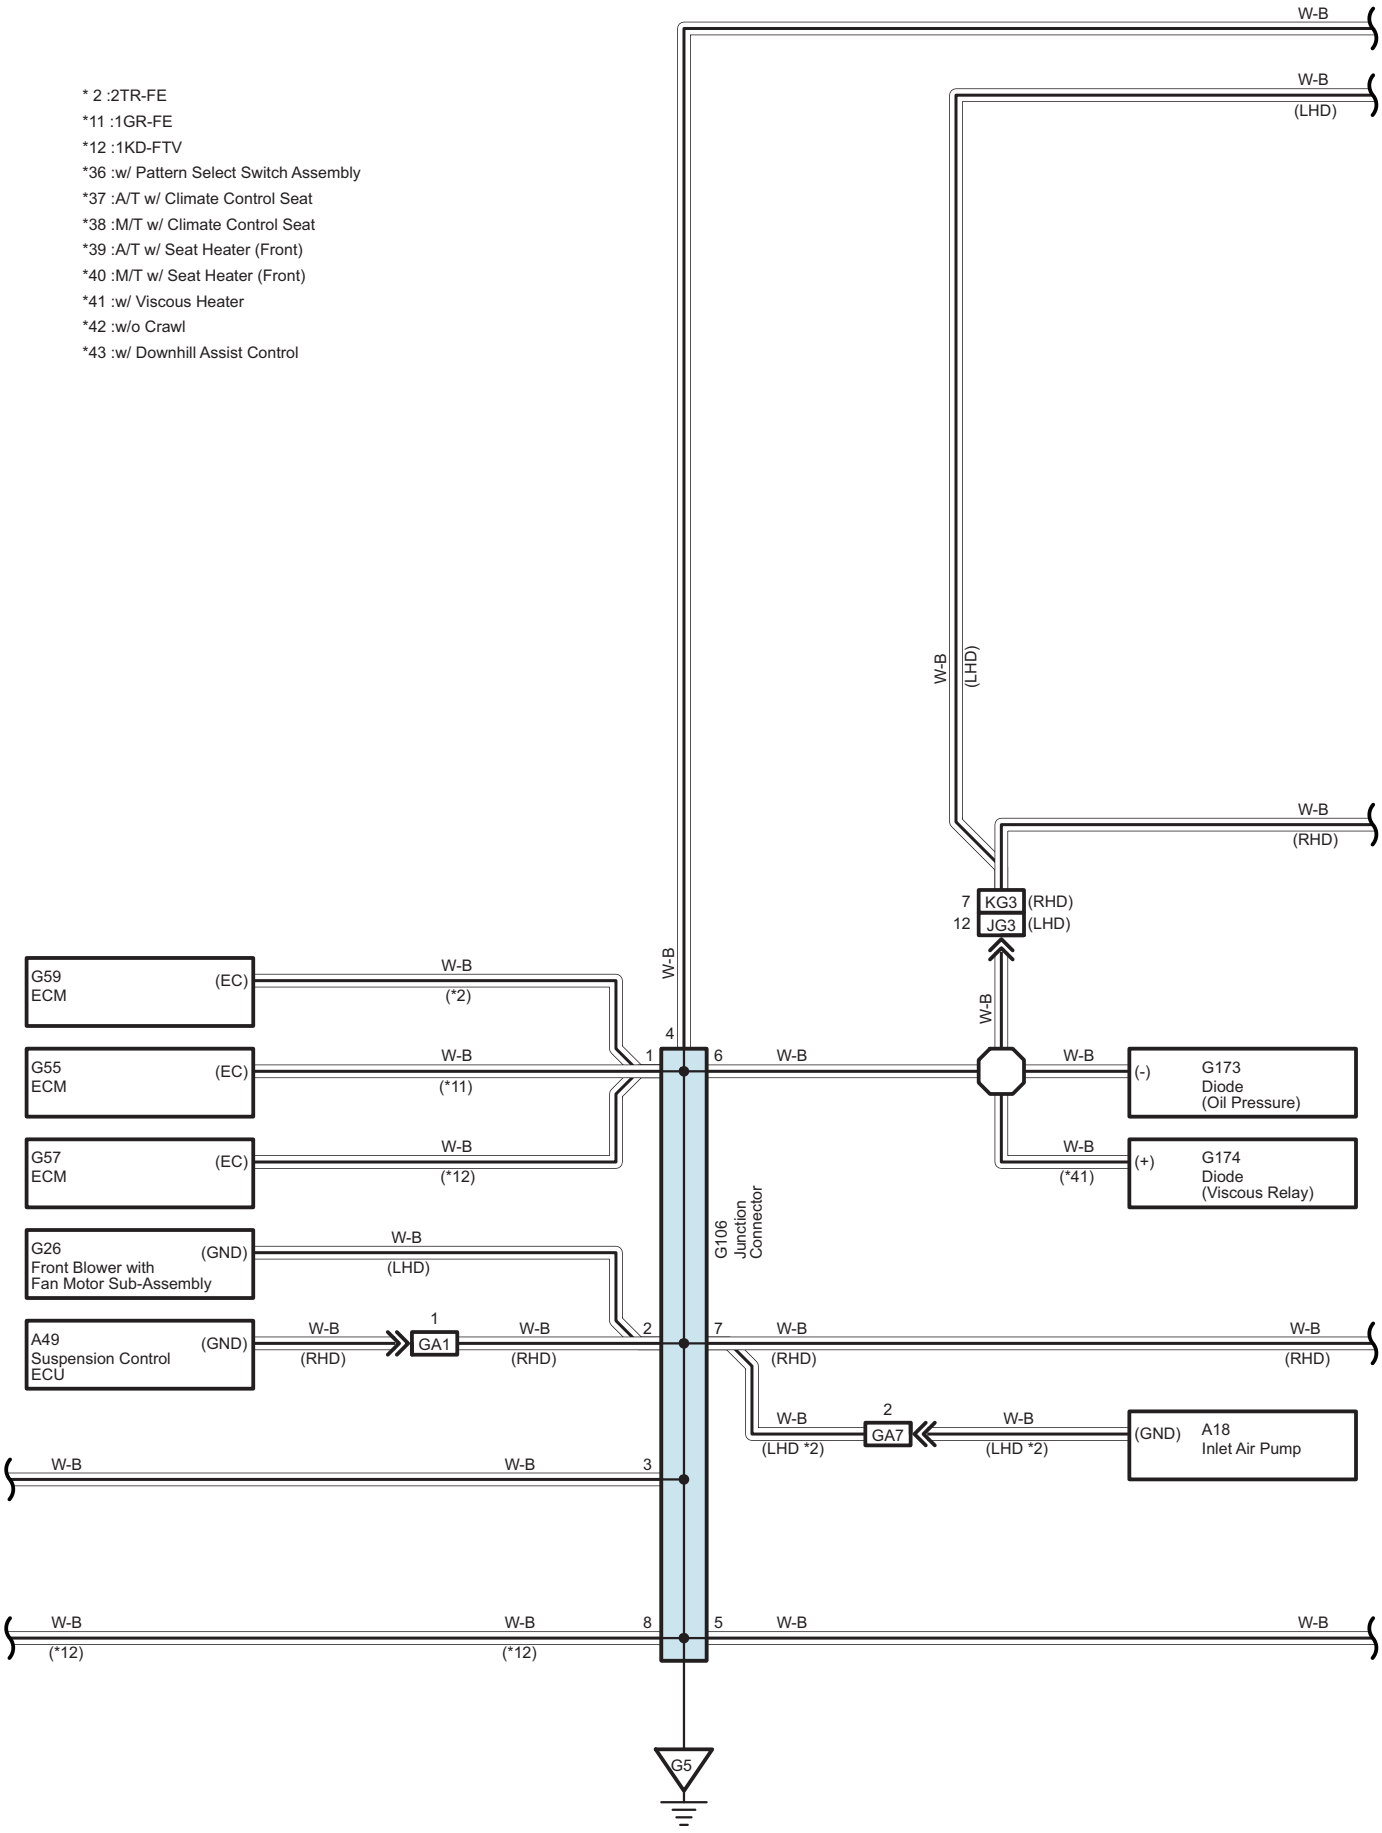

* 2 :2TR-FE
*11 :1GR-FE
*12 :1KD-FTV
*36 :w/ Pattern Select Switch Assembly
*37 :A/T w/ Climate Control Seat
*38 :M/T w/ Climate Control Seat
*39 :A/T w/ Seat Heater (Front)
*40 :M/T w/ Seat Heater (Front)
*41 :w/ Viscous Heater
*42 :w/o Crawl
*43 :w/ Downhill Assist Control
W-B
W-B
(LHD)
W-B
(LHD)
W-B
(RHD)
7 KG3 (RHD)
12 JG3 (LHD)
W-B
W-B
G59
ECM
(EC)
W-B
(*2)
G55
ECM
(EC)
W-B
(*11)
G57
ECM
(EC)
W-B
(*12)
4
1
6
W-B
W-B
(-)
G173
Diode
(Oil Pressure)
W-B
(*41)
(+)
G174
Diode
(Viscous Relay)
G106
Junction
Connector
G26
Front Blower with
Fan Motor Sub-Assembly
(GND)
W-B
(LHD)
A49
Suspension Control
ECU
(GND)
W-B
(RHD)
1
GA1
W-B
(RHD)
2
7
W-B
(RHD)
W-B
(RHD)
W-B
(LHD *2)
2
GA7
W-B
(LHD *2)
(GND)
A18
Inlet Air Pump
W-B
W-B
3
W-B
(*12)
W-B
(*12)
8
5
W-B
W-B
G5

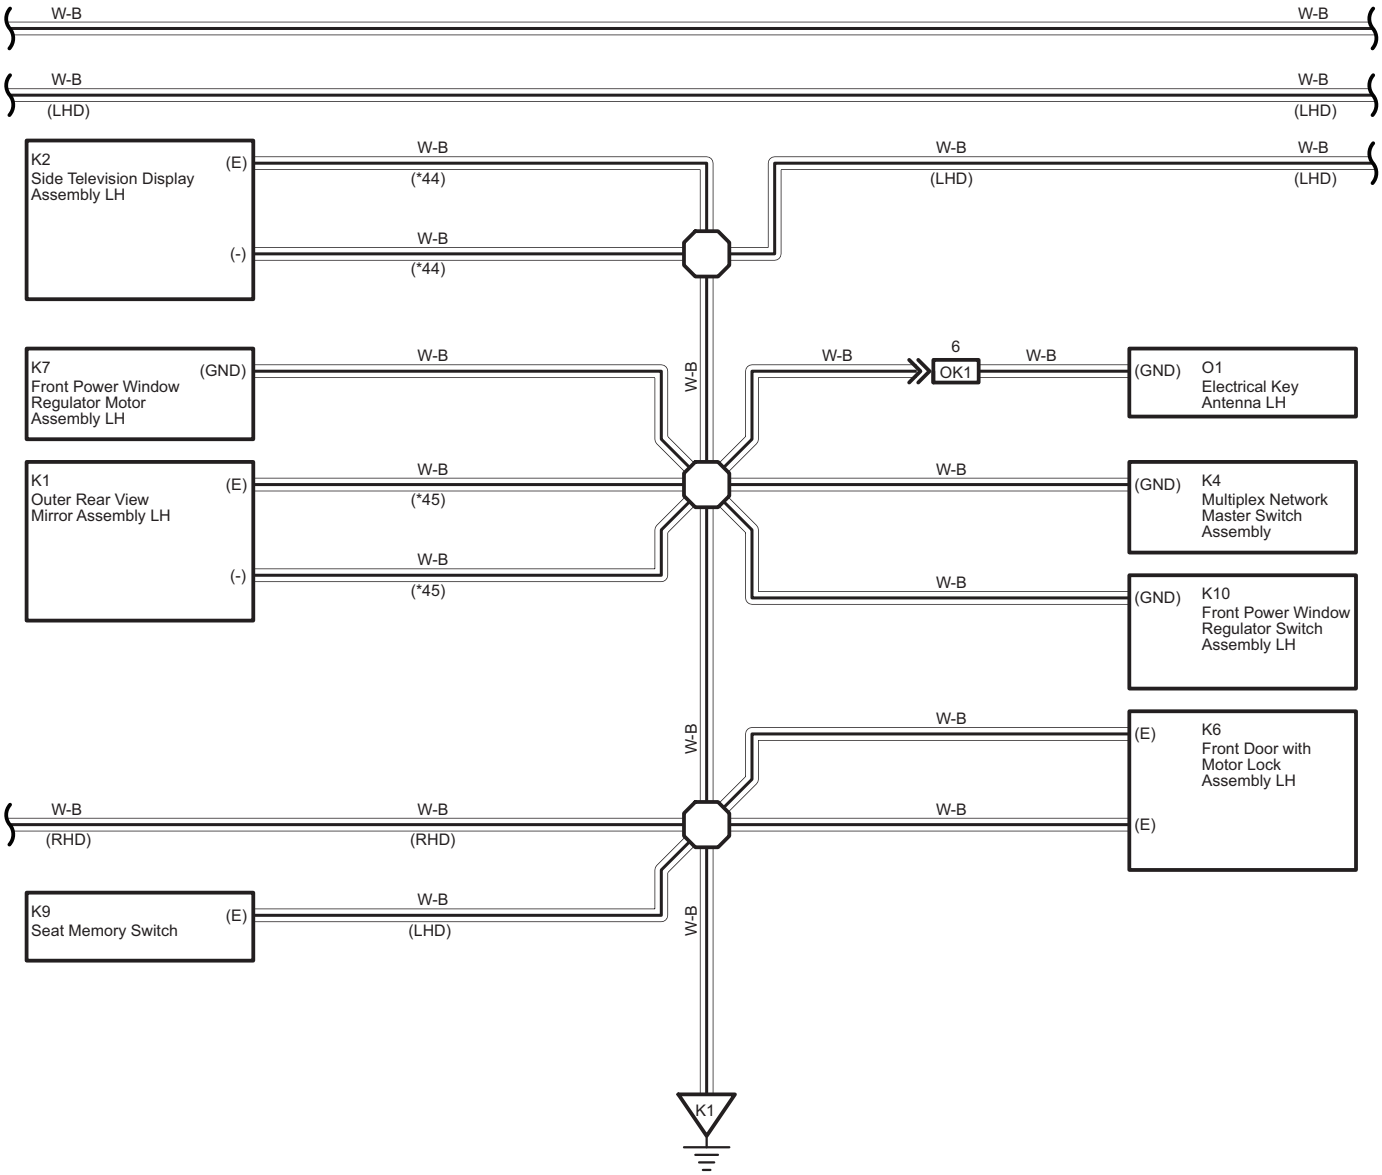
W-B
W-B
(LHD)
W-B
(LHD)
K2
Side Television Display Assembly LH
(E)
(-)
W-B
(*44)
W-B
(*44)
W-B
(LHD)
W-B
(LHD)
K7
Front Power Window Regulator Motor Assembly LH
(GND)
W-B
W-B
6
OK1
W-B
(GND)
O1
Electrical Key Antenna LH
K1
Outer Rear View Mirror Assembly LH
(E)
(-)
W-B
(*45)
W-B
(*45)
W-B
W-B
(GND)
K4
Multiplex Network Master Switch Assembly
W-B
(GND)
K10
Front Power Window Regulator Switch Assembly LH
W-B
W-B
W-B
W-B
(RHD)
W-B
(RHD)
W-B
(E)
K6
Front Door with Motor Lock Assembly LH
(E)
K9
Seat Memory Switch
(E)
W-B
(LHD)
K1

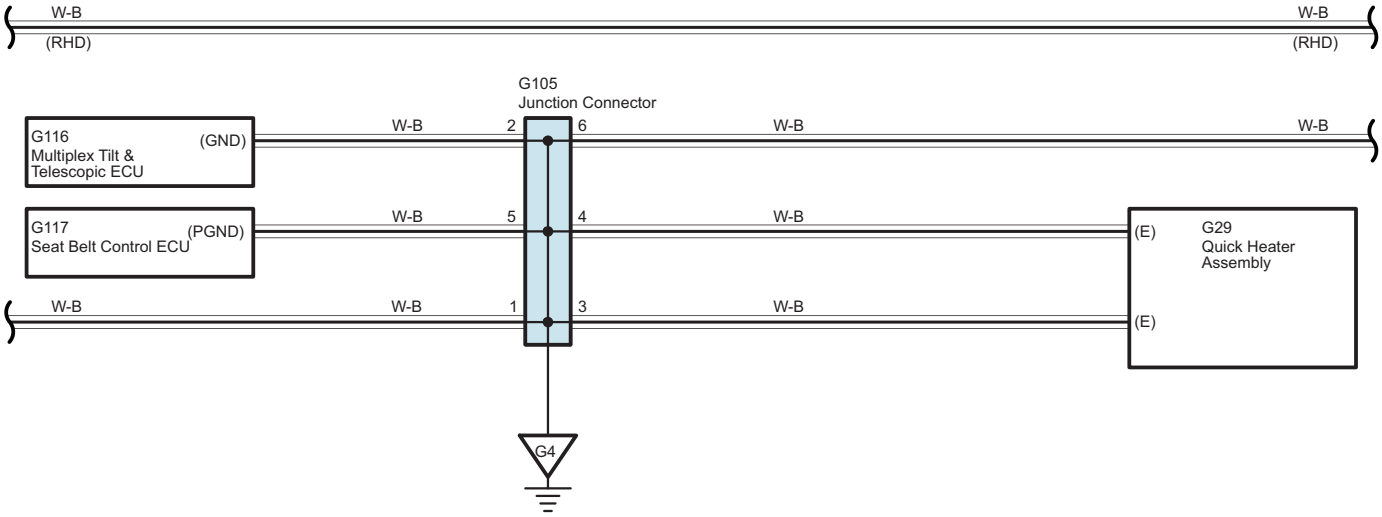

W-B
(RHD)
W-B
(RHD)
G105
Junction Connector
G116
Multiplex Tilt & Telescopic ECU
(GND)
W-B
2
6
W-B
W-B
G117
Seat Belt Control ECU
(PGND)
W-B
5
4
W-B
(E)
G29
Quick Heater Assembly
W-B
W-B
1
3
W-B
(E)
G4

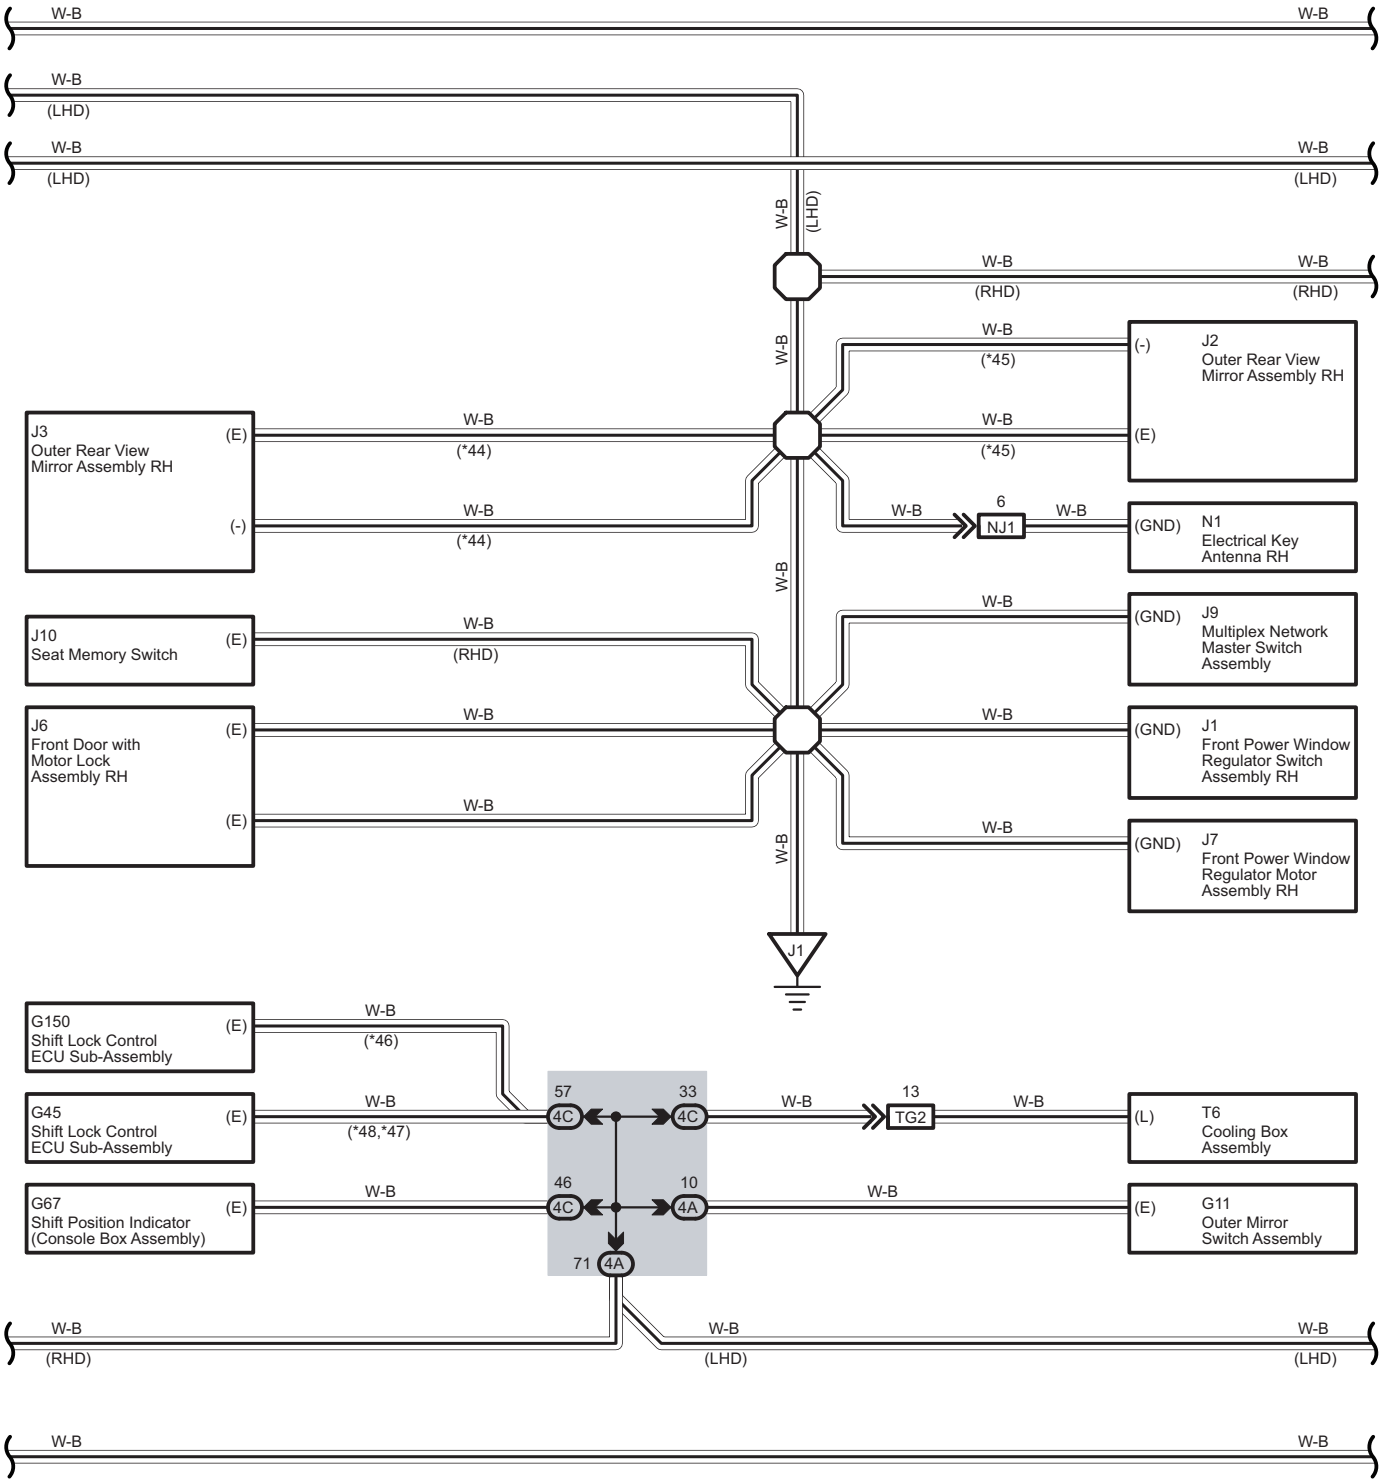



*44 :w/ Side Monitor
*45 :w/o Side Monitor
*46 :1GR-FE w/o Entry & Start System , 1KD-FTV w/o Entry & Start System
*47 :2TR-FE w/o Entry & Start System
*48 :w/ Entry & Start System

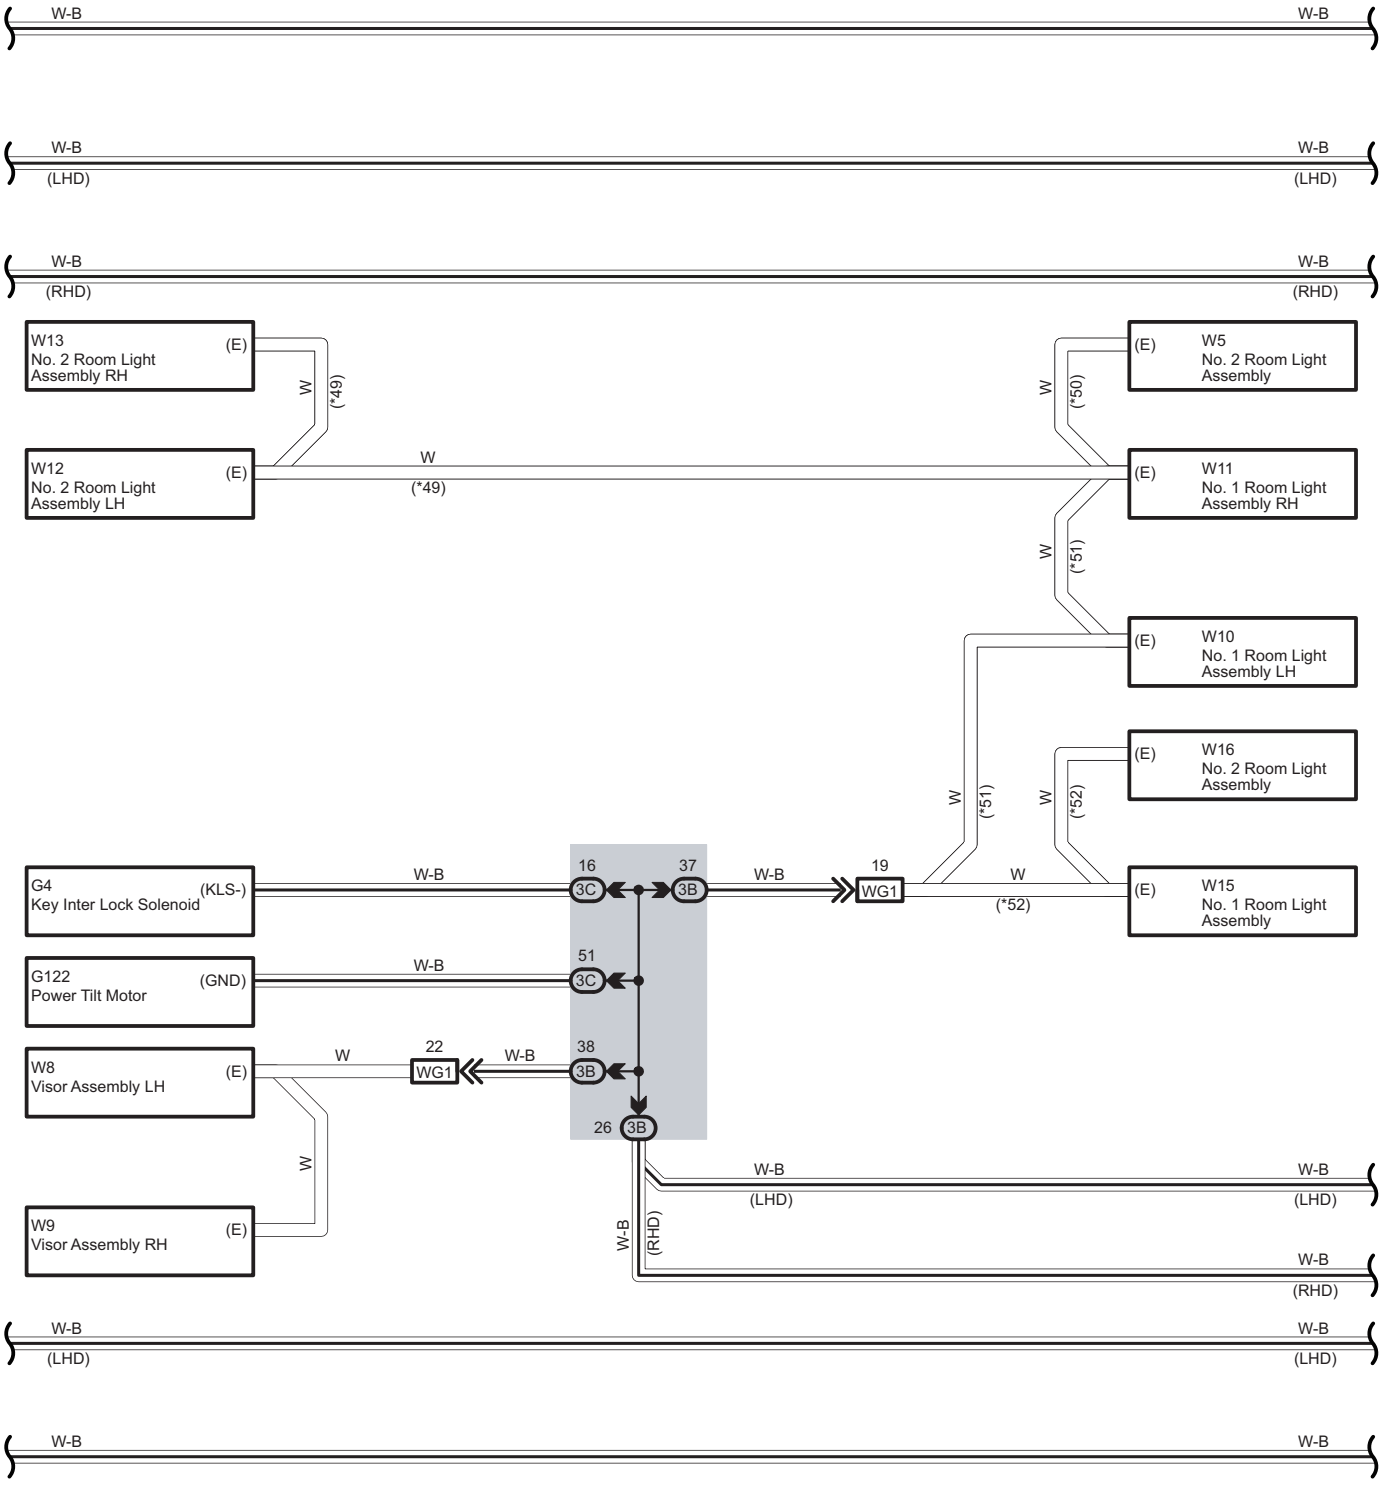


*49 :w/ Reading Light 5-Door Rear No. 2 Seat
*50 :w/ Reading Light 5-Door Except Rear No. 2 Seat
*51 :w/ Reading Light
*52 :w/o Reading Light
*53 :w/o Entry & Start System
*60 :Except 5L-E

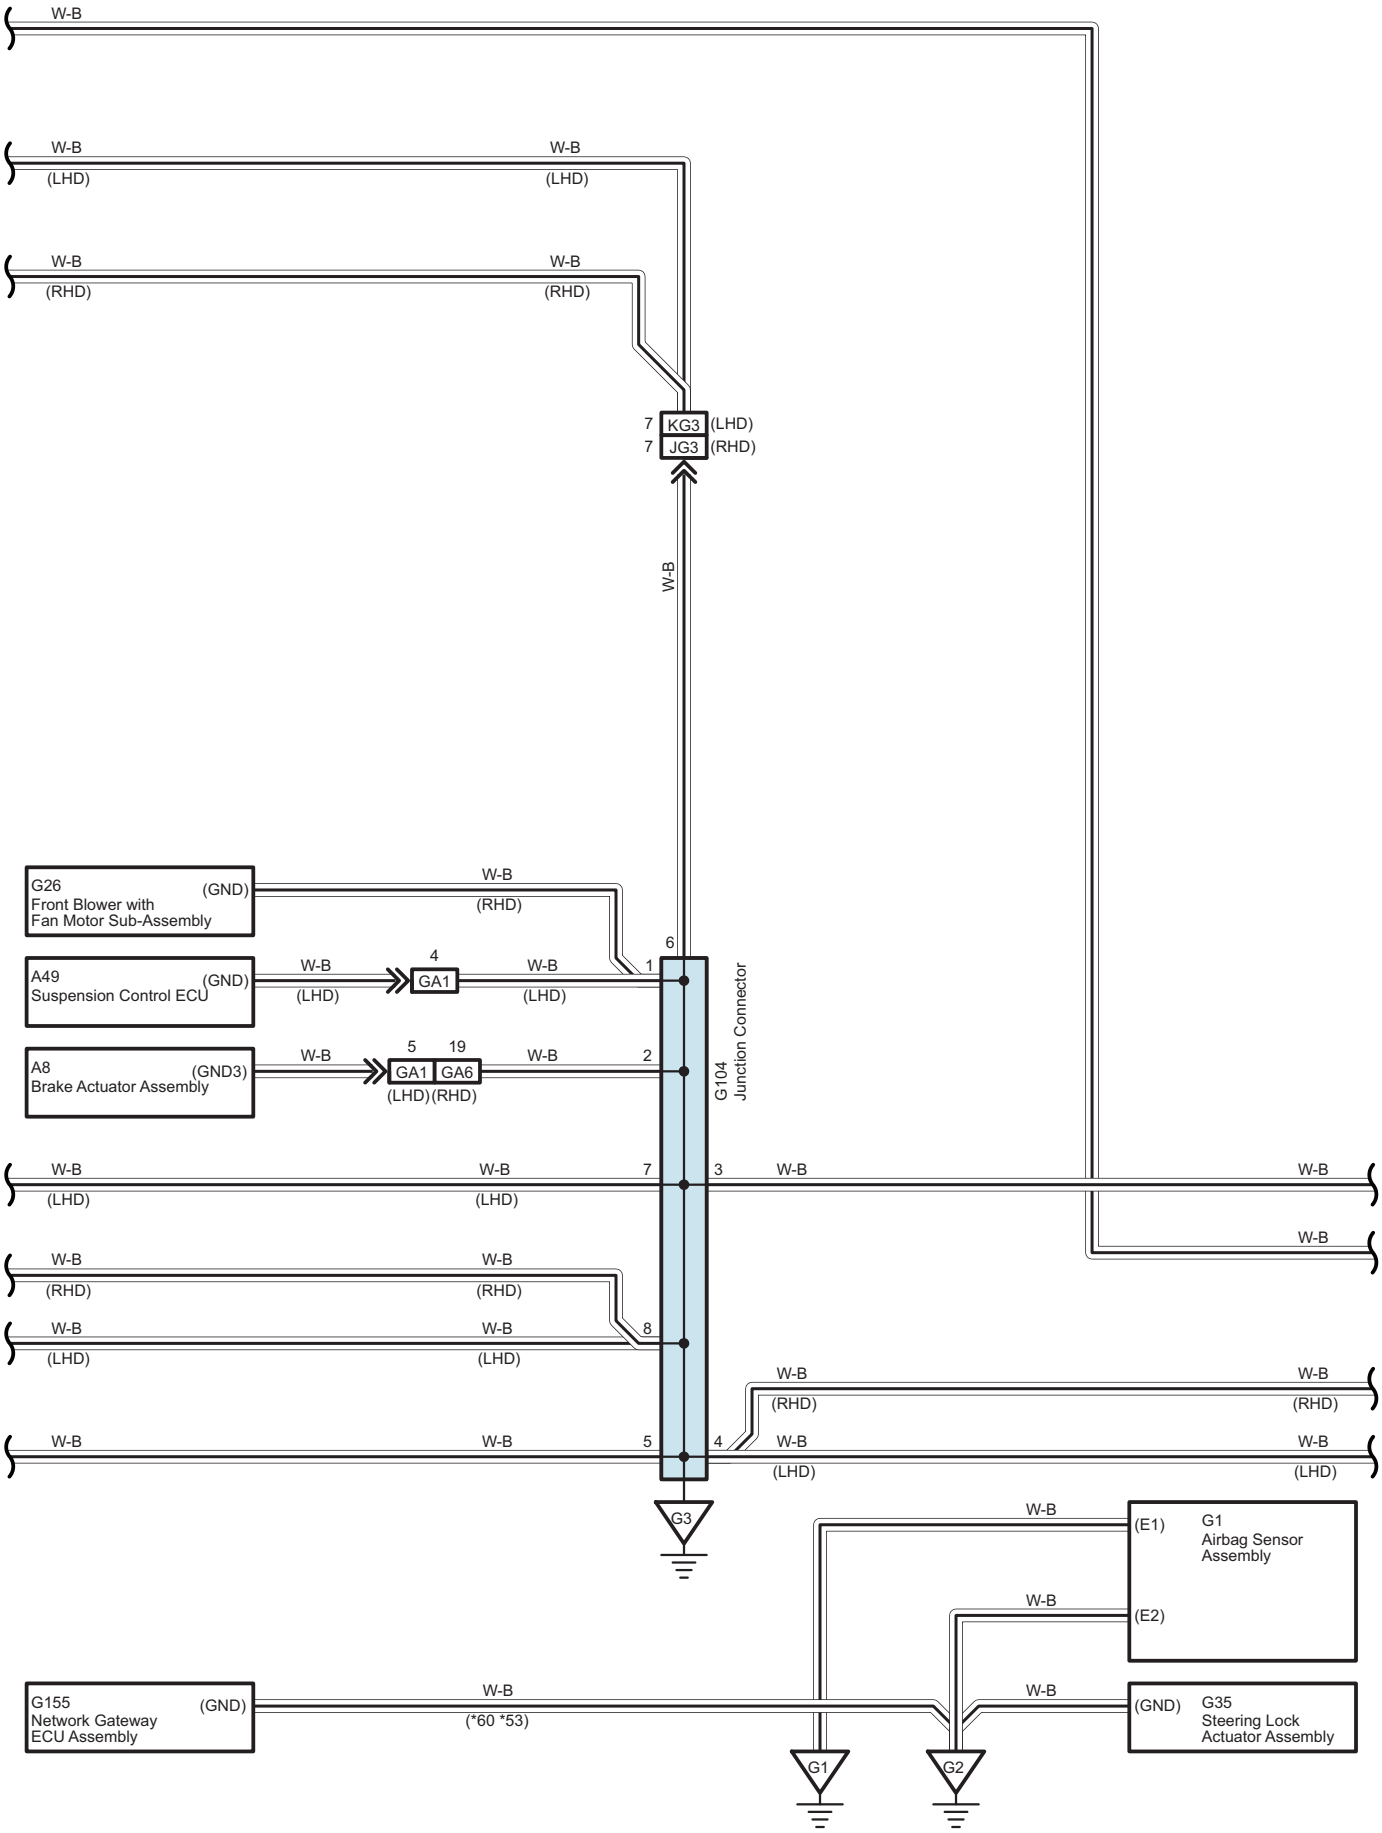
W-B
W-B (LHD)
W-B (LHD)
W-B (RHD)
W-B (RHD)
7 KG3 (LHD)
7 JG3 (RHD)
W-B
G26 (GND) Front Blower with Fan Motor Sub-Assembly
W-B (RHD)
A49 (GND) Suspension Control ECU
W-B (LHD)
4 GA1
W-B (LHD)
A8 (GND3) Brake Actuator Assembly
W-B
5 GA1
19 GA6
W-B
(LHD) (RHD)
6
1
2
G104 Junction Connector
7
3
8
5
4
W-B (LHD)
W-B (RHD)
G3
W-B (E1) G1 Airbag Sensor Assembly
W-B (E2)
G155 (GND) Network Gateway ECU Assembly
W-B (*60 *53)
W-B (GND) G35 Steering Lock Actuator Assembly
G1
G2

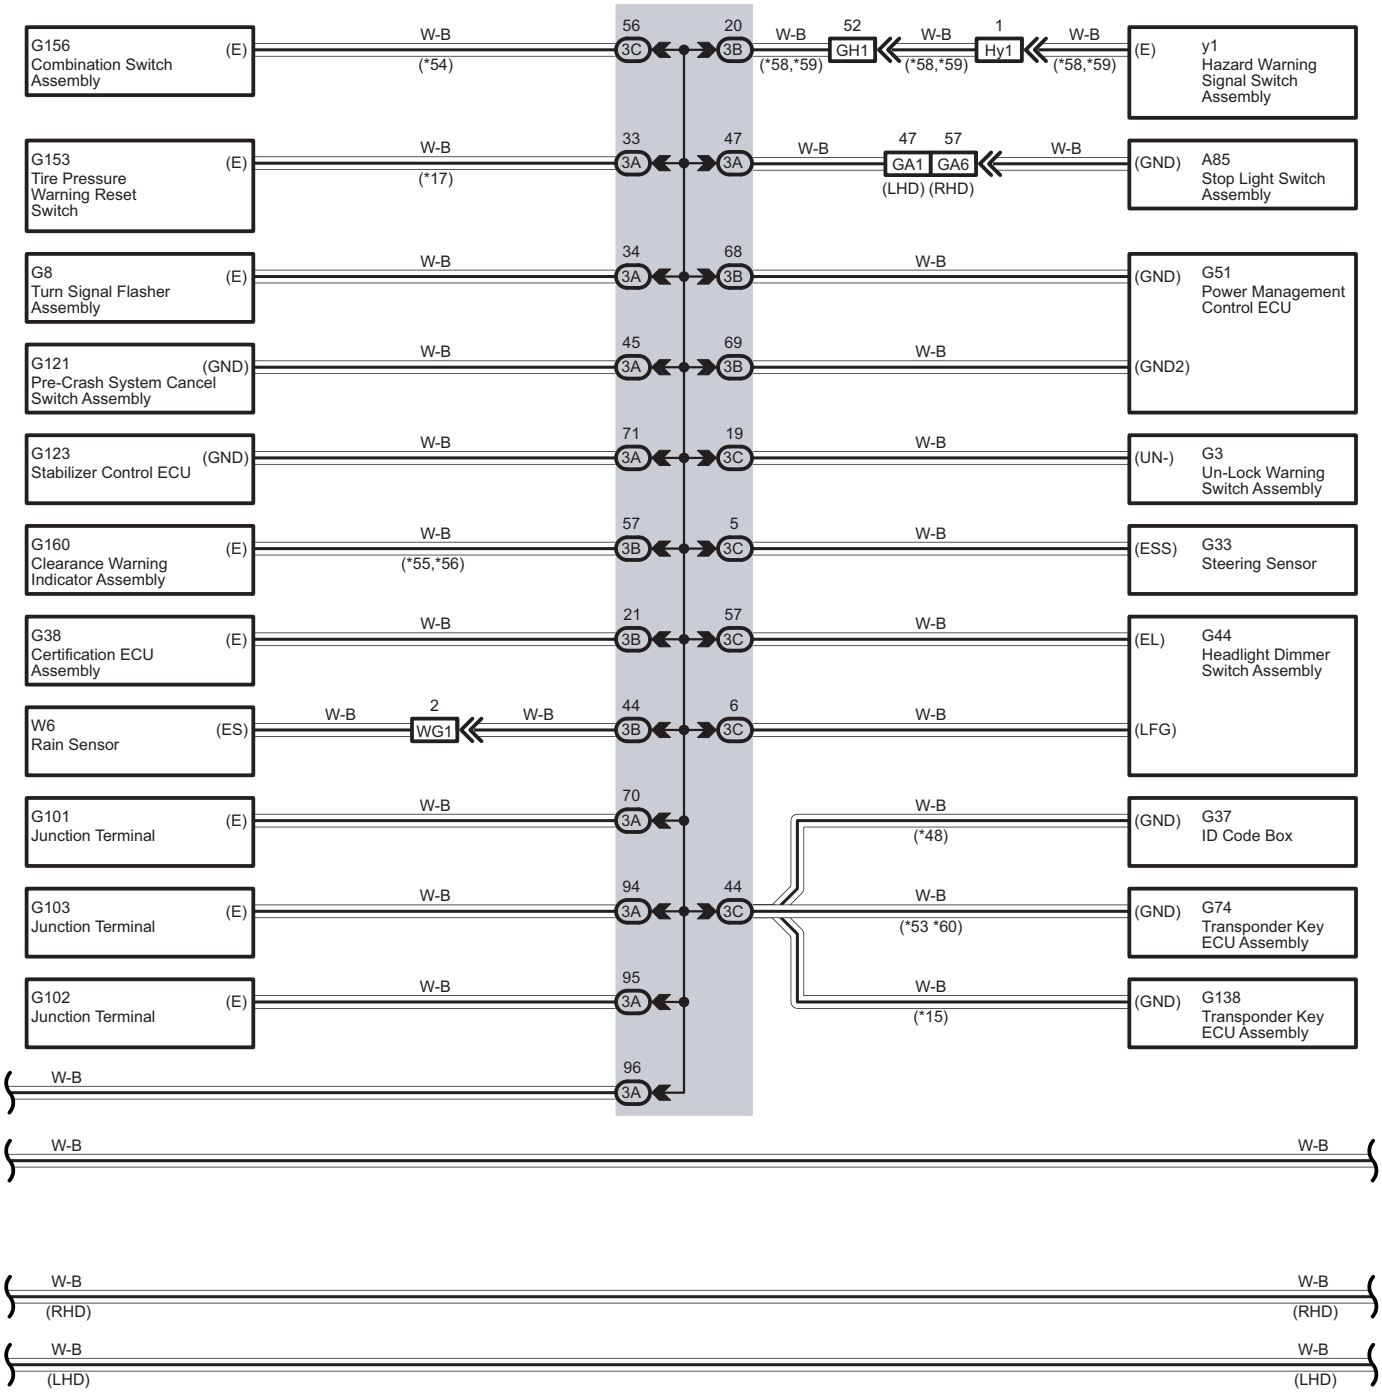

G156
Combination Switch Assembly
(E)
W-B
(*54)
56
3C
20
3B
W-B
(*58,*59)
52
GH1
W-B
(*58,*59)
1
Hy1
W-B
(*58,*59)
(E)
y1
Hazard Warning Signal Switch Assembly
G153
Tire Pressure Warning Reset Switch
(E)
W-B
(*17)
33
3A
47
3A
W-B
47
GA1
57
GA6
(LHD) (RHD)
W-B
(GND)
A85
Stop Light Switch Assembly
G8
Turn Signal Flasher Assembly
(E)
W-B
34
3A
68
3B
W-B
(GND)
G51
Power Management Control ECU
G121
Pre-Crash System Cancel Switch Assembly
(GND)
W-B
45
3A
69
3B
W-B
(GND2)
G123
Stabilizer Control ECU
(GND)
W-B
71
3A
19
3C
W-B
(UN-)
G3
Un-Lock Warning Switch Assembly
G160
Clearance Warning Indicator Assembly
(E)
W-B
(*55,*56)
57
3B
5
3C
W-B
(ESS)
G33
Steering Sensor
G38
Certification ECU Assembly
(E)
W-B
21
3B
57
3C
W-B
(EL)
G44
Headlight Dimmer Switch Assembly
W6
Rain Sensor
(ES)
W-B
2
WG1
W-B
44
3B
6
3C
W-B
(LFG)
G101
Junction Terminal
(E)
W-B
70
3A
W-B
(*48)
(GND)
G37
ID Code Box
G103
Junction Terminal
(E)
W-B
94
3A
44
3C
W-B
(*53 *60)
(GND)
G74
Transponder Key ECU Assembly
G102
Junction Terminal
(E)
W-B
95
3A
W-B
(*15)
(GND)
G138
Transponder Key ECU Assembly
W-B
96
3A
W-B
W-B
W-B
(RHD)
W-B
(RHD)
W-B
(LHD)
W-B
(LHD)

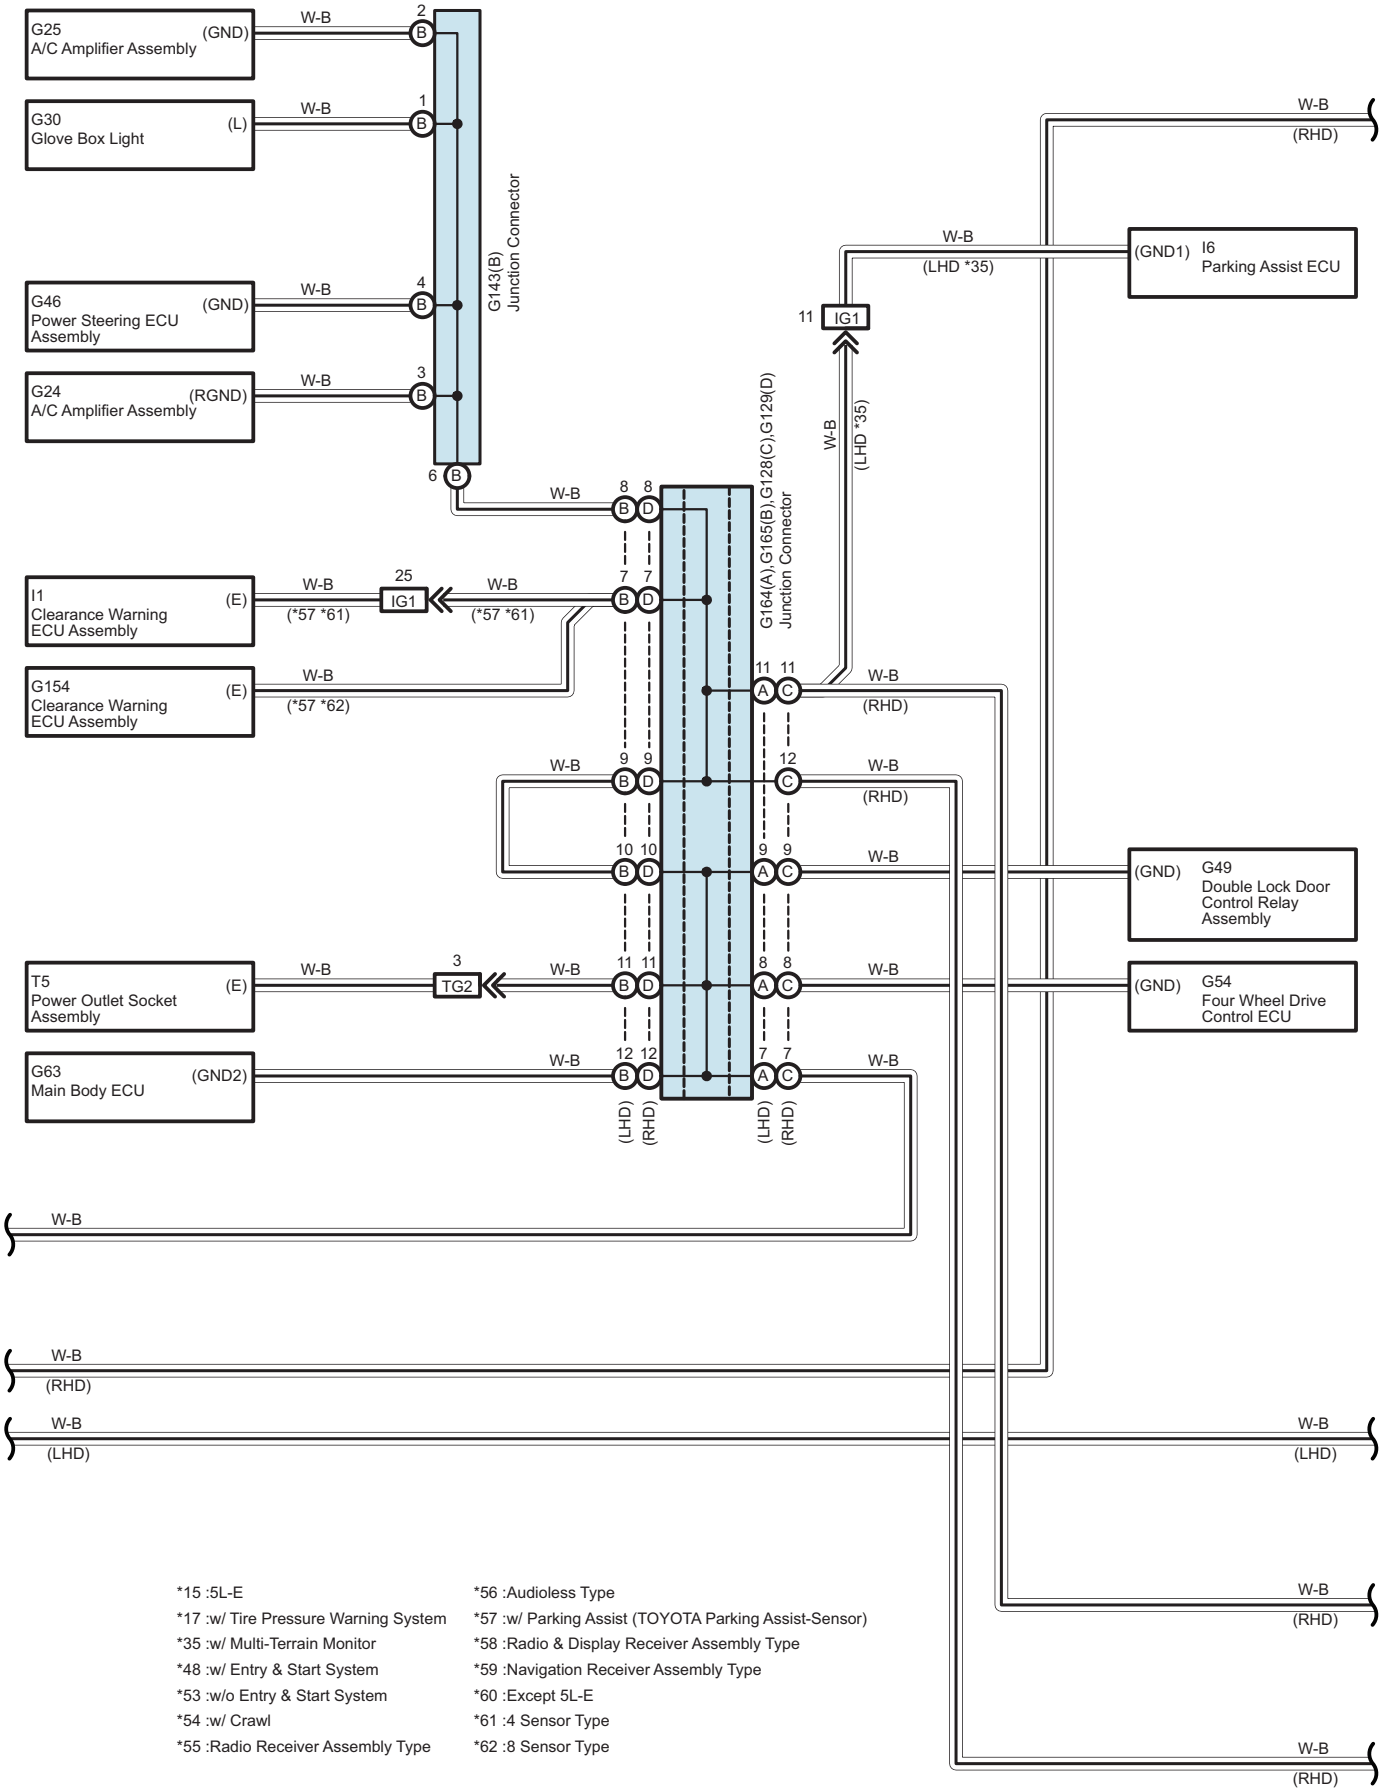


*15 :5L-E
*17 :w/ Tire Pressure Warning System
*35 :w/ Multi-Terrain Monitor
*48 :w/ Entry & Start System
*53 :w/o Entry & Start System
*54 :w/ Crawl
*55 :Radio Receiver Assembly Type
*56 :Audioless Type
*57 :w/ Parking Assist (TOYOTA Parking Assist-Sensor)
*58 :Radio & Display Receiver Assembly Type
*59 :Navigation Receiver Assembly Type
*60 :Except 5L-E
*61 :4 Sensor Type
*62 :8 Sensor Type

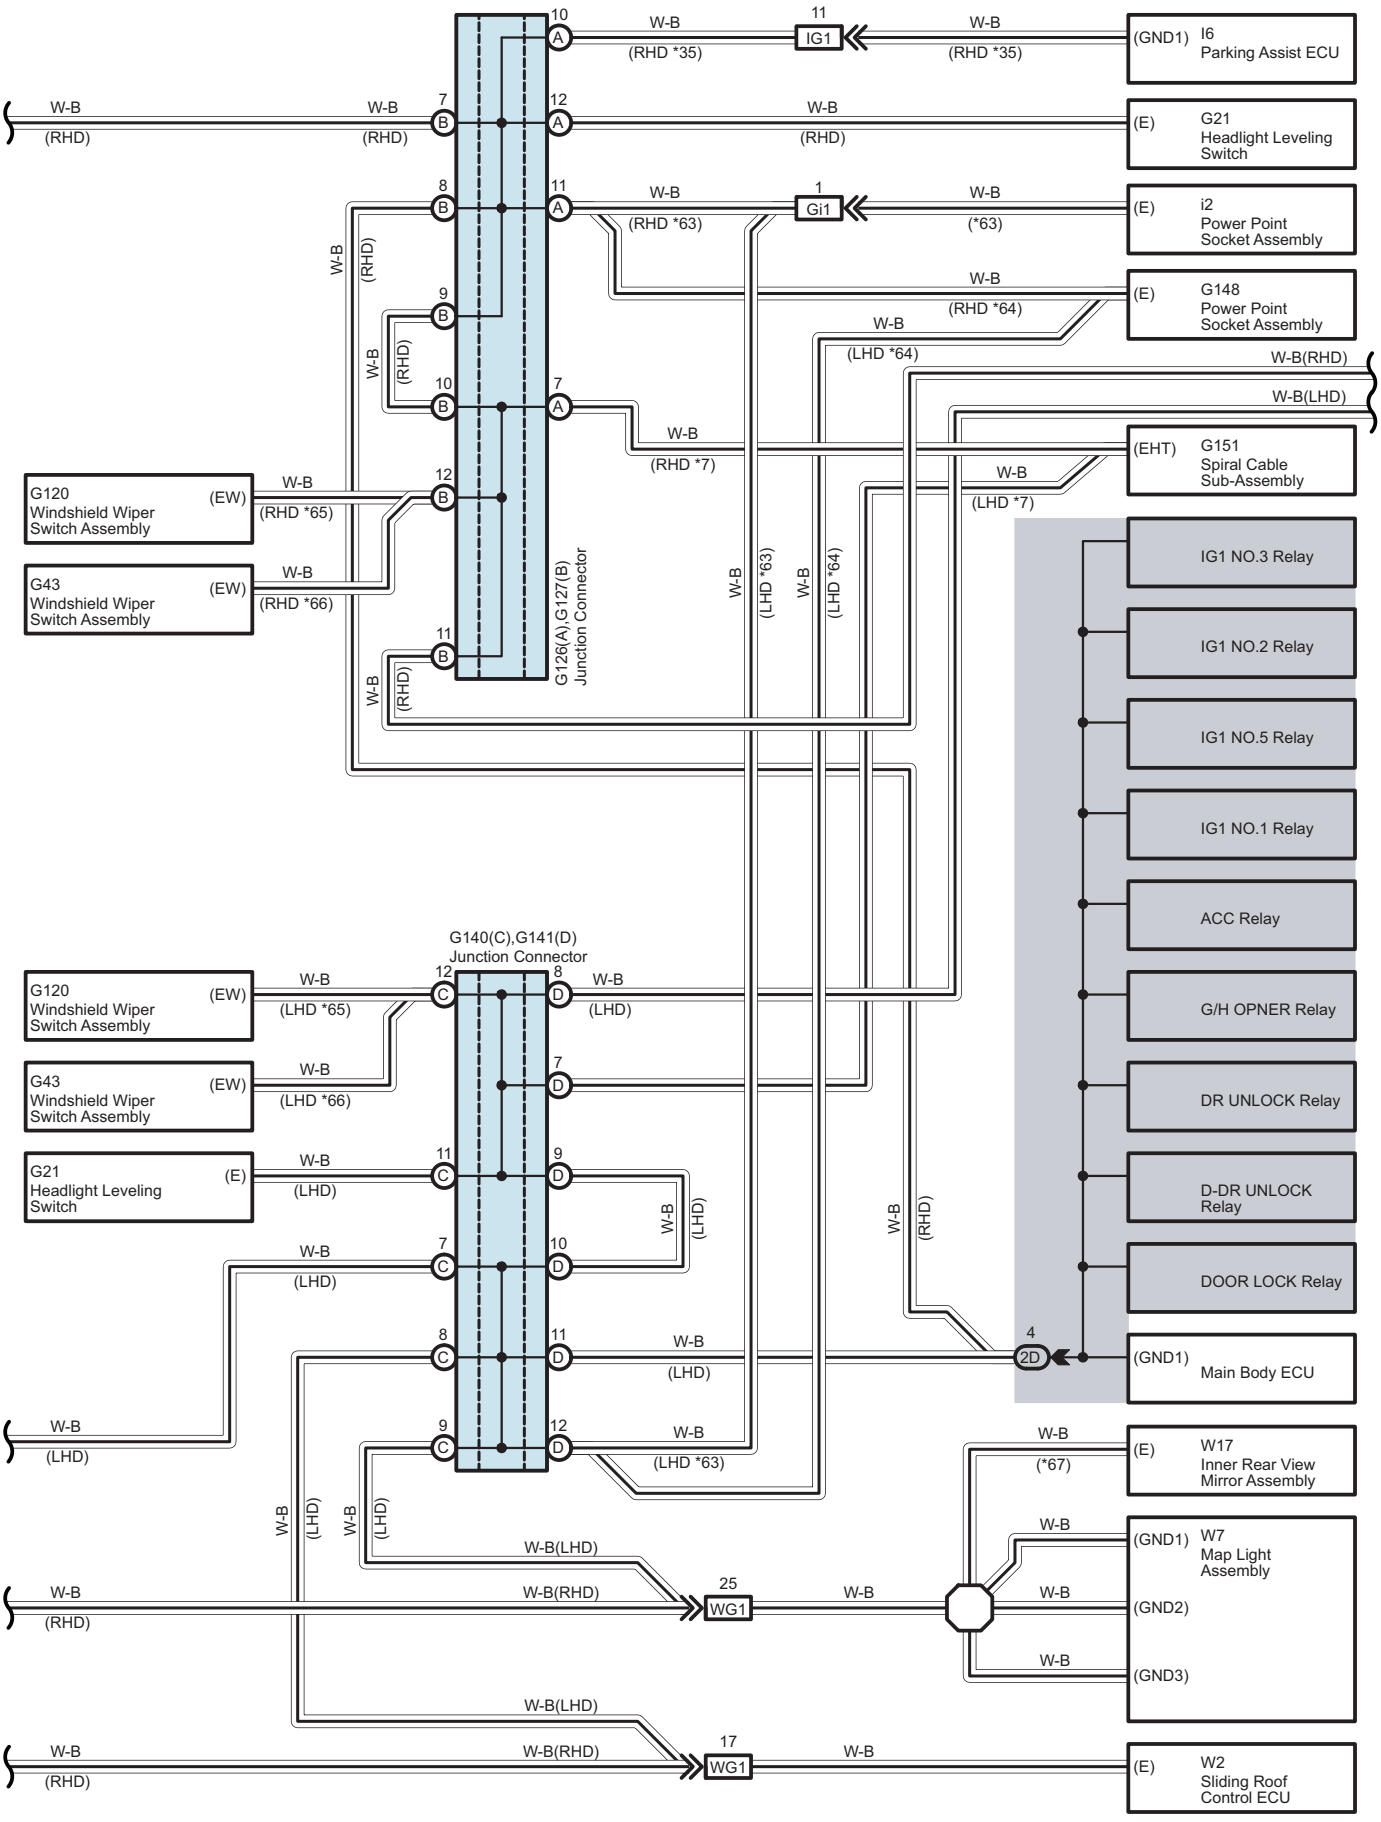

G126(A),G127(B) Junction Connector
G140(C),G141(D) Junction Connector
IG1
Gi1
WG1
(GND1) I6 Parking Assist ECU
(E) G21 Headlight Leveling Switch
(E) i2 Power Point Socket Assembly
(E) G148 Power Point Socket Assembly
(EHT) G151 Spiral Cable Sub-Assembly
G120 Windshield Wiper Switch Assembly (EW)
G43 Windshield Wiper Switch Assembly (EW)
G21 Headlight Leveling Switch (E)
IG1 NO.3 Relay
IG1 NO.2 Relay
IG1 NO.5 Relay
IG1 NO.1 Relay
ACC Relay
G/H OPNER Relay
DR UNLOCK Relay
D-DR UNLOCK Relay
DOOR LOCK Relay
(GND1) Main Body ECU
(E) W17 Inner Rear View Mirror Assembly
(GND1) W7 Map Light Assembly
(GND2)
(GND3)
(E) W2 Sliding Roof Control ECU
W-B
W-B(RHD)
W-B(LHD)
(RHD)
(LHD)
(RHD *35)
(RHD *63)
(RHD *64)
(RHD *7)
(RHD *65)
(RHD *66)
(LHD *64)
(LHD *63)
(LHD *65)
(LHD *66)
(*63)
(*67)


* 7 :w/ Heated Steering Wheel System
*35 :w/ Multi-Terrain Monitor
*36 :w/ Pattern Select Switch Assembly
*37 :A/T w/ Climate Control Seat
*38 :M/T w/ Climate Control Seat
*39 :A/T w/ Seat Heater (Front)
*40 :M/T w/ Seat Heater (Front)
*42 :w/o Crawl
*43 :w/ Downhill Assist Control
*54 :w/ Crawl
*55 :Radio Receiver Assembly Type
*56 :Audioless Type
*58 :Radio & Display Receiver Assembly Type
*59 :Navigation Receiver Assembly Type
*63 :Separate Seat
*64 :Bench Seat
*65 :w/ Auto Wiper System
*66 :w/o Auto Wiper System
*67 :w/ Automatic Glare-Resistant EC Mirror with Compass

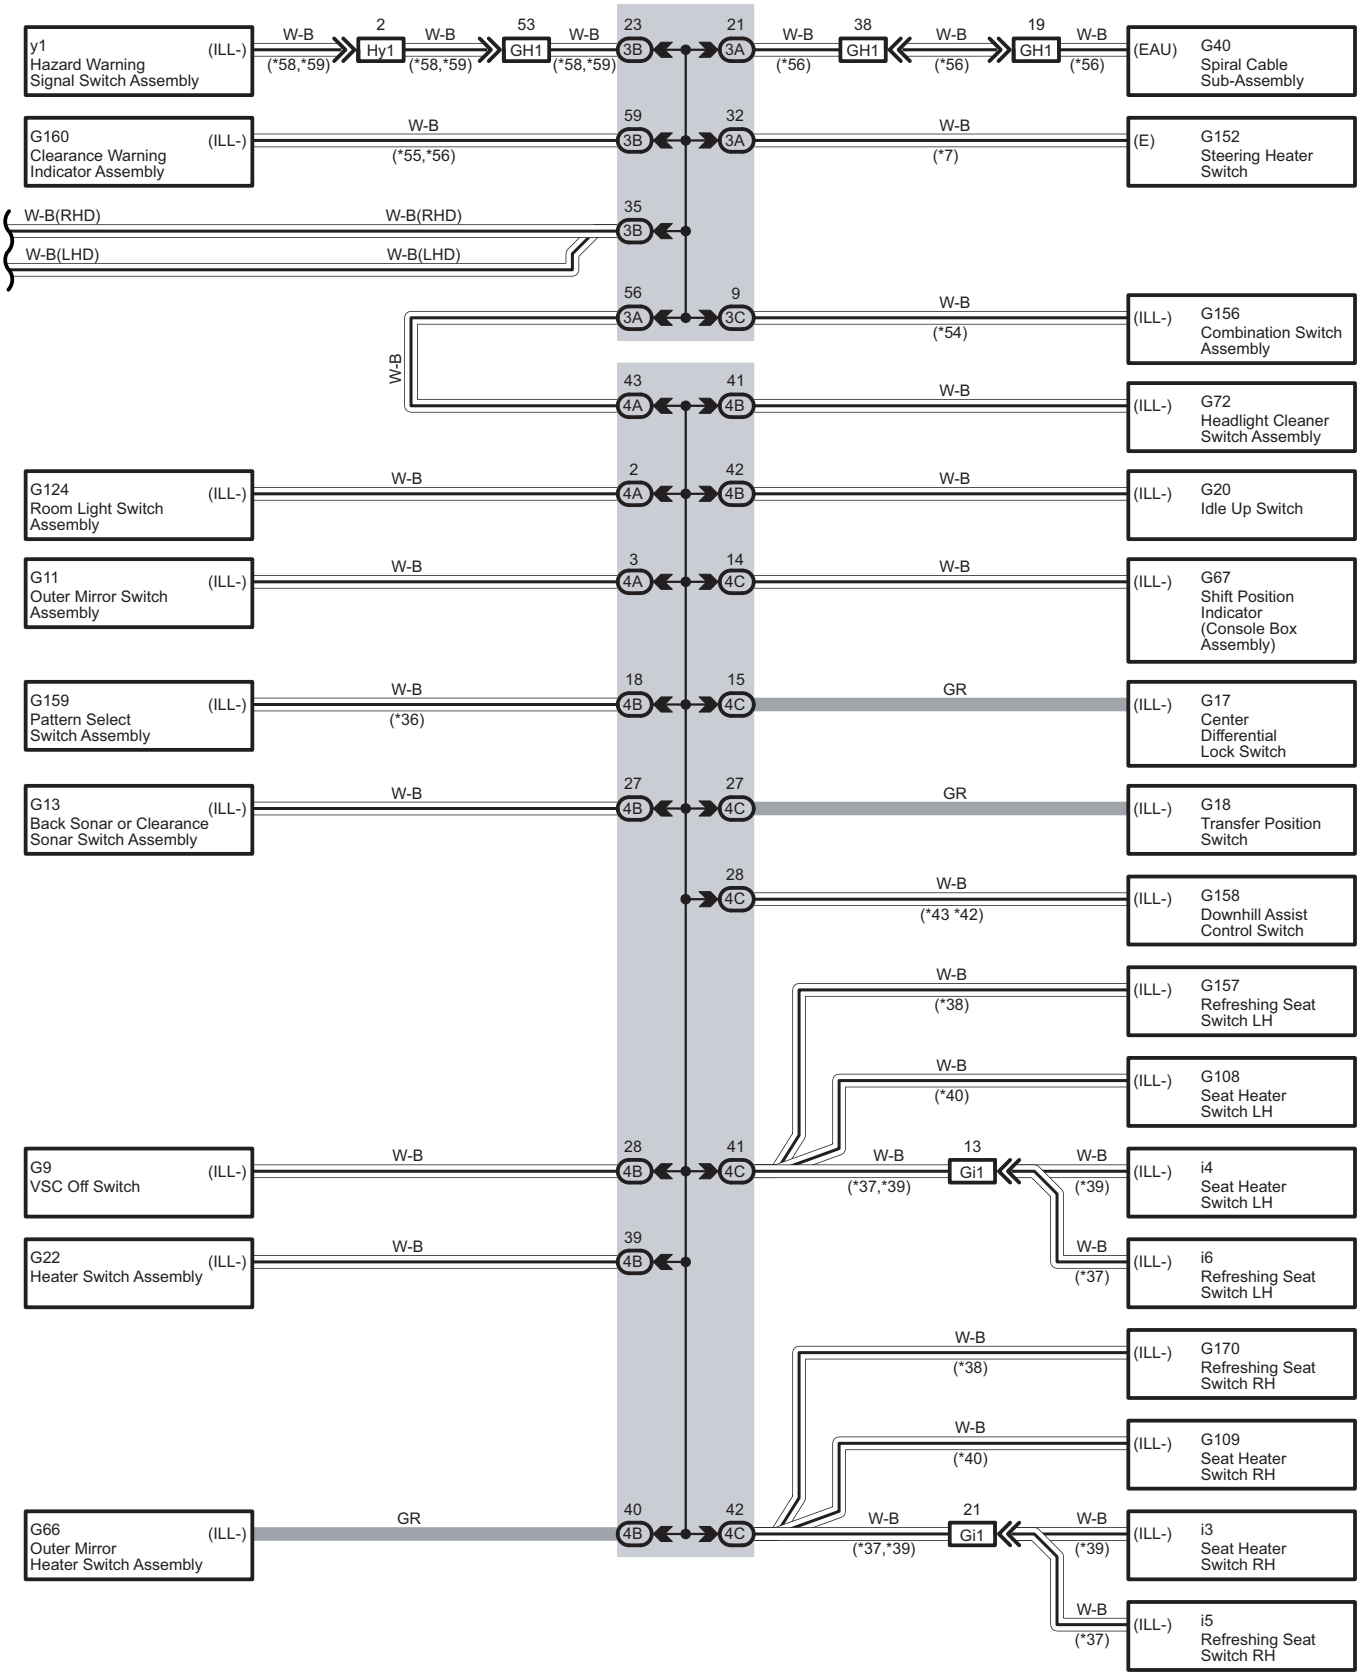


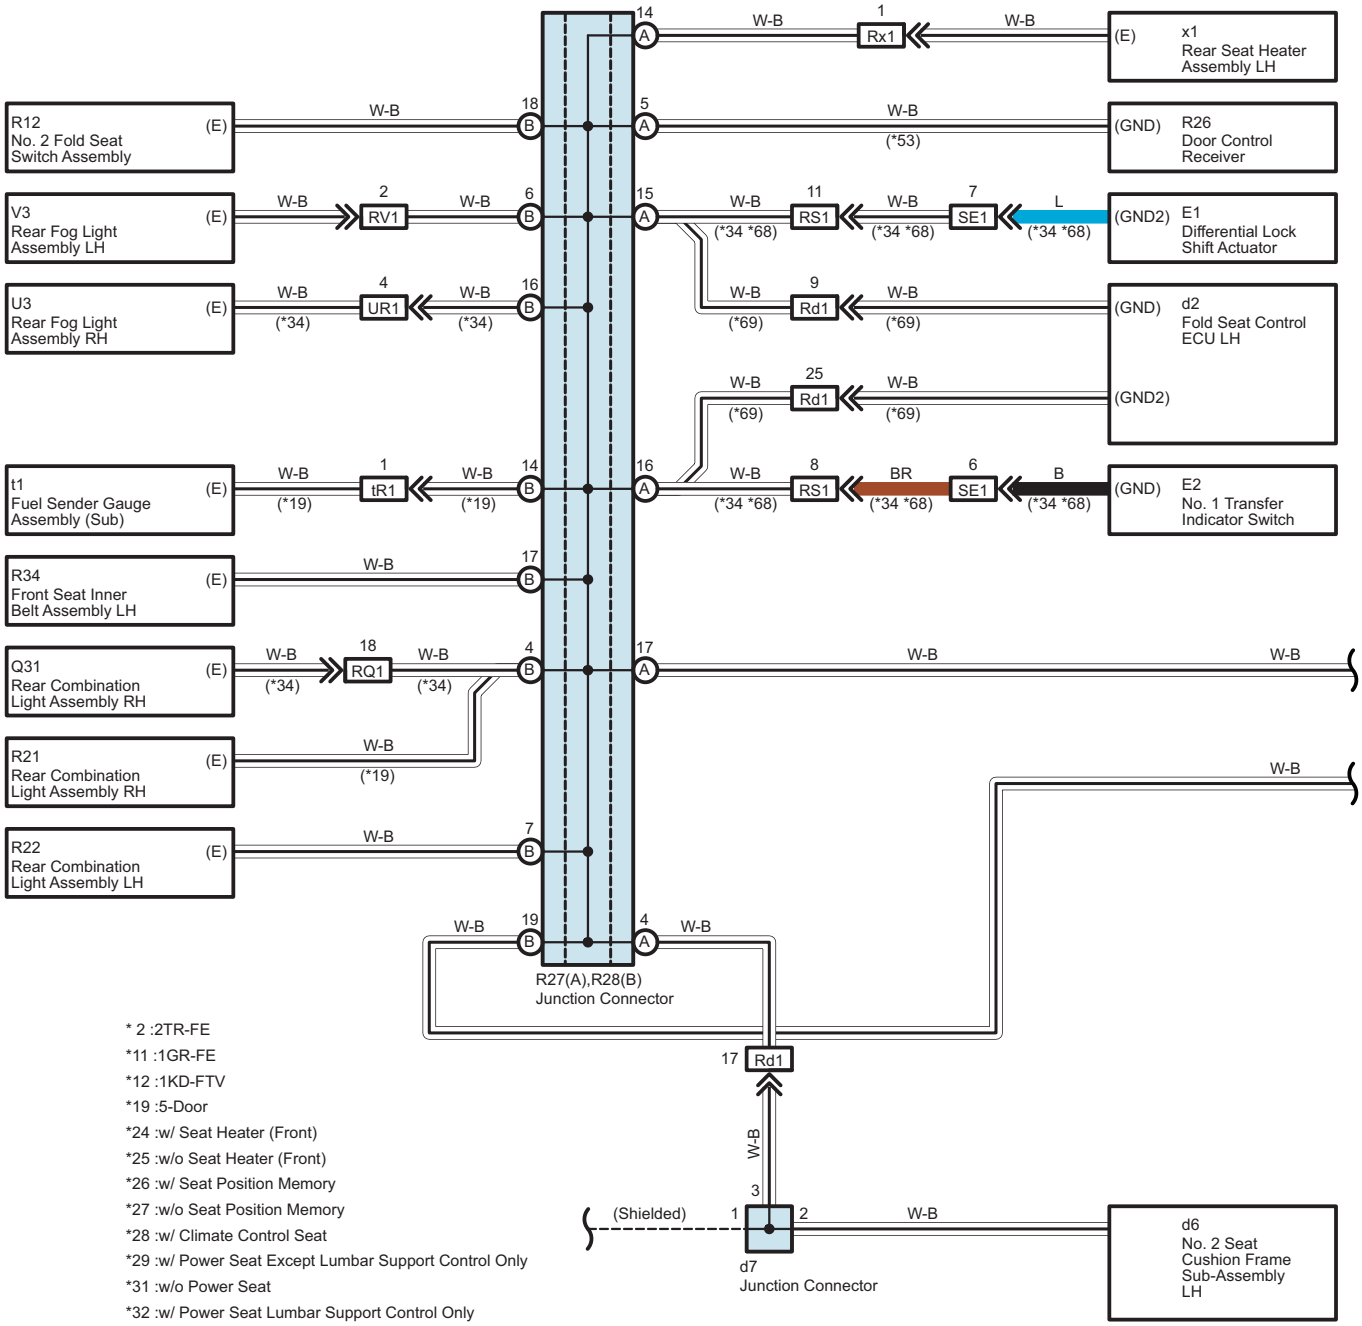


* 2 :2TR-FE
*11 :1GR-FE
*12 :1KD-FTV
*19 :5-Door
*24 :w/ Seat Heater (Front)
*25 :w/o Seat Heater (Front)
*26 :w/ Seat Position Memory
*27 :w/o Seat Position Memory
*28 :w/ Climate Control Seat
*29 :w/ Power Seat Except Lumbar Support Control Only
*31 :w/o Power Seat
*32 :w/ Power Seat Lumbar Support Control Only
*34 :3-Door
*53 :w/o Entry & Start System
*68 :w/ Rear Differential Lock
*69 :w/ Power Rear No. 2 Seat with Stowing Function
*73 :w/ Blind Spot Monitor System
*74 :w/ Fuel Sub Tank w/o DPF

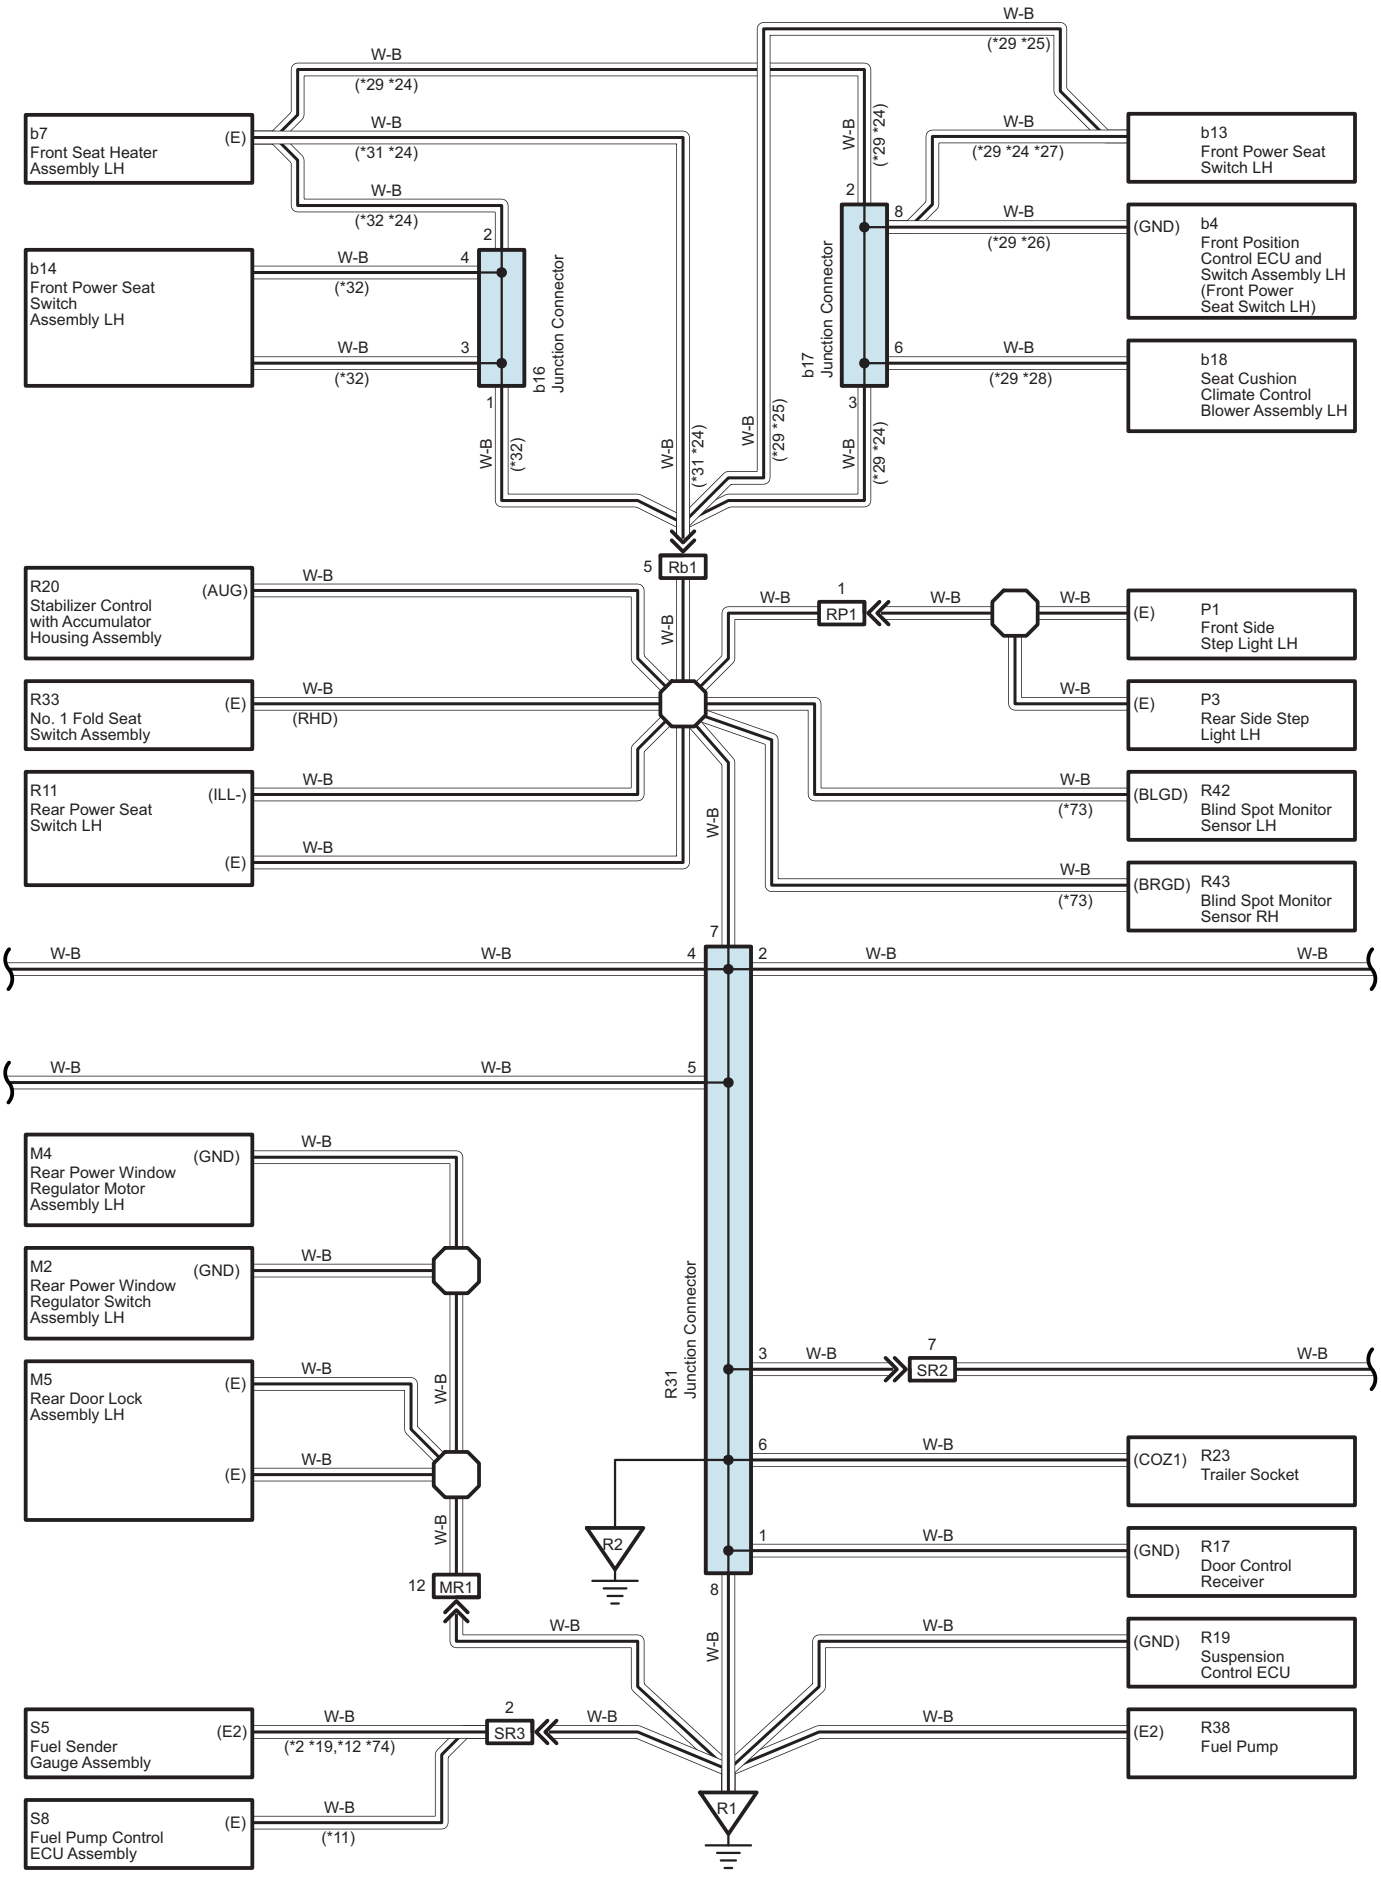
b7
Front Seat Heater Assembly LH
(E)
b14
Front Power Seat Switch Assembly LH
b16
Junction Connector
b17
Junction Connector
b13
Front Power Seat Switch LH
(GND)
b4
Front Position Control ECU and Switch Assembly LH (Front Power Seat Switch LH)
b18
Seat Cushion Climate Control Blower Assembly LH
Rb1
RP1
R20
Stabilizer Control with Accumulator Housing Assembly
(AUG)
R33
No. 1 Fold Seat Switch Assembly
R11
Rear Power Seat Switch LH
(ILL-)
P1
Front Side Step Light LH
P3
Rear Side Step Light LH
R42
Blind Spot Monitor Sensor LH
(BLGD)
R43
Blind Spot Monitor Sensor RH
(BRGD)
R31
Junction Connector
M4
Rear Power Window Regulator Motor Assembly LH
M2
Rear Power Window Regulator Switch Assembly LH
M5
Rear Door Lock Assembly LH
MR1
SR2
SR3
R2
R1
R23
Trailer Socket
(COZ1)
R17
Door Control Receiver
R19
Suspension Control ECU
R38
Fuel Pump
(E2)
S5
Fuel Sender Gauge Assembly
S8
Fuel Pump Control ECU Assembly
W-B
(*29 *25)
(*29 *24)
(*31 *24)
(*32 *24)
(*29 *24 *27)
(*29 *26)
(*29 *28)
(*32)
(*31 *24)
(*29 *25)
(*29 *24)
(RHD)
(*73)
(*2 *19,*12 *74)
(*11)

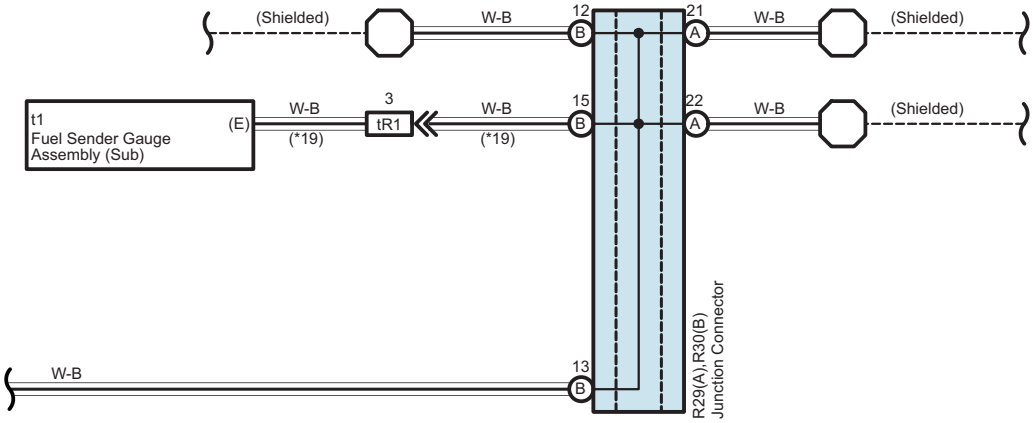
(Shielded)
W-B
12
B
21
A
W-B
(Shielded)
t1
Fuel Sender Gauge Assembly (Sub)
(E)
W-B
(*19)
3
tR1
W-B
(*19)
15
B
22
A
W-B
(Shielded)
W-B
13
B
R29(A),R30(B) Junction Connector

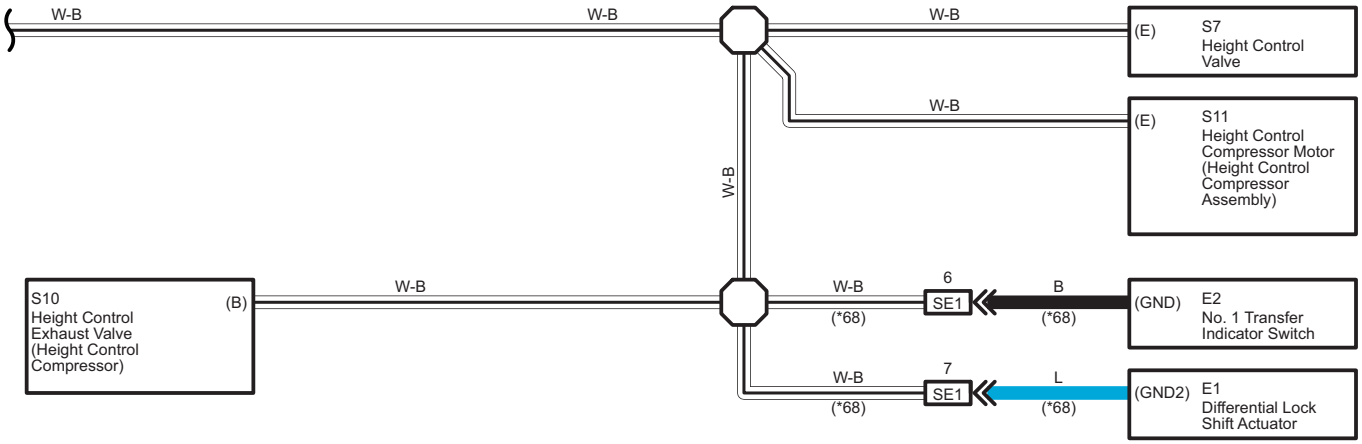
W-B
W-B
W-B
(E)
S7
Height Control Valve
W-B
(E)
S11
Height Control Compressor Motor (Height Control Compressor Assembly)
W-B
S10
Height Control Exhaust Valve (Height Control Compressor)
(B)
W-B
W-B
(*68)
6
SE1
B
(*68)
(GND)
E2
No. 1 Transfer Indicator Switch
W-B
(*68)
7
SE1
L
(*68)
(GND2)
E1
Differential Lock Shift Actuator

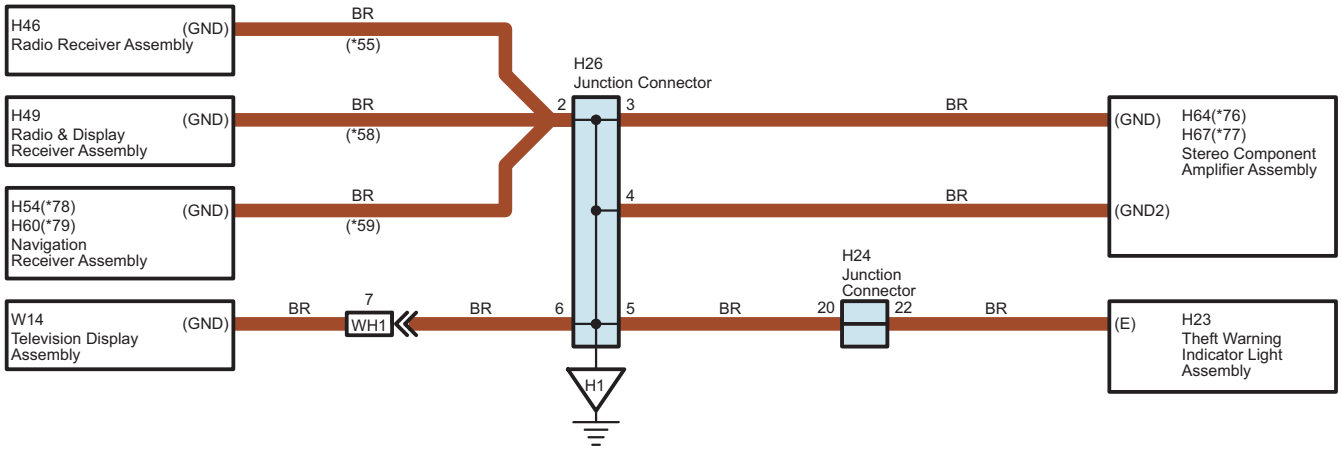

*19 :5-Door
*55 :Radio Receiver Assembly Type
*58 :Radio & Display Receiver Assembly Type
*59 :Navigation Receiver Assembly Type
*68 :w/ Rear Differential Lock
*76 :JBL Type
*77 :PIONEER Type
*78 :Except China
*79 :China

A47
Gray




90980-10945

A48
Gray




90980-10946

A68
Dark Gray

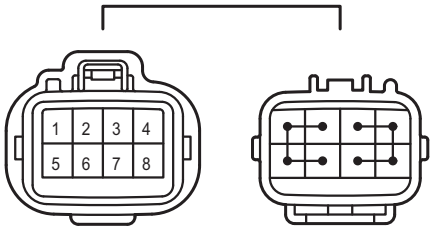


90980-10891

A70
White

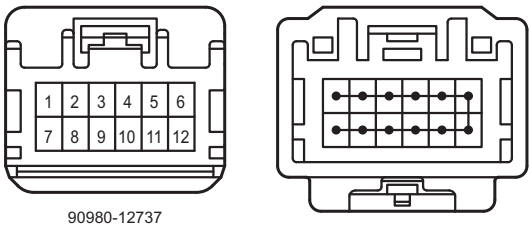


90980-12737

C48
White

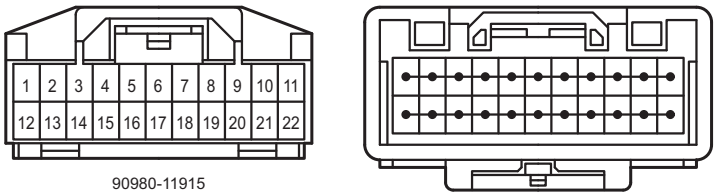


90980-11915

C136
White

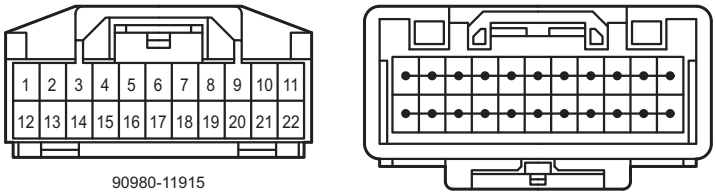


90980-11915

G104
White

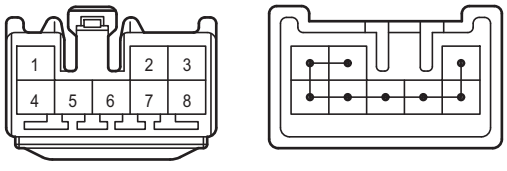


90980-11686

G105
White

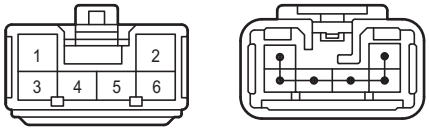


90980-10976

G106
White

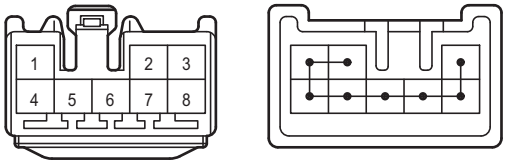


90980-11686

G126
Black

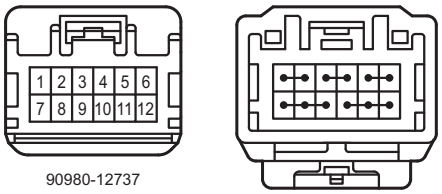


90980-12737

G127
Black

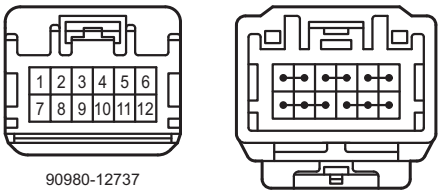


90980-12737

G128
Black

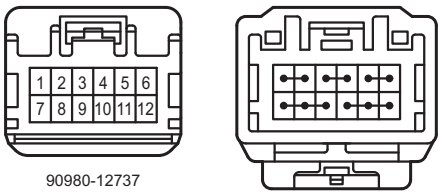


90980-12737

G129
Black

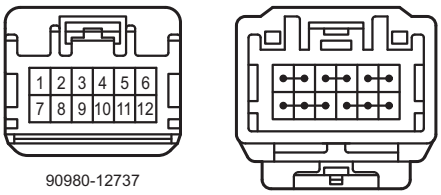


90980-12737

G140
Black

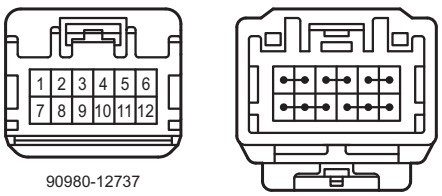


90980-12737

G141
Black

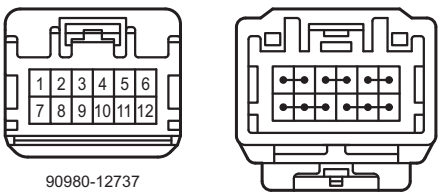


90980-12737

G143
Black

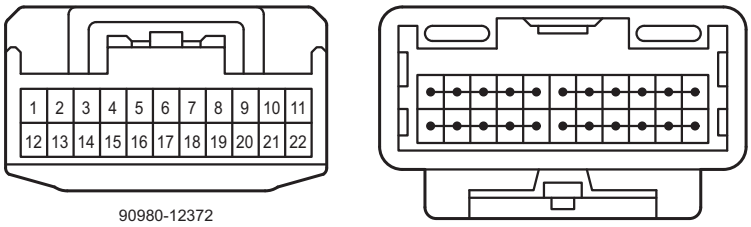


90980-12372

G164
Black

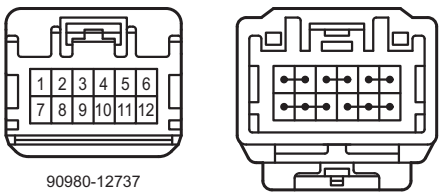


90980-12737

G165
Black

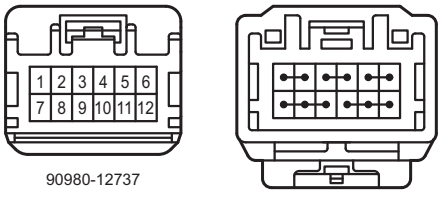


90980-12737

H24
White

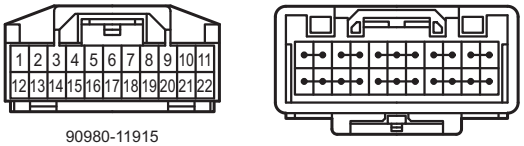


90980-11915

H26
White

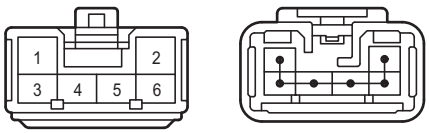


90980-10976

Q23
White

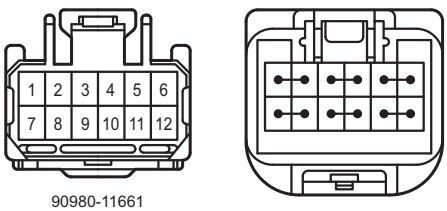


90980-11661

Q24
White

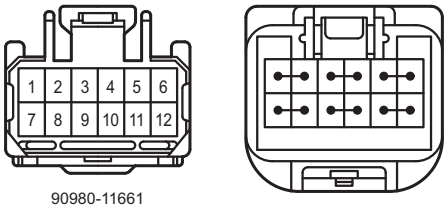


90980-11661

R27
Dark Gray

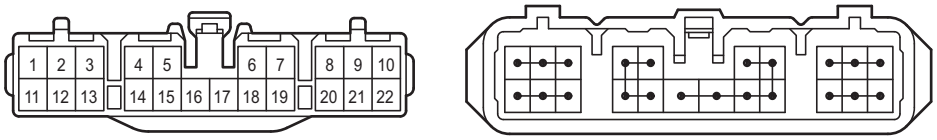


90980-11238

R28
White

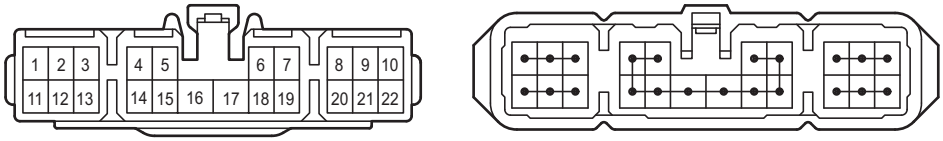


90980-10875

R29
Blue

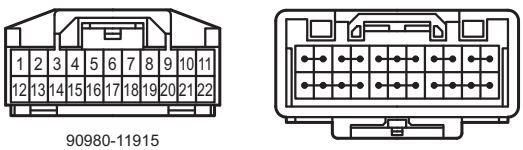


90980-11915

R30
Blue

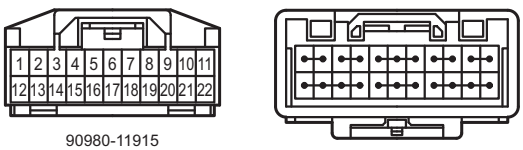

90980-11915

R31
White

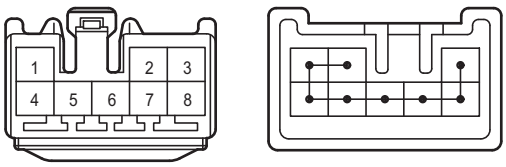


90980-11686

a16
Black



90980-11398

a17
White

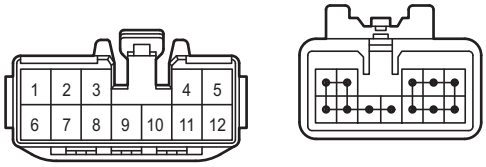


90980-12346

b16
Black



90980-11398

b17
White

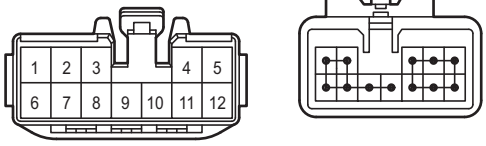


90980-12346

d7
Black




90980-11398

1 A
White

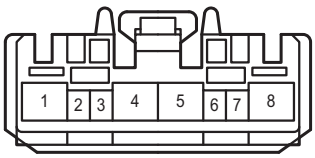


90980-12485

1 B
White

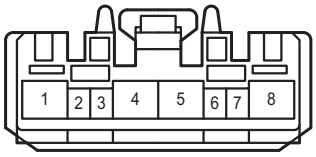


90980-12486

2 D
White

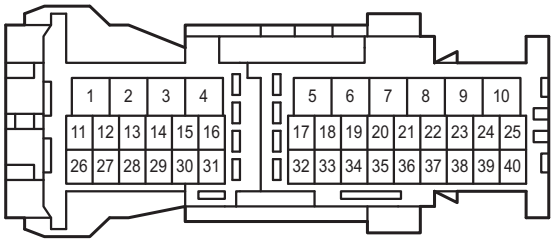


90980-12818

3 A
White

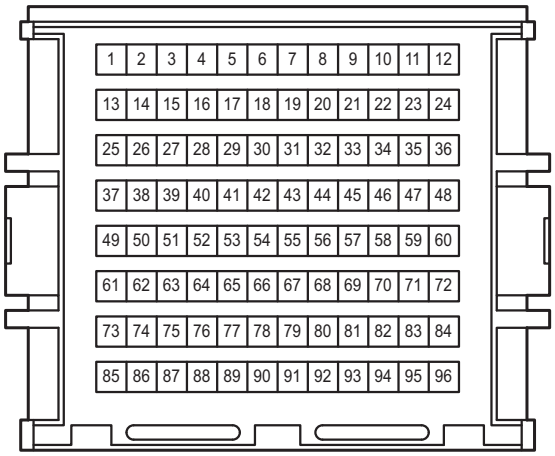


82890-12030

3 B
White

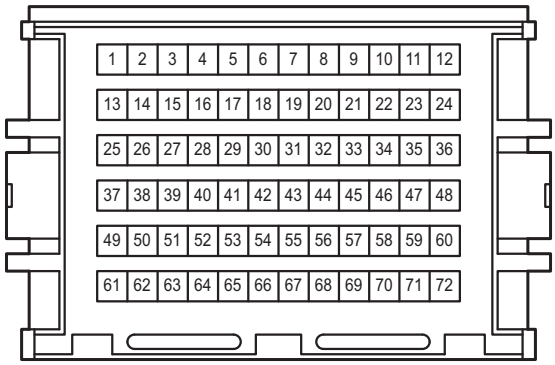


82890-42010

3 C
White

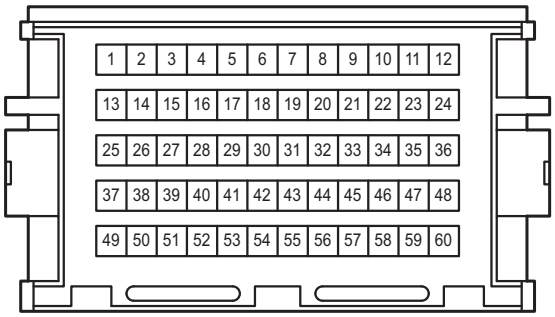


82890-12020

4 A
White

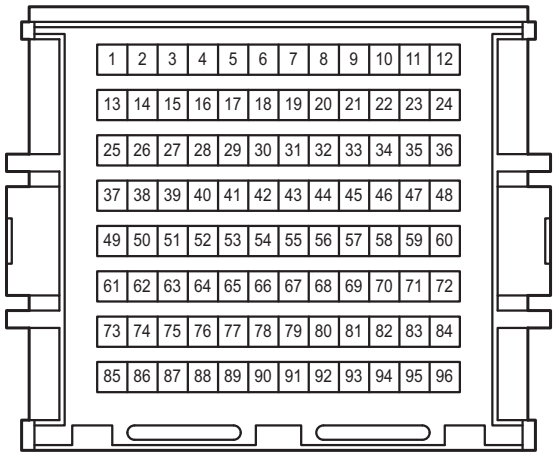


82890-12030

4 B
White

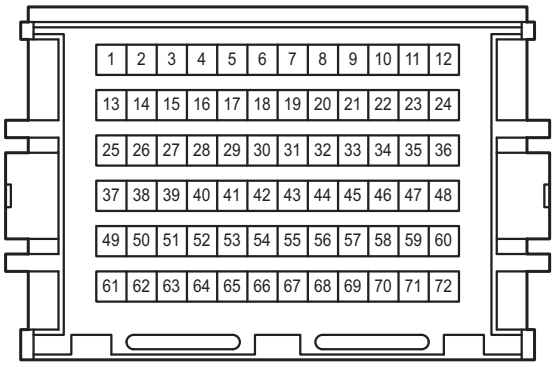

82890-42010


4 C
White

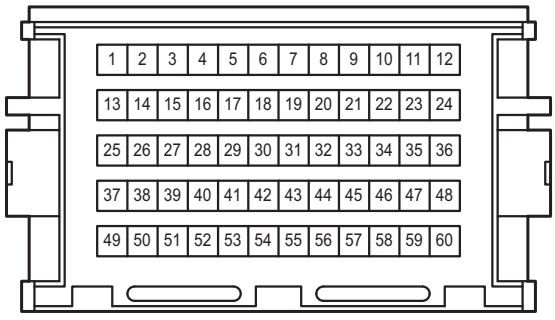


82890-12020

AC1

Black

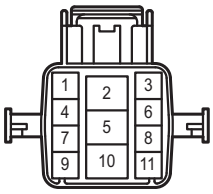

90980-11612

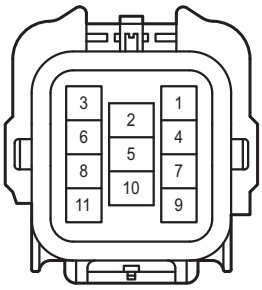

90980-11609

AC2

Dark Gray




90980-11242




90980-11241

AC3

Black

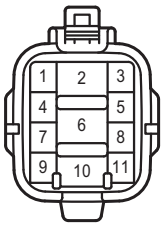


90980-11240

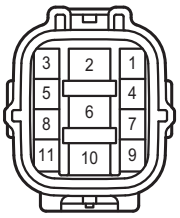


90980-11239

BA2

Gray

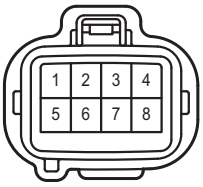


90980-10897

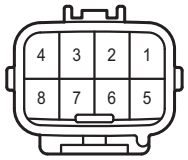


90980-10896

CG1

White

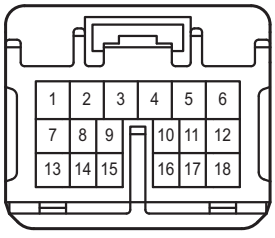


90980-12745

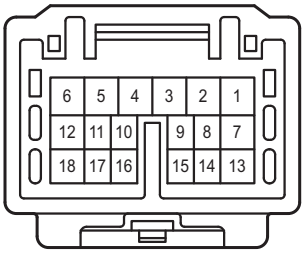


90980-12744

CG2

White

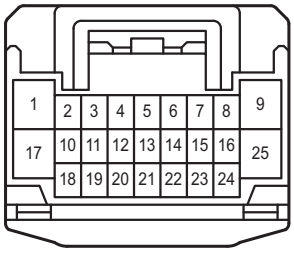


90980-12414

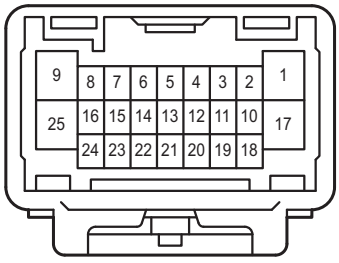


90980-12413

CG3

White

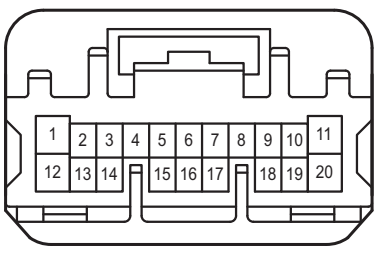


90980-12741

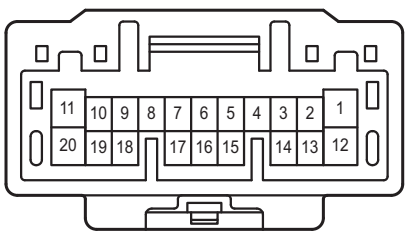


90980-12740

GA1

White

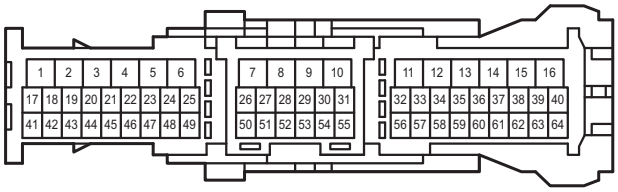


90980-12774

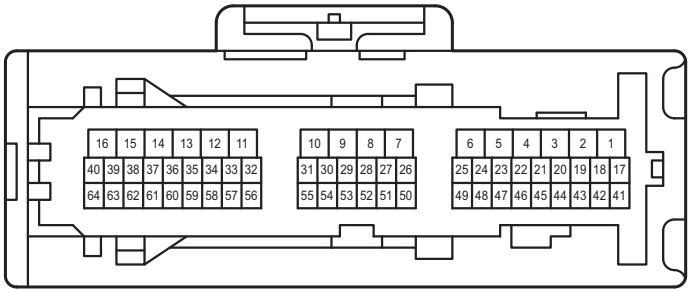


90980-12798

GA6

White

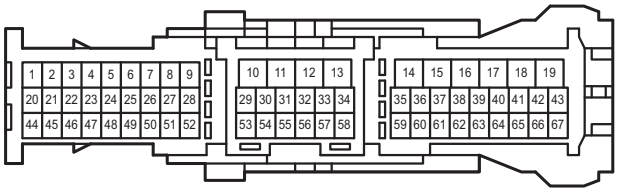


90980-12783

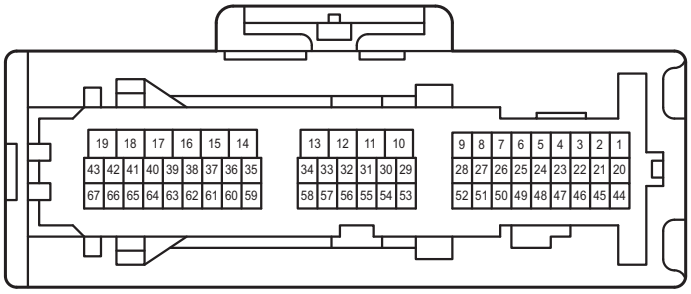


90980-12800

GA7

Black

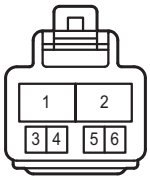


90980-10910

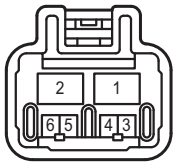


90980-10909

GH1

White

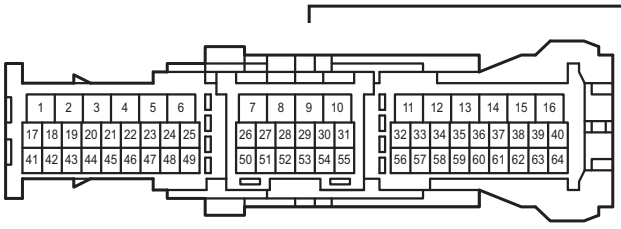


90980-12774

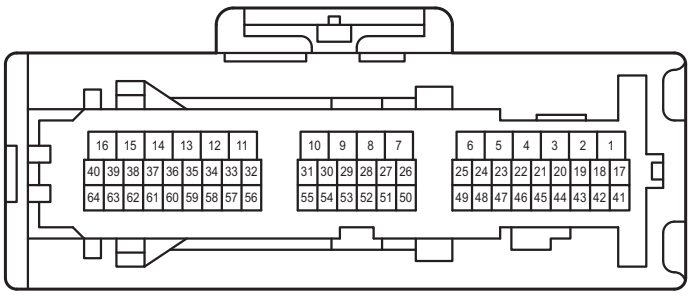


90980-12798

GQ1

White

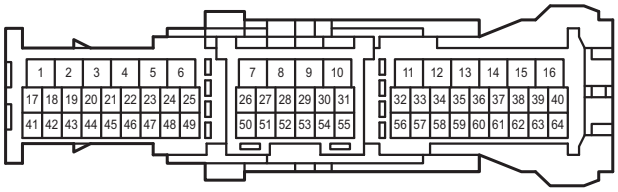


90980-12774

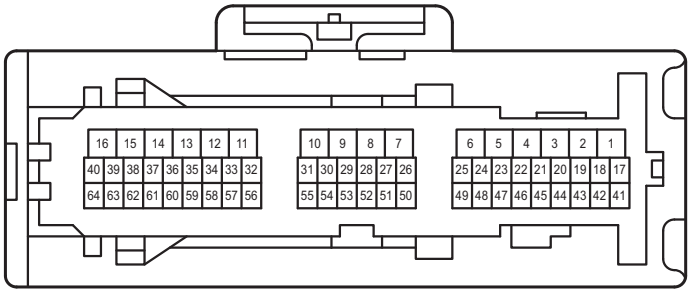


90980-12798

GR1

White

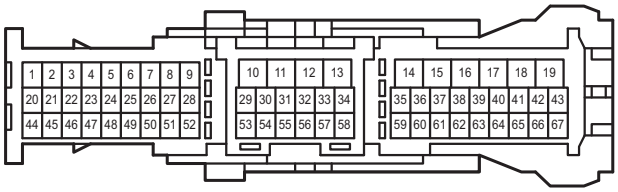


90980-12783

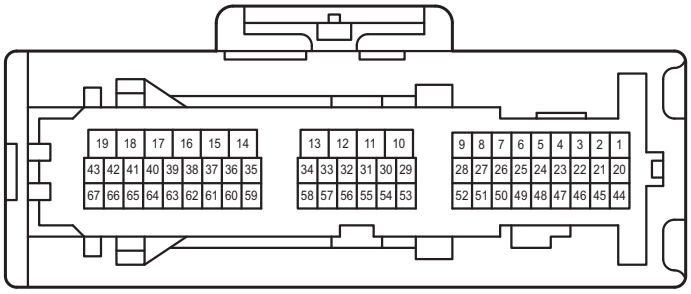


90980-12800

GR3

Blue

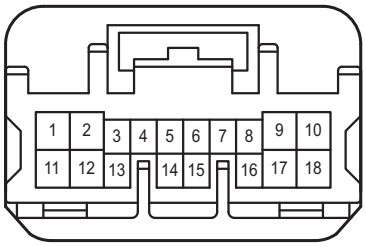


90980-12739

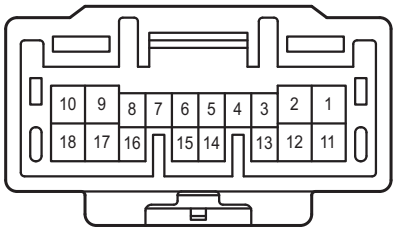


90980-12738

Gi1

White

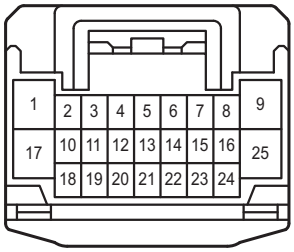


90980-12414

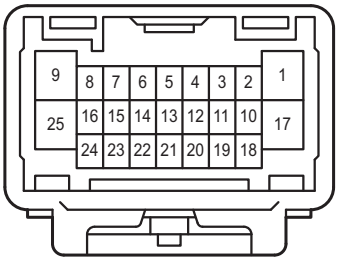


90980-12413

Hy1

White

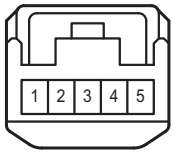


90980-12366

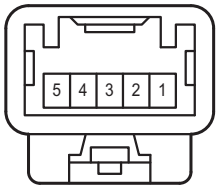


90980-12365

IG1

White

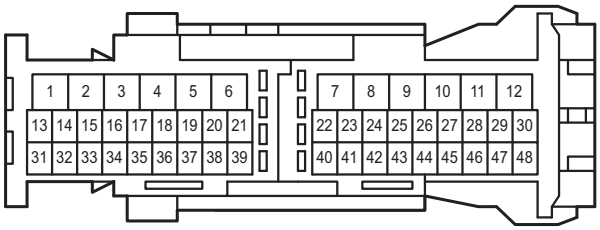


90980-12779

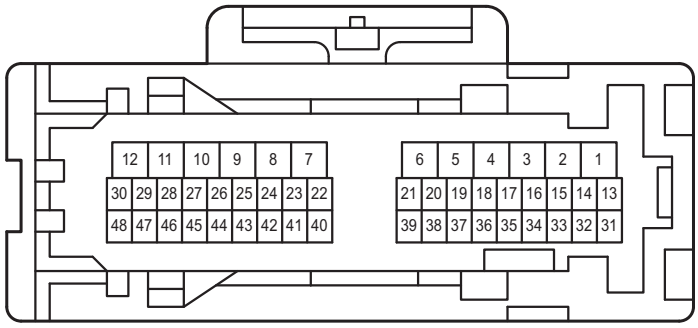


90980-12799

JG3

Black

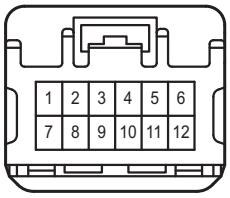


90980-12737

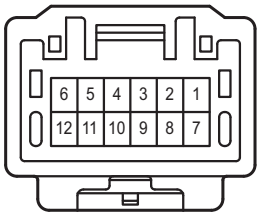


90980-12736

KG3

Black

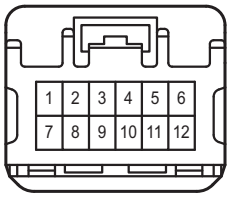


90980-12737

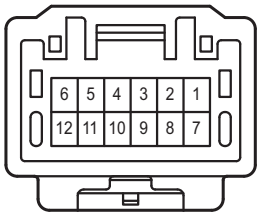


90980-12736

LQ1

White

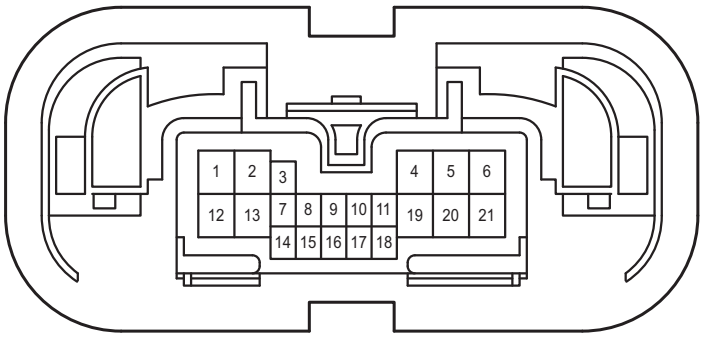


90980-12671

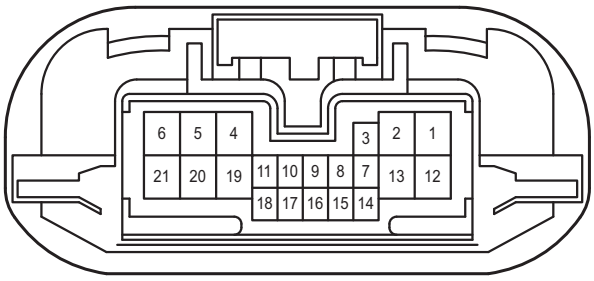


90980-12670

MR1

White

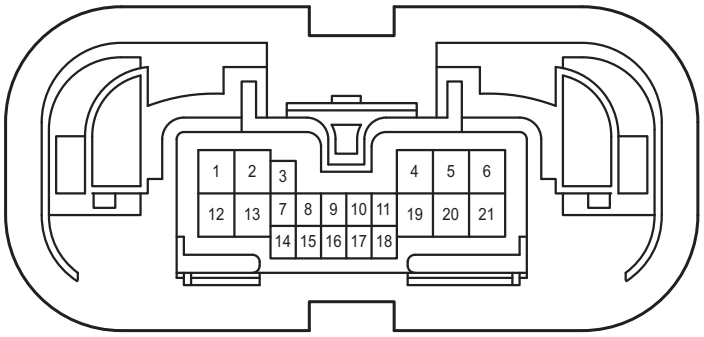

90980-12671

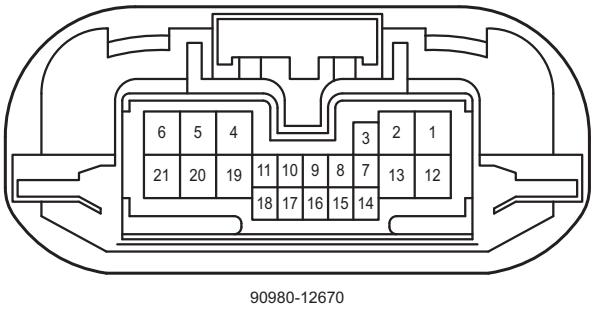


90980-12670

NJ1

White



90980-12368

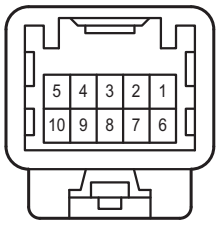


90980-12367

OK1

White



90980-12368

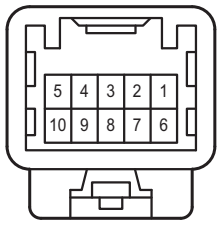

90980-12367

QP1

Gray




90980-11075




90980-11073

Qa1

White

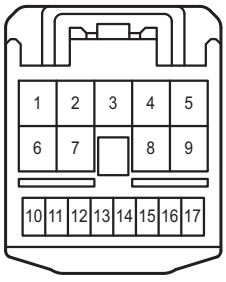


90980-12374

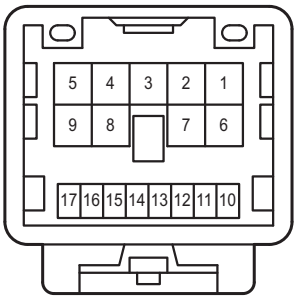


90980-12373

Qa2

Black

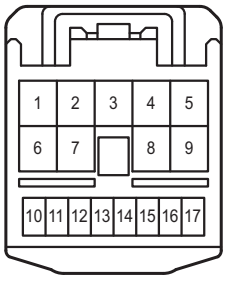


90980-12374

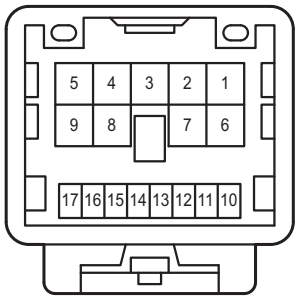


90980-12373

Qc1

White

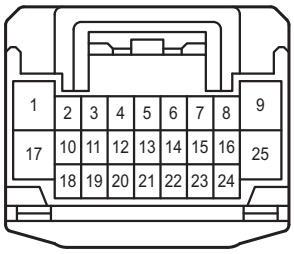


90980-12414

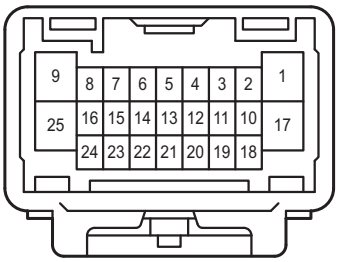


90980-12413

Qw1

White

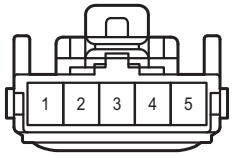

90980-10789

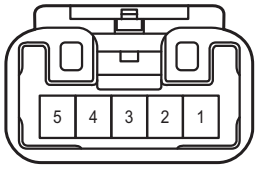

90980-11085

RP1

Gray




90980-11075




90980-11073

RQ1

White

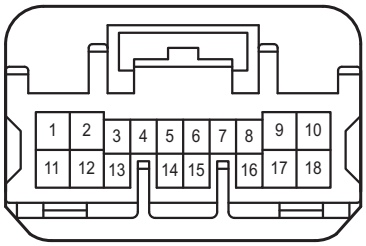


90980-12739

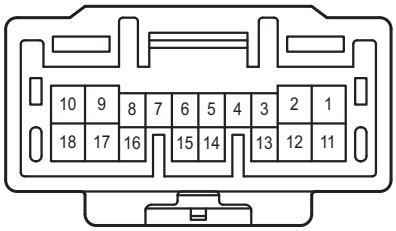


90980-12738

RS1

Black

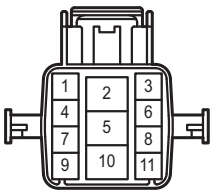

90980-11612

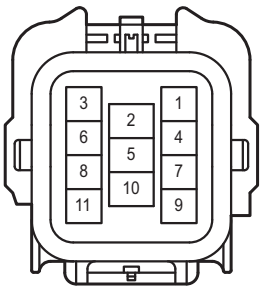

90980-11609

RV1

White




90980-10869




90980-10868

Rb1

White

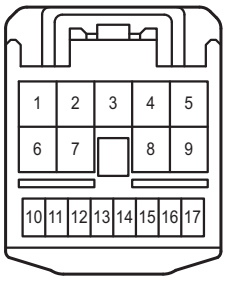


90980-12374

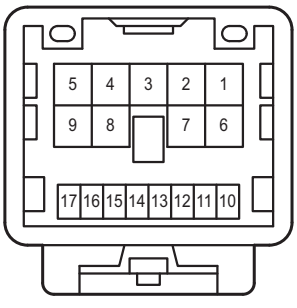


90980-12373

Rd1

White

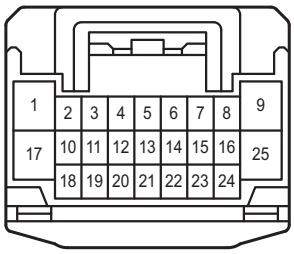


90980-12414

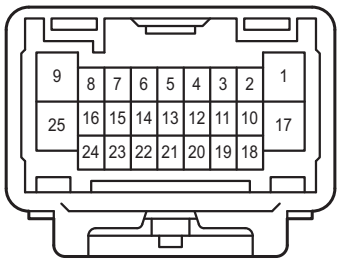


90980-12413

Rx1

White

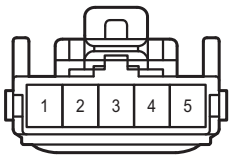

90980-10789

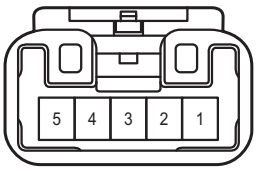


90980-11085

SE1

Gray




90980-10897

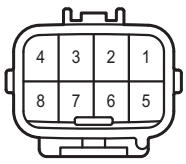


90980-10896

SR2

White

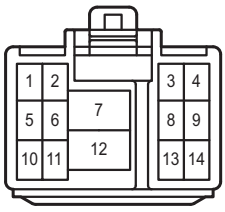

90980-10813

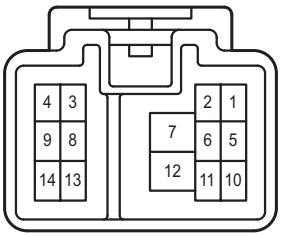

90980-10812

SR3

White




90980-10942




90980-10941

TG2

White

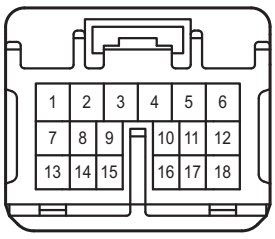

90980-12745

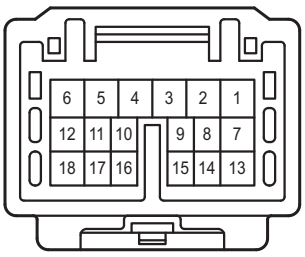

90980-12744

UQ1

Gray



90980-11194



90980-11193

UR1

Gray




90980-11194




90980-11193

WG1

White

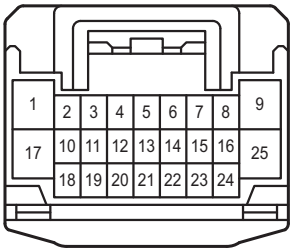


90980-12414

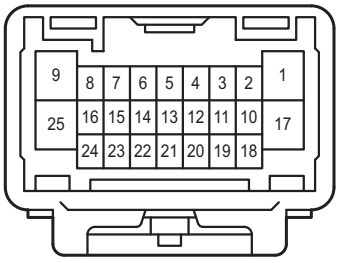


90980-12413

WH1

Gray

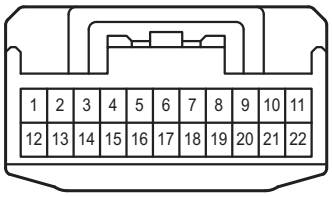


90980-12372

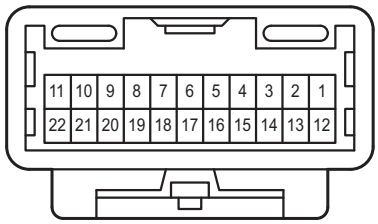


90980-12371

XQ2

White

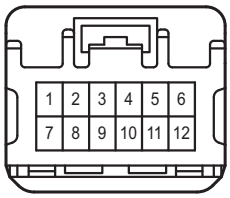


90980-12737

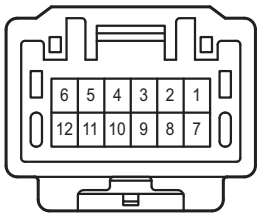


90980-12736

YX1

White

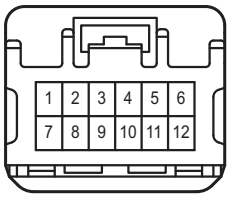


90980-12737

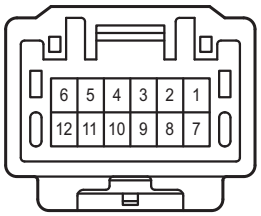


90980-12736

YX2

White

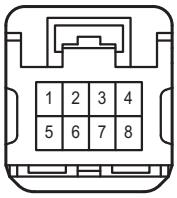

90980-12735

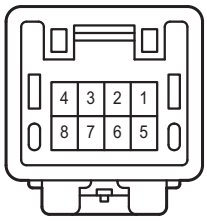


90980-12734

YZ1

White



90980-11003

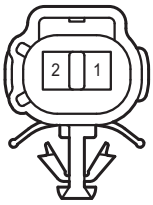

90980-11002

tR1

Gray



90980-11599



90980-11598

zX1

Dark Gray



90980-11194



90980-11193