





G116
Multiplex Tilt &
Telescopic ECU
CANP
CANN
G76(A),G163(B)
Driving Support
Switch Control ECU
(M/T)
(A/T)
P
W
(*1)
GR
(*2)
R
(*1)
G96
Junction Connector
B
(*4)
(*4)
GA2
29
30
A73
Junction Connector
A47(A),A48(B)
Short Connector
L
(*3)
GR3
7
8
LG
Rb1
16
17
G103
Junction Terminal
W-B
94
96
3A
G104
Junction
Connector
G3
V
(*5)
CANH
CANL
11
25
40
39
b5(B)
Front Position Control ECU and
Switch Assembly LH
(Front Power Seat Switch LH)
A7
Brake Actuator Assembly
G6(A)
Combination Meter Assembly

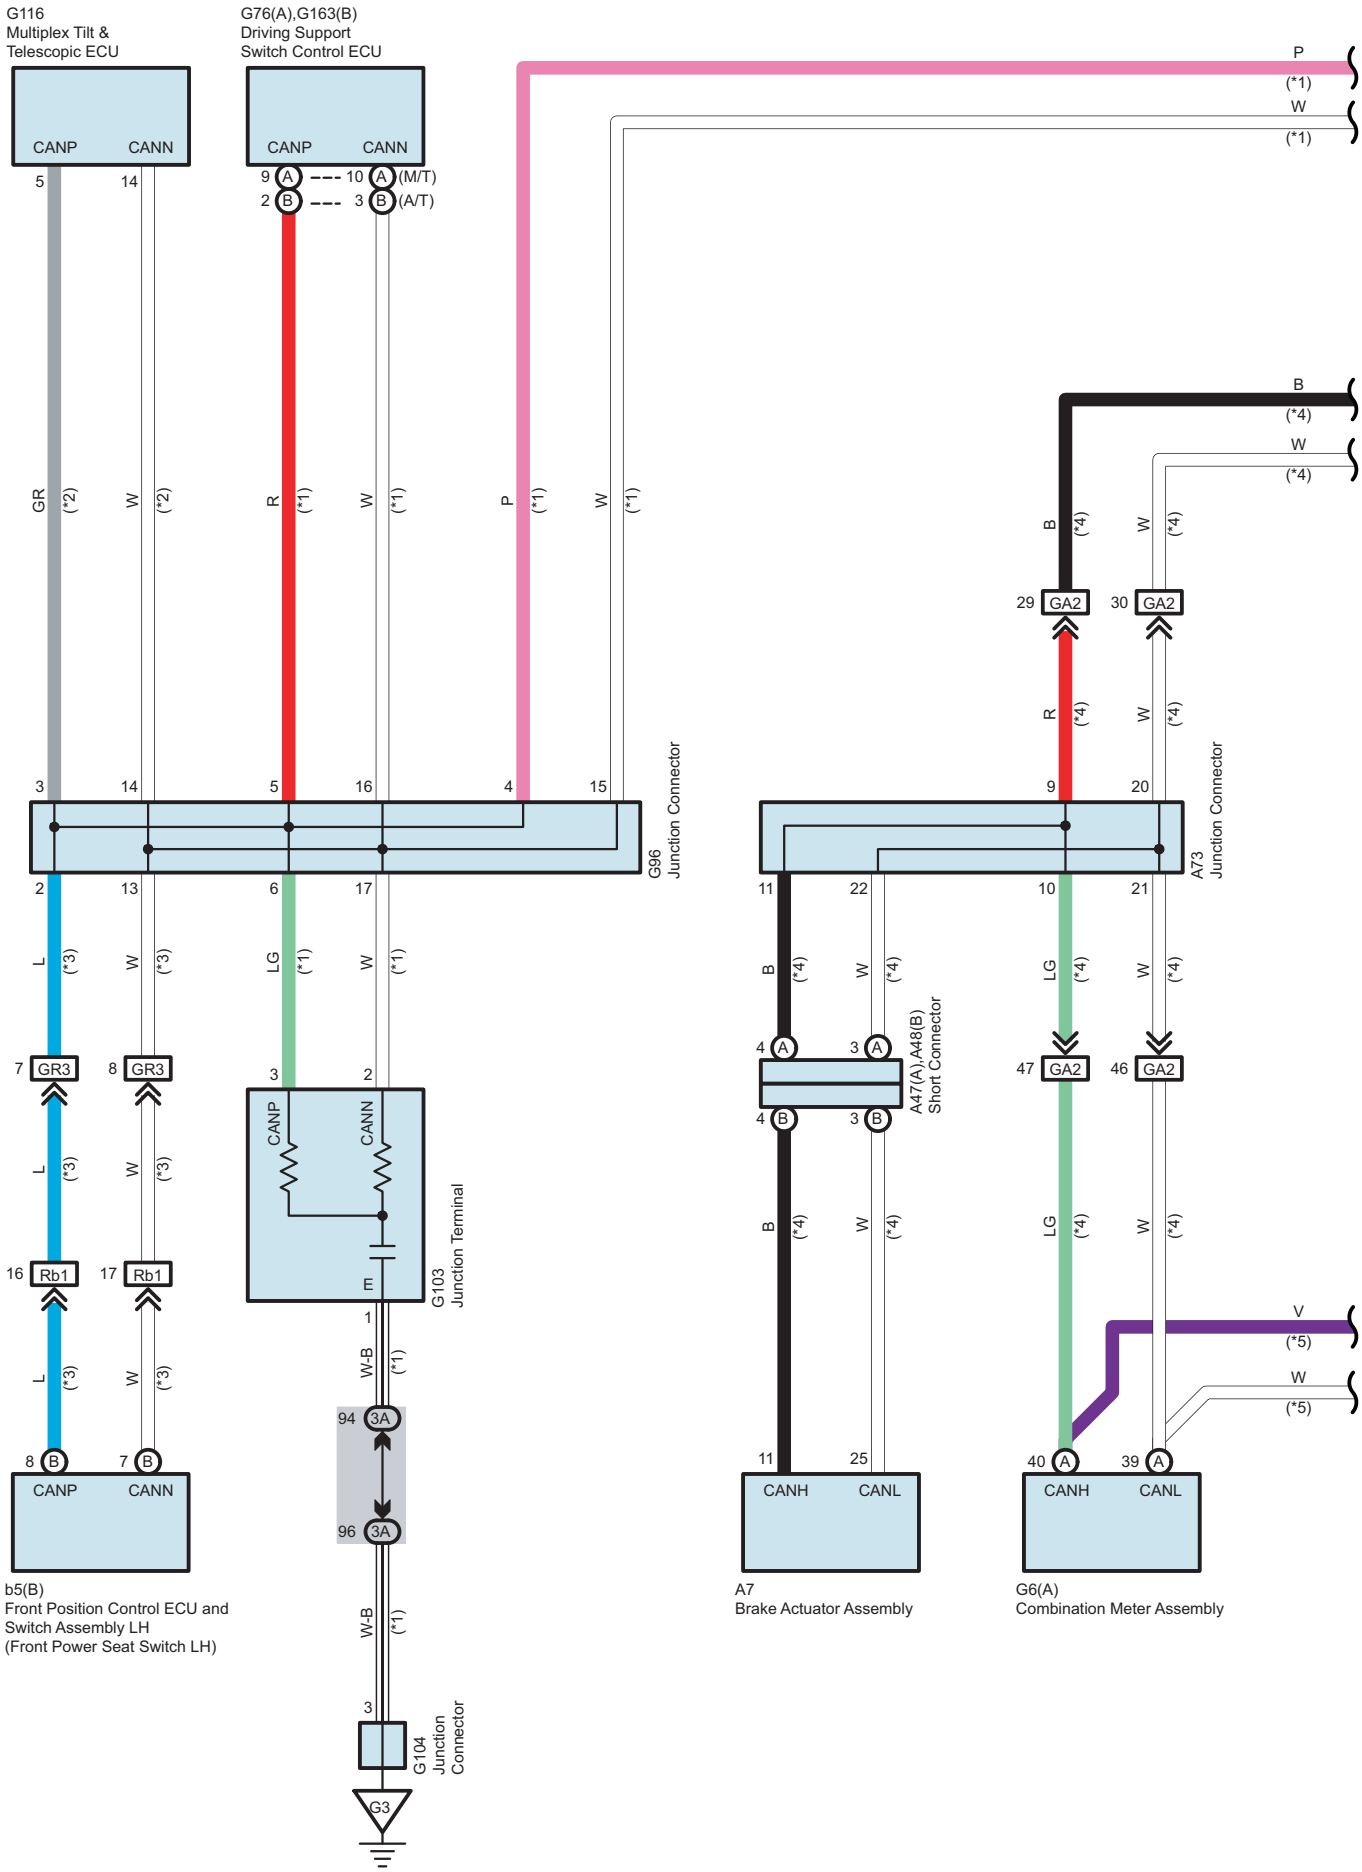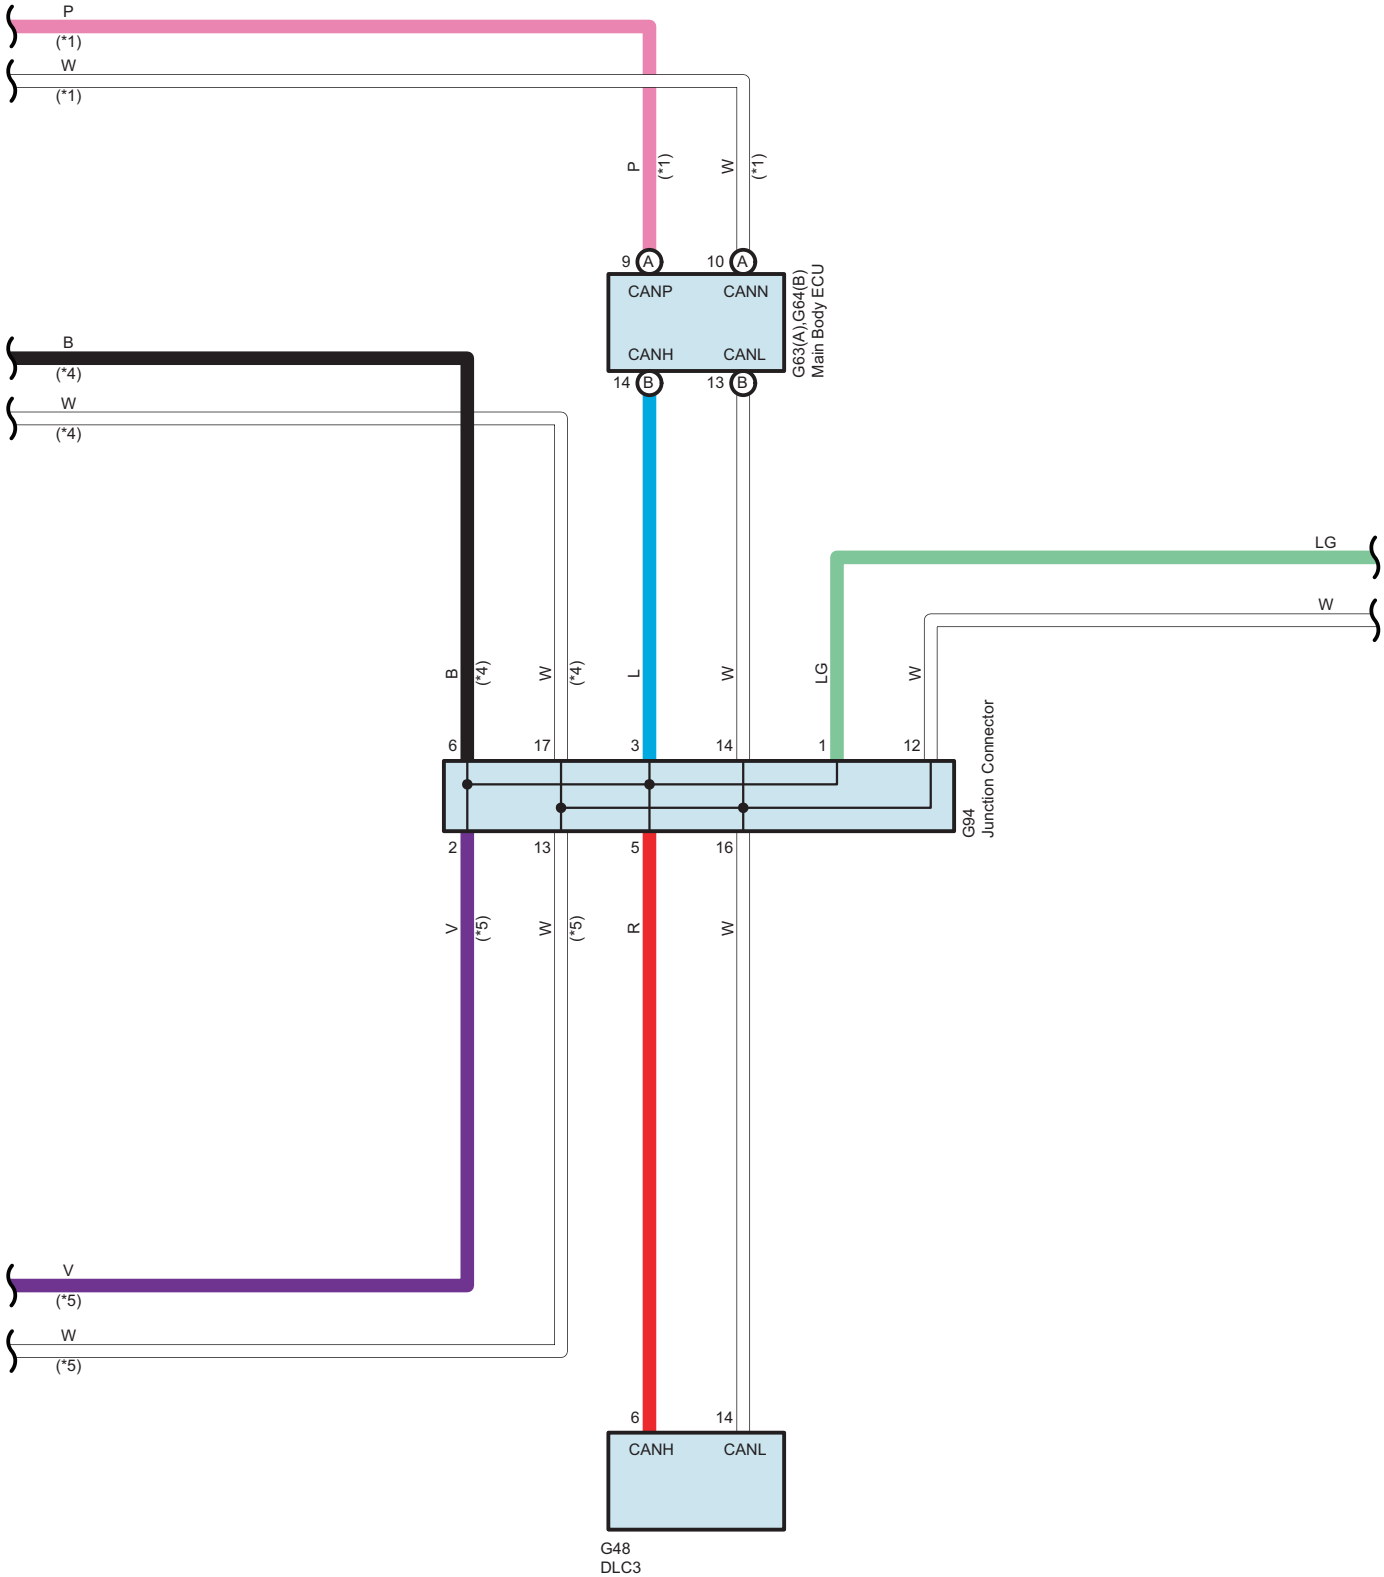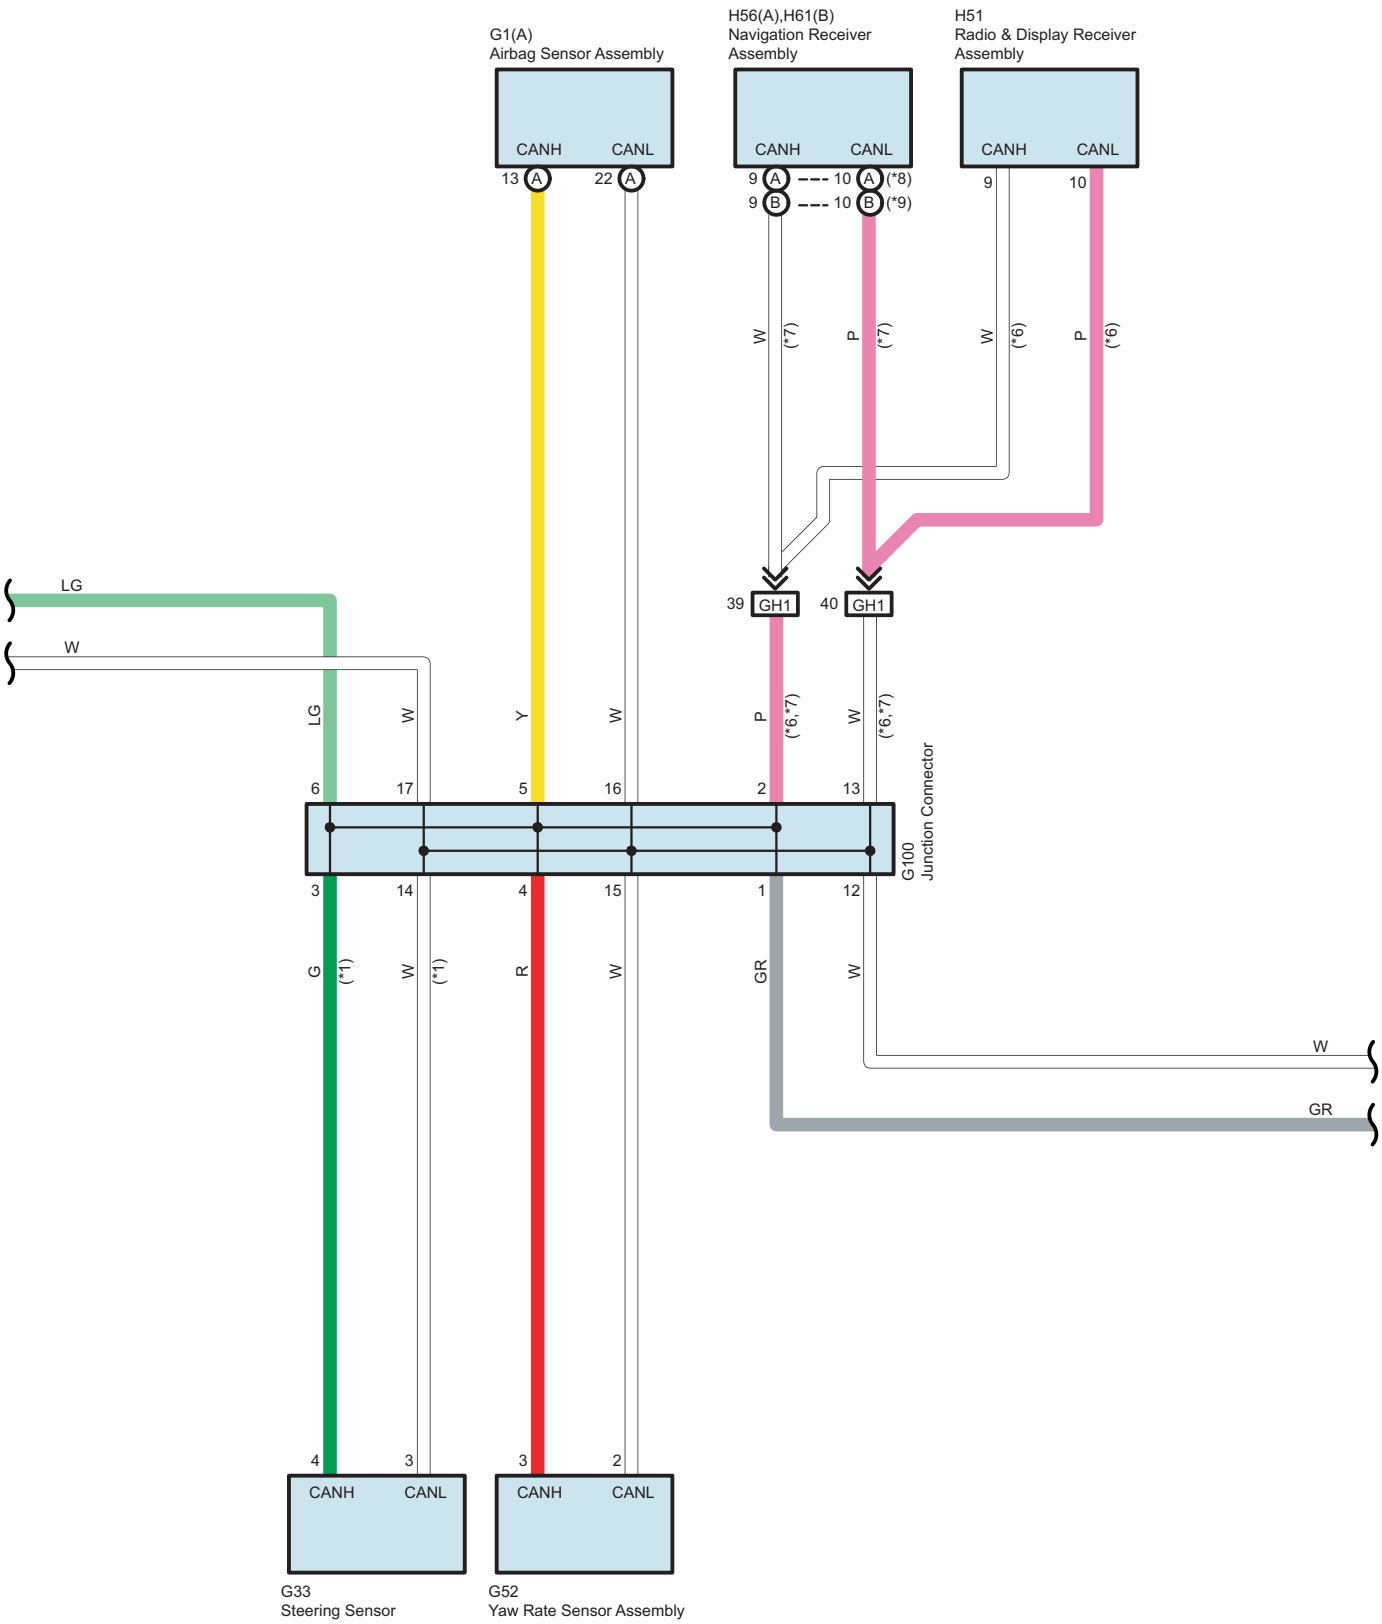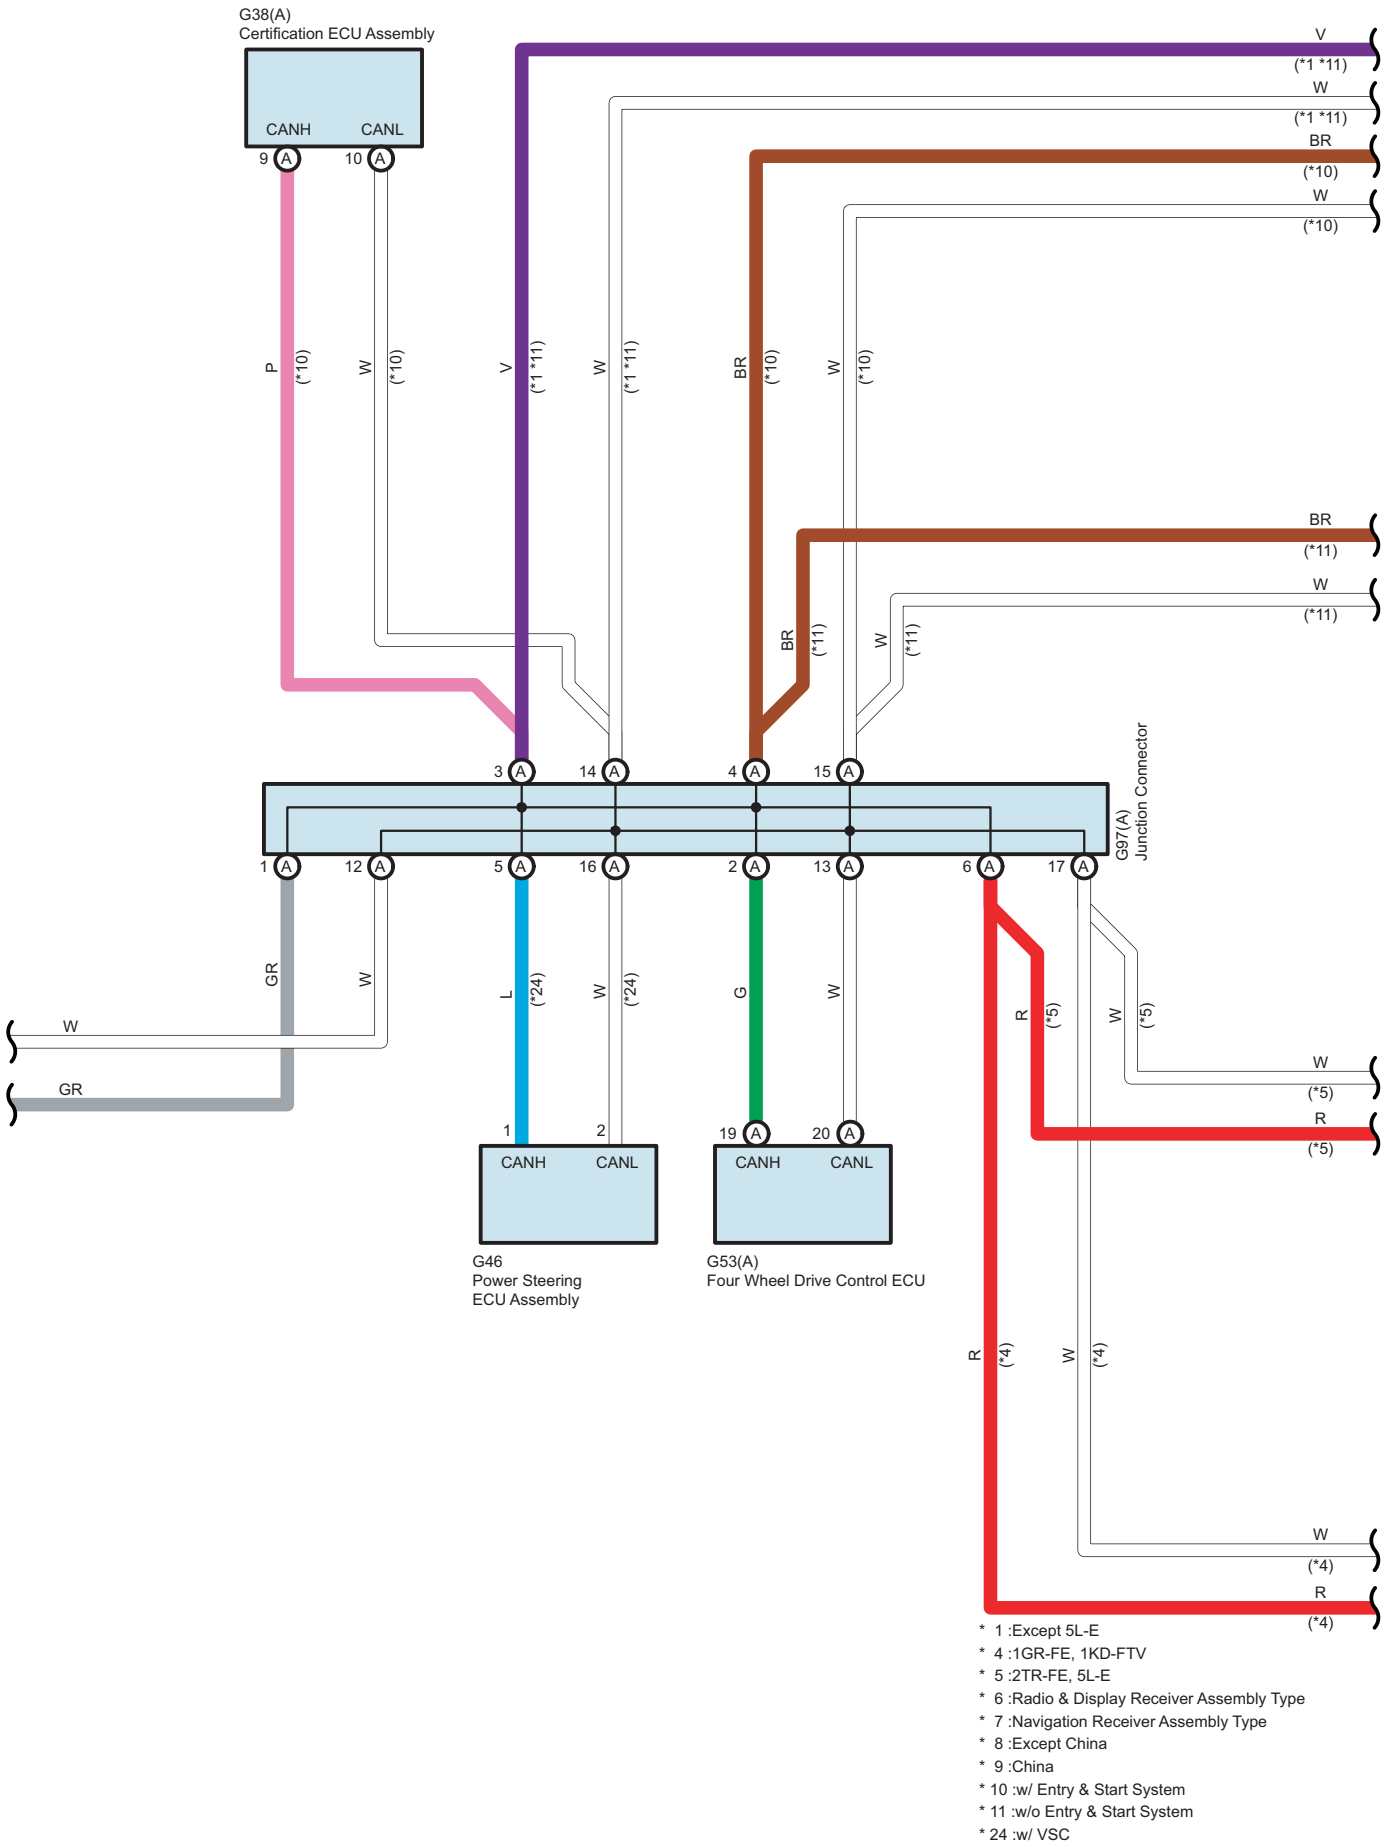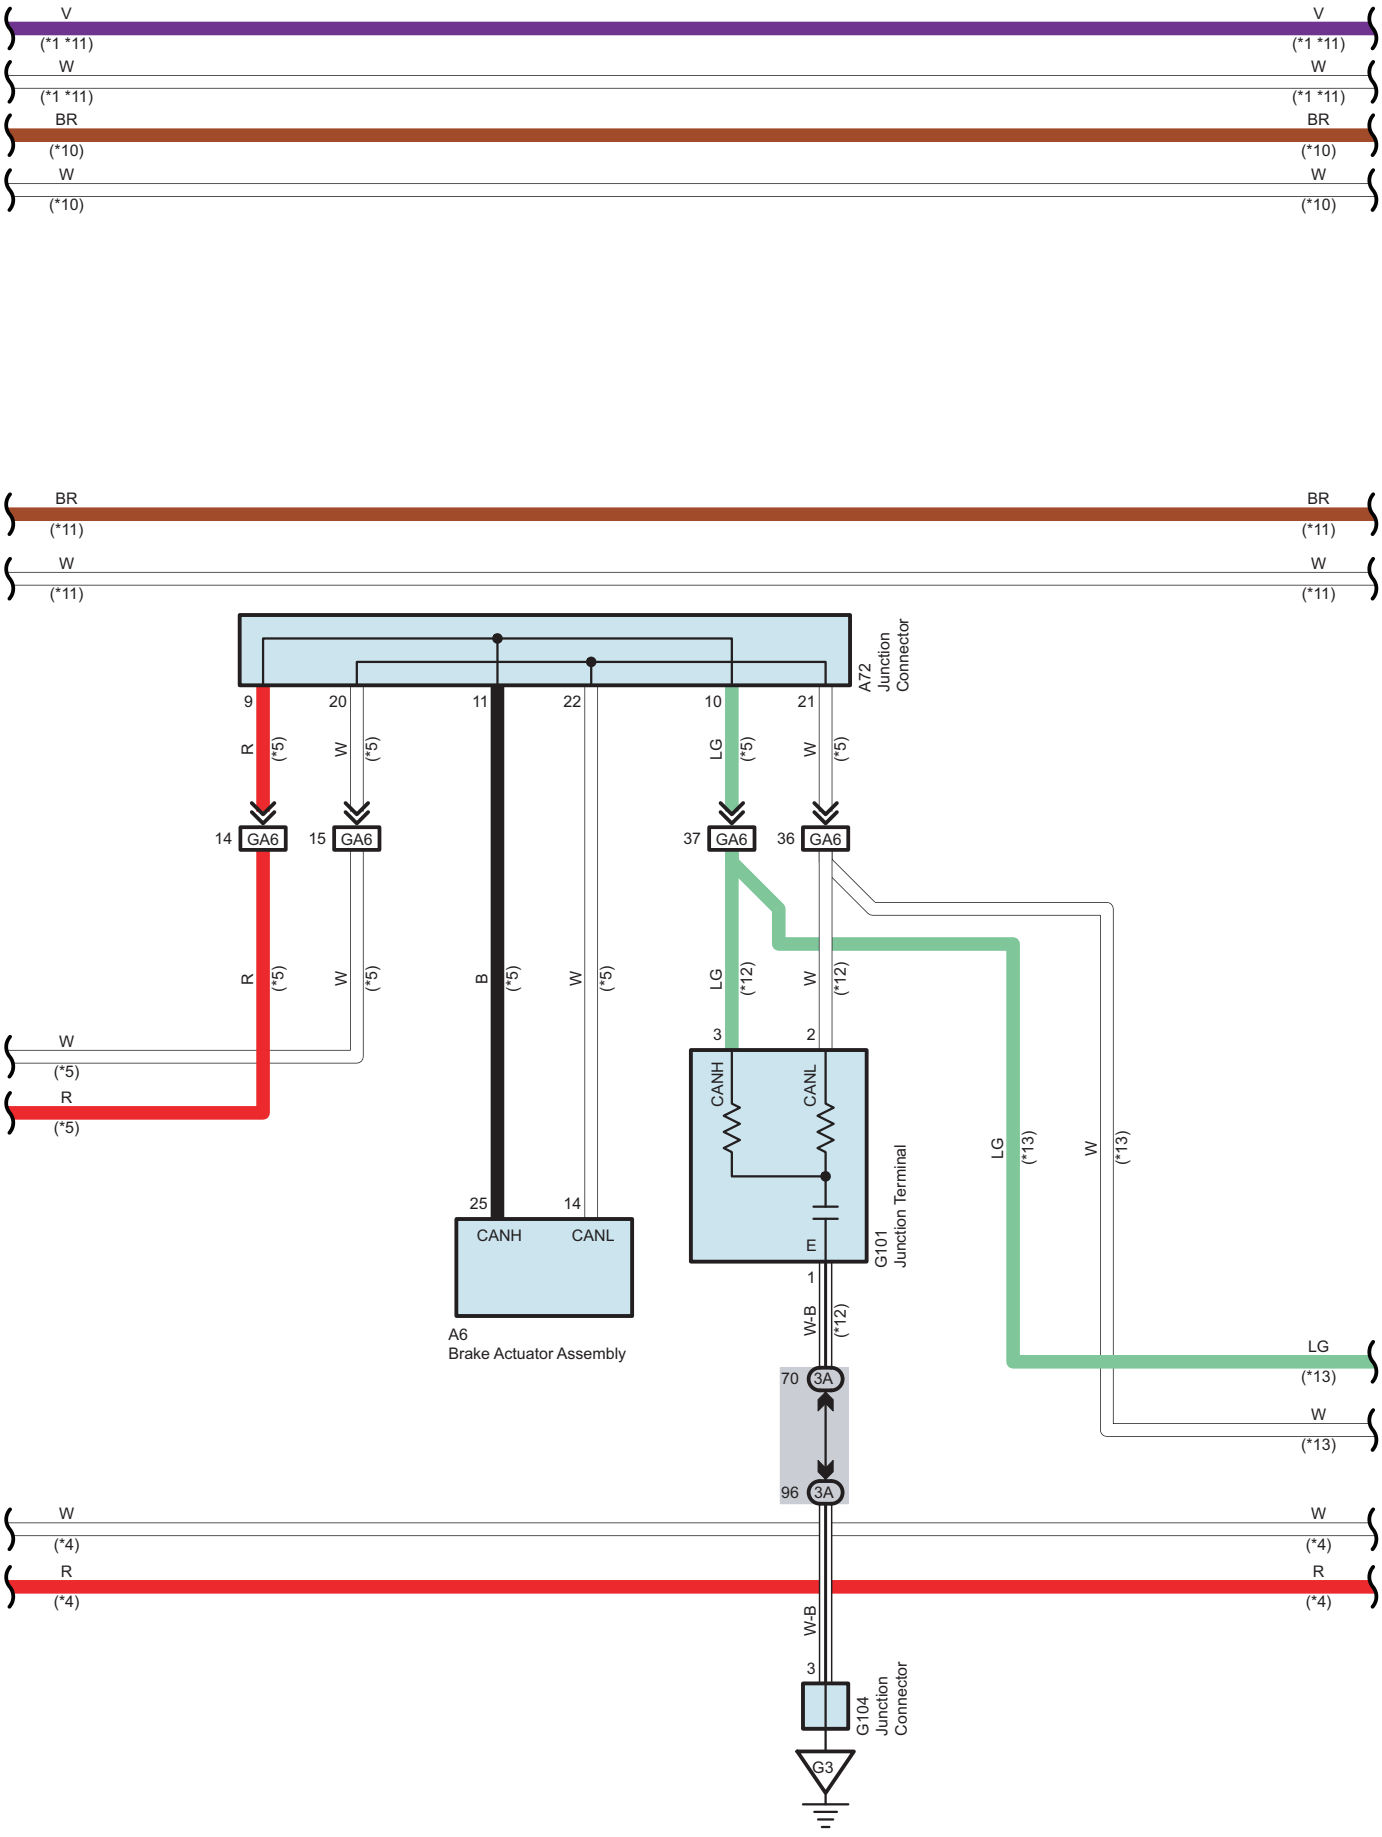


* 1 :Except 5L-E
* 2 :w/ Power Tilt and Power Telescopic
* 3 :w/ Power Seat (LHD Driver's Seat w/ Seat Position Memory)
* 4 :1GR-FE, 1KD-FTV
* 5 :2TR-FE, 5L-E



G1(A)
Airbag Sensor Assembly
CANH
CANL
13 A
22 A
H56(A),H61(B)
Navigation Receiver
Assembly
9 A
10 A
(*8)
9 B
10 B
(*9)
H51
Radio & Display Receiver
Assembly
9
10
W
(*7)
P
(*7)
W
(*6)
P
(*6)
LG
W
39 GH1
40 GH1
LG
W
Y
W
P
(*6, *7)
W
(*6, *7)
6
17
5
16
2
13
G100
Junction Connector
3
14
4
15
1
12
G
(*1)
W
(*1)
R
W
GR
W
GR
4
3
3
2
G33
Steering Sensor
G52
Yaw Rate Sensor Assembly


G38(A)
Certification ECU Assembly
CANH
CANL
9 A
10 A
P (*10)
W (*10)
V (*1 *11)
W (*1 *11)
BR (*10)
W (*10)
BR (*11)
W (*11)
3 A
14 A
4 A
15 A
G97(A)
Junction Connector
1 A
12 A
5 A
16 A
2 A
13 A
6 A
17 A
GR
W
L (*24)
W (*24)
G
W
R (*5)
W (*5)
W
GR
W (*5)
R (*5)
1
2
19 A
20 A
CANH
CANL
CANH
CANL
G46
Power Steering
ECU Assembly
G53(A)
Four Wheel Drive Control ECU
R (*4)
W (*4)
W (*4)
R (*4)
* 1 :Except 5L-E
* 4 :1GR-FE, 1KD-FTV
* 5 :2TR-FE, 5L-E
* 6 :Radio & Display Receiver Assembly Type
* 7 :Navigation Receiver Assembly Type
* 8 :Except China
* 9 :China
* 10 :w/ Entry & Start System
* 11 :w/o Entry & Start System
* 24 :w/ VSC



V (*1 *11)
W (*1 *11)
BR (*10)
W (*10)
BR (*11)
W (*11)
A72 Junction Connector
9
20
11
22
10
21
R (*5)
W (*5)
LG (*5)
14 GA6
15 GA6
37 GA6
36 GA6
B (*5)
LG (*12)
W (*12)
3
2
CANH
CANL
E
G101 Junction Terminal
1
W-B (*12)
LG (*13)
W (*13)
25
14
CANH
CANL
A6 Brake Actuator Assembly
70 3A
96 3A
W (*4)
R (*4)
W-B
3
G104 Junction Connector
G3

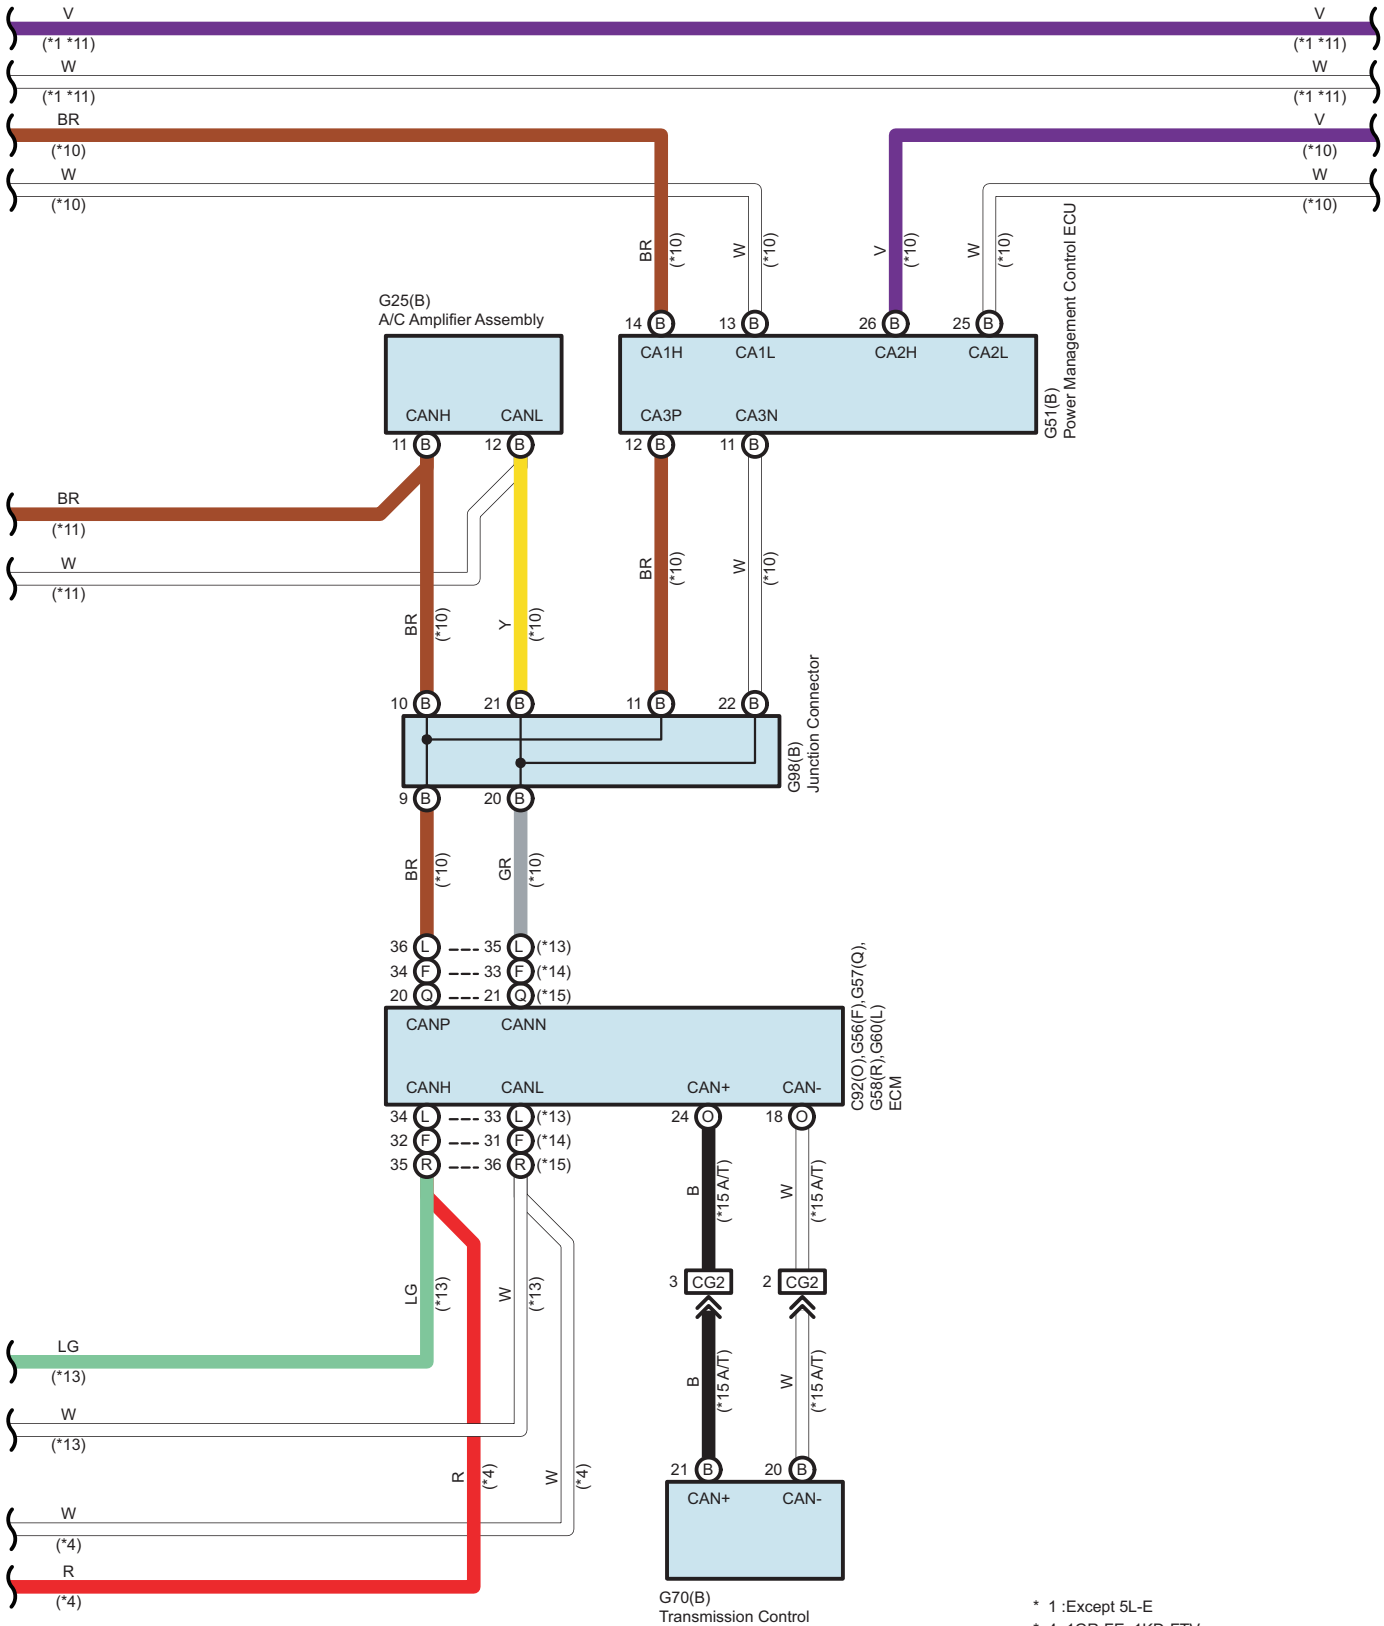


* 1 :Except 5L-E
* 4 :1GR-FE, 1KD-FTV
* 5 :2TR-FE, 5L-E
* 10 :w/ Entry & Start System
* 11 :w/o Entry & Start System
* 12 :5L-E
* 13 :2TR-FE
* 14 :1GR-FE
* 15 :1KD-FTV

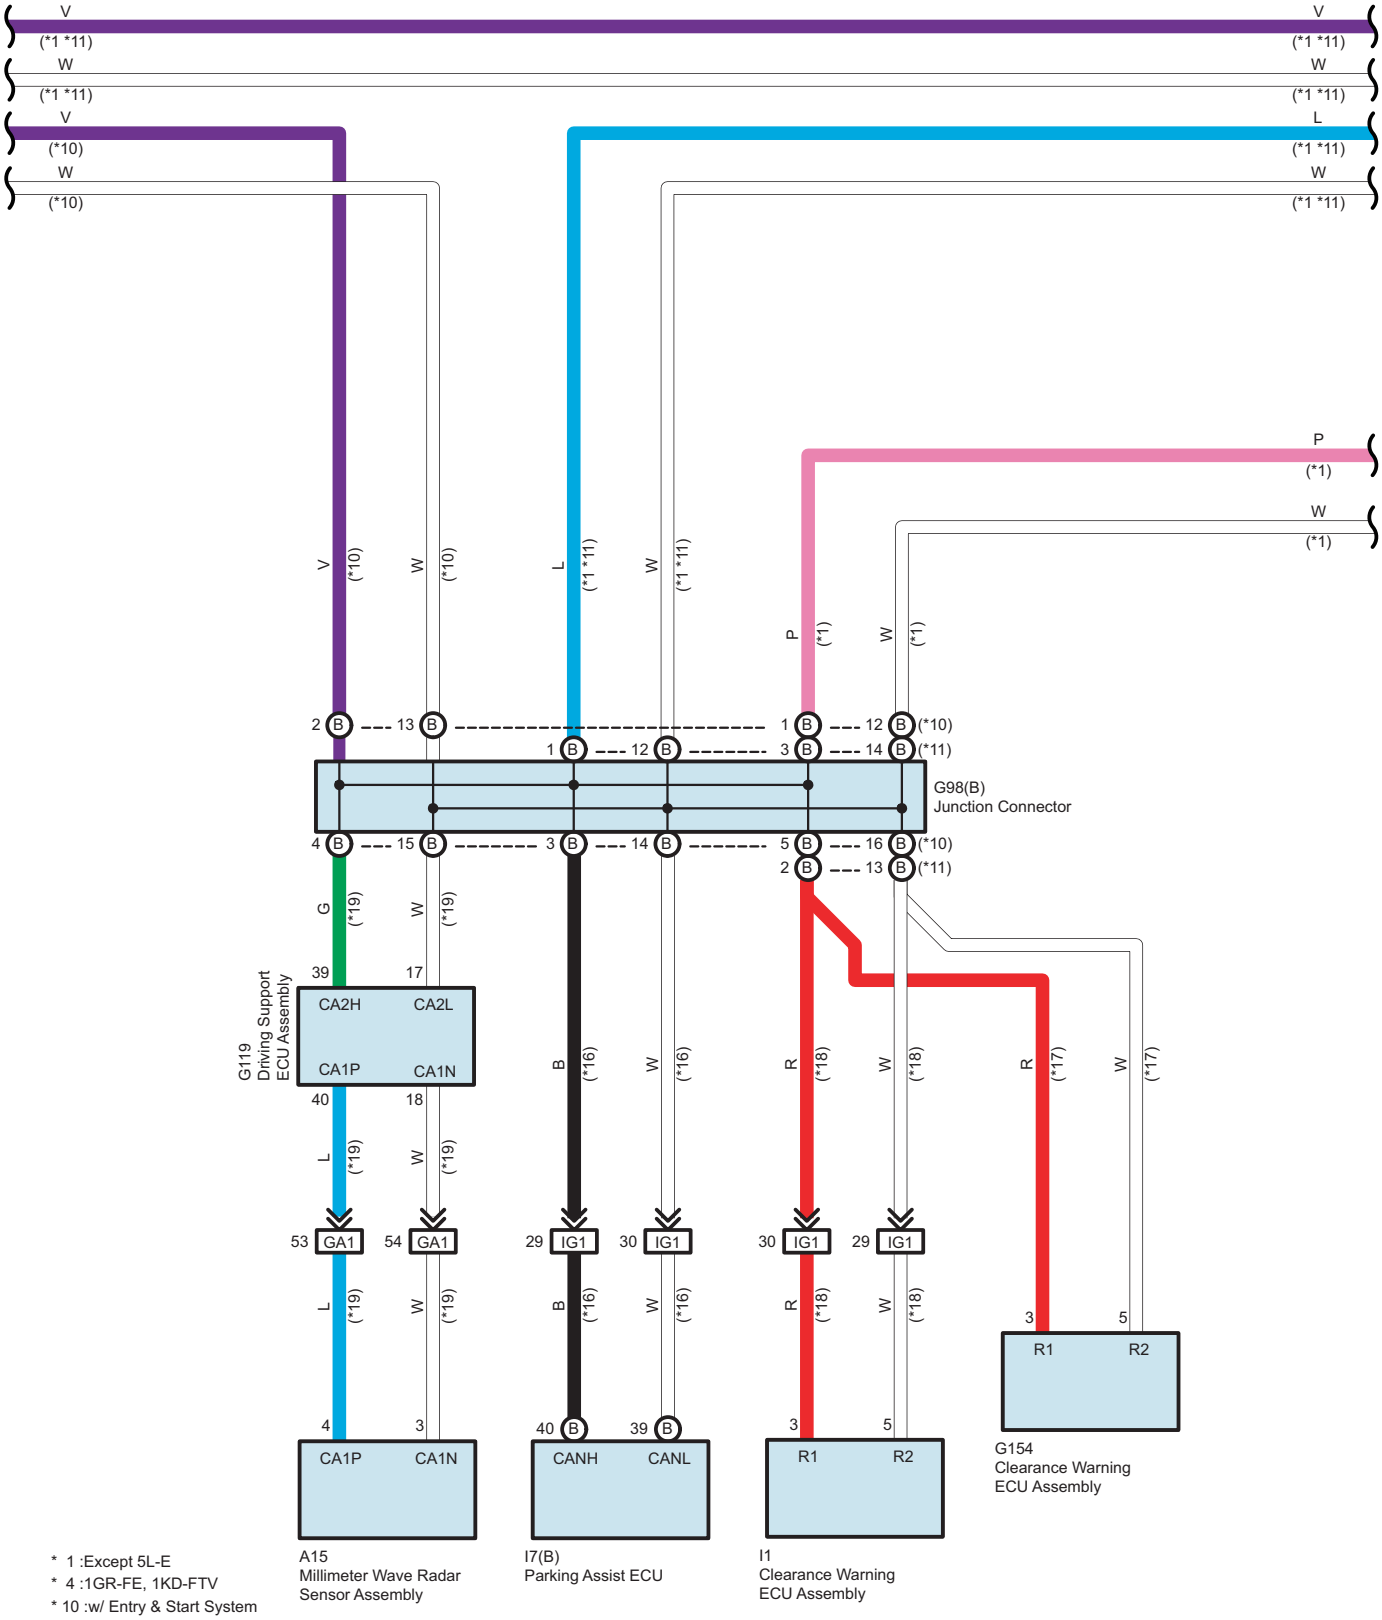


* 1 :Except 5L-E
* 4 :1GR-FE, 1KD-FTV
* 10 :w/ Entry & Start System
* 11 :w/o Entry & Start System
* 16 :w/ Multi-Terrain Monitor
* 17 :w/ Parking Assist (TOYOTA Parking Assist-Sensor 8 Sensor Type)
* 18 :w/ Parking Assist (TOYOTA Parking Assist-Sensor 4 Sensor Type)
* 19 :w/ Pre-Crash Safety System
* 20 :w/ Blind Spot Monitor System
* 21 :w/o Blind Spot Monitor System
* 22 :w/ Electronic Modulated Air Suspension
* 23 :LED Type

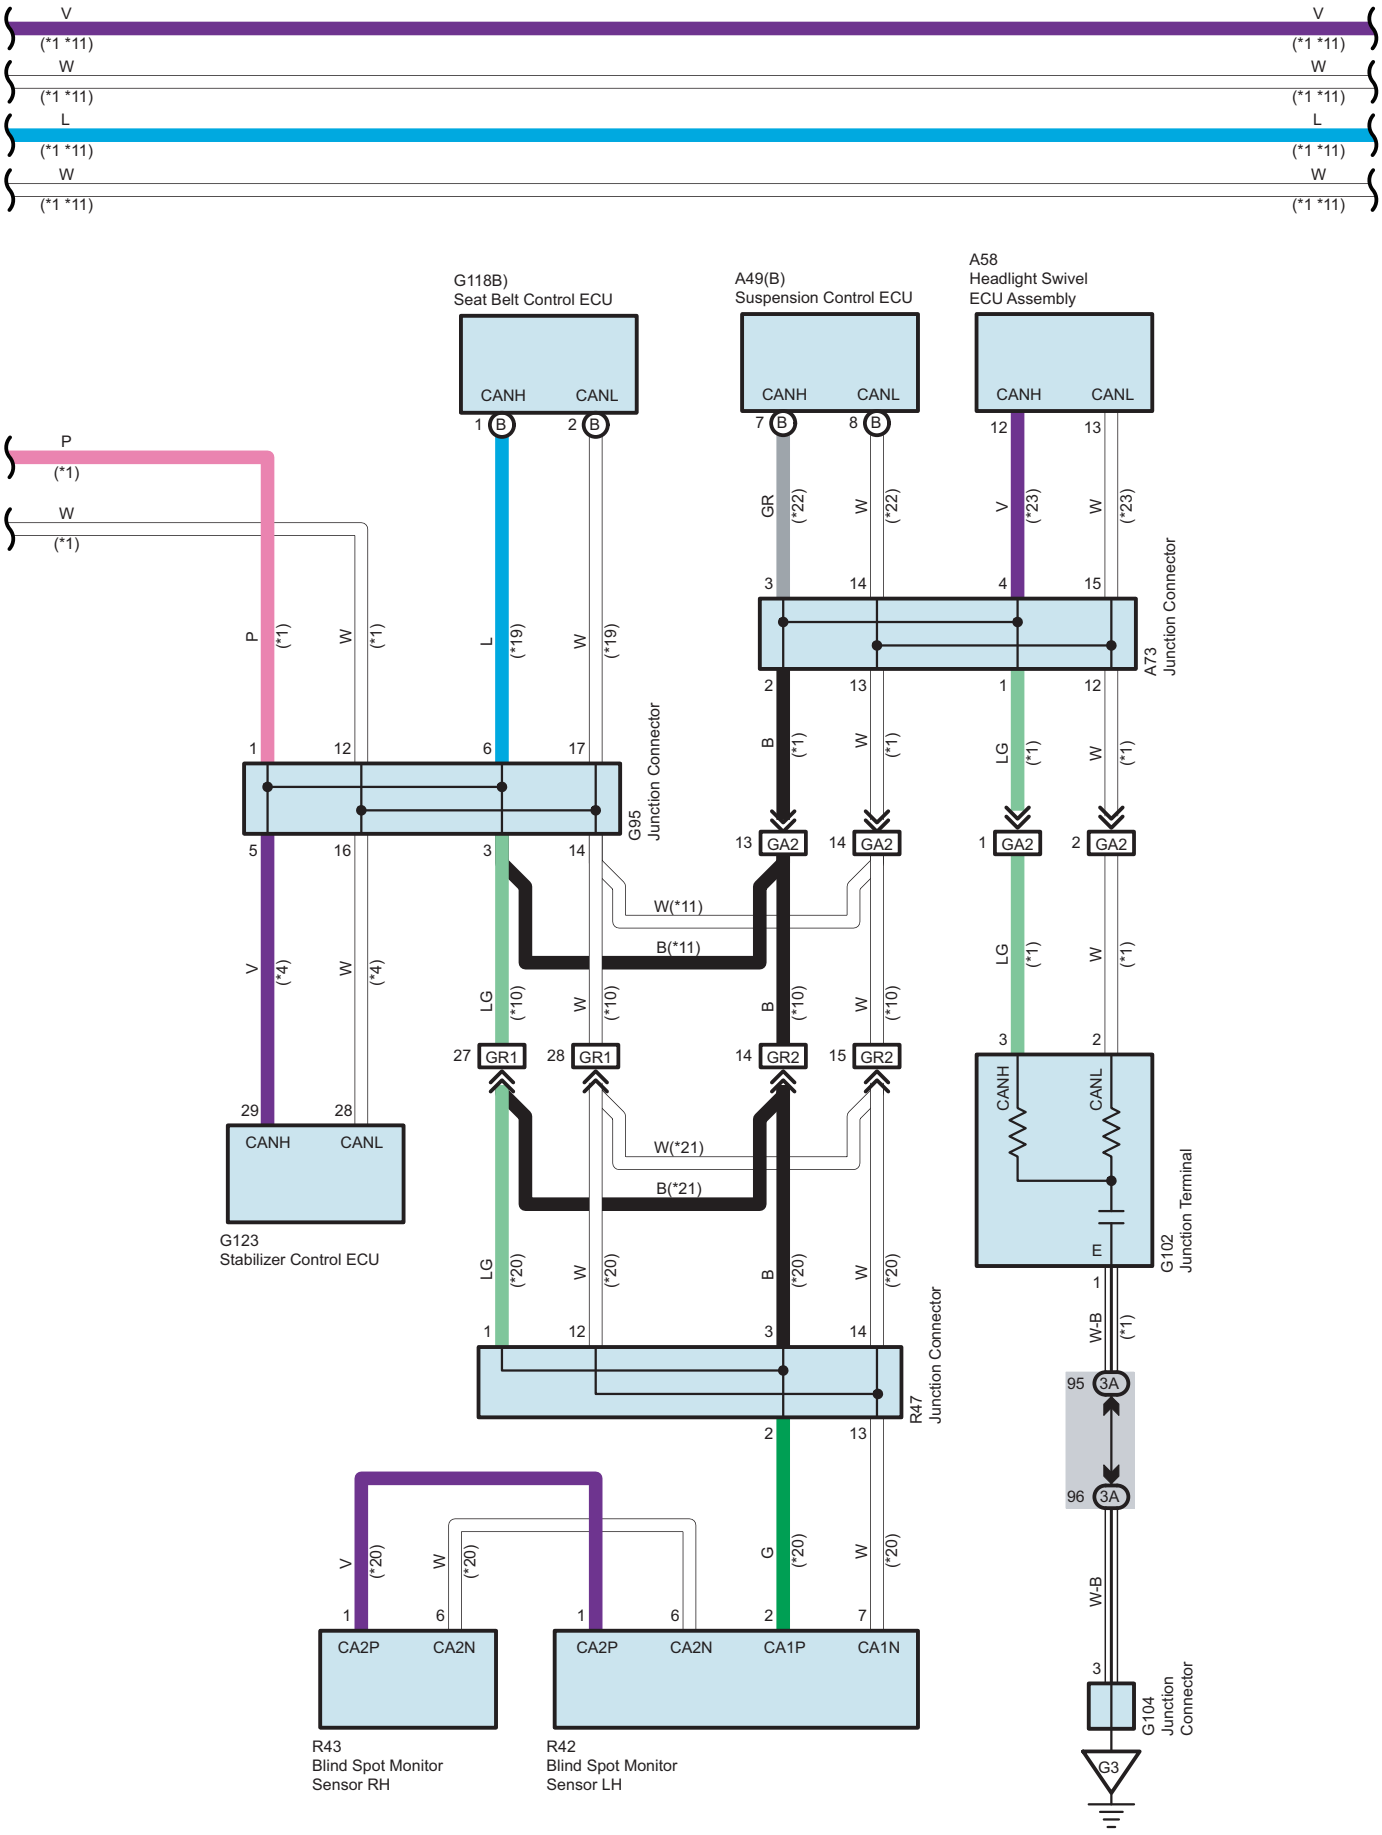
V (*1 *11)
W (*1 *11)
L (*1 *11)
W (*1 *11)
G118B) Seat Belt Control ECU
A49(B) Suspension Control ECU
A58 Headlight Swivel ECU Assembly
CANH
CANL
G95 Junction Connector
A73 Junction Connector
G123 Stabilizer Control ECU
R47 Junction Connector
G102 Junction Terminal
G104 Junction Connector
R43 Blind Spot Monitor Sensor RH
R42 Blind Spot Monitor Sensor LH
CA2P
CA2N
CA1P
CA1N
W(*11)
B(*11)
W(*21)
B(*21)
G3

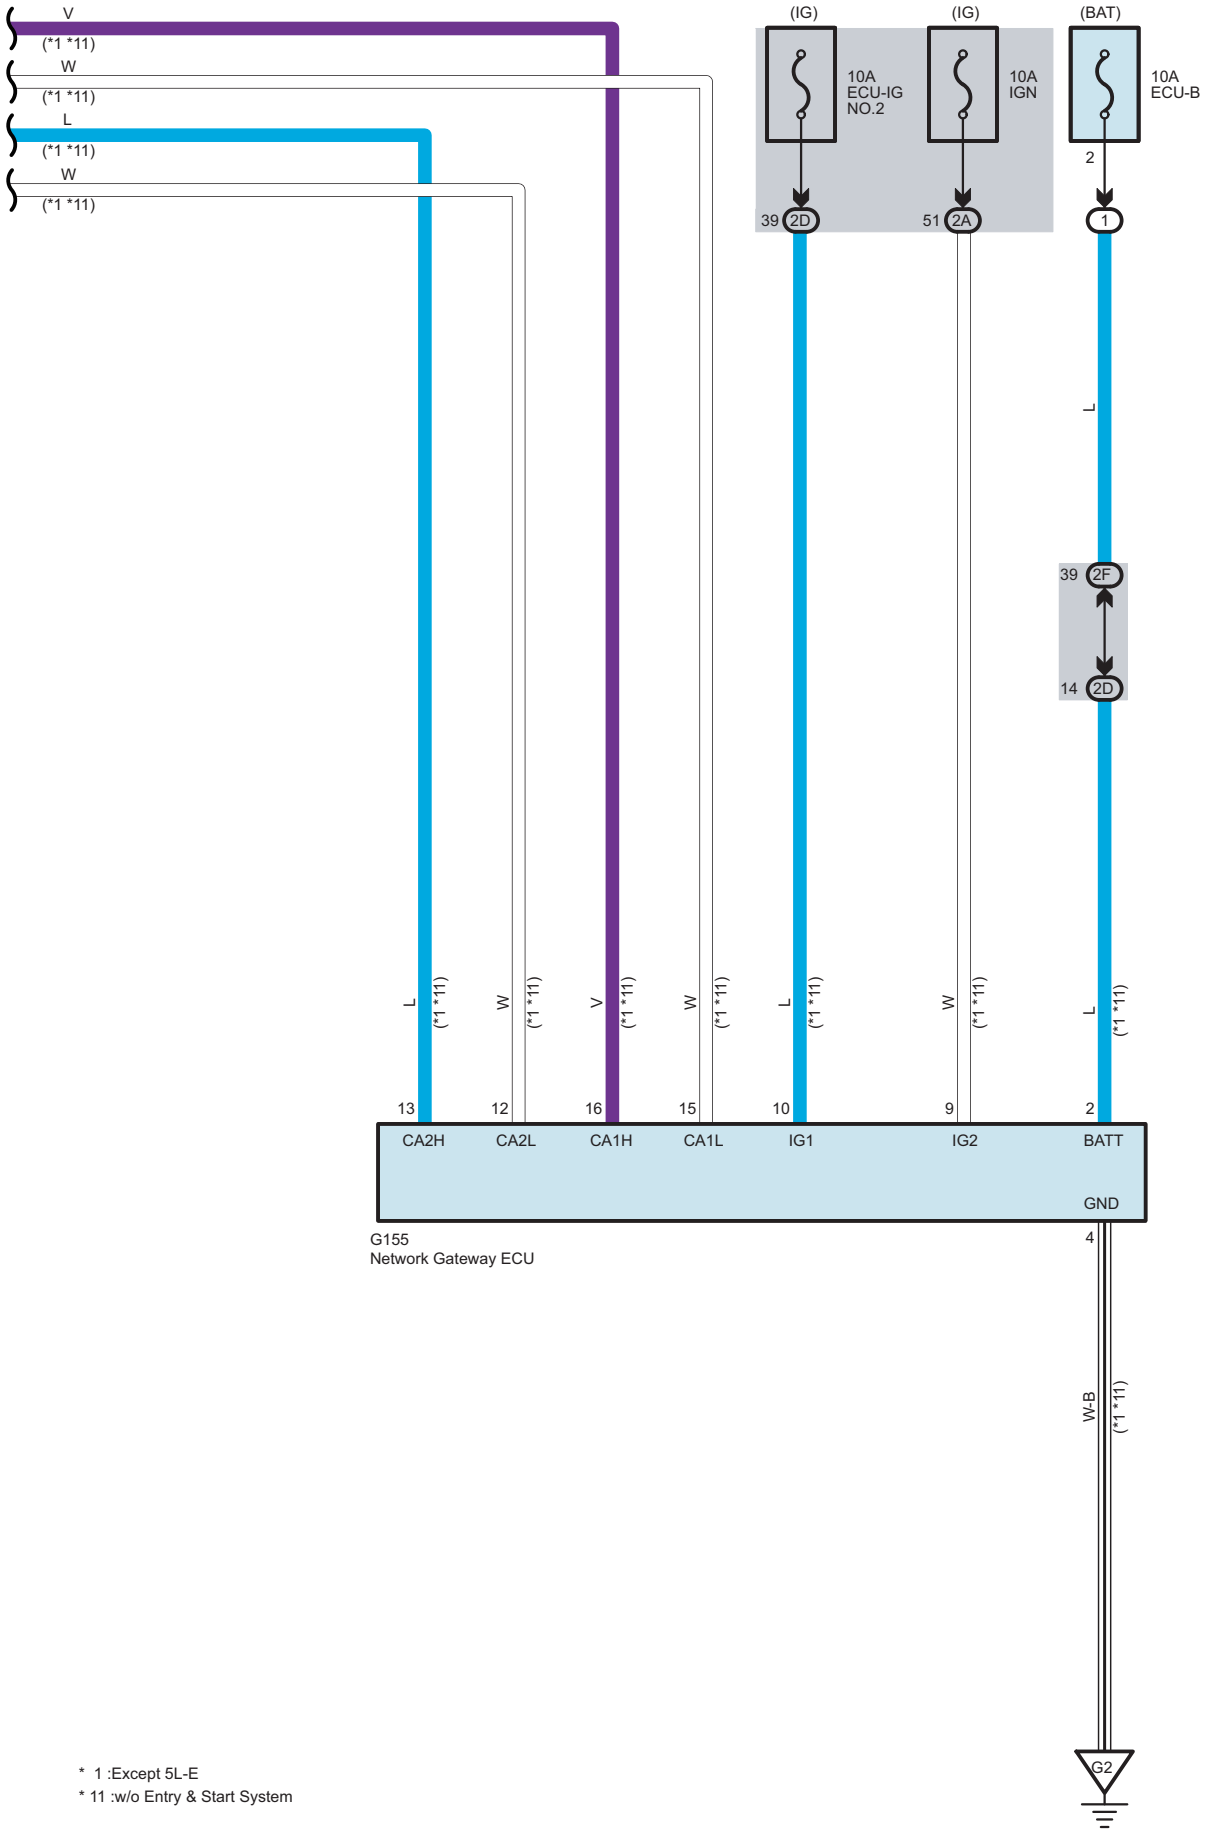


* 1 :Except 5L-E
* 11 :w/o Entry & Start System

A6
Black

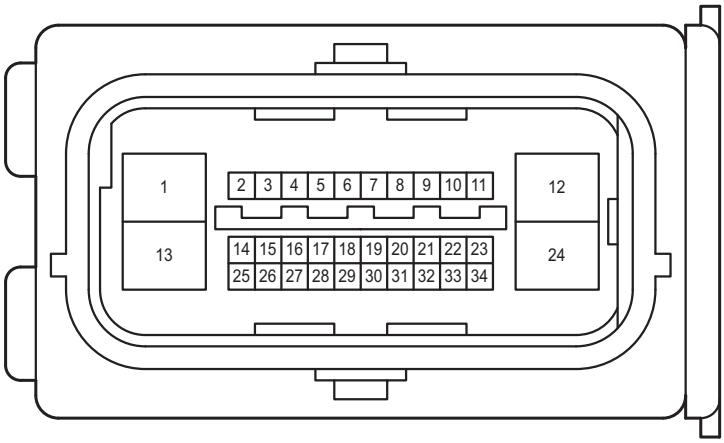

A7
Black

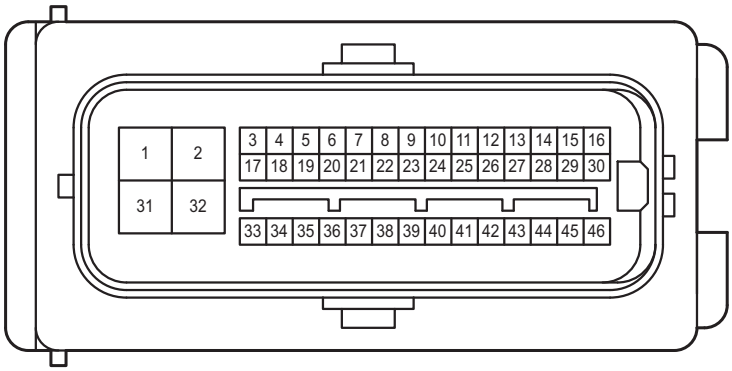

A15
Black




A47
Gray




A48
Gray




A49
Black

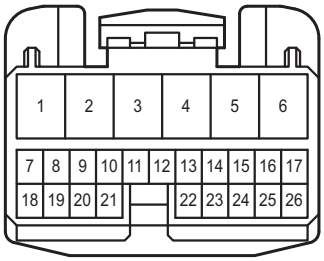


A58
White

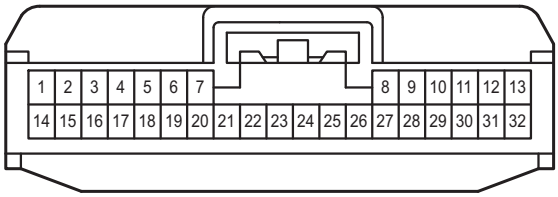


A72
White

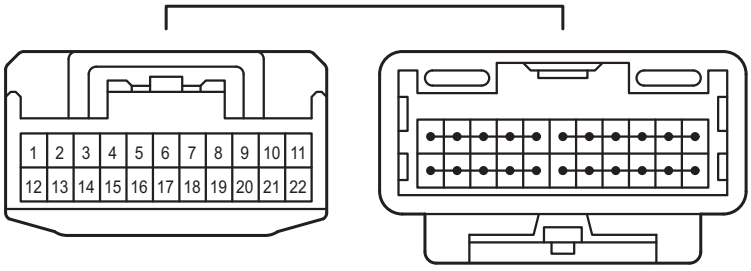


A73
White

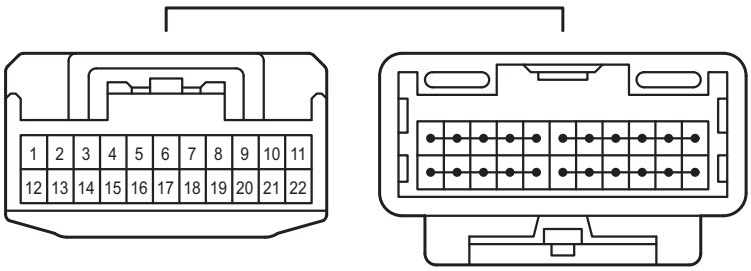


C92
White

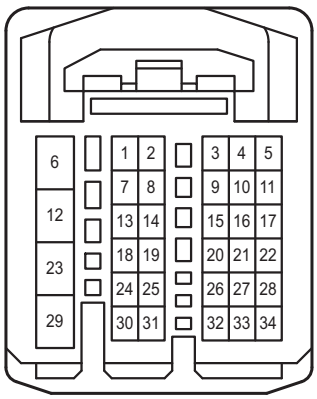


G1
Yellow

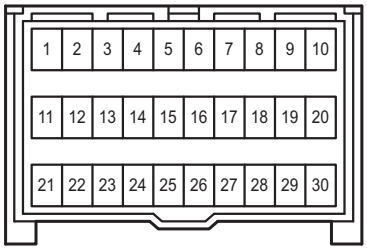


G6
Black

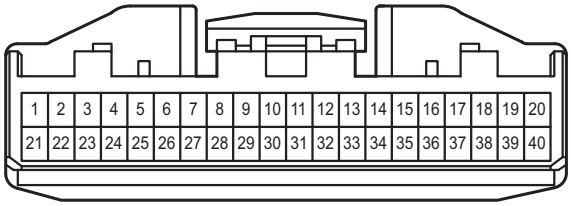


G25
White

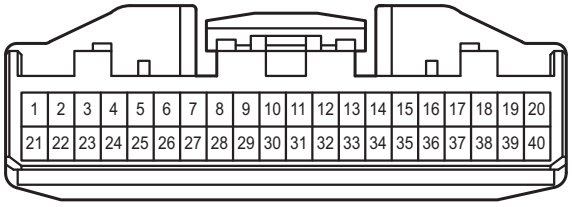


G33
White

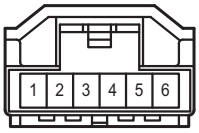


G38
White

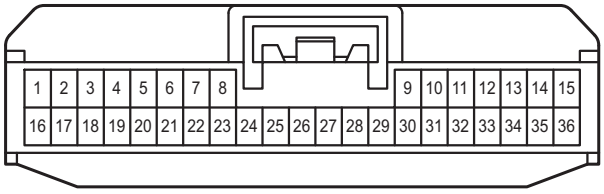


G46
White

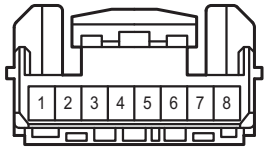


G48
White

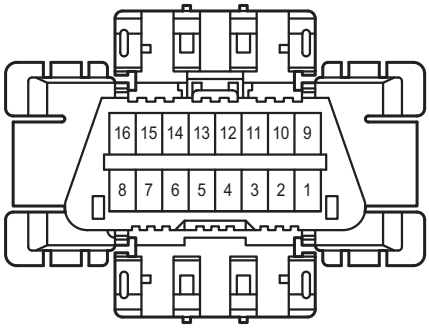


G51
Black

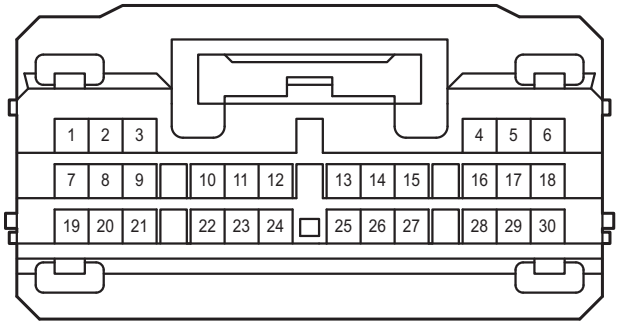


G52
Black

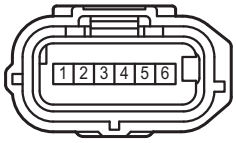


G53
Black

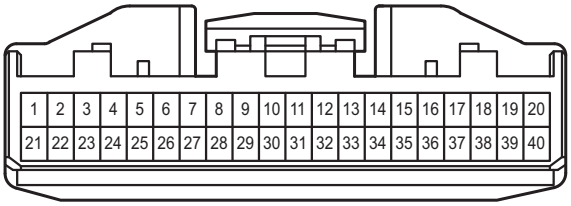


G56
White

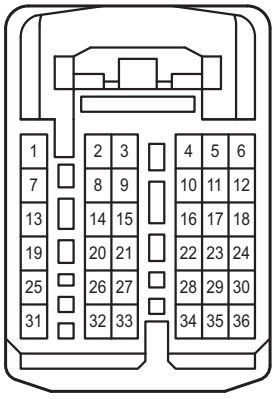


G57
White

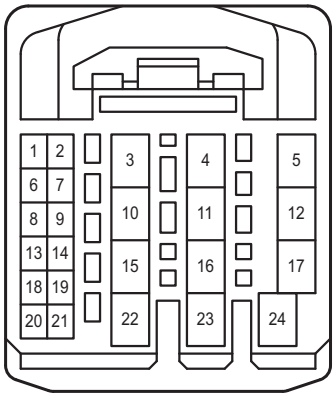


G58
White

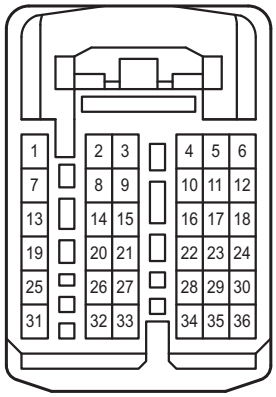


G60
White

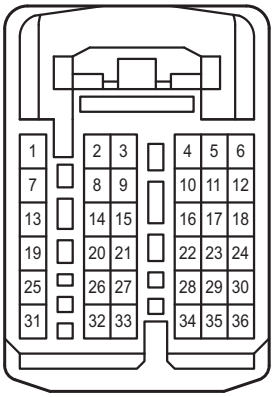


G63
White

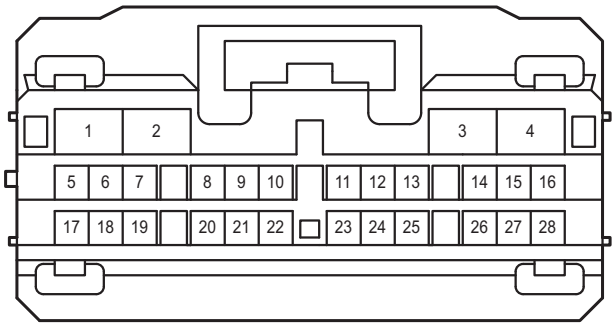


G64
White

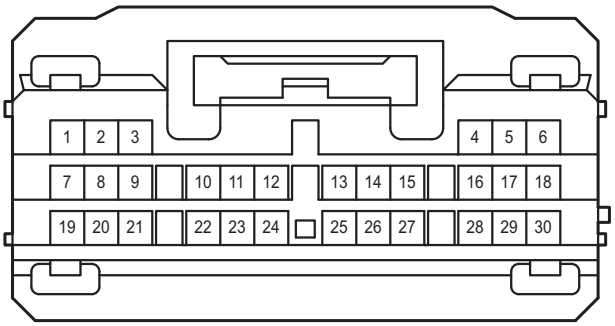


G70
White

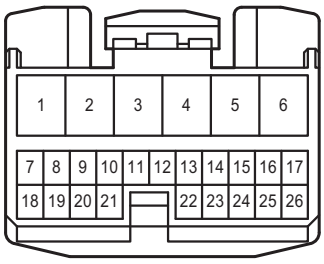


G76
Black

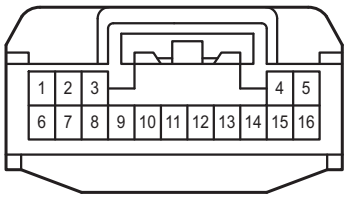


G94
White

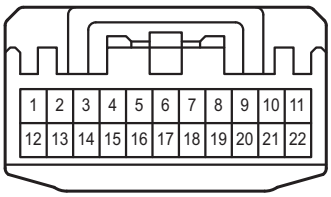


G95
White

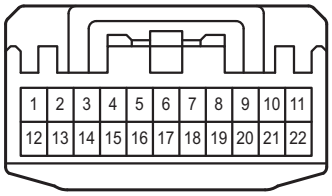


G96
White

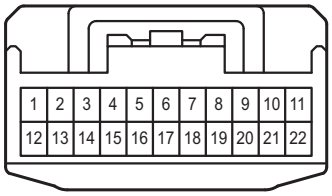


G97
White

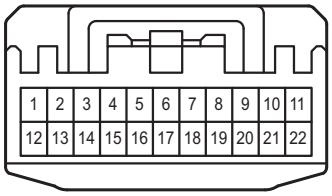


G98
White

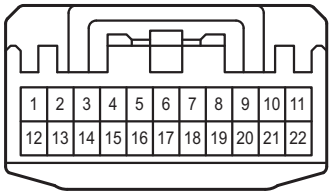


G100
Gray

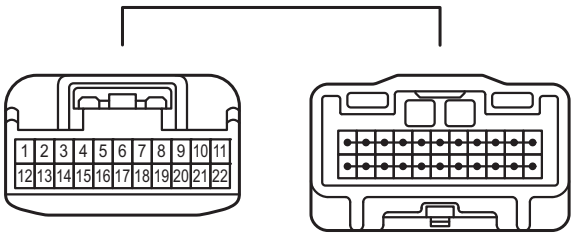


G101
White

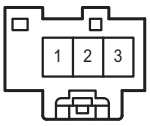


G102
White

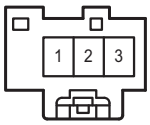


G103
White

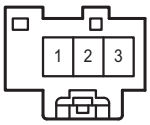


G104
White

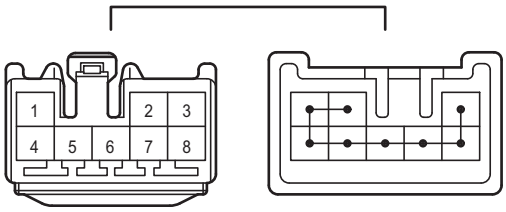


G116
White

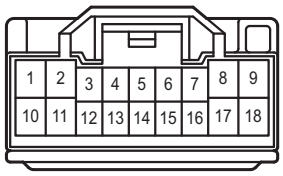


G118
White

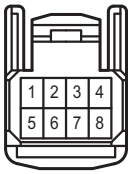


G119
White

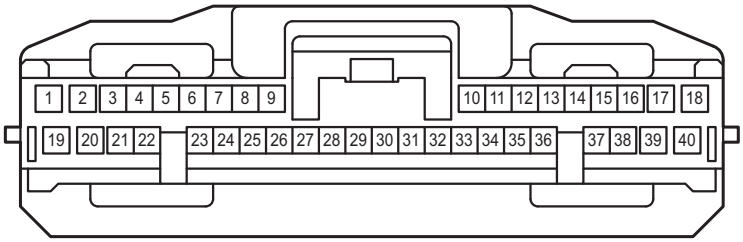


G123
White

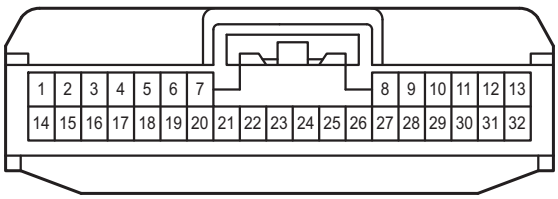

G154
White

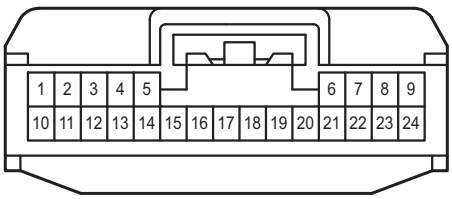


G155
White

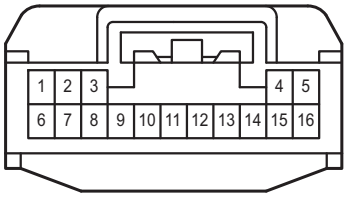


G163
White




H51
White

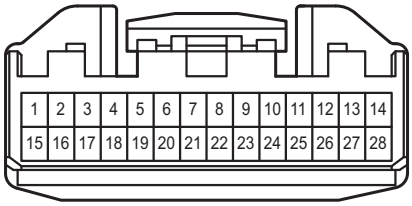


H56
White

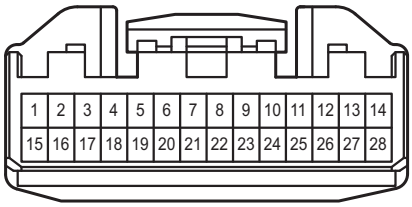


H61
White

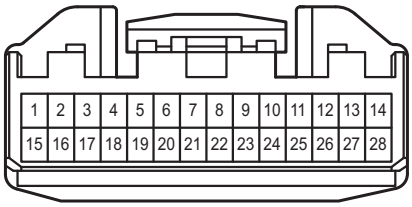

I1
White

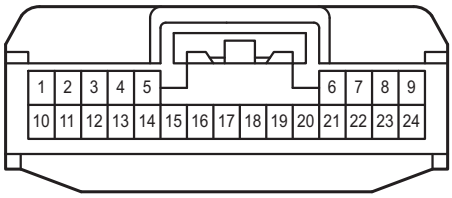

I7
Black

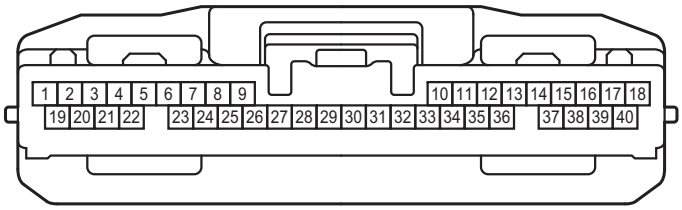


R42
Black



R43
Black




R47
Gray

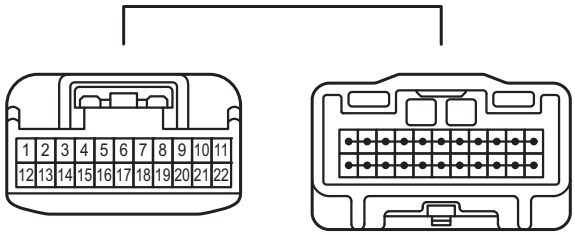


b5
White




2 A
White

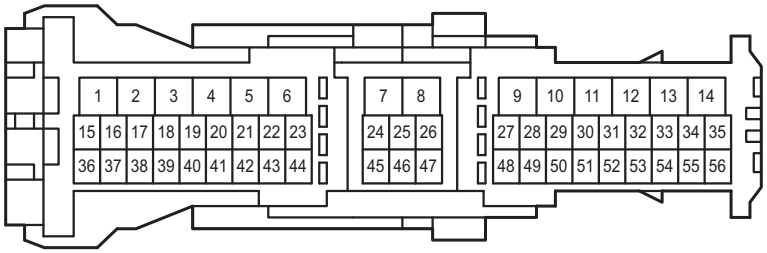


2 D
White

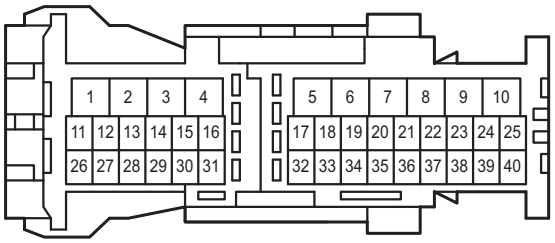


2 F
White

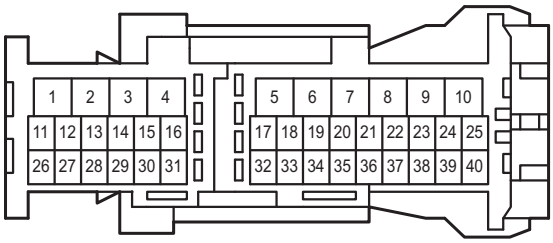


3 A
White

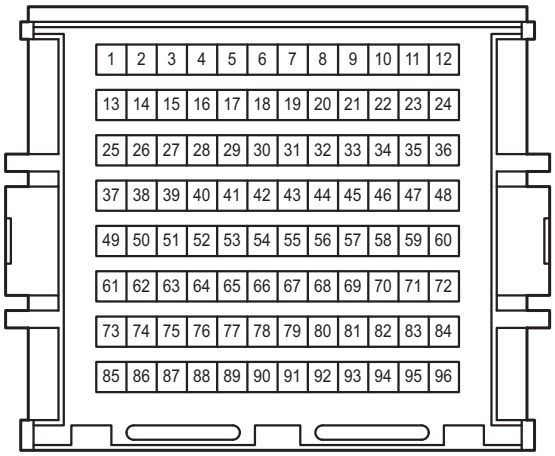

CG2
White

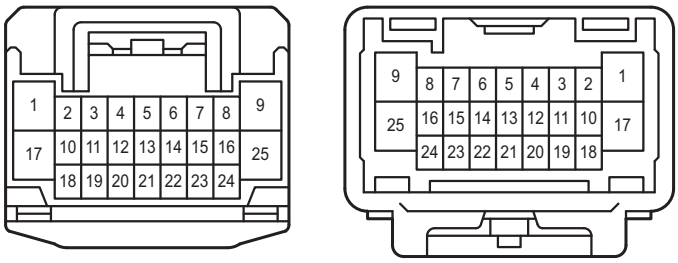


GA1
White

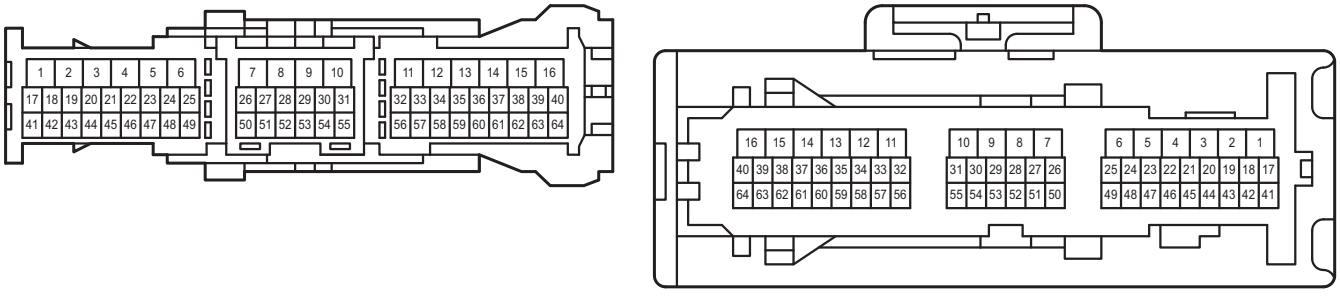


GA2

White

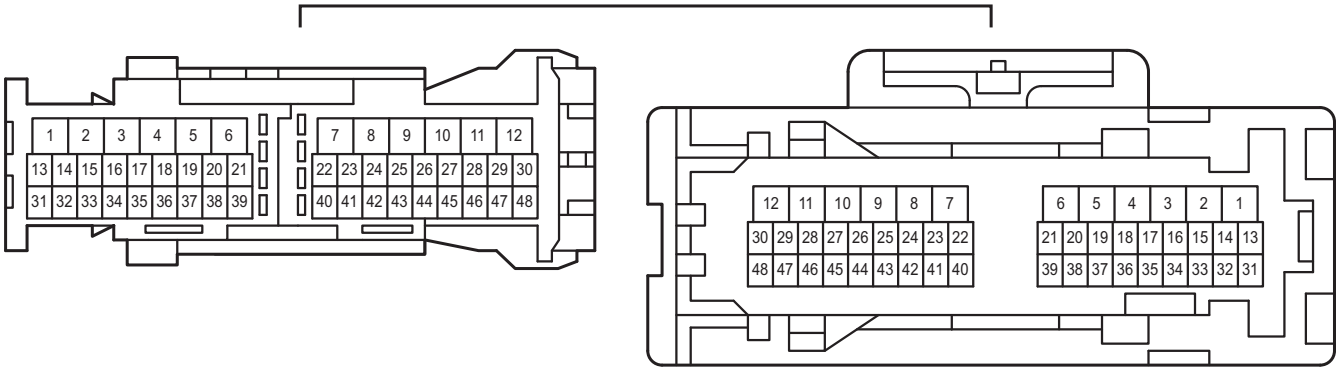


GA6

White

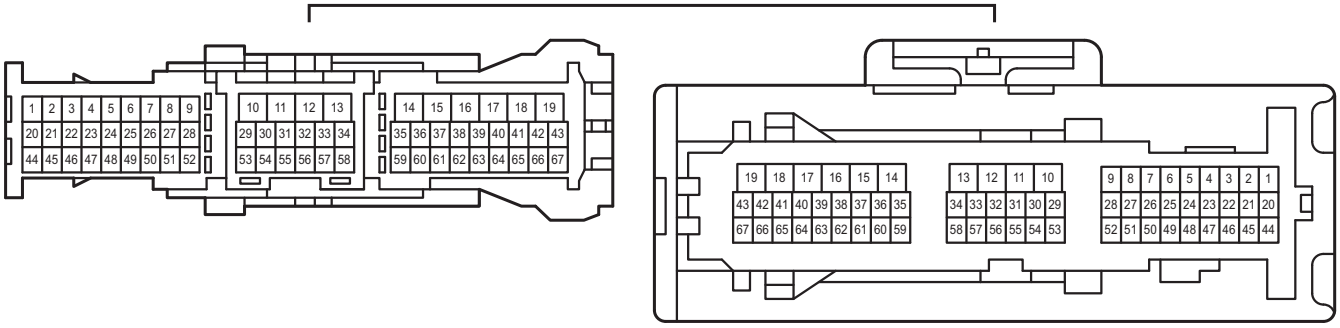


GH1

White

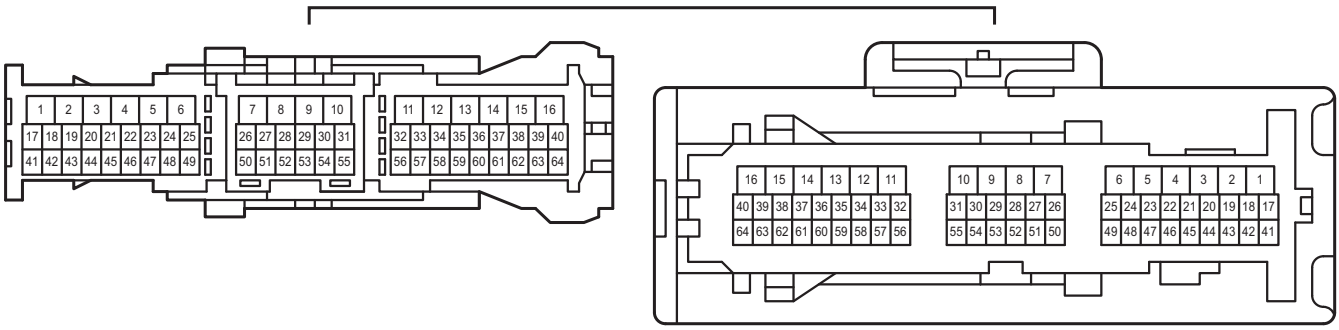


GR1

White

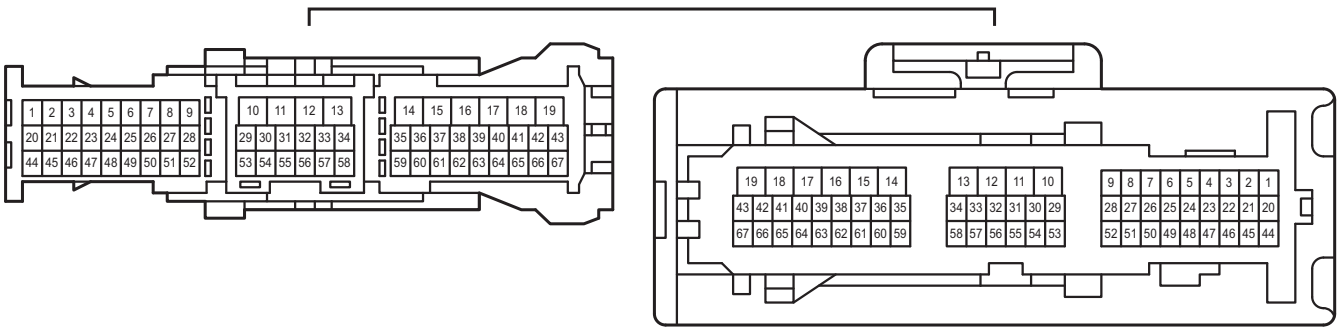


GR2

Gray

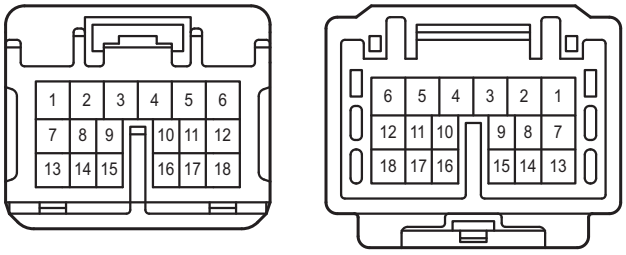


GR3

Blue

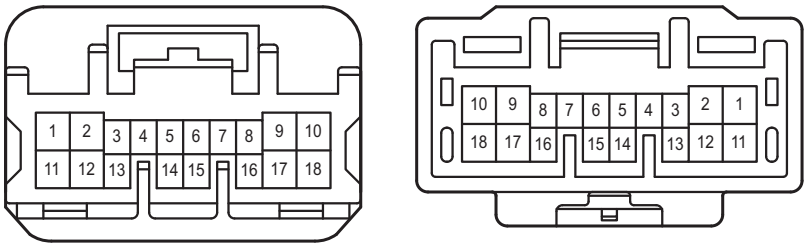

IG1

White

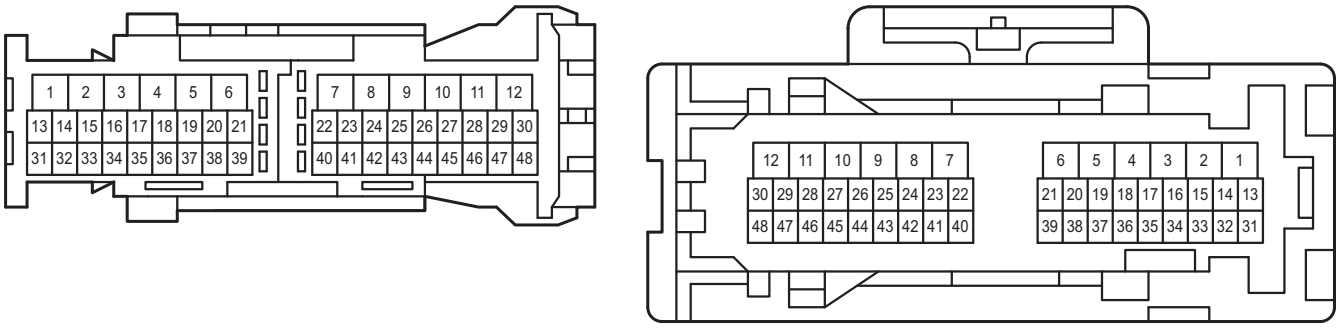

Rb1

White

