




G116
Multiplex Tilt &
Telescopic ECU
CANP
CANN
G76(A),G163(B)
Driving Support
Switch Control ECU
(M/T)
(A/T)
P
(*10)
W
(*10)
B
W
GR
(*2)
R
(*10)
G133
Junction Connector
A72
Junction Connector
L
(*3)
LG
(*10)
GQ1
Qa1
G103
Junction Terminal
W-B
(*10)
94
96
3A
G104
Junction
Connector
G3
R
(*12)
(*4)
A47(A),A48(B)
Short Connector
CANH
CANL
a5(B)
Front Position Control ECU and
Switch Assembly RH
(Front Power Seat Switch RH)
A6
Brake Actuator Assembly
A7
Brake Actuator Assembly
G6(A)
Combination Meter Assembly

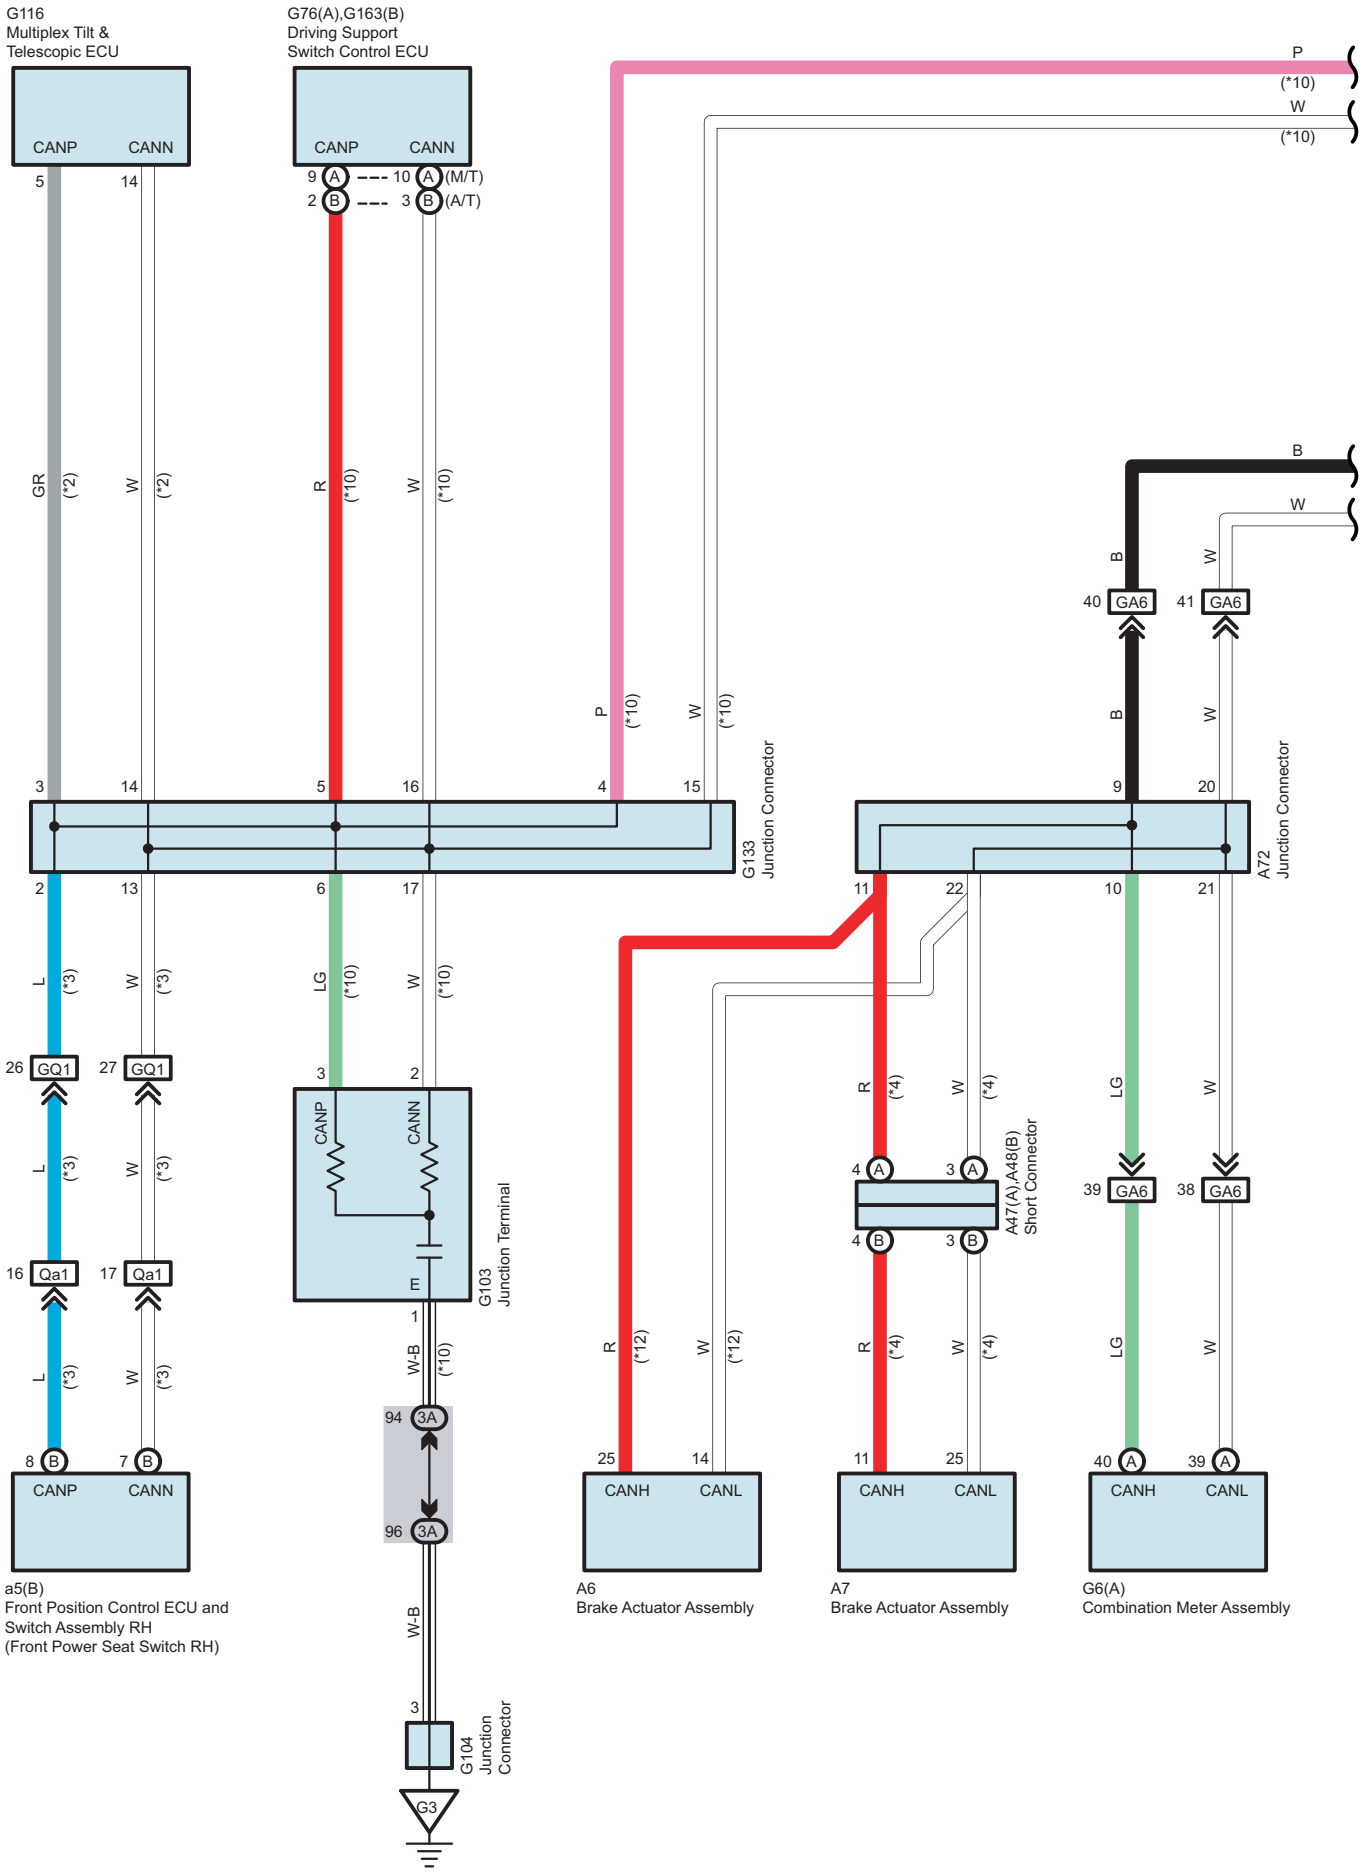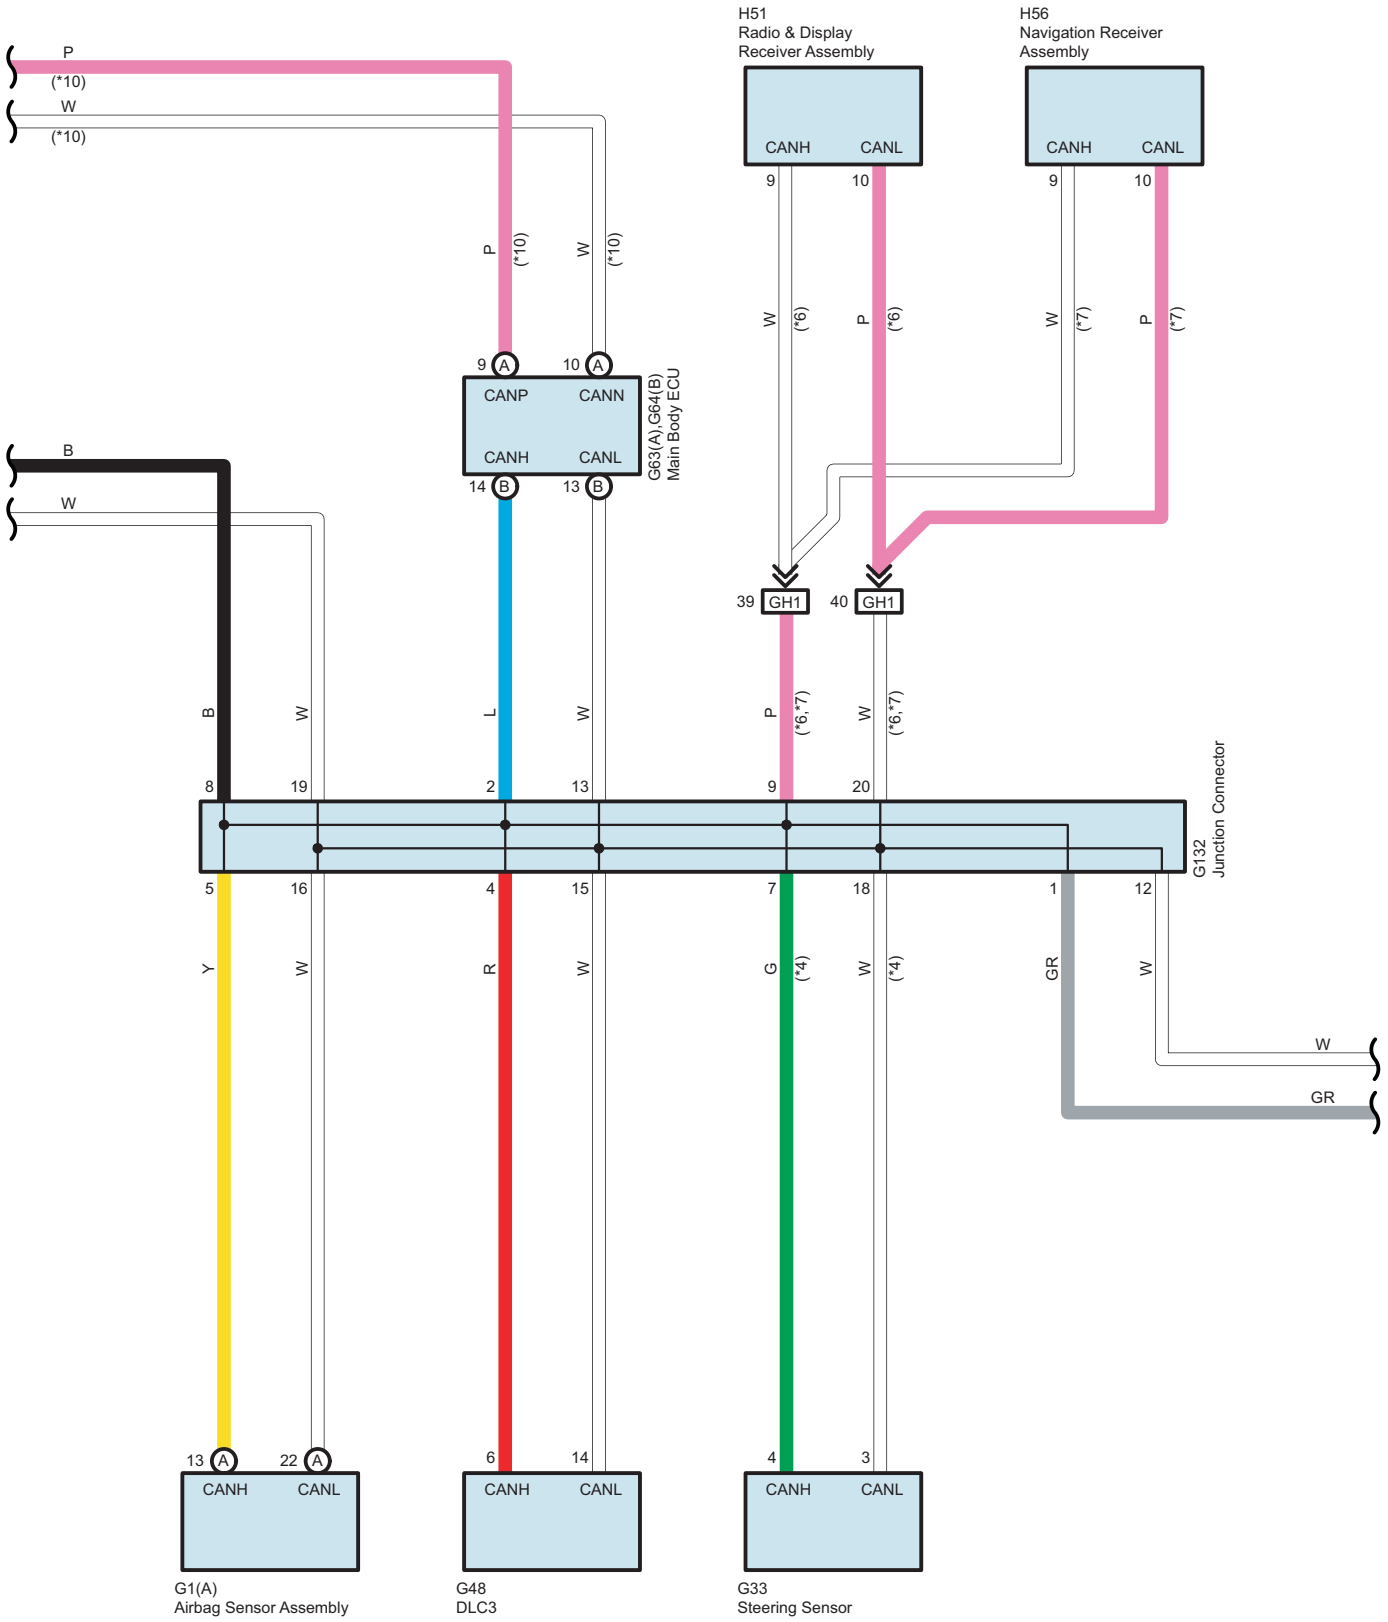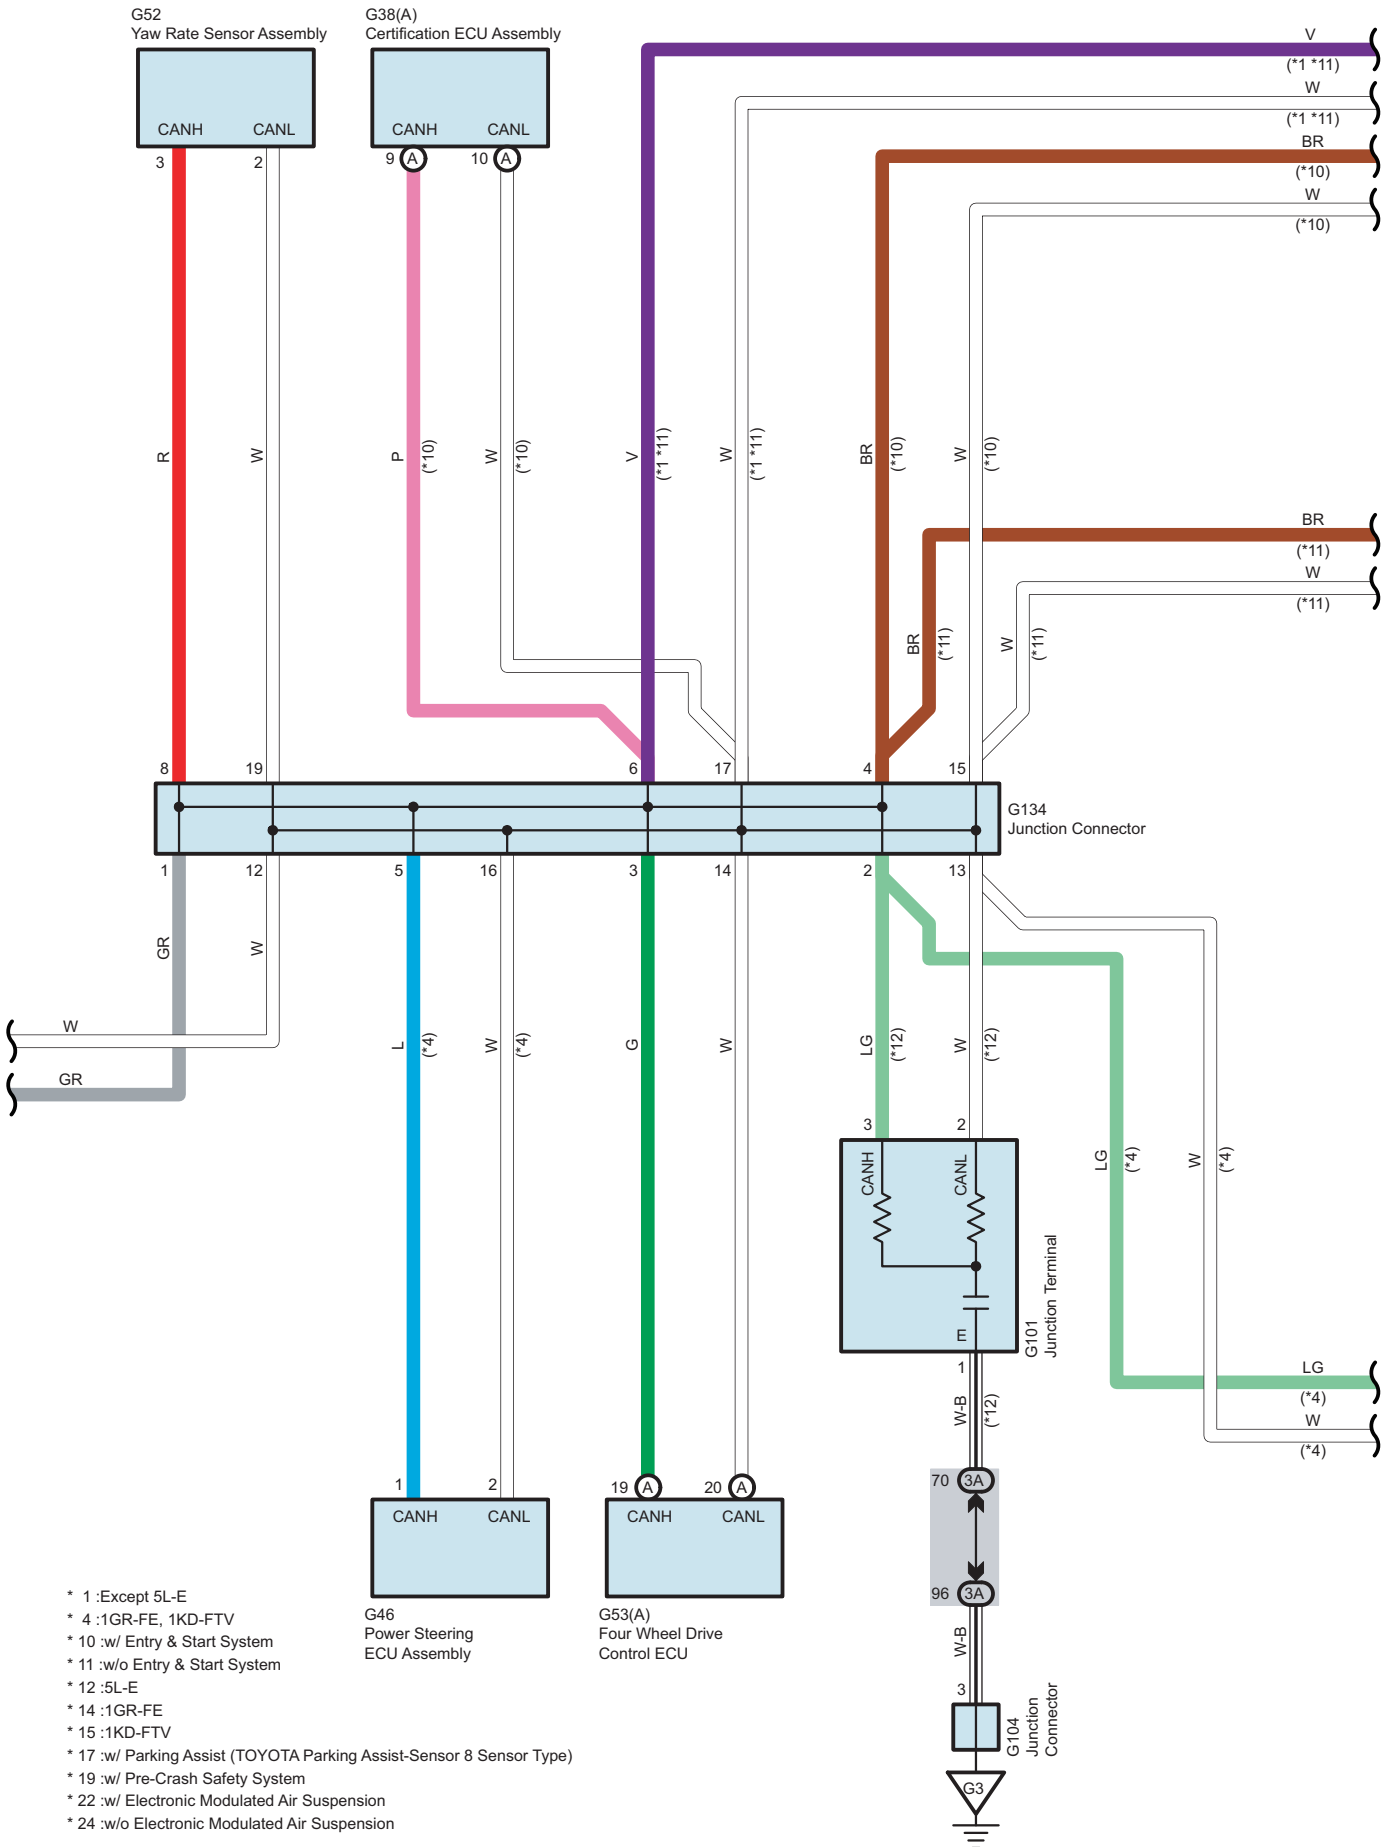


* 2 :w/ Power Tilt and Power Telescopic
* 3 :w/ Power Seat (RHD Driver's Seat w/ Seat Position Memory)
* 4 :1GR-FE, 1KD-FTV
* 6 :Radio & Display Receiver Assembly Type
* 7 :Navigation Receiver Assembly Type
* 10 :w/ Entry & Start System
* 12 :5L-E

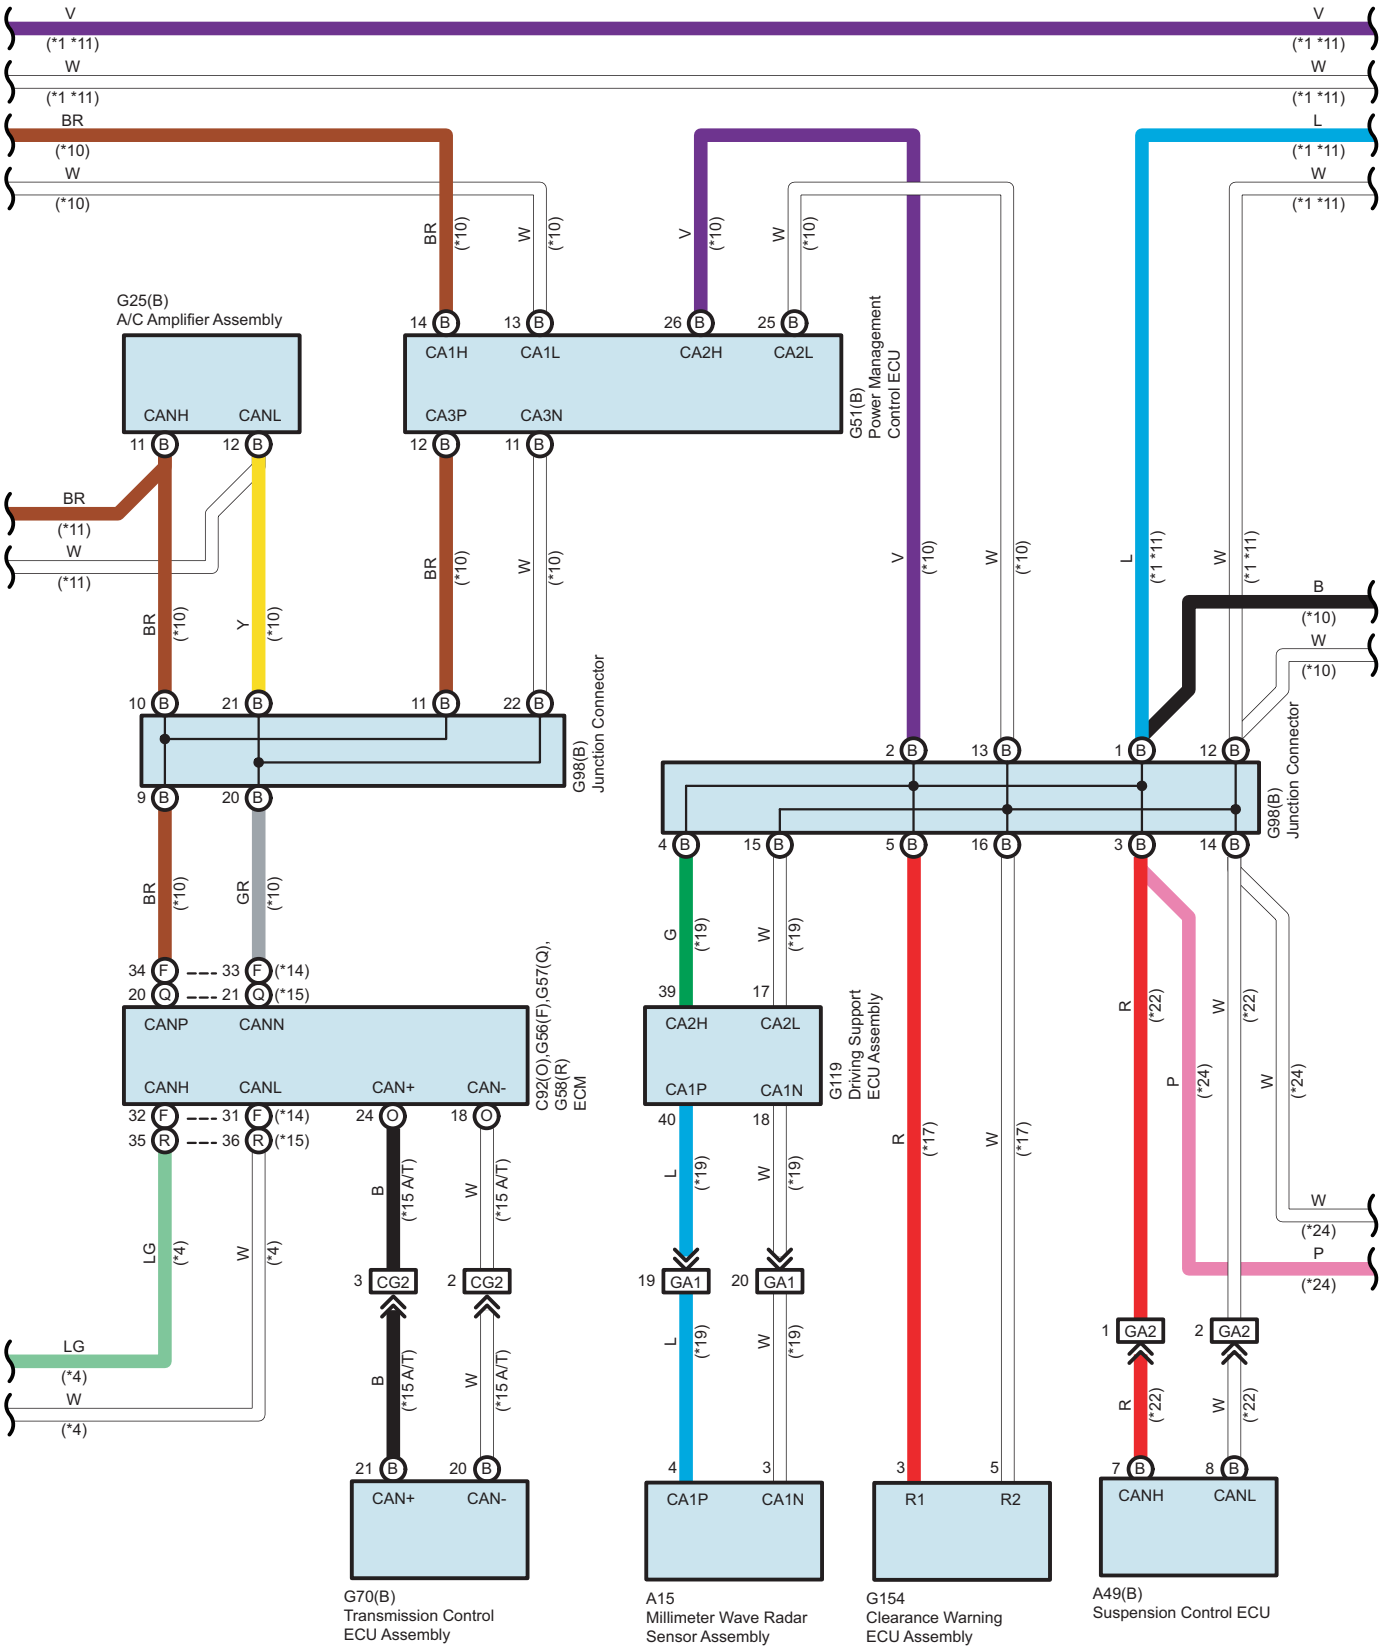



* 1 :Except 5L-E
* 4 :1GR-FE, 1KD-FTV
* 10 :w/ Entry & Start System
* 11 :w/o Entry & Start System
* 12 :5L-E
* 14 :1GR-FE
* 15 :1KD-FTV
* 17 :w/ Parking Assist (TOYOTA Parking Assist-Sensor 8 Sensor Type)
* 19 :w/ Pre-Crash Safety System
* 22 :w/ Electronic Modulated Air Suspension
* 24 :w/o Electronic Modulated Air Suspension


G25(B)
A/C Amplifier Assembly
CANH
CANL
CA1H
CA1L
CA2H
CA2L
CA3P
CA3N
G51(B)
Power Management
Control ECU
G98(B)
Junction Connector
G98(B)
Junction Connector
CANP
CANN
CANH
CANL
CAN+
CAN-
C92(O),G56(F),G57(Q),
G58(R)
ECM
G119
Driving Support
ECU Assembly
CG2
GA1
GA2
G70(B)
Transmission Control
ECU Assembly
A15
Millimeter Wave Radar
Sensor Assembly
G154
Clearance Warning
ECU Assembly
R1
R2
A49(B)
Suspension Control ECU

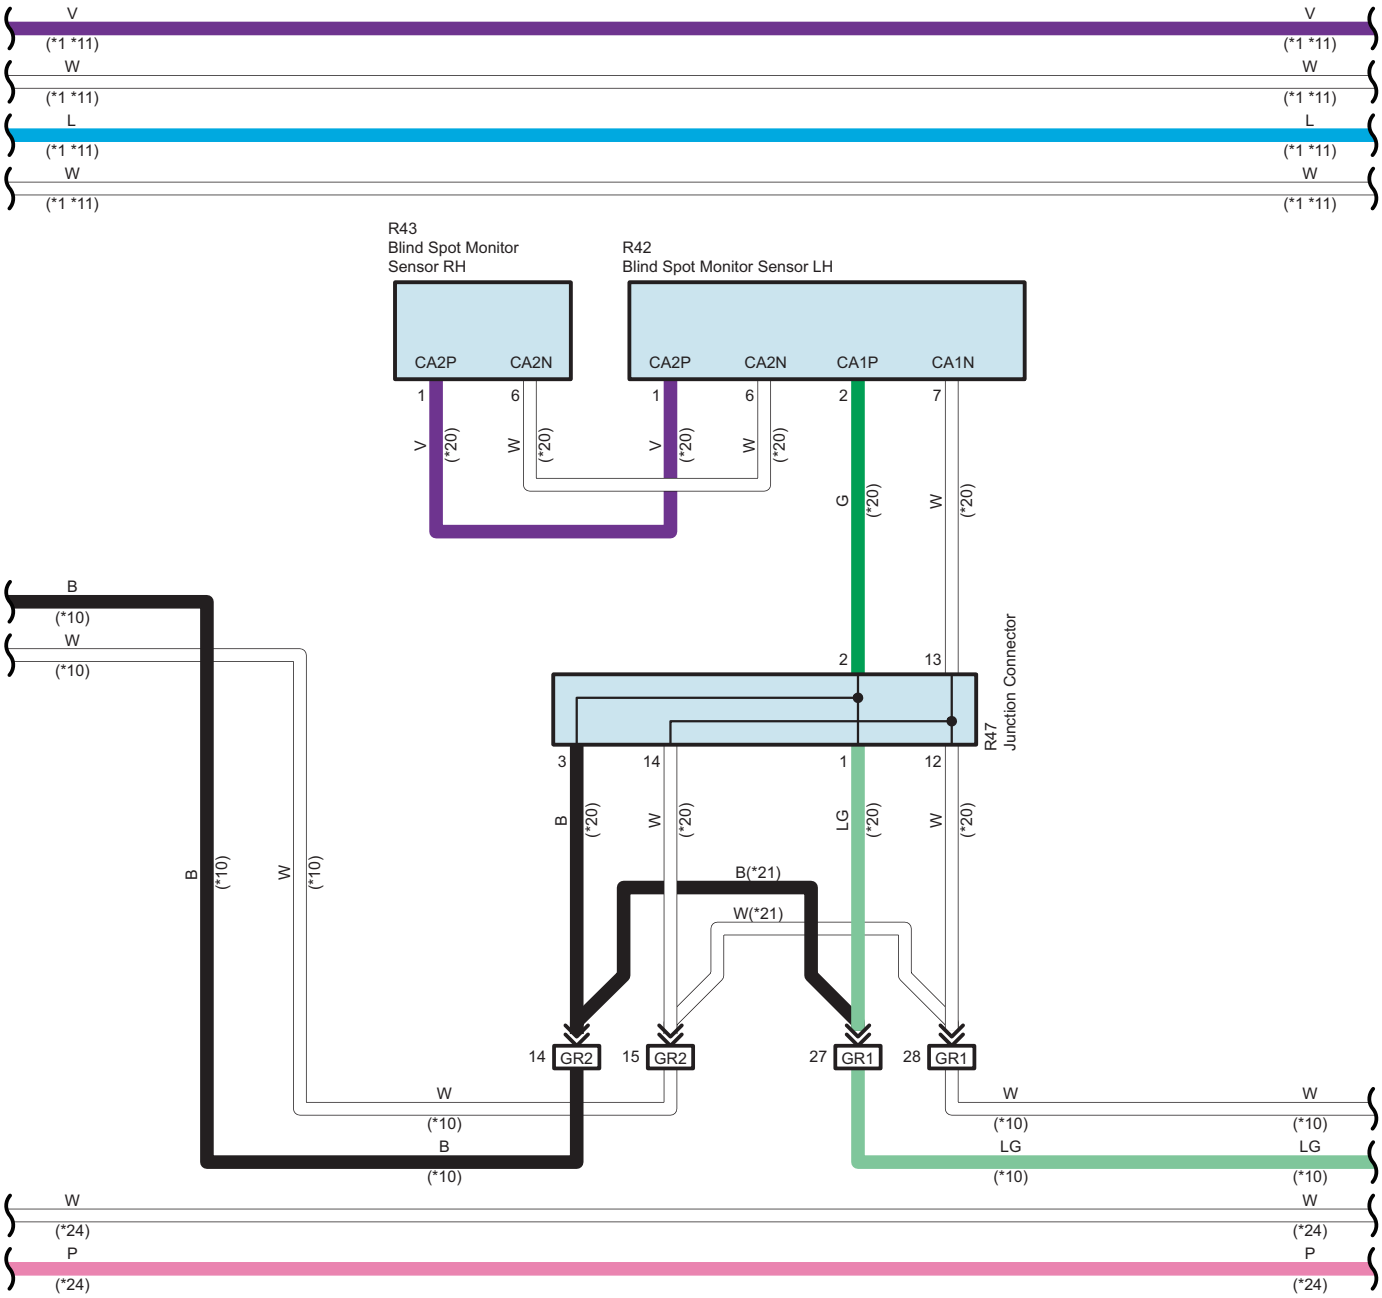


* 1 :Except 5L-E
* 4 :1GR-FE, 1KD-FTV
* 10 :w/ Entry & Start System
* 11 :w/o Entry & Start System
* 16 :w/ Multi-Terrain Monitor
* 18 :w/ Parking Assist (TOYOTA Parking Assist-Sensor 4 Sensor Type)
* 19 :w/ Pre-Crash Safety System
* 20 :w/ Blind Spot Monitor System
* 21 :w/o Blind Spot Monitor System
* 23 :LED Type
* 24 :w/o Electronic Modulated Air Suspension

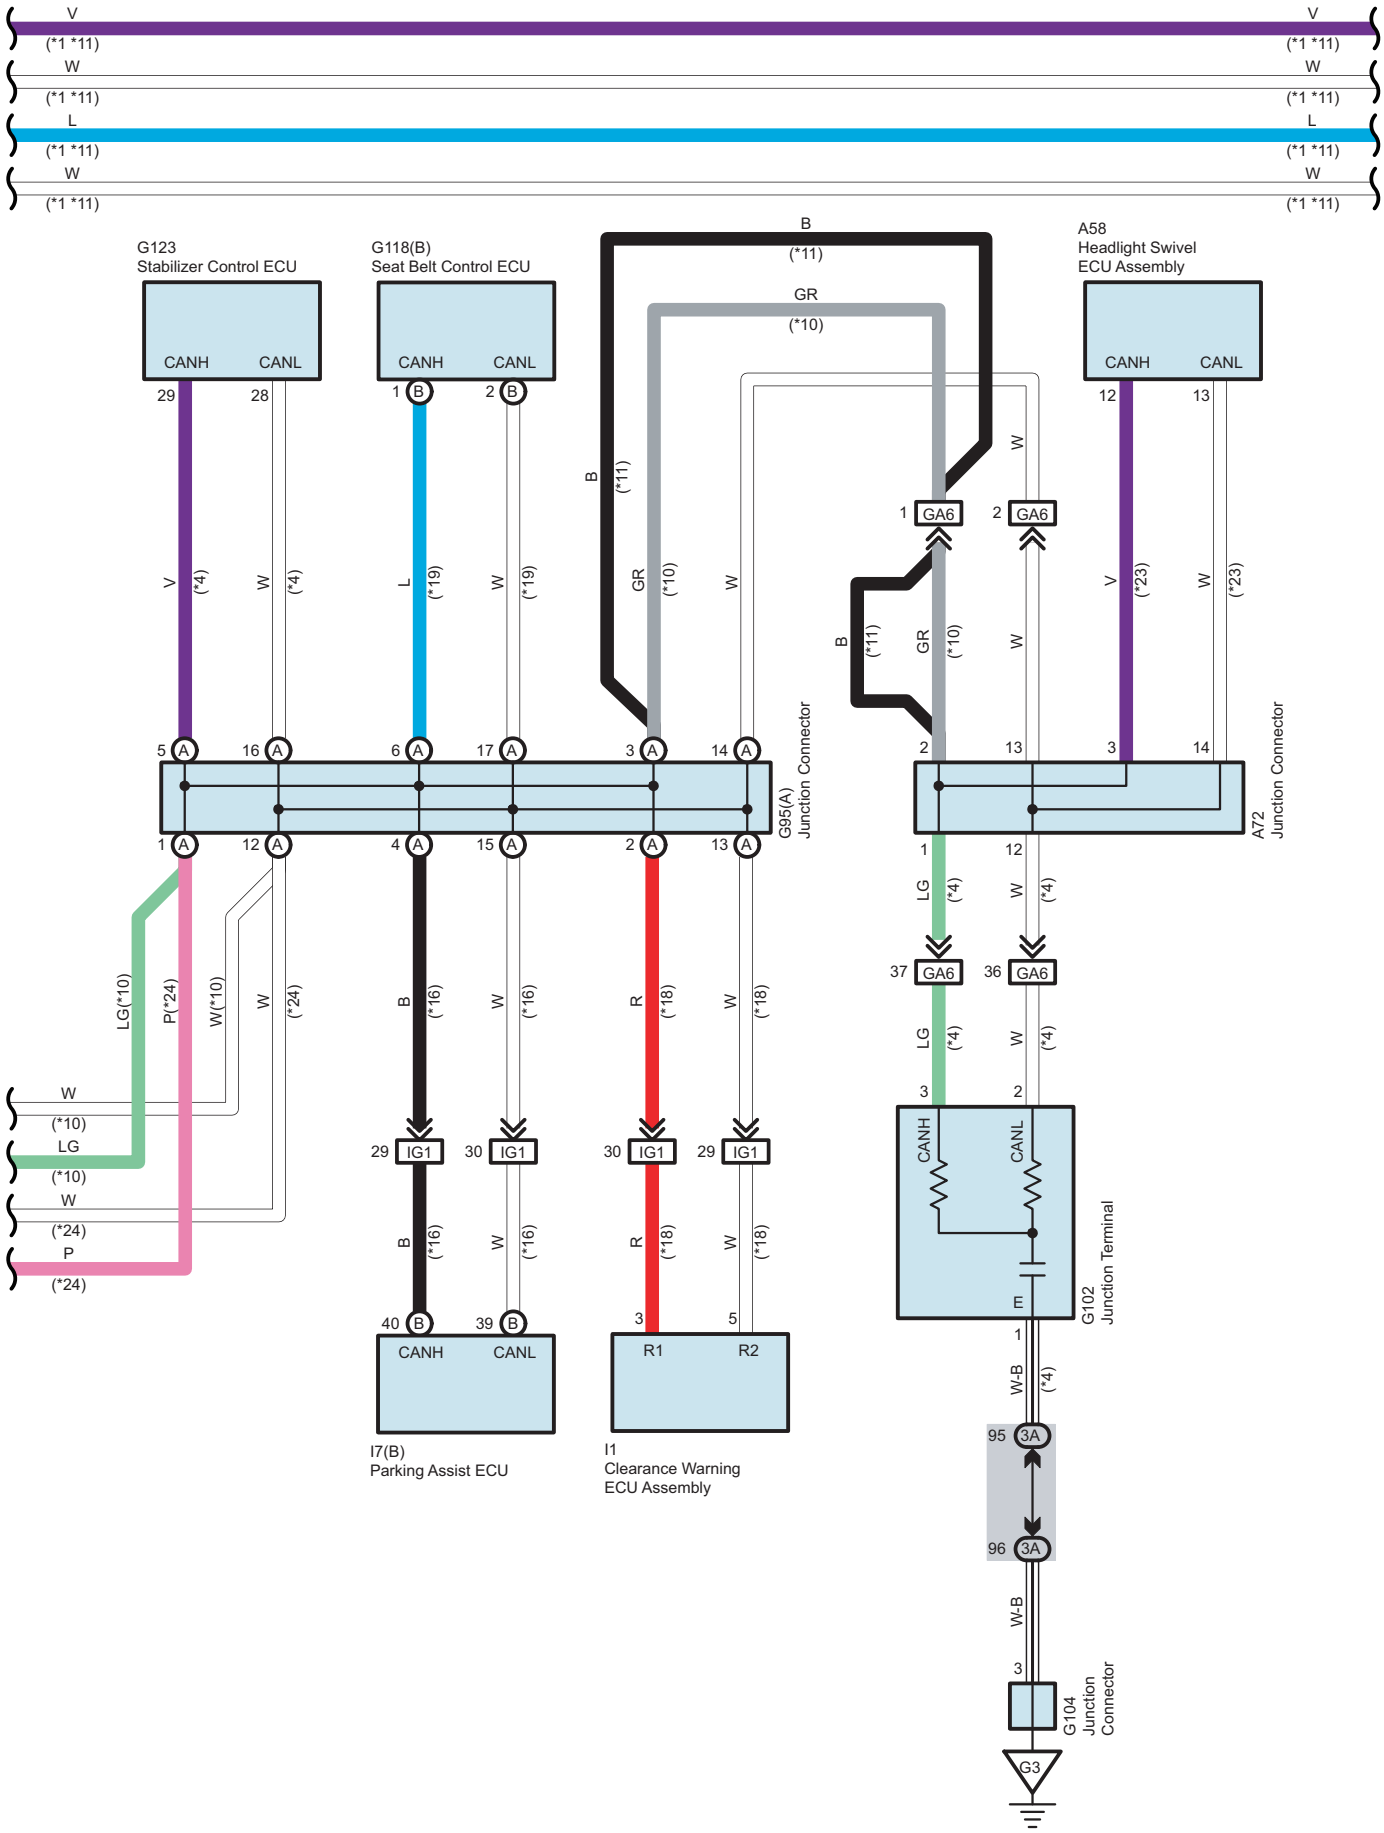
V (*1 *11)
W (*1 *11)
L (*1 *11)
W (*1 *11)
G123
Stabilizer Control ECU
CANH
CANL
G118(B)
Seat Belt Control ECU
A58
Headlight Swivel
ECU Assembly
G95(A)
Junction Connector
A72
Junction Connector
G102
Junction Terminal
G104
Junction
Connector
I7(B)
Parking Assist ECU
I1
Clearance Warning
ECU Assembly
IG1
GA6
R1
R2
E
G3

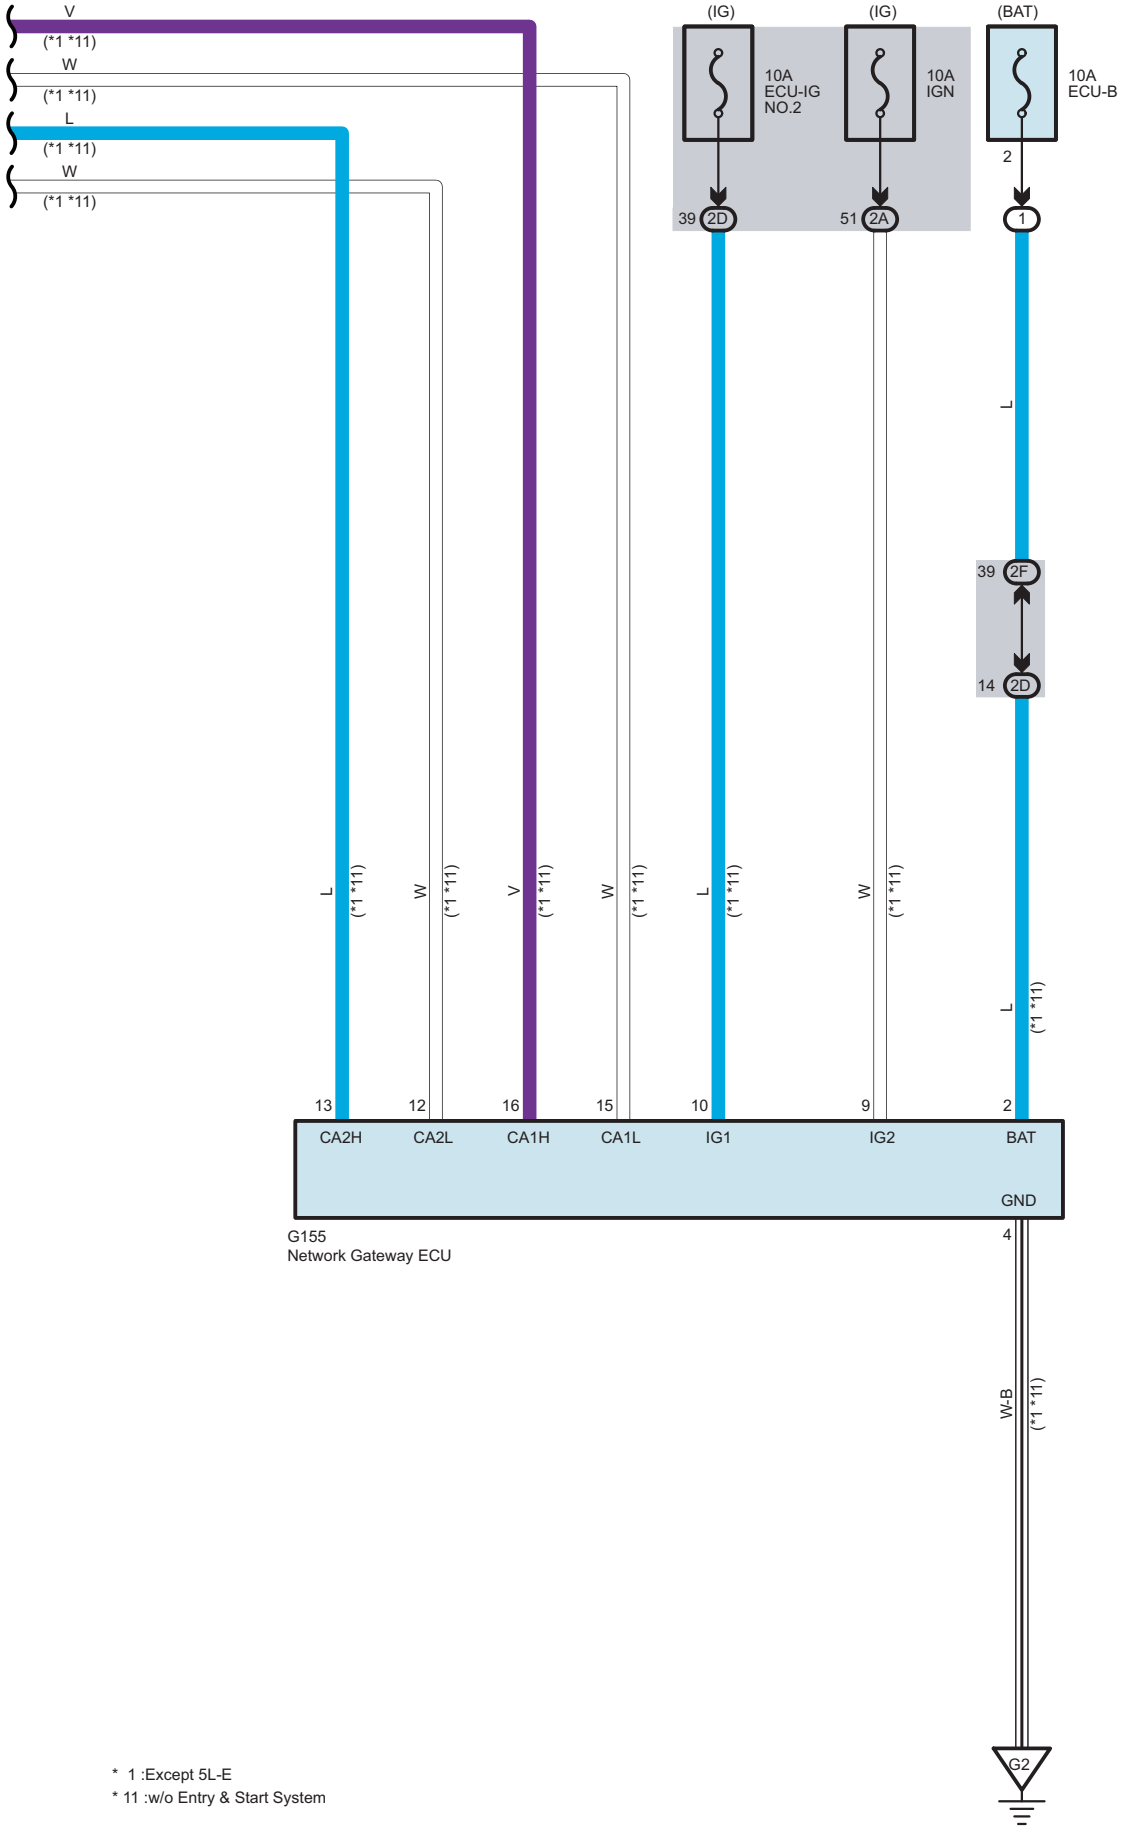


* 1 :Except 5L-E
* 11 :w/o Entry & Start System

A6
Black

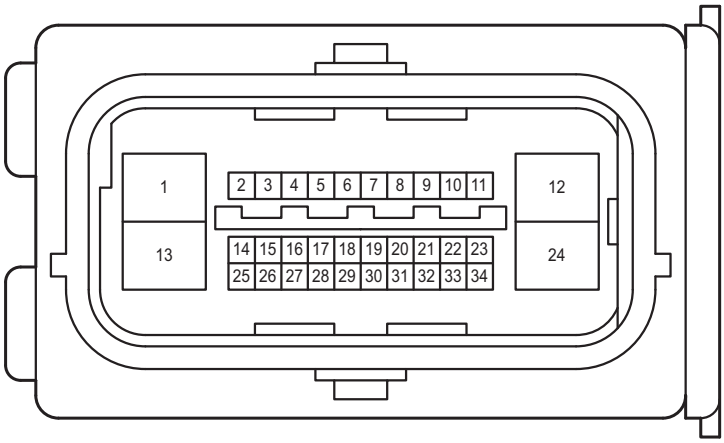

A7
Black

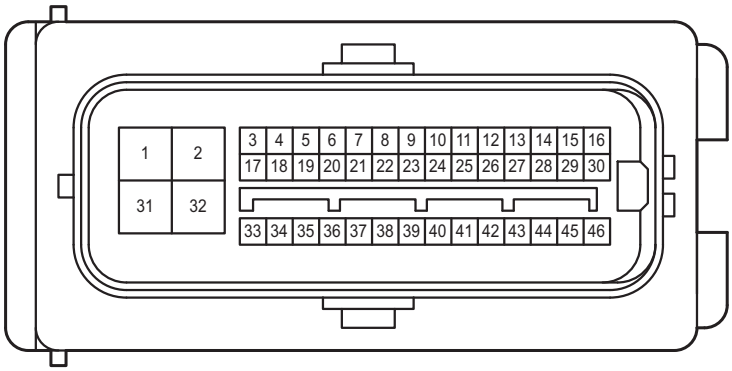

A15
Black




A47
Gray




A48
Gray




A49
Black

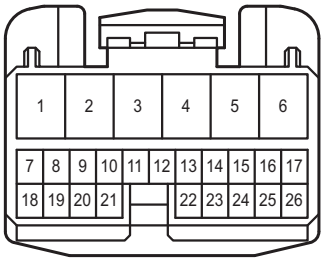


A58
White

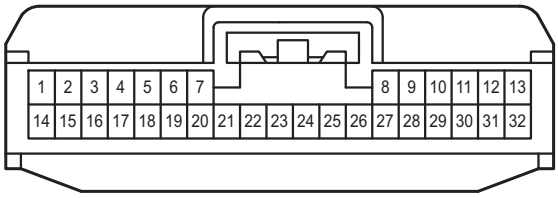


A72
White

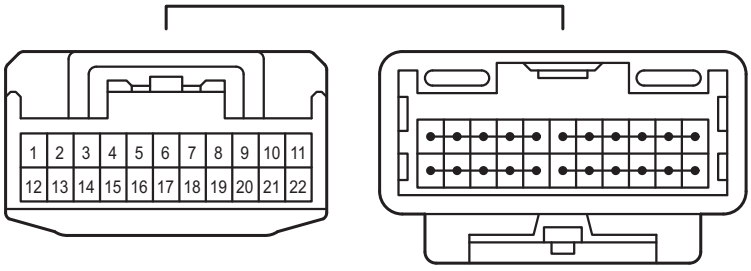


C92
White

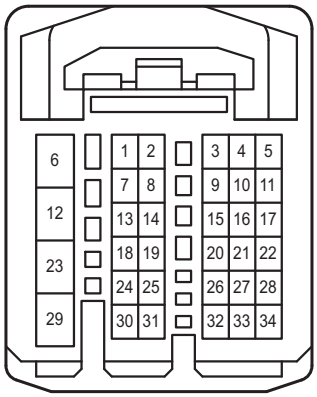


G1
Yellow

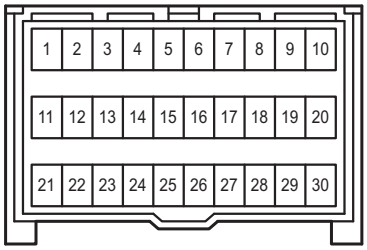


G6
Black

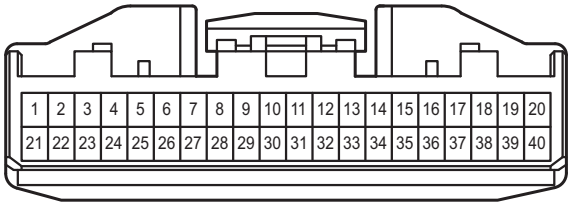


G25
White

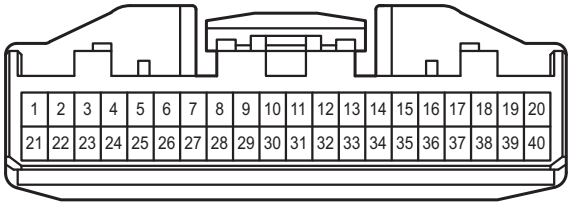


G33
White

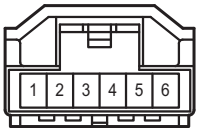


G38
White

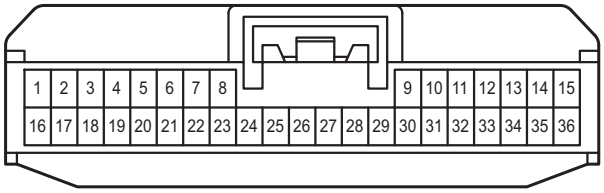


G46
White

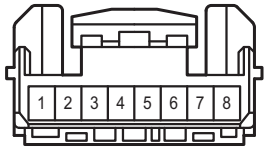


G48
White

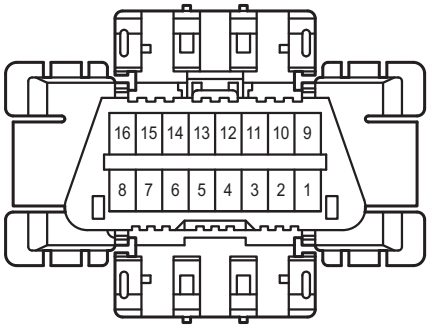


G51
Black

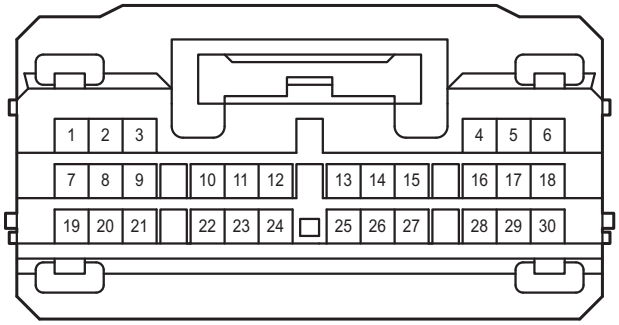


G52
Black

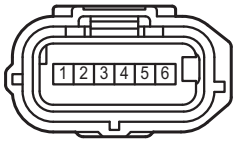


G53
Black

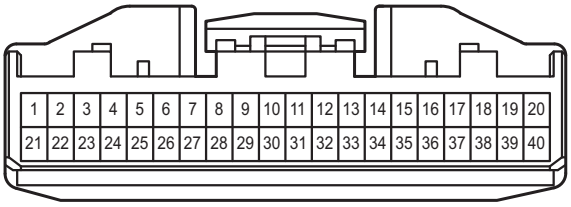


G56
White

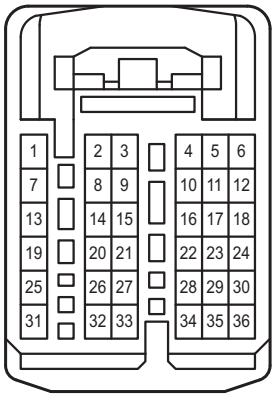


G57
White

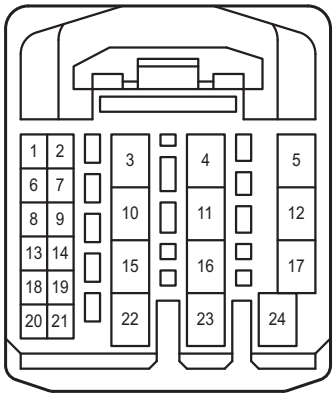


G58
White

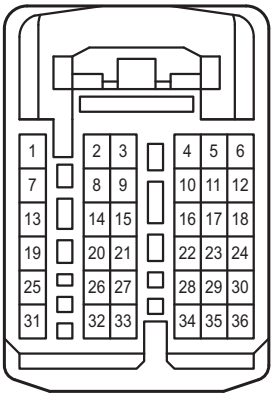


G63
White

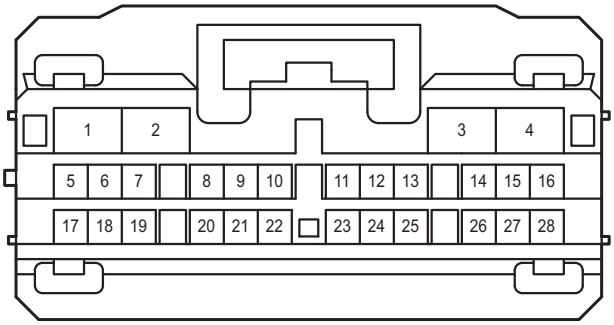


G64
White

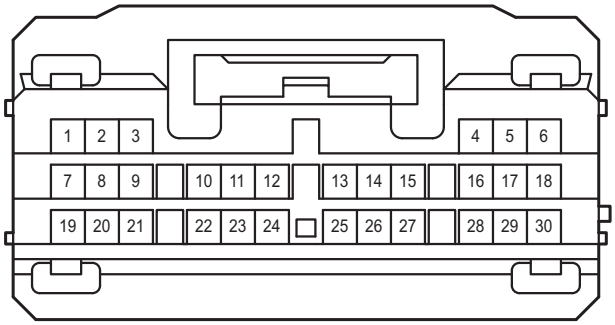


G70
White

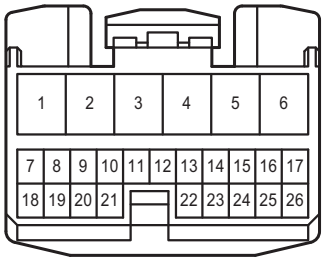


G76
Black

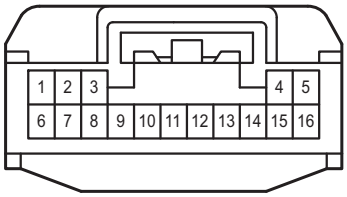


G95
White

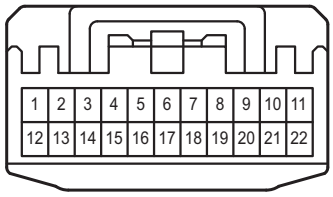


G98
White

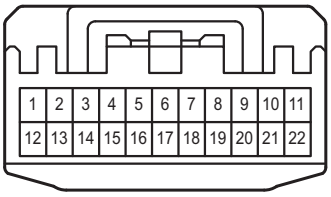


G101
White

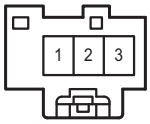


G102
White

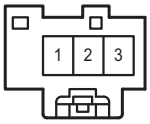


G103
White

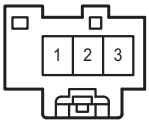


G104
White

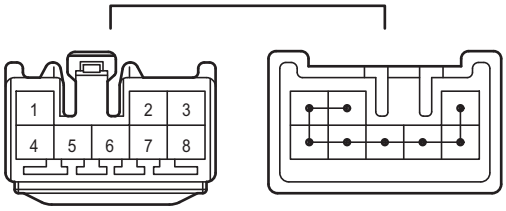


G116
White

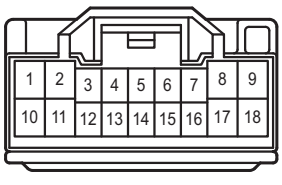


G118
White

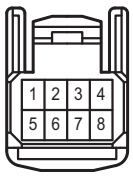


G119
White

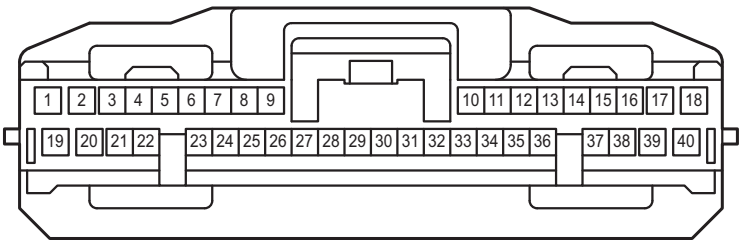


G123
White

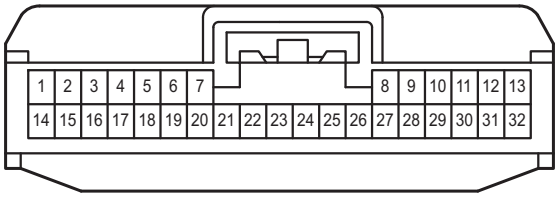


G132
Gray

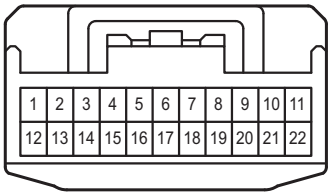


G133
White

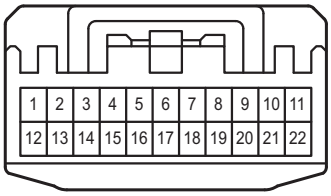


G134
Gray

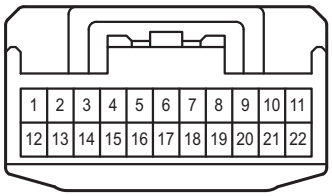

G154
White

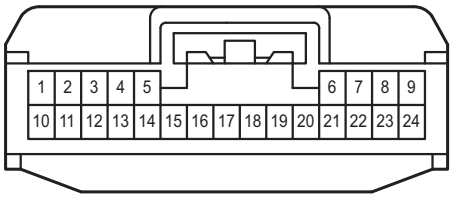


G155
White

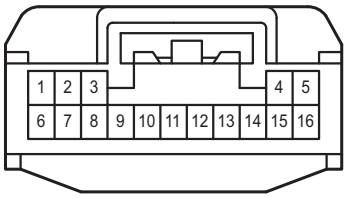


G163
White




H51
White

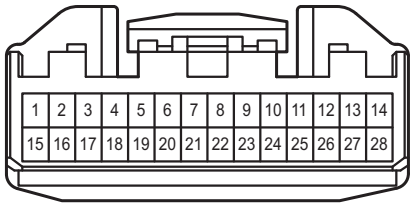


H56
White

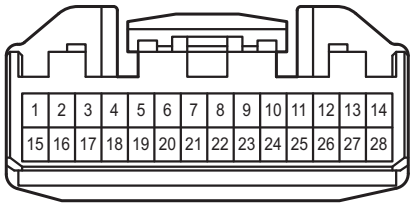


I1
White

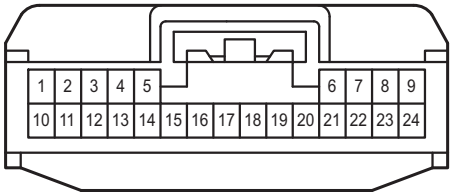


I7
Black

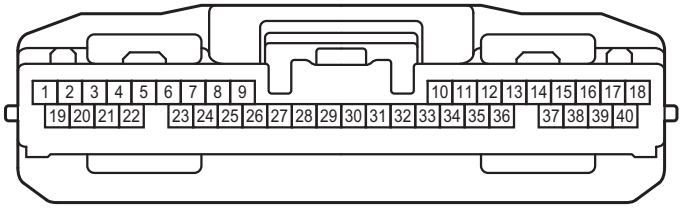


R42
Black

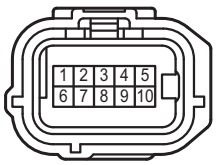

R43
Black

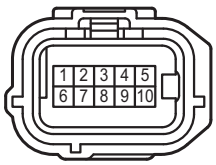


R47
Gray

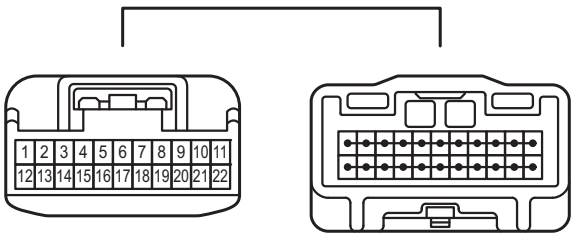


a5
White




2 A
White

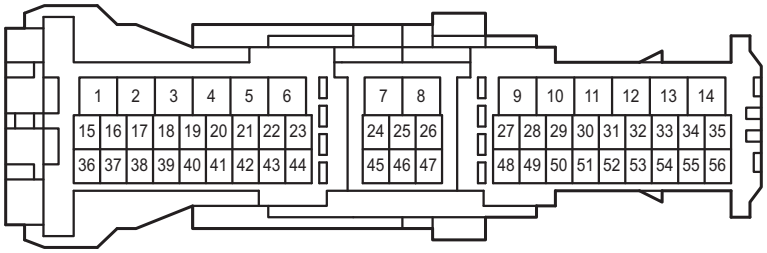


2 D
White

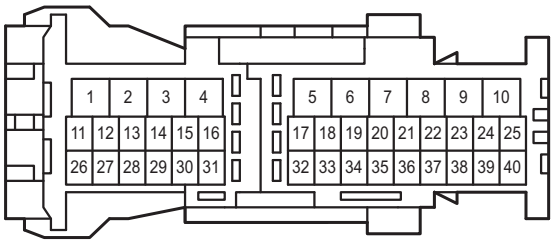


2 F
White

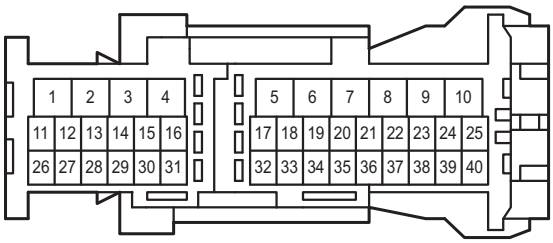

3 A
White

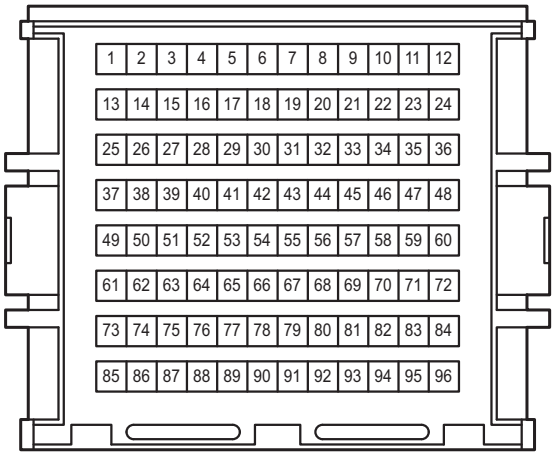


CG2
White

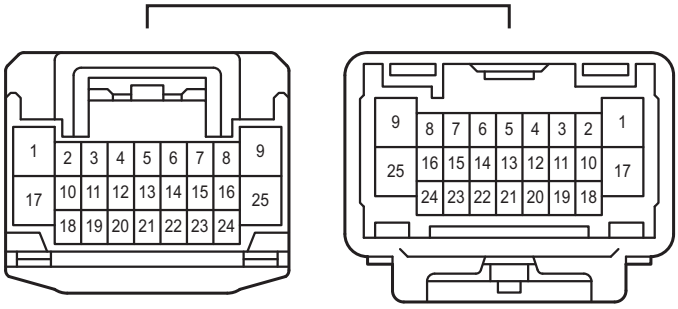


GA1

White

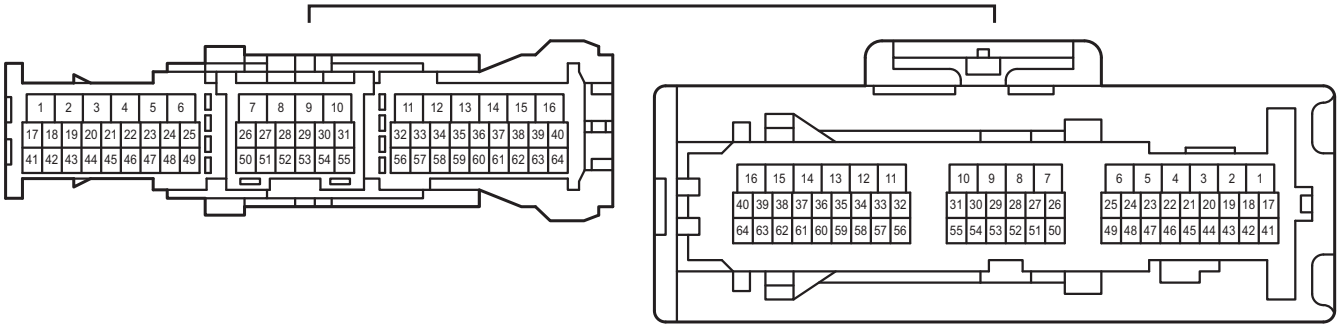


GA2

White

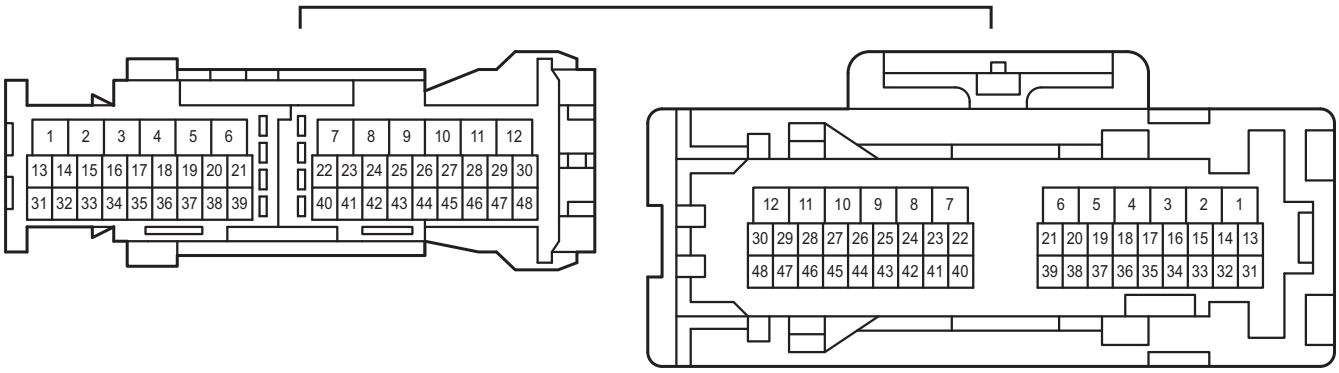


GA6

White

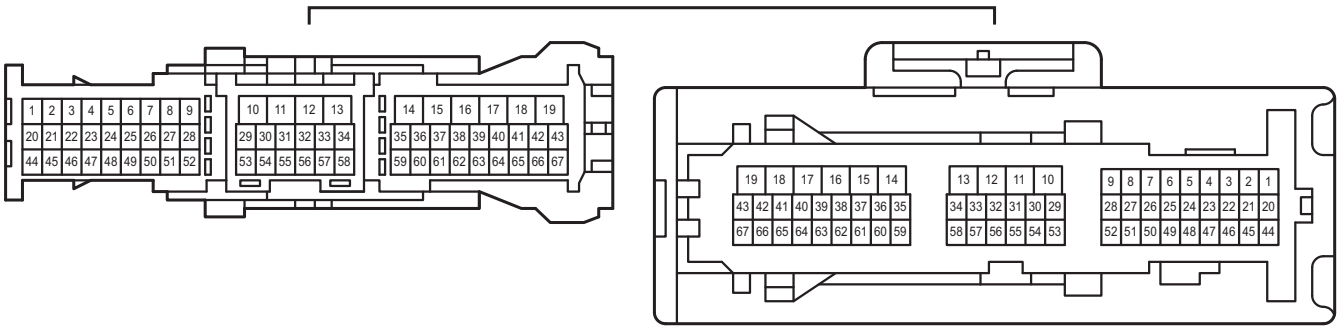


GH1

White

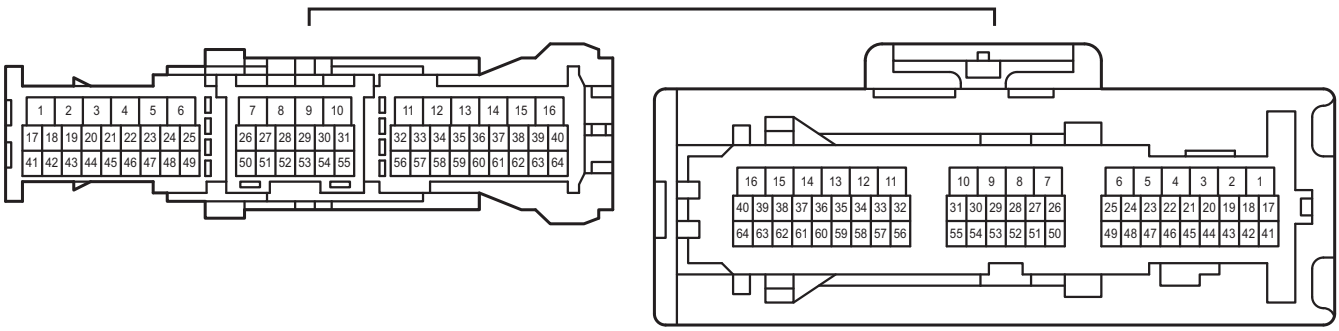


GQ1

White

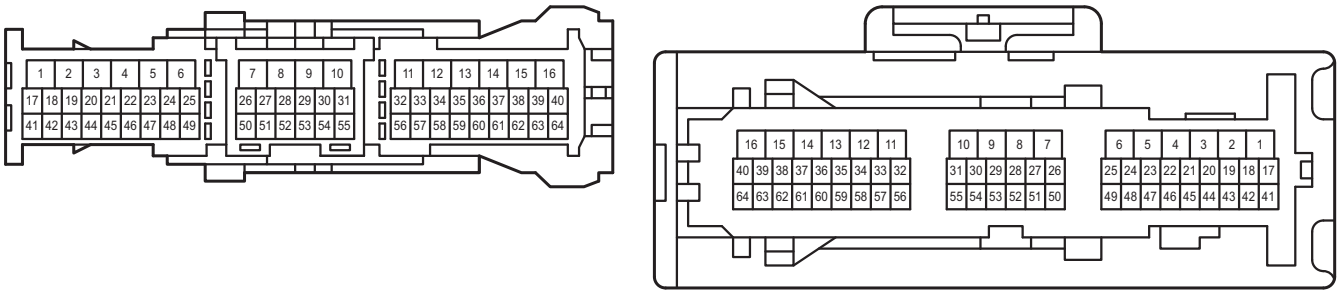


GR1

White

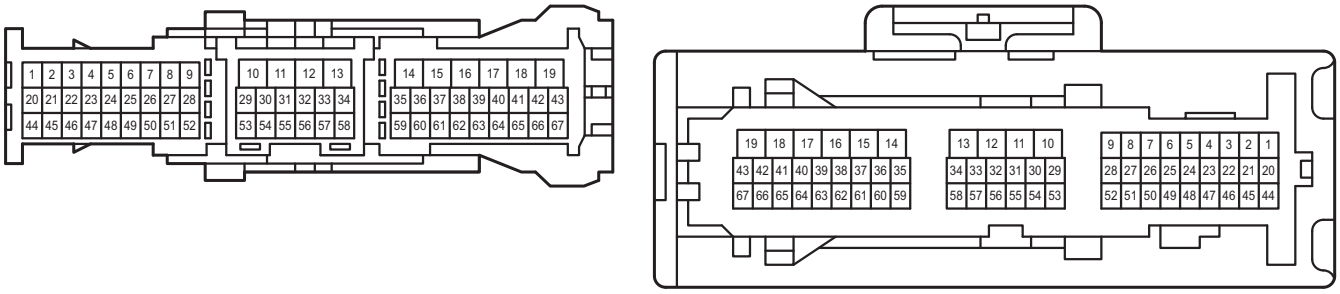


GR2


Gray

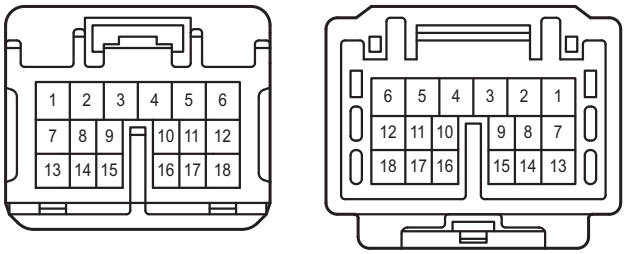

IG1

White

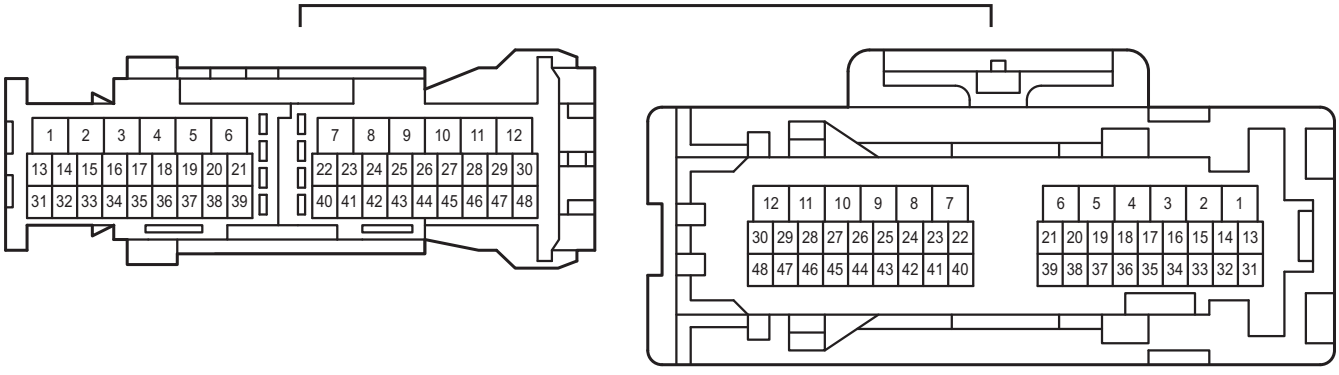

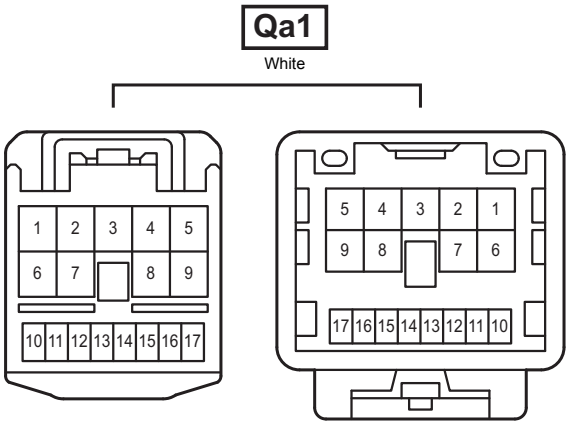
Qa1
White
1 2 3 4 5
6 7 8 9
10 11 12 13 14 15 16 17
5 4 3 2 1
9 8 7 6
17 16 15 14 13 12 11 10