





1
1E
B
R
(*26 *27)
L
LG
15A INV
30A DEF
15A MIR HTR
30A FOLD SEAT RH
30A FOLD SEAT LH
10A A/C COMP
7.5A FOG RR
20A DEICER
25A FUEL HTR(*13)
10A AIR PMP HTR(*12)
10A STOP
50A AIR SUS
30A WIP WSH RR
50A HTR
40A A/C RR
30A H-LP CLN
50A PTC HTR NO.1
30A PTC HTR NO.2
30A PTC HTR NO.3
30A TOWING BRK
30A RAD NO.2(*26)
10A RAD NO.2(*25)
7.5A ALT-S
30A AMP
50A ABS NO.1
30A ABS NO.2
50A AIR PMP
20A RAD NO.1(*26)
15A RAD NO.1(*25)
2
1
140A ALT (*1, *28)
120A ALT (*2, *29)
1 1D
B
Battery
20A CDS FAN
10A VISCUS
20A S/HTR RR(*26)
10A STRG HTR(*26)
SHORT PIN
10A DOME
10A ECU-B

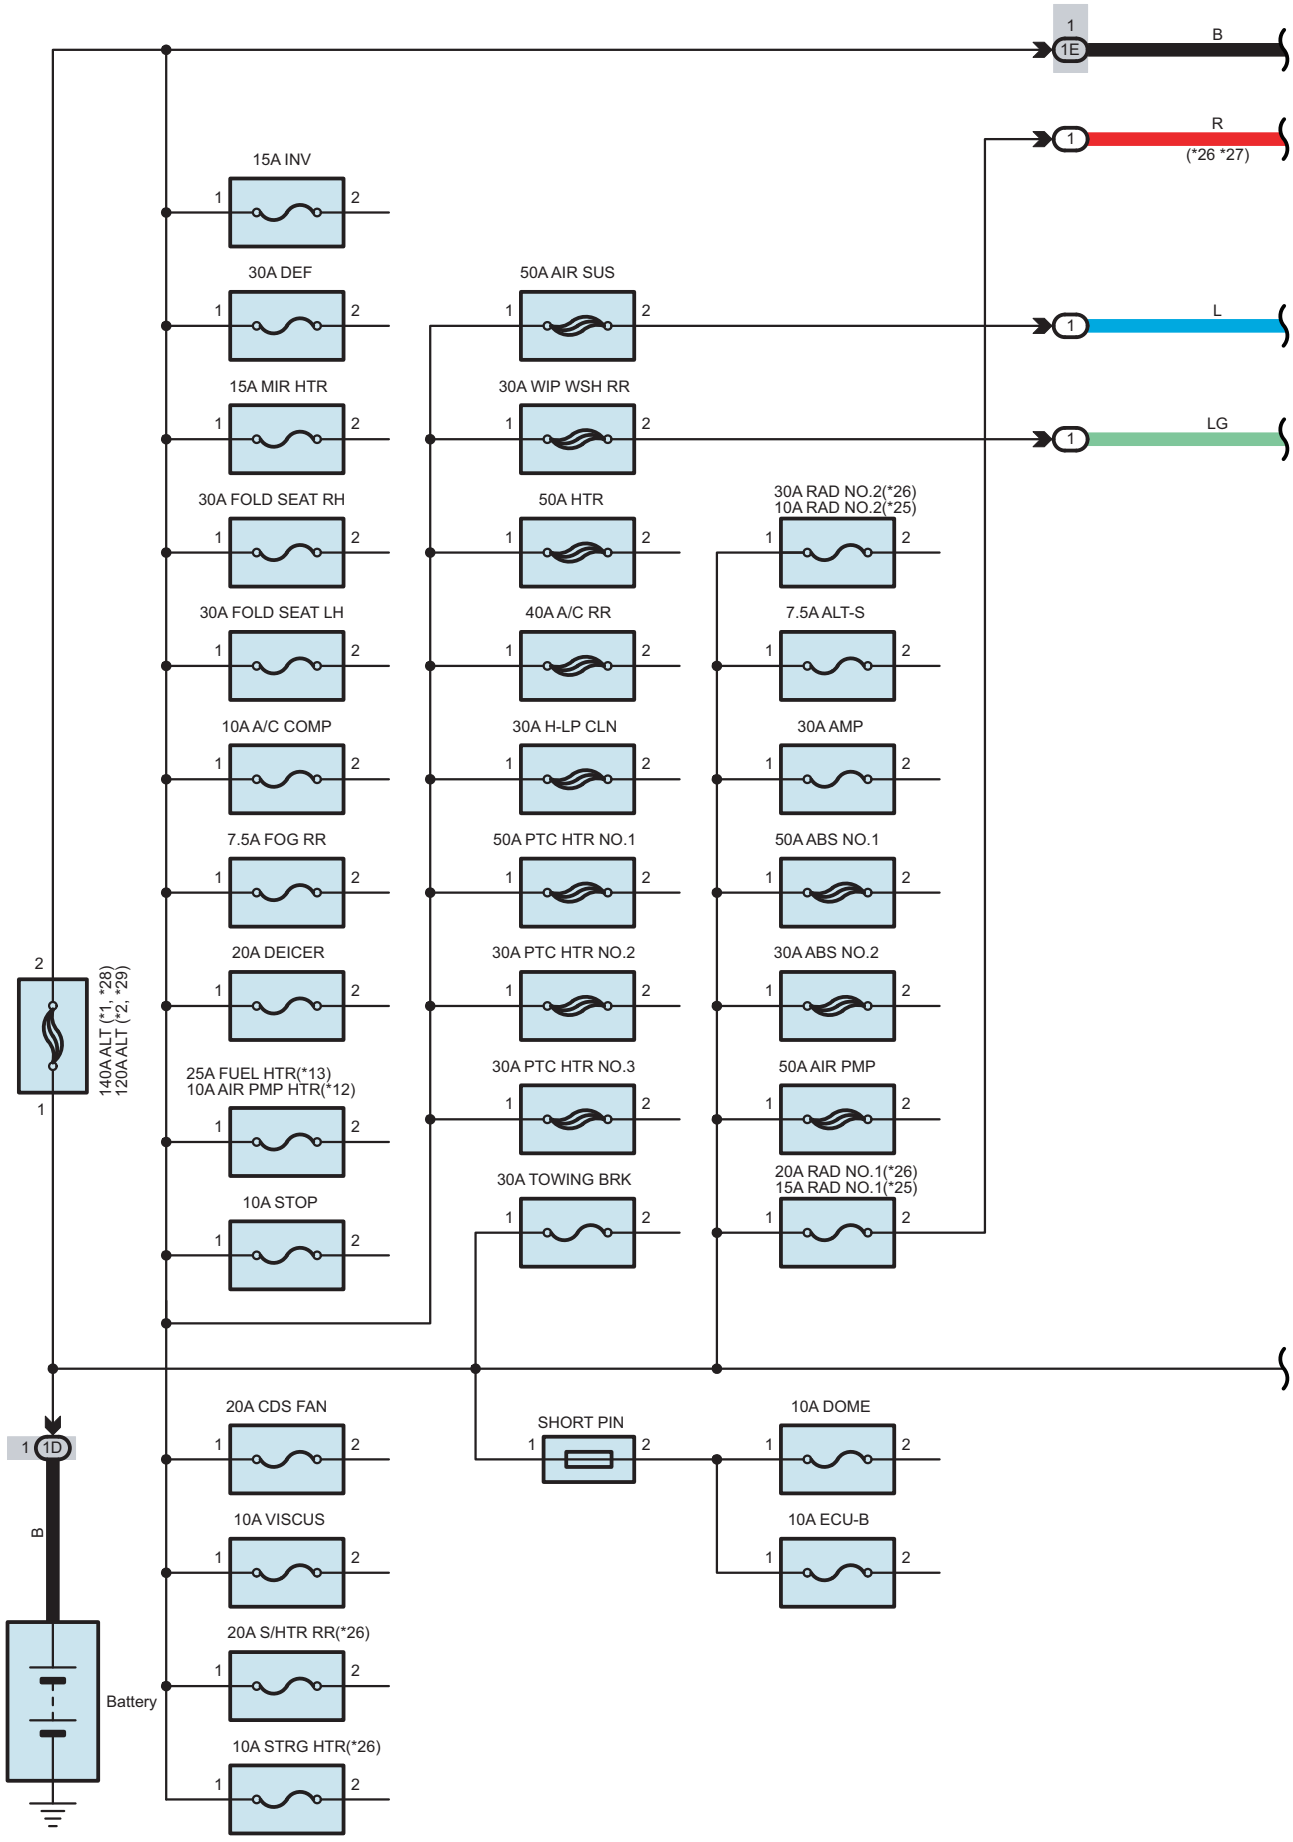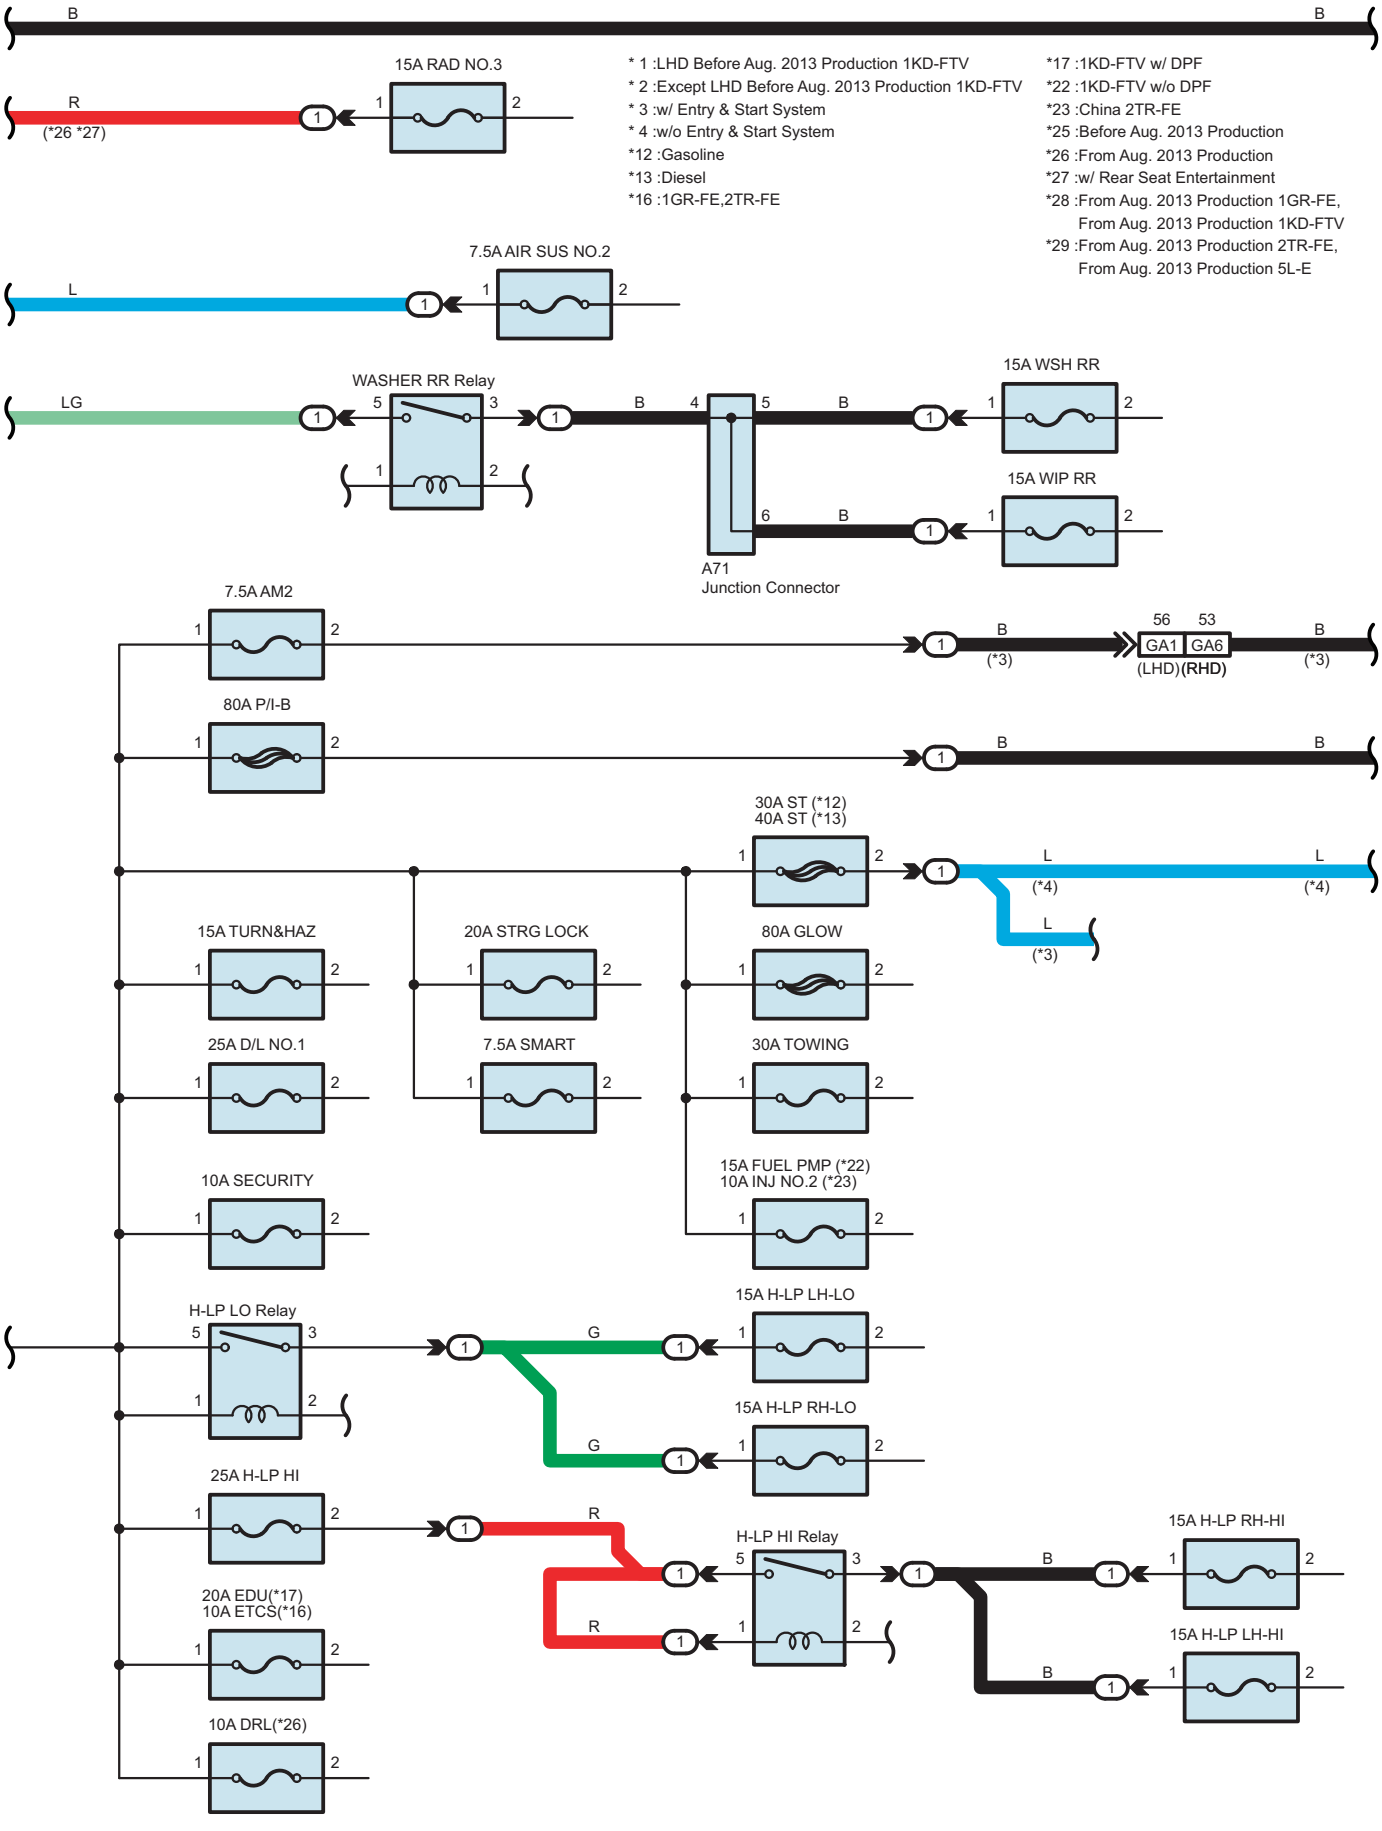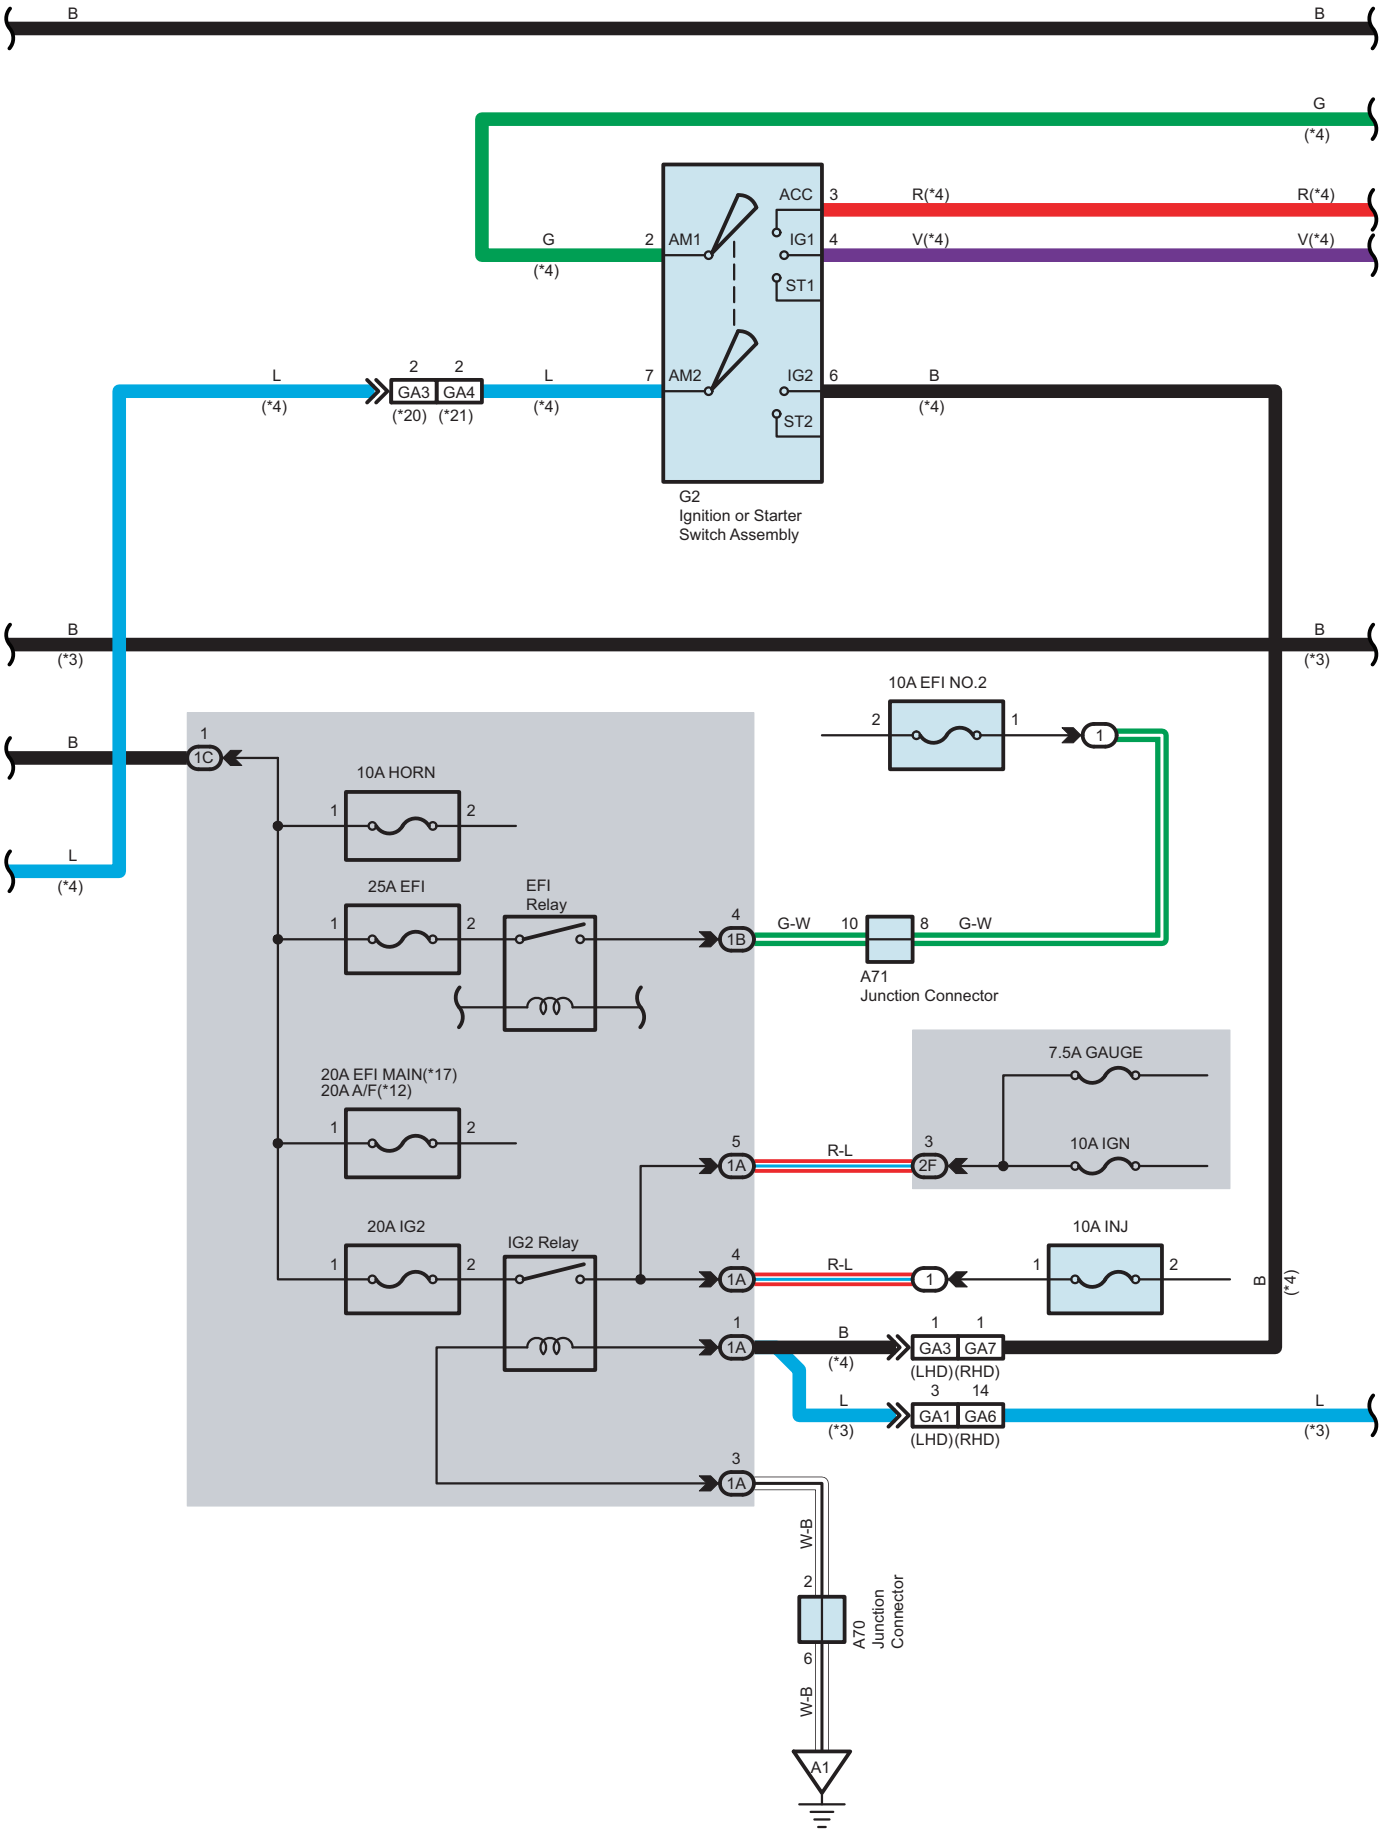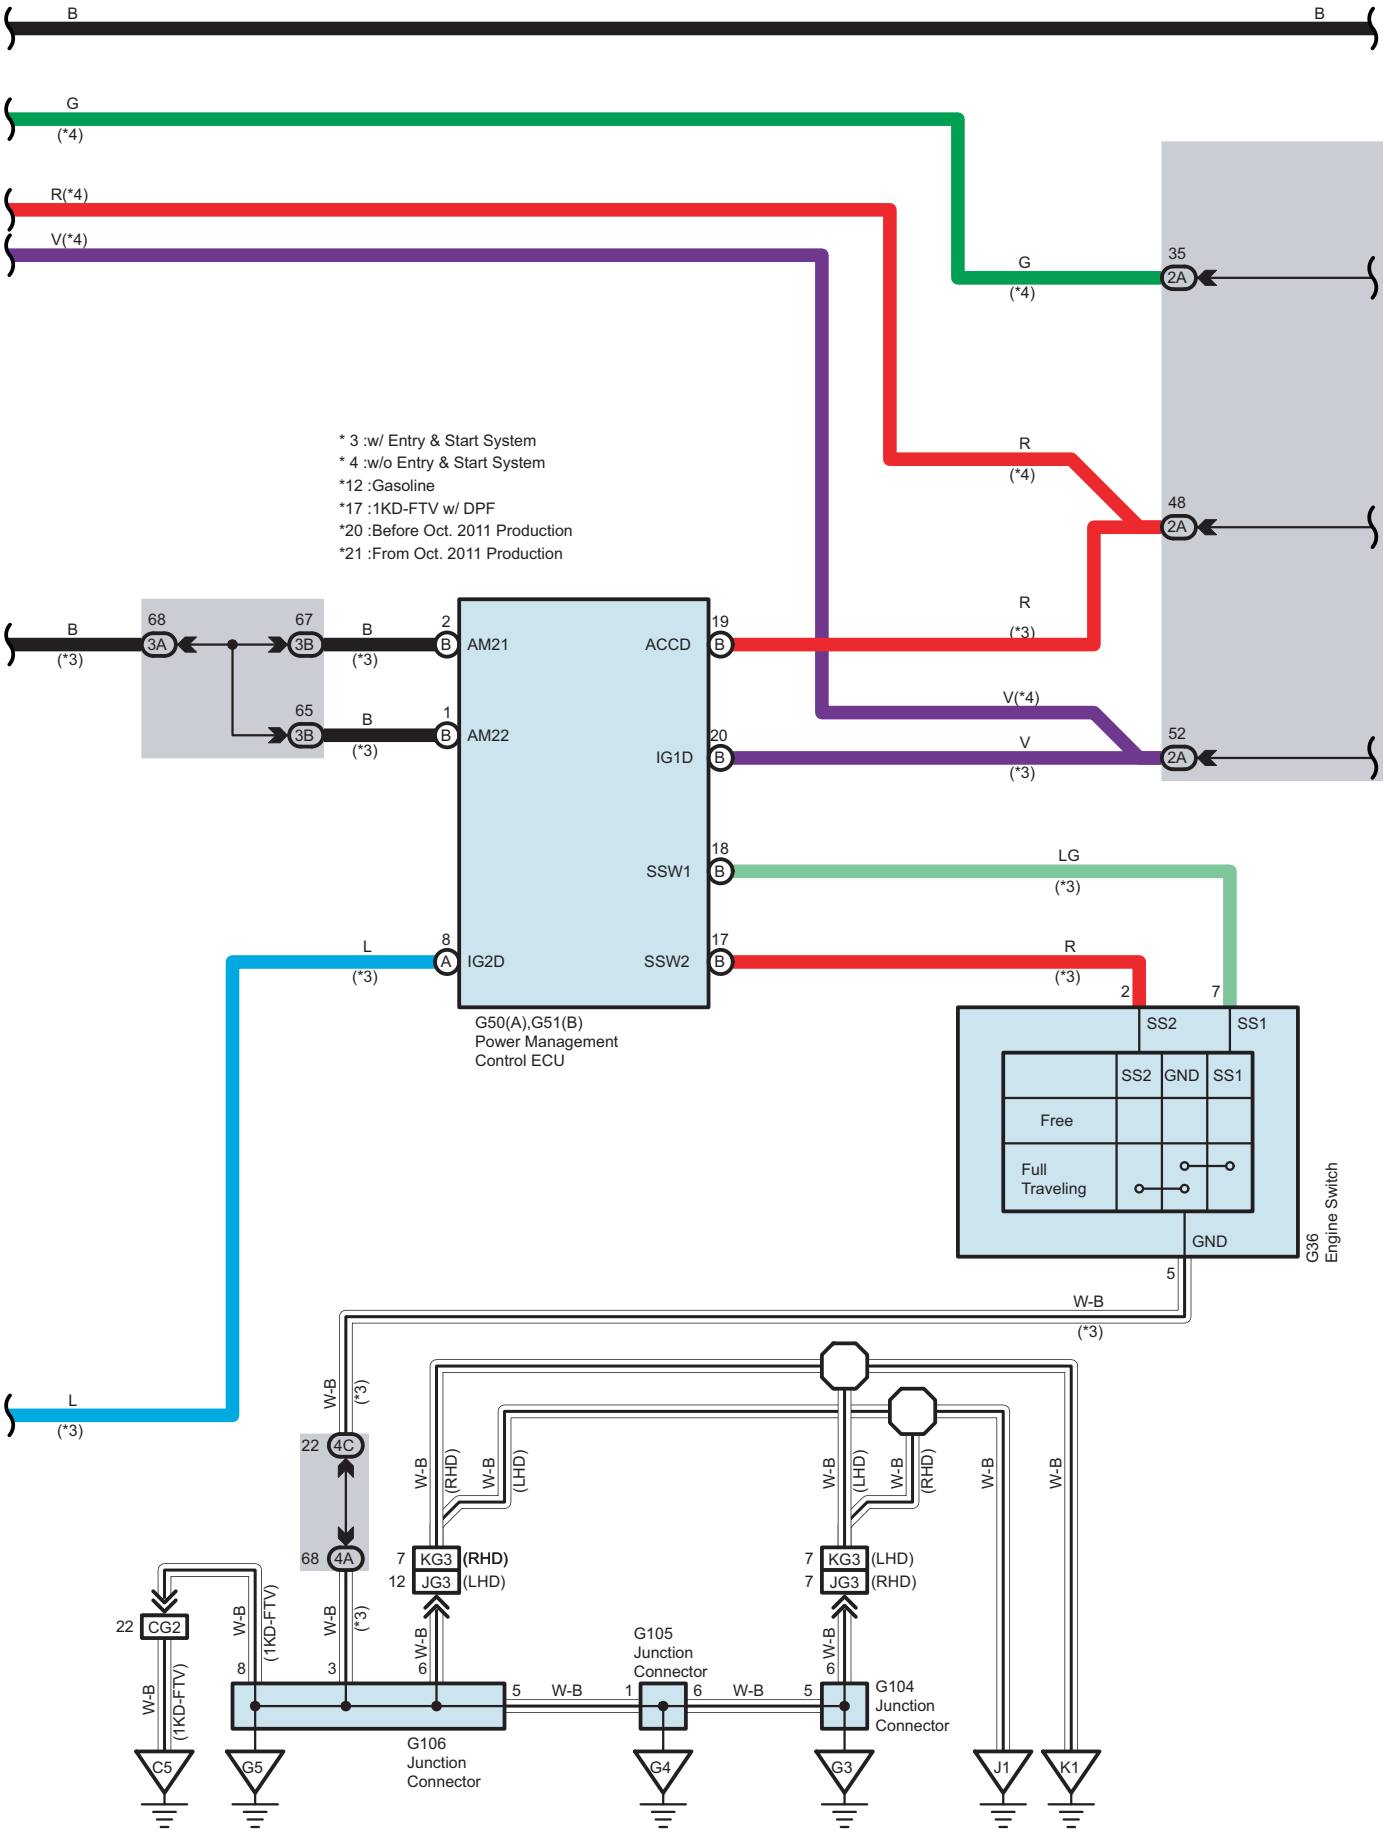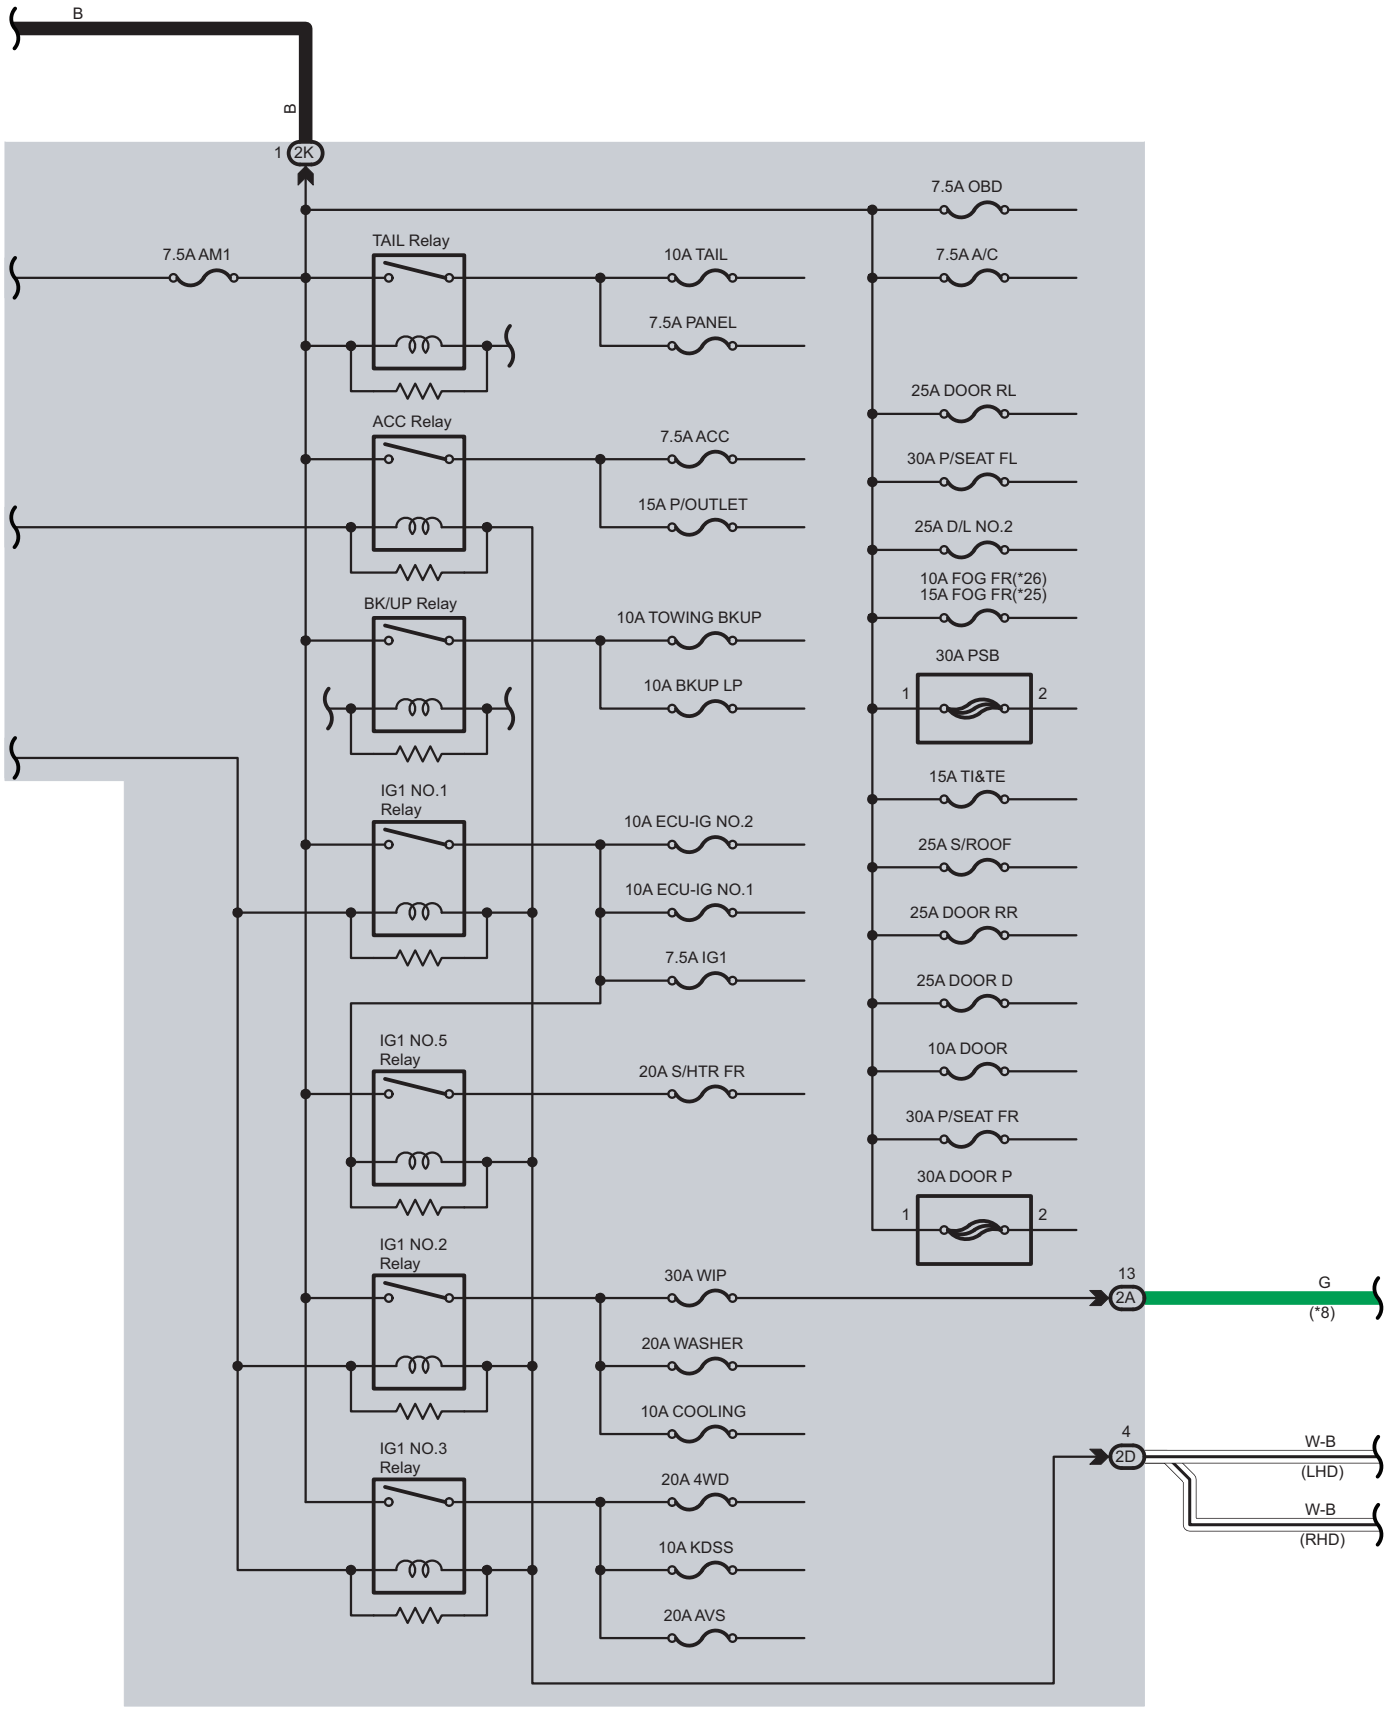


* 1 :LHD Before Aug. 2013 Production 1KD-FTV
* 2 :Except LHD Before Aug. 2013 Production 1KD-FTV
* 3 :w/ Entry & Start System
* 4 :w/o Entry & Start System
*12 :Gasoline
*13 :Diesel
*16 :1GR-FE,2TR-FE
*17 :1KD-FTV w/ DPF
*22 :1KD-FTV w/o DPF
*23 :China 2TR-FE
*25 :Before Aug. 2013 Production
*26 :From Aug. 2013 Production
*27 :w/ Rear Seat Entertainment
*28 :From Aug. 2013 Production 1GR-FE, From Aug. 2013 Production 1KD-FTV
*29 :From Aug. 2013 Production 2TR-FE, From Aug. 2013 Production 5L-E


B
B
G
(*4)
G
(*4)
2
AM1
ACC
3
R(*4)
R(*4)
IG1
4
V(*4)
V(*4)
ST1
L
(*4)
2
2
GA3
GA4
(*20)
(*21)
L
(*4)
7
AM2
IG2
6
B
(*4)
ST2
G2
Ignition or Starter
Switch Assembly
B
(*3)
B
(*3)
10A EFI NO.2
2
1
1
B
1
1C
10A HORN
1
2
L
(*4)
25A EFI
EFI
Relay
1
2
4
1B
G-W
10
8
G-W
A71
Junction Connector
7.5A GAUGE
20A EFI MAIN(*17)
20A A/F(*12)
1
2
5
1A
R-L
3
2F
10A IGN
20A IG2
IG2 Relay
1
2
4
1A
R-L
1
10A INJ
1
2
B
(*4)
1
1A
B
(*4)
1
1
GA3
GA7
(LHD)(RHD)
L
(*3)
3
14
GA1
GA6
(LHD)(RHD)
L
(*3)
3
1A
W-B
2
A70
Junction
Connector
6
W-B
A1



B
B
G
(*4)
R(*4)
V(*4)
G
(*4)
35
2A
* 3 :w/ Entry & Start System
* 4 :w/o Entry & Start System
*12 :Gasoline
*17 :1KD-FTV w/ DPF
*20 :Before Oct. 2011 Production
*21 :From Oct. 2011 Production
R
(*4)
48
2A
B
(*3)
68
3A
67
3B
B
(*3)
2
B
AM21
ACCD
19
B
R
(*3)
65
3B
B
(*3)
1
B
AM22
IG1D
20
B
V(*4)
V
(*3)
52
2A
SSW1
18
B
LG
(*3)
L
(*3)
8
A
IG2D
SSW2
17
B
R
(*3)
G50(A),G51(B)
Power Management
Control ECU
2
7
SS2
SS1
SS2
GND
SS1
Free
Full
Traveling
GND
G36
Engine Switch
5
W-B
(*3)
L
(*3)
W-B
(*3)
22
4C
68
4A
W-B
(RHD)
W-B
(LHD)
W-B
(LHD)
W-B
(RHD)
W-B
W-B
7
KG3
(RHD)
12
JG3
(LHD)
7
KG3
(LHD)
7
JG3
(RHD)
22
CG2
W-B
(1KD-FTV)
W-B
(*3)
W-B
6
G105
Junction
Connector
W-B
6
W-B
(1KD-FTV)
8
3
5
W-B
1
6
W-B
5
G104
Junction
Connector
G106
Junction
Connector
C5
G5
G4
G3
J1
K1


B
B
1
2K
7.5A AM1
TAIL Relay
ACC Relay
BK/UP Relay
IG1 NO.1 Relay
IG1 NO.5 Relay
IG1 NO.2 Relay
IG1 NO.3 Relay
10A TAIL
7.5A PANEL
7.5A ACC
15A P/OUTLET
10A TOWING BKUP
10A BKUP LP
10A ECU-IG NO.2
10A ECU-IG NO.1
7.5A IG1
20A S/HTR FR
30A WIP
20A WASHER
10A COOLING
20A 4WD
10A KDSS
20A AVS
7.5A OBD
7.5A A/C
25A DOOR RL
30A P/SEAT FL
25A D/L NO.2
10A FOG FR(*26)
15A FOG FR(*25)
30A PSB
15A TI&TE
25A S/ROOF
25A DOOR RR
25A DOOR D
10A DOOR
30A P/SEAT FR
30A DOOR P
13
2A
G
(*8)
4
2D
W-B
(LHD)
W-B
(RHD)


* 8 :w/ Auto Wiper System
*10 :Headlight Dimmer Switch Assembly LH Side Type
*11 :Headlight Dimmer Switch Assembly RH Side Type
*14 :Before Oct. 2010 Production
*15 :From Oct. 2010 Production
*25 :Before Aug. 2013 Production
*26 :From Aug. 2013 Production

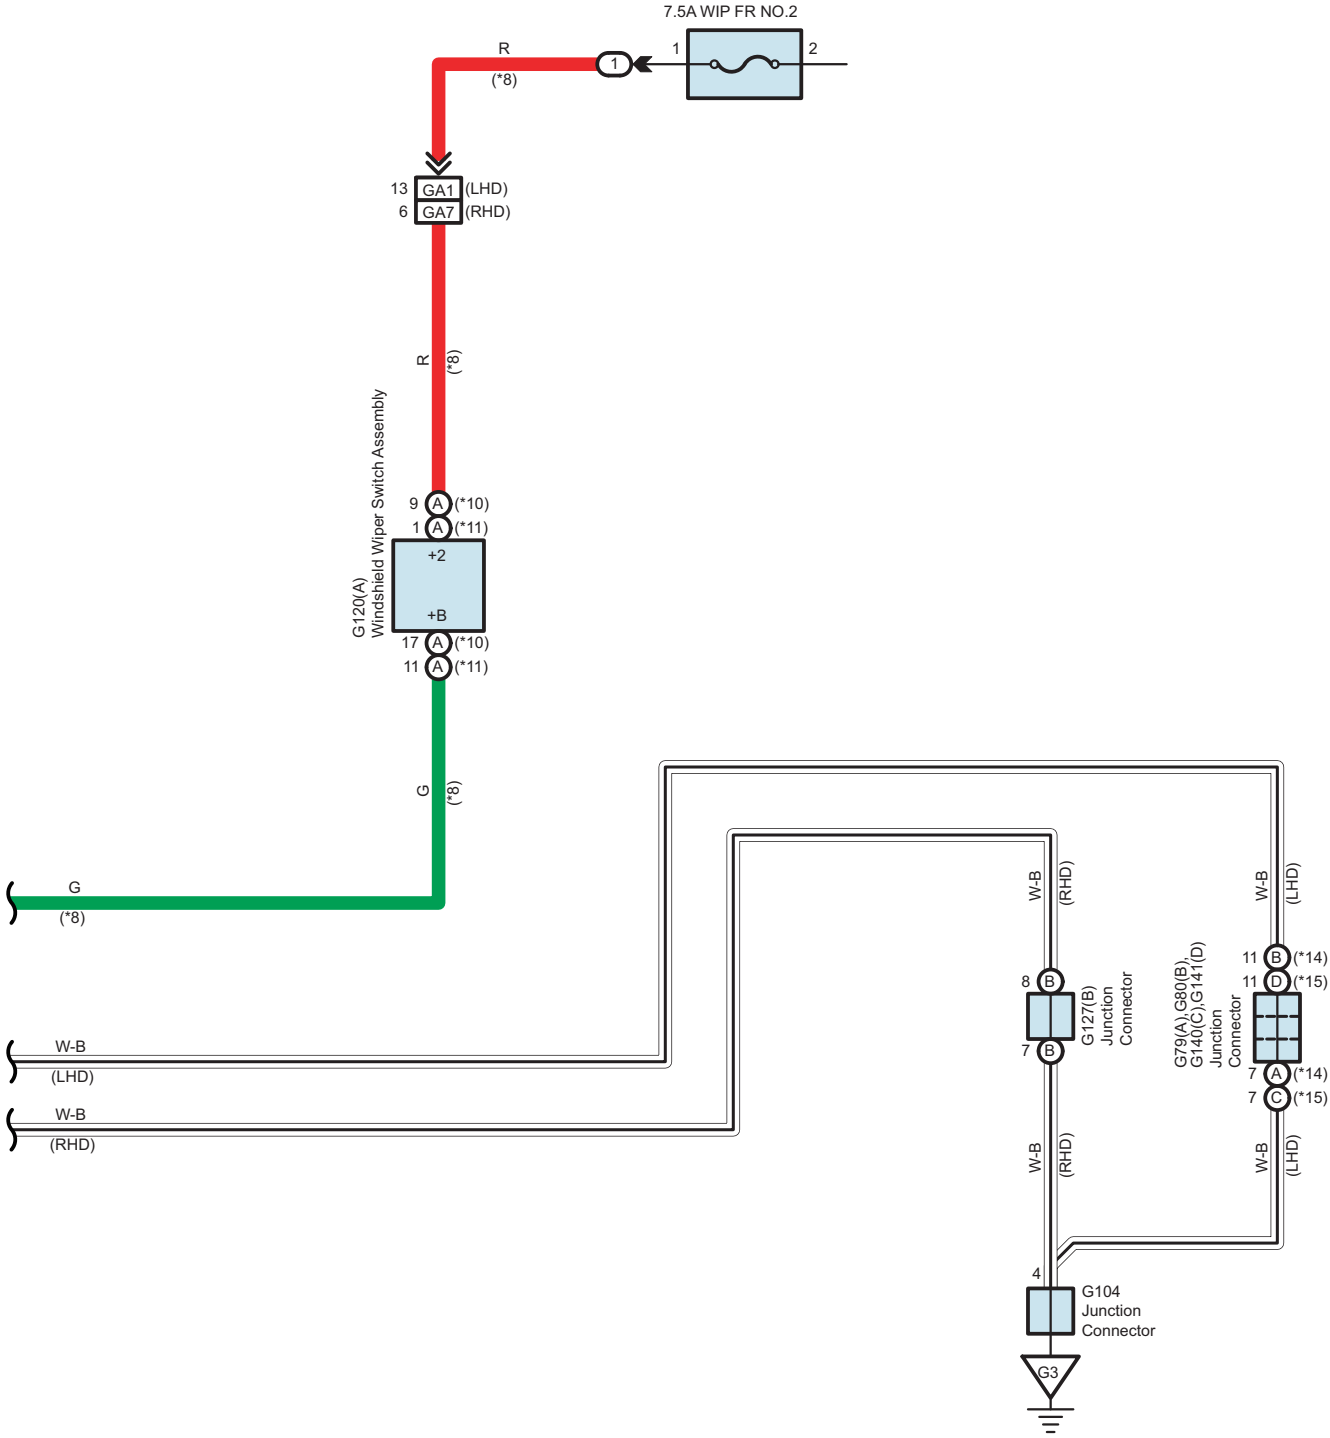


A70
White

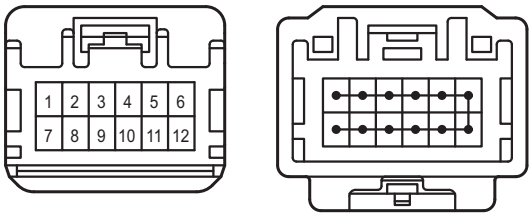


A71
White

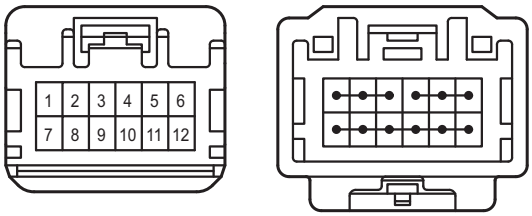


G2
White

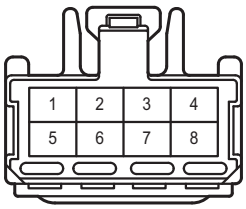


G36
Black

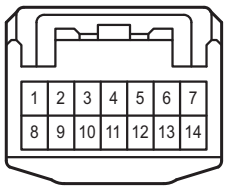


G50
White

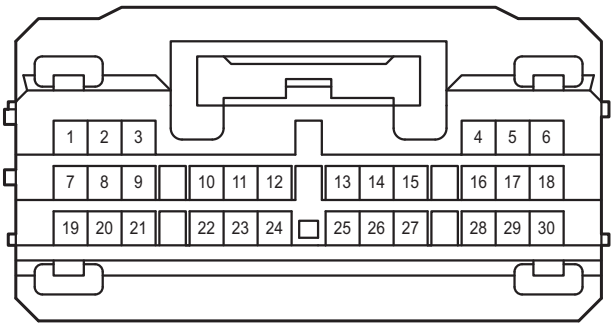


G51
Black

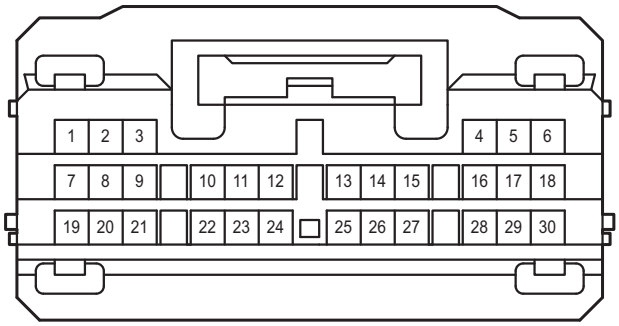


G79
White

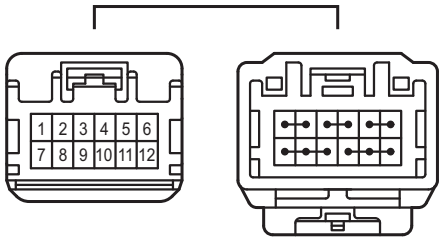


G80
White

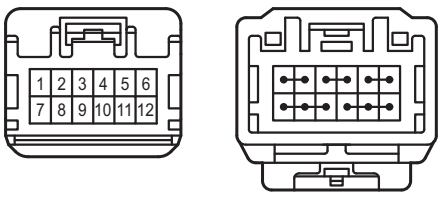


G104
White

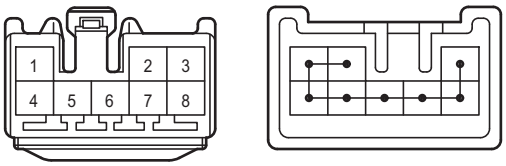


G105
White

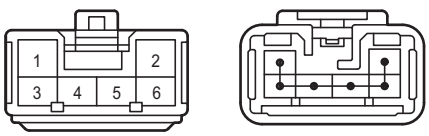


G106
White

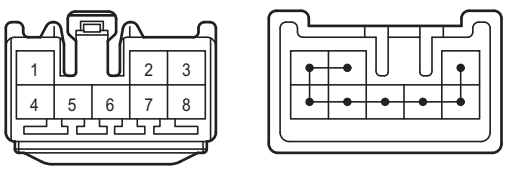


G120
White

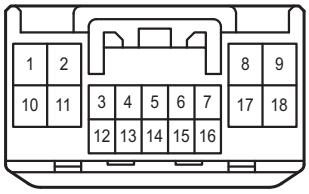


G127
Black

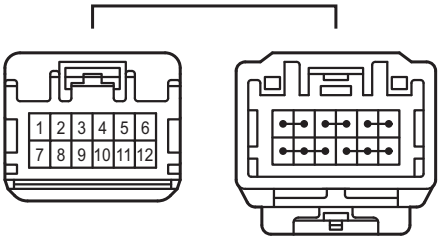


G140
Black

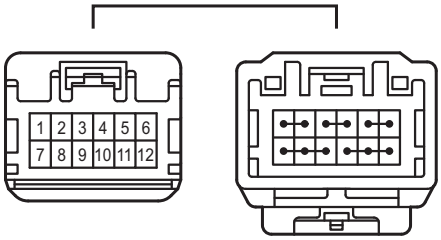


G141
Black

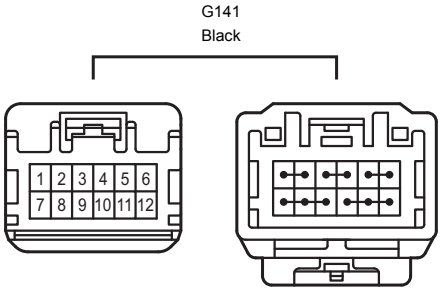

1 A
White

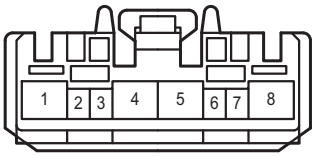

1 B
White

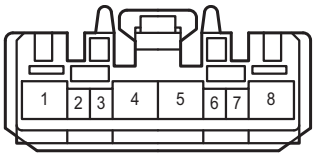

1 C
White




1 D




1 E




2 A
White

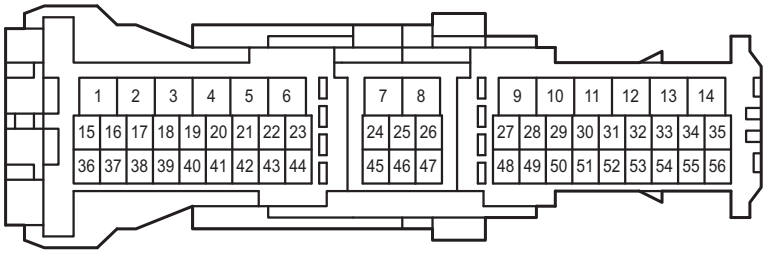


2 D
White

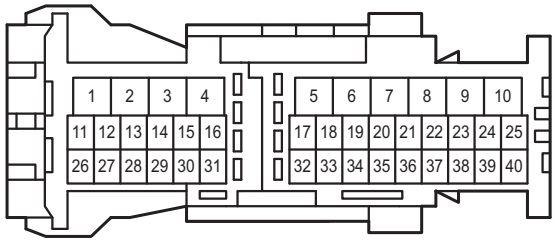


2 F
White

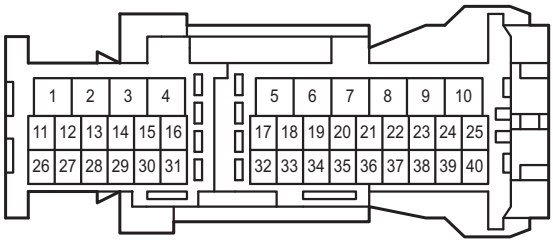


2 K
White

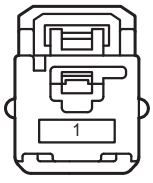


3 A
White

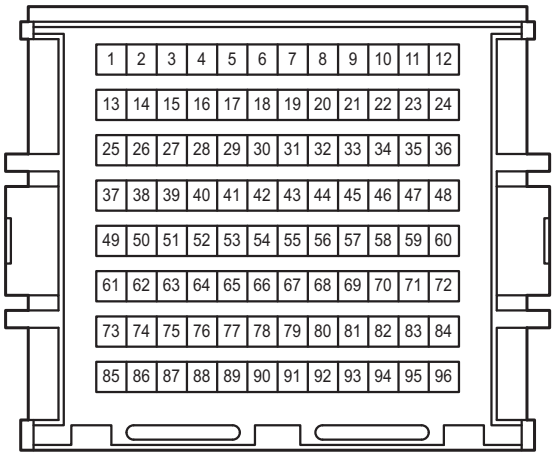


3 B
White

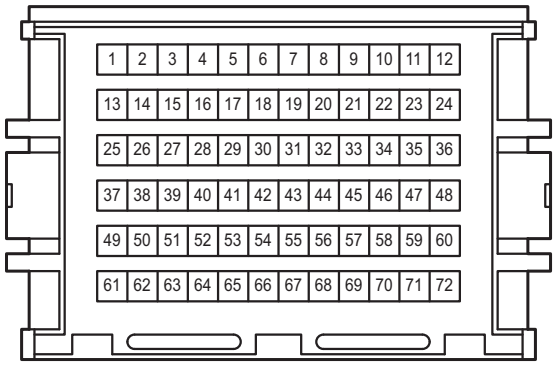


4 A
White

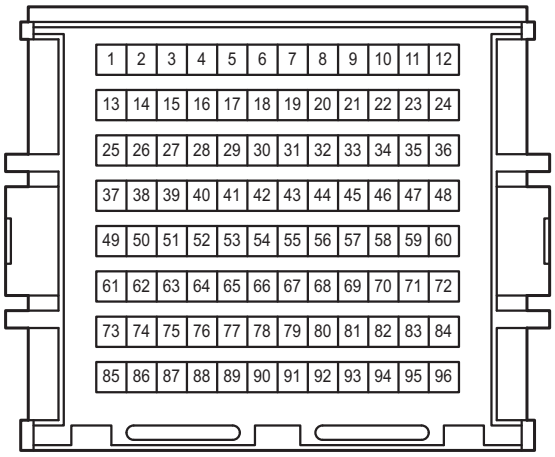


4 C
White

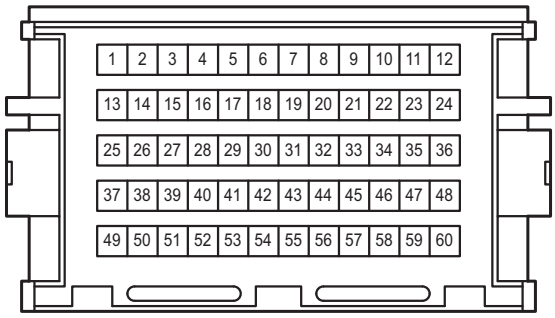


CG2
White

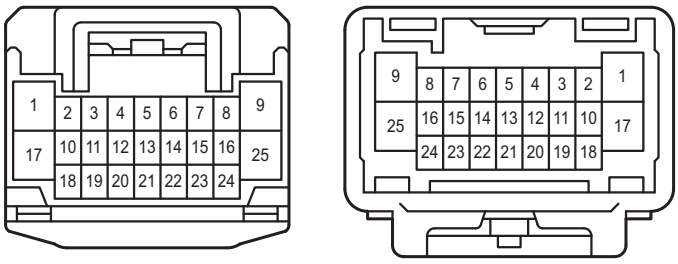


GA1
White

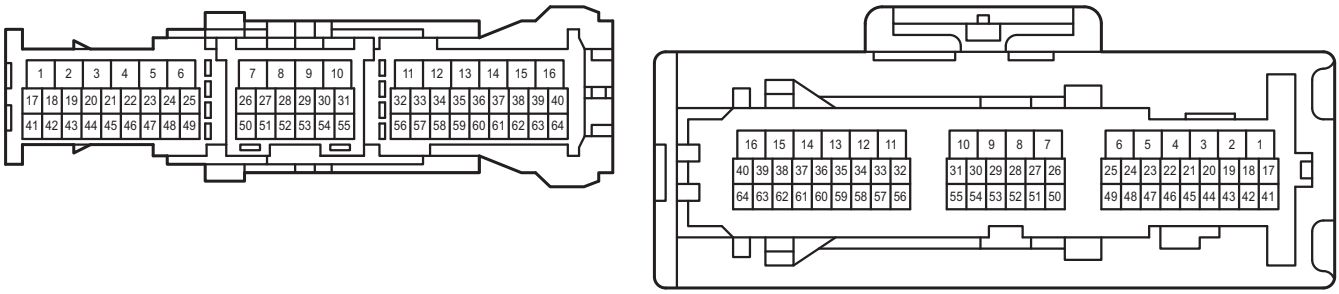


GA3
Black

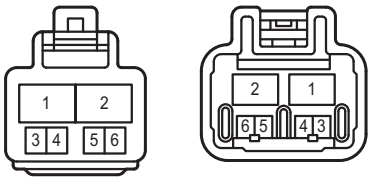


GA4
White

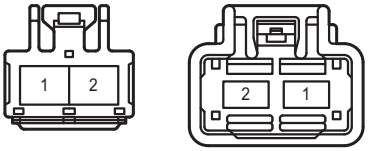


GA6
White

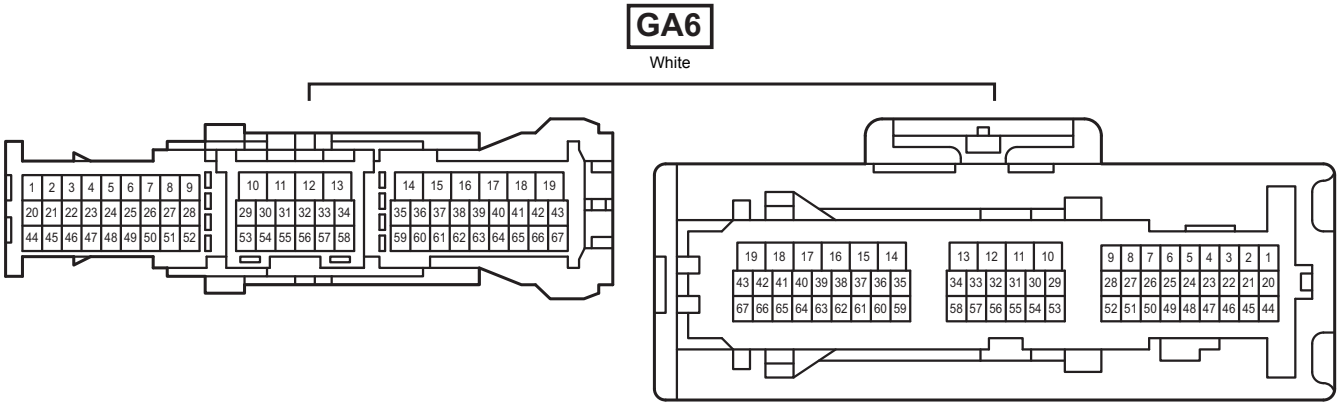


GA7
Black

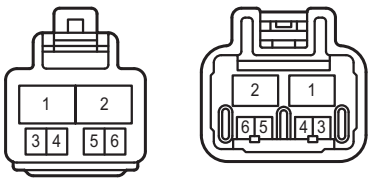

JG3
Black

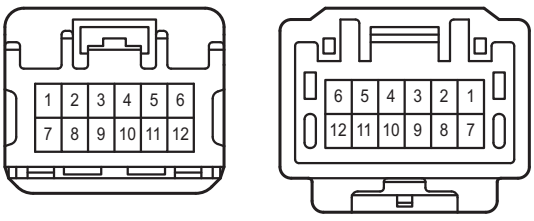

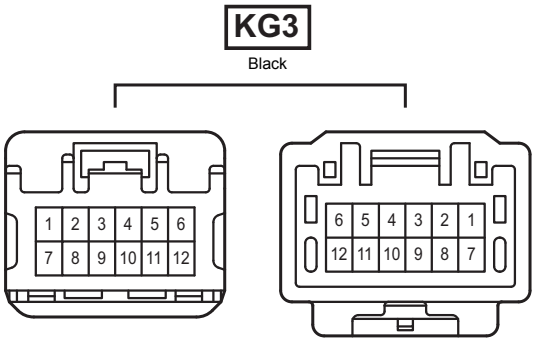
KG3
Black
1 2 3 4 5 6
7 8 9 10 11 12
6 5 4 3 2 1
12 11 10 9 8 7