




(IG)
10A
ECU-IG
NO.2
39 2D
36 3B
18 3A
14 4A
13 4B
(BAT)
50A
AIR
SUS
2
1
L
12 AR1
G
AIR SUS
Relay
5
1
3
2
7 AR2
12 SR2
W-B
A70
Junction
Connector
3
6
A1
7.5A
AIR SUS
NO.2
GR
(IG)
20A
AVS
8 2F
B
A14(A),A49(B),R19(C)
Suspension Control ECU
22 C
RC
3 B
B
1 B
IG
RM+
RM-
SLEX
19 A
17 A
9 C
P
LG
5 AR1
4 AR1
14 SR1
10 SR2
11 SR2
S11
Height Control Compressor Motor
(Height Control Compressor Assembly)
S10
Height Control Exhaust Valve
(Height Control Compressor)
RM+
RM-
B
E
7 SR2
R31
Junction Connector
R2


S3
Rear Height Control Sensor Sub-Assembly RH
SHG
SHRR
SHB
S6
Rear Height Control Sensor Sub-Assembly LH
SHB
SHG
SHRL
SBL2
SGL2
SHRL
SGR2
SHRR
SBR2
SLRR
SLRL
TSW1
TSW2
A14(A),A49(B),R19(C)
Suspension Control ECU
ECU1
ECU2
RH+
LH+
E
S7
Height Control
Valve
G111
Suspension Control Switch
SPORT
COMF
IG
GND
W-B
L



A14(A),A49(B),R19(C)
Suspension Control ECU
TD
DNSW
UPSW
GND
SBR
SGFR
SGR
13 B
14 B
15 B
10 C
9 A
18 A
10 A
L
V
P
G-B
R-L
L-Y
43 GA1
42 GA1
41 GA1
19 GA2
21 GA2
20 GA2
G
R
L
27 GA6
26 GA6
25 GA6
G-B
R-L
L-Y
8
2
3
3
1
2
SHB
SGFL
SHG
A13
Front Acceleration Sensor Assembly
G112
No. 2 Absorber Control Switch
N
E
G113
Absorber Control Switch
LO
HI
Low
High
E
5
4
W-B
W-B
W-B
22 4B
33 4B
23 4B
68 4A
W-B
W-B
W-B
3
G106
Junction
Connector
G5
R1

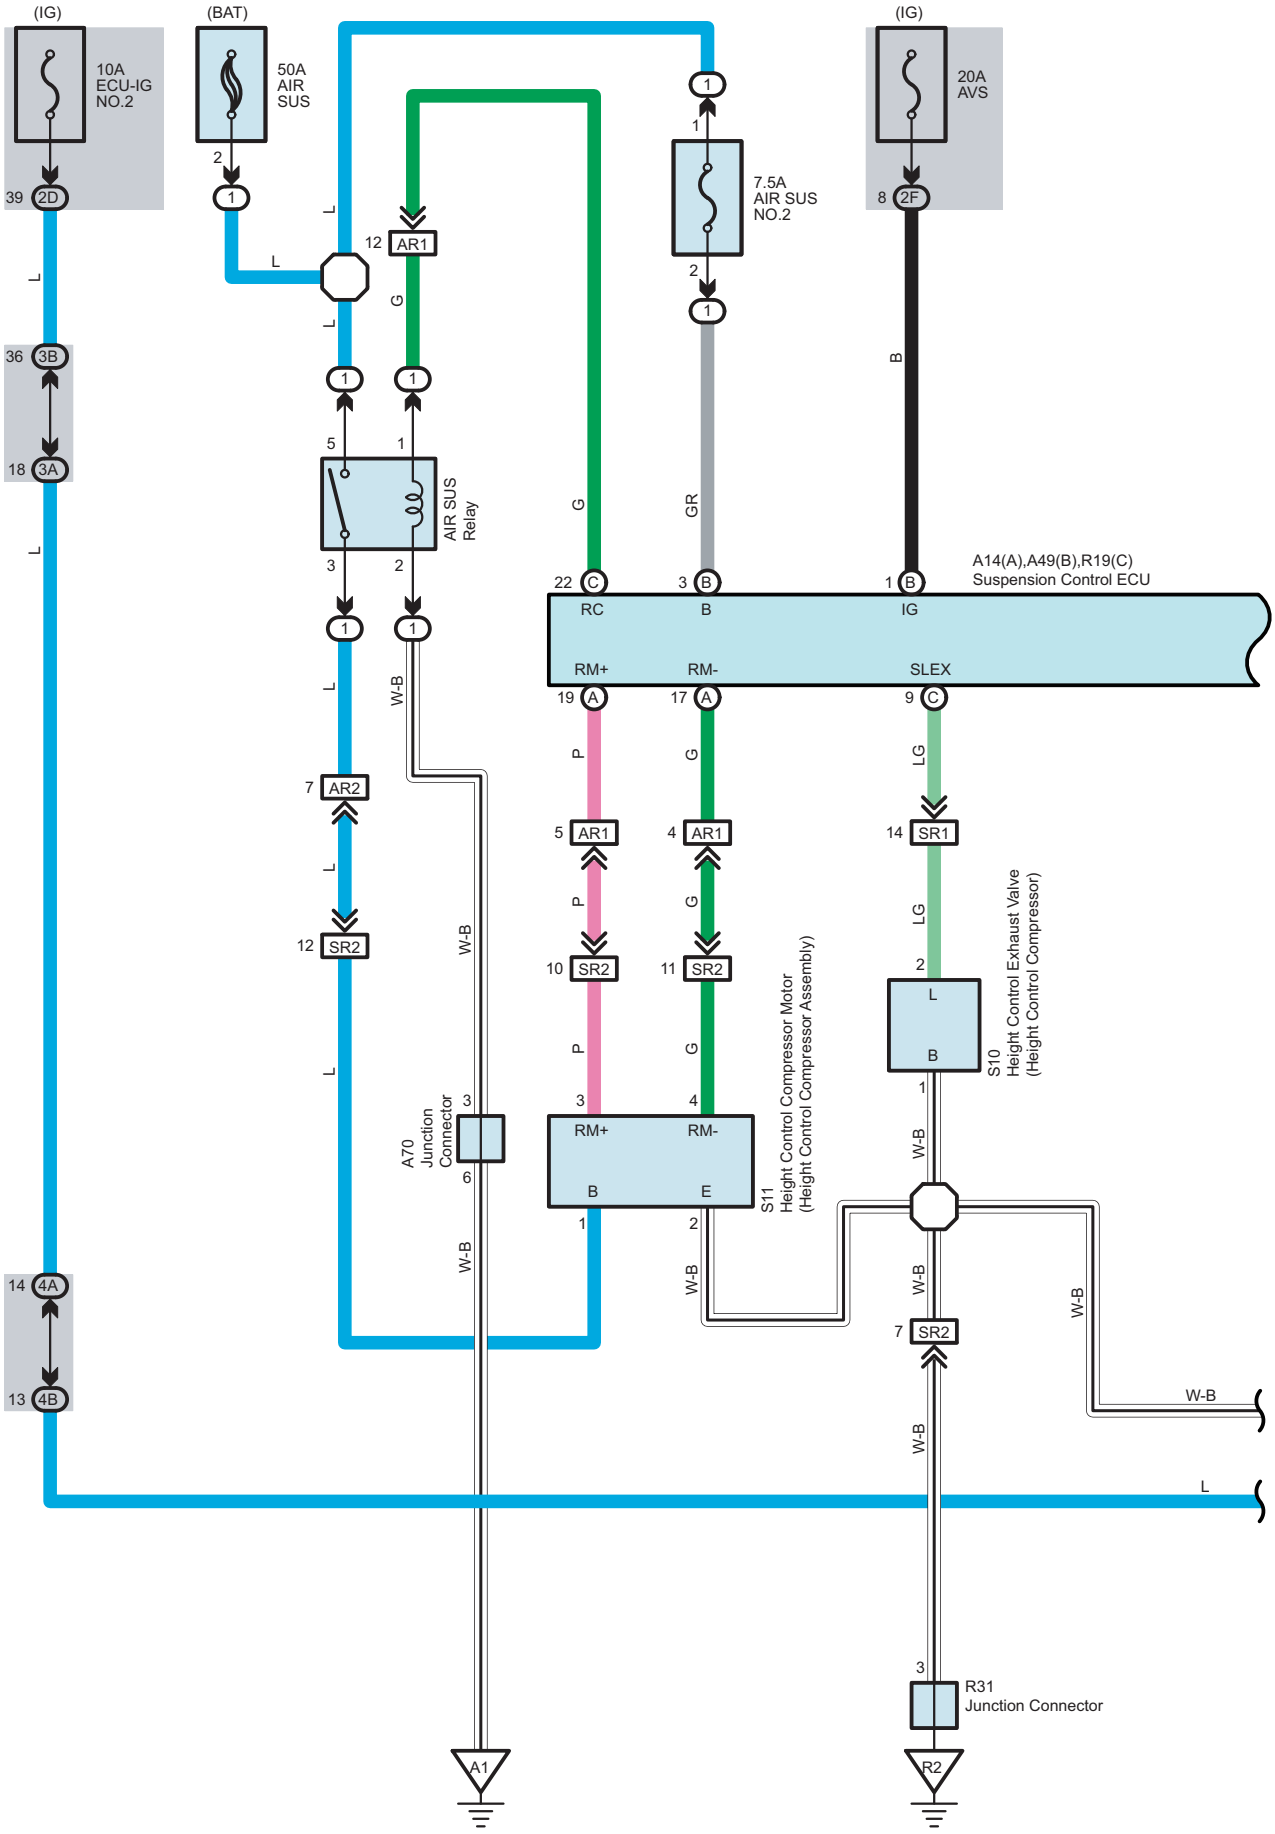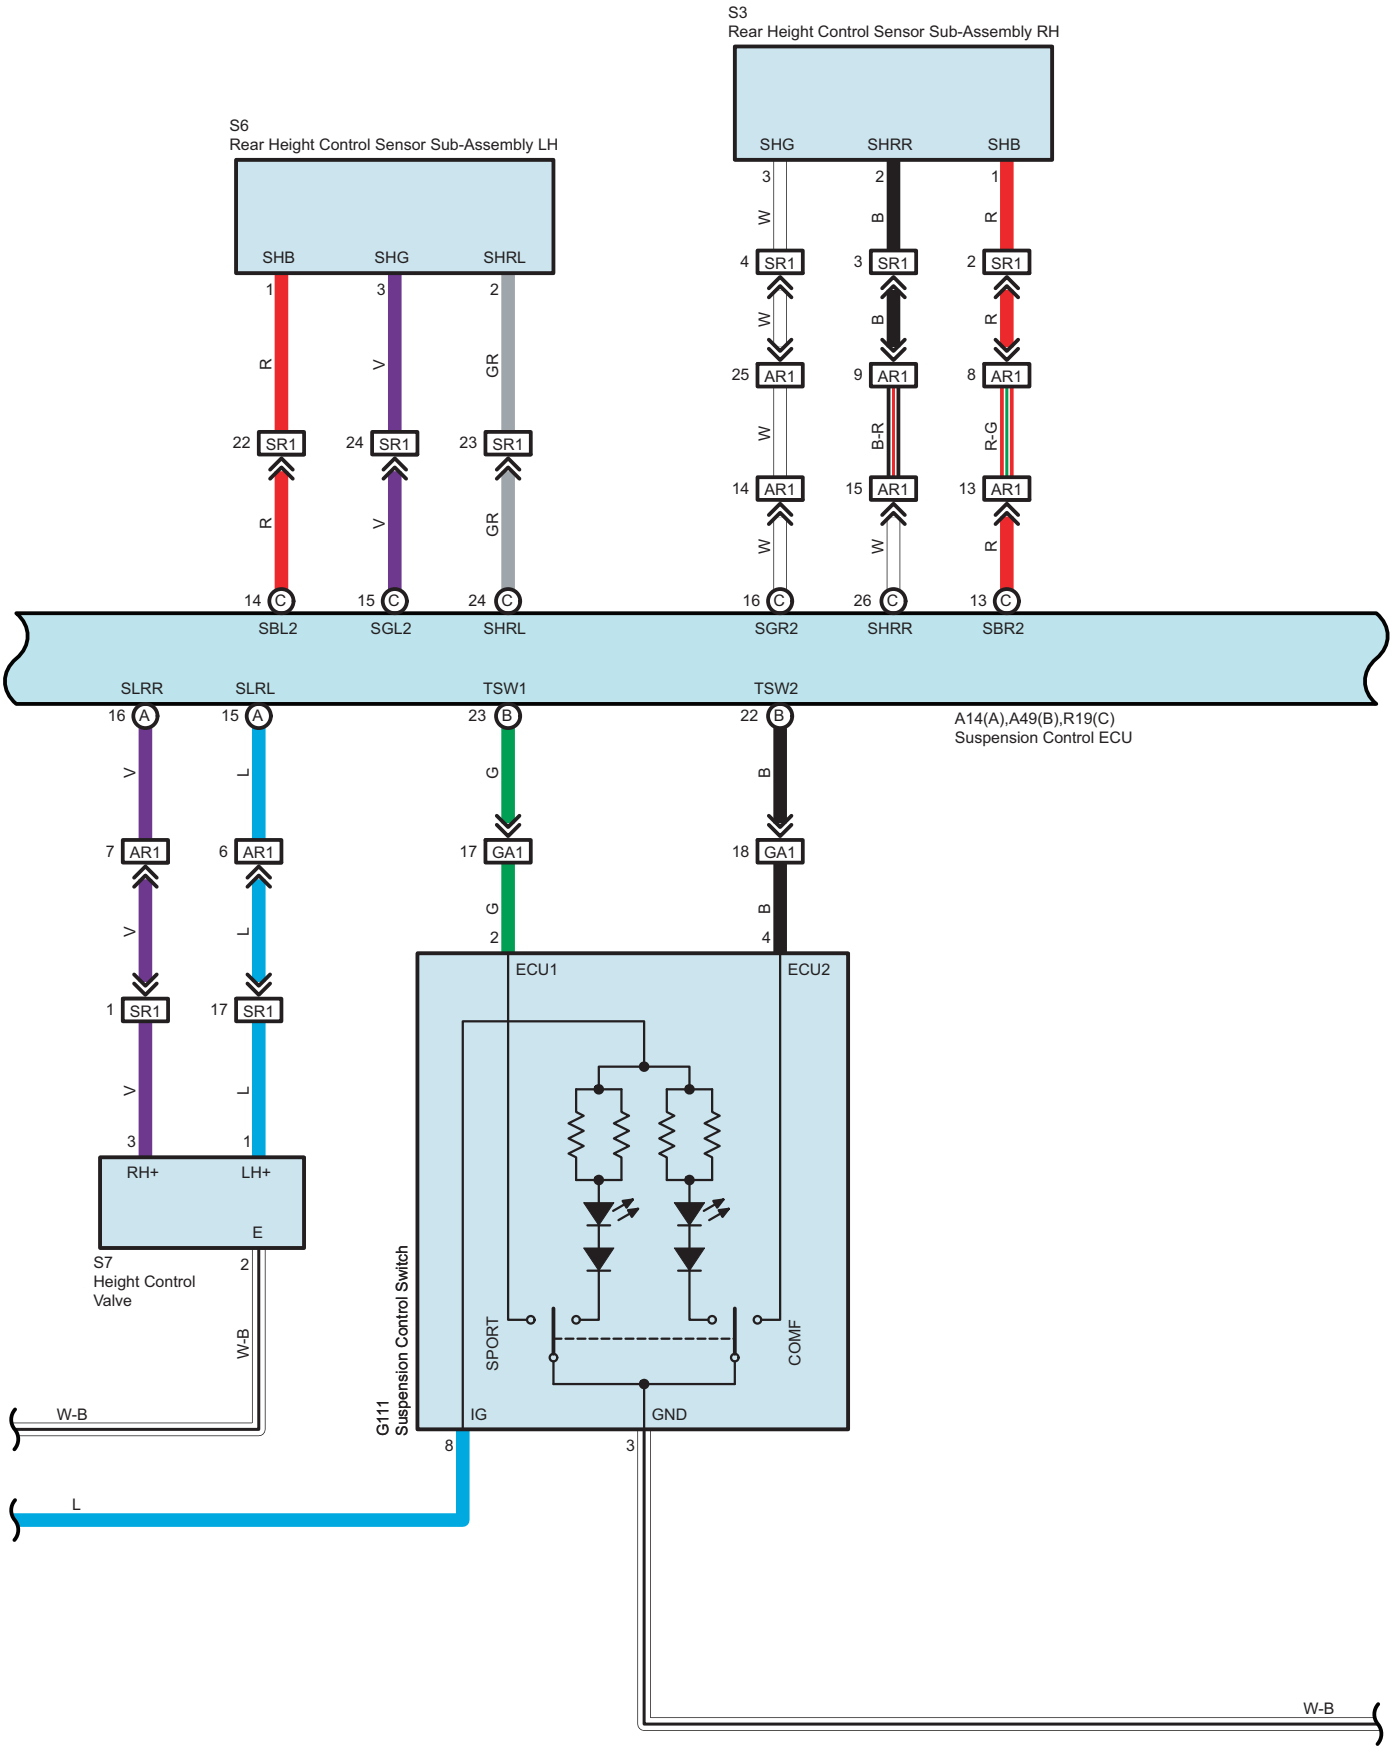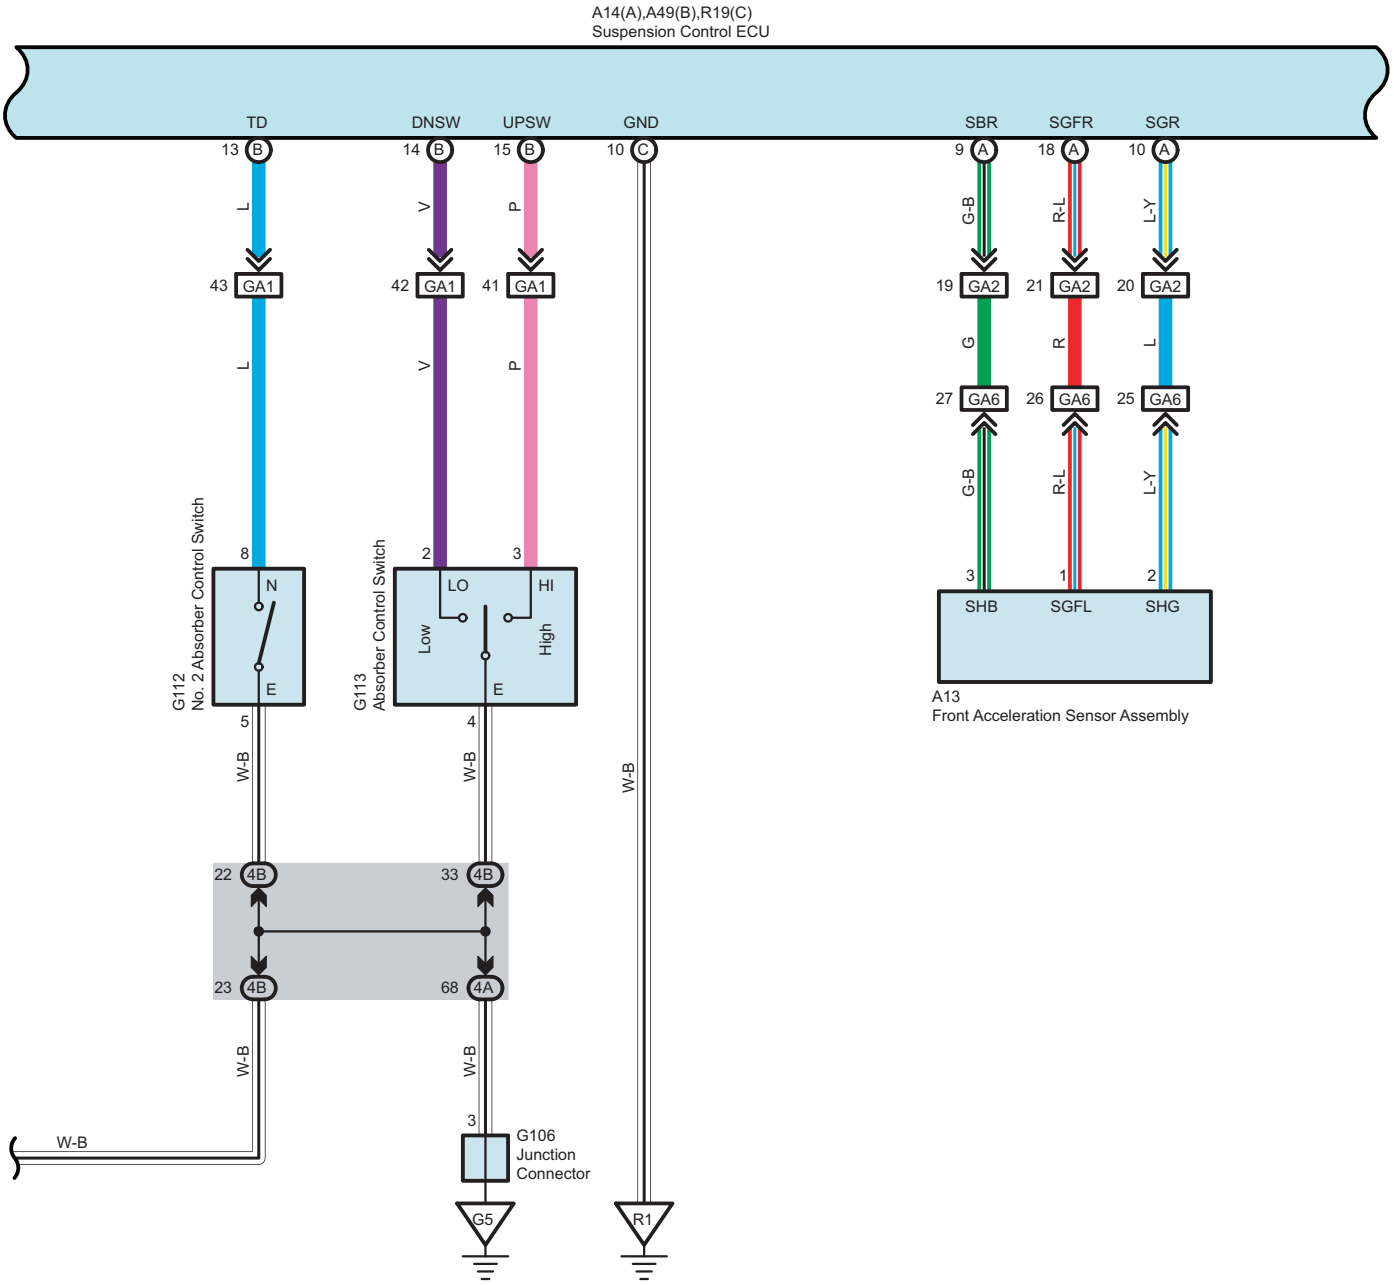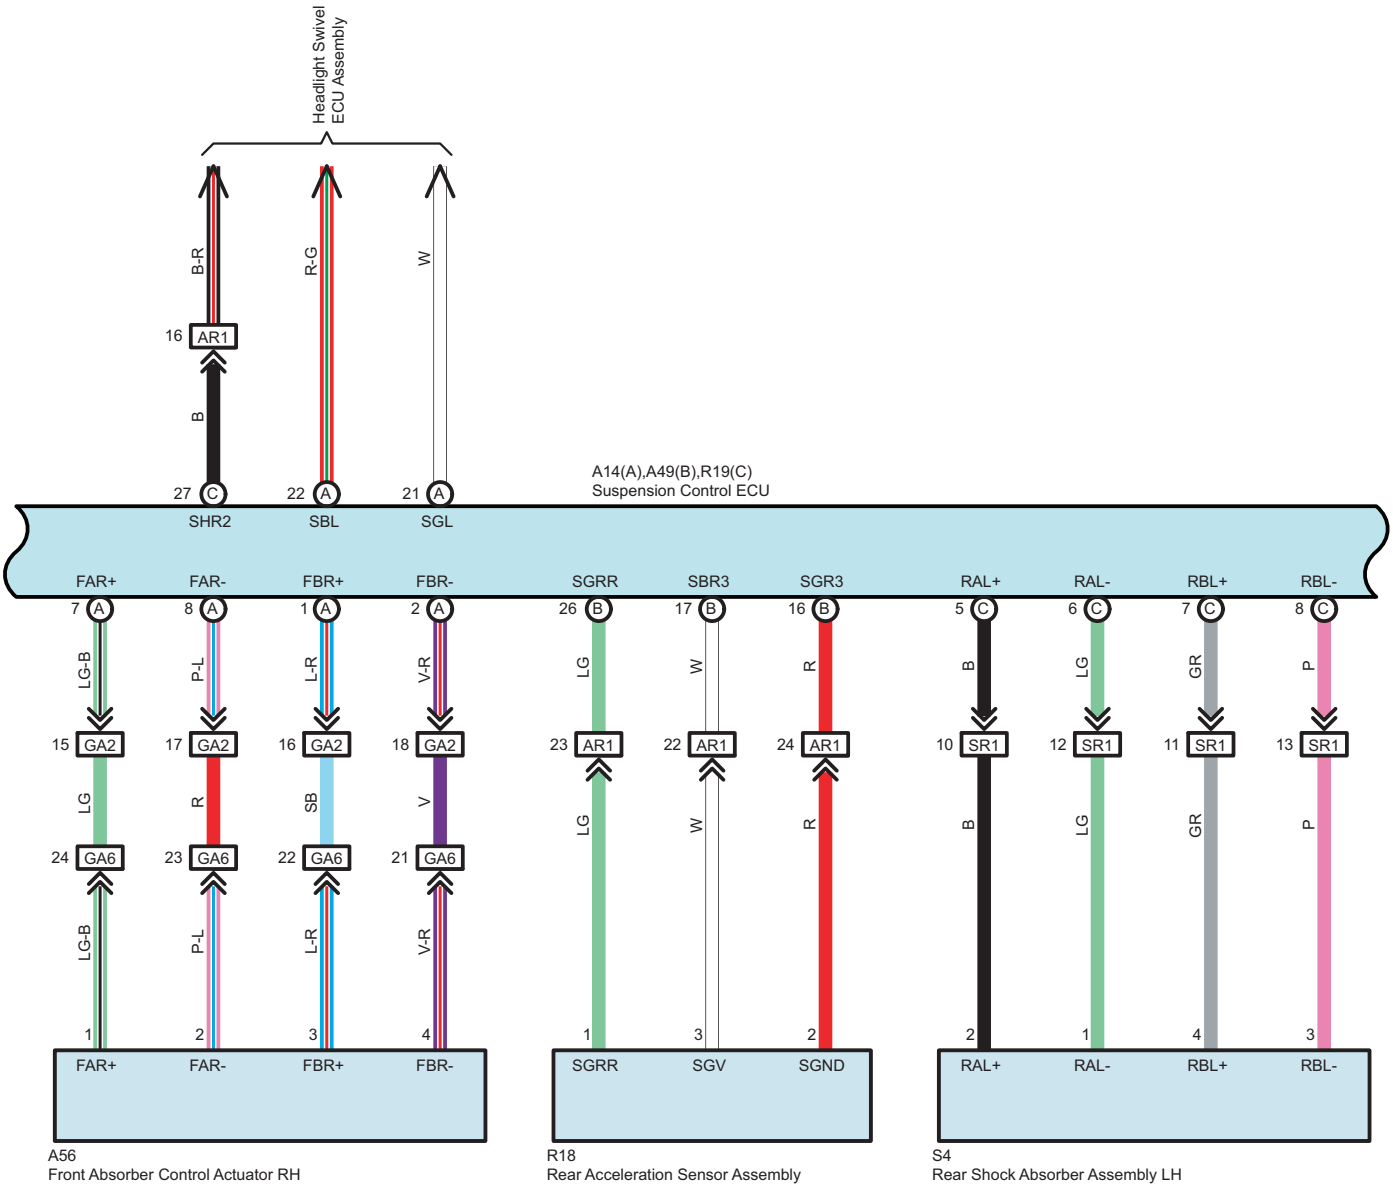



A56
Front Absorber Control Actuator RH


R18
Rear Acceleration Sensor Assembly


S4
Rear Shock Absorber Assembly LH

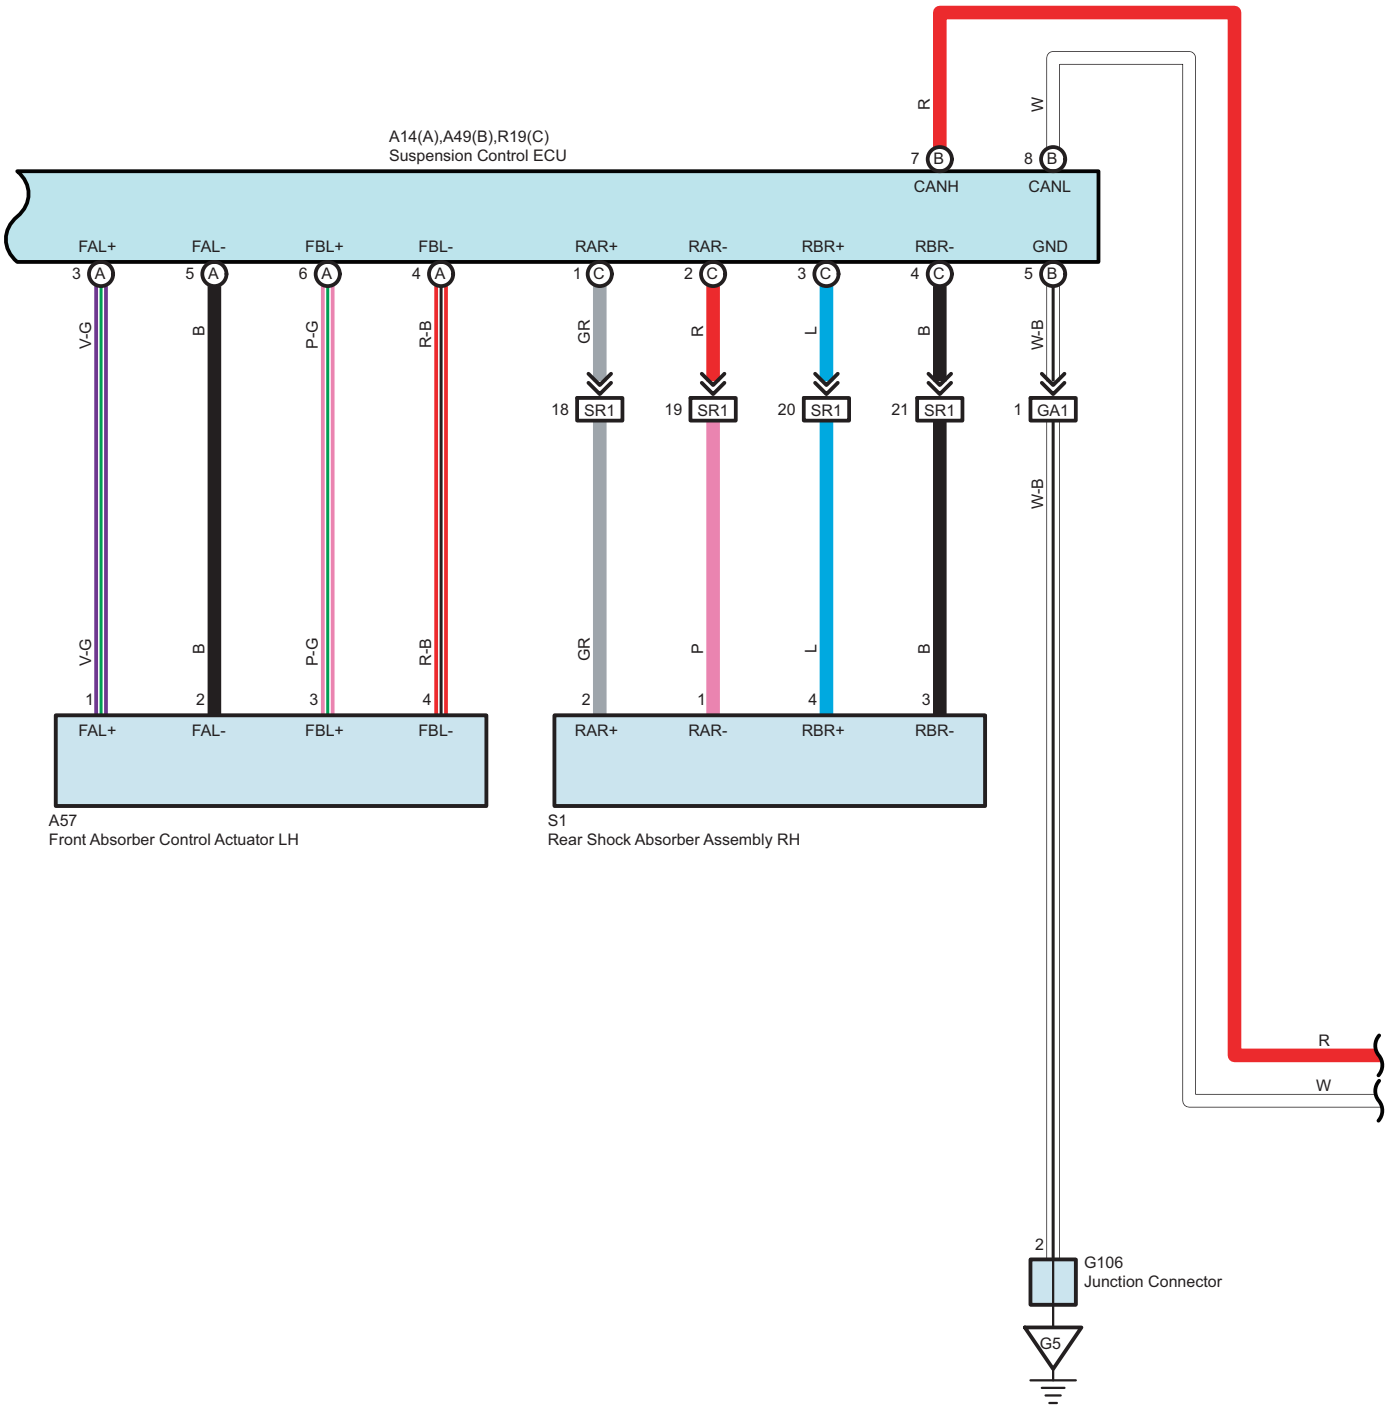
A14(A),A49(B),R19(C)
Suspension Control ECU
7 B CANH
8 B CANL
R
W
FAL+ FAL- FBL+ FBL- RAR+ RAR- RBR+ RBR- GND
3 A 5 A 6 A 4 A 1 C 2 C 3 C 4 C 5 B
V-G B P-G R-B GR R L B W-B
18 SR1 19 SR1 20 SR1 21 SR1 1 GA1
W-B
V-G B P-G R-B GR P L B
1 2 3 4 2 1 4 3
FAL+ FAL- FBL+ FBL- RAR+ RAR- RBR+ RBR-
A57
Front Absorber Control Actuator LH
S1
Rear Shock Absorber Assembly RH
R
W
2
G106
Junction Connector
G5

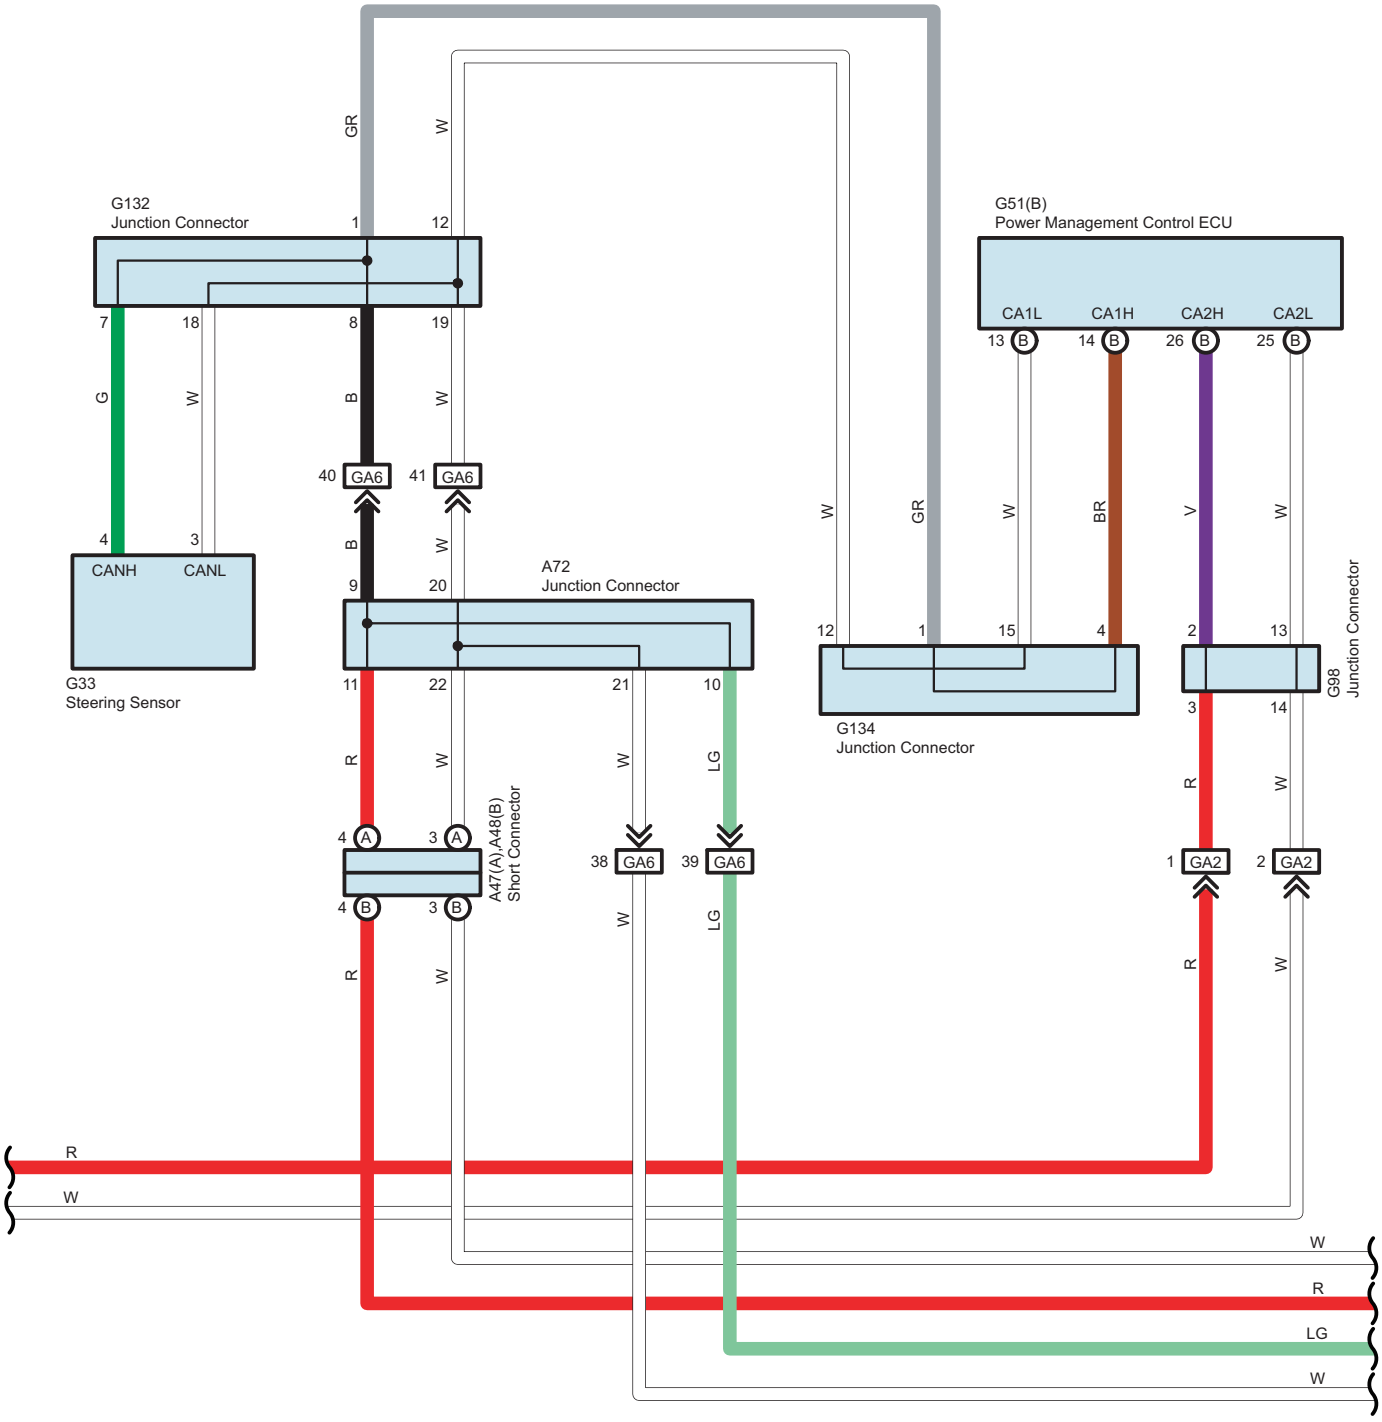

G132
Junction Connector
G33
Steering Sensor
CANH
CANL
A72
Junction Connector
A47(A),A48(B)
Short Connector
G134
Junction Connector
G51(B)
Power Management Control ECU
CA1L
CA1H
CA2H
CA2L
G98
Junction Connector
GA6
GA2
GR
W
G
B
R
BR
V
LG

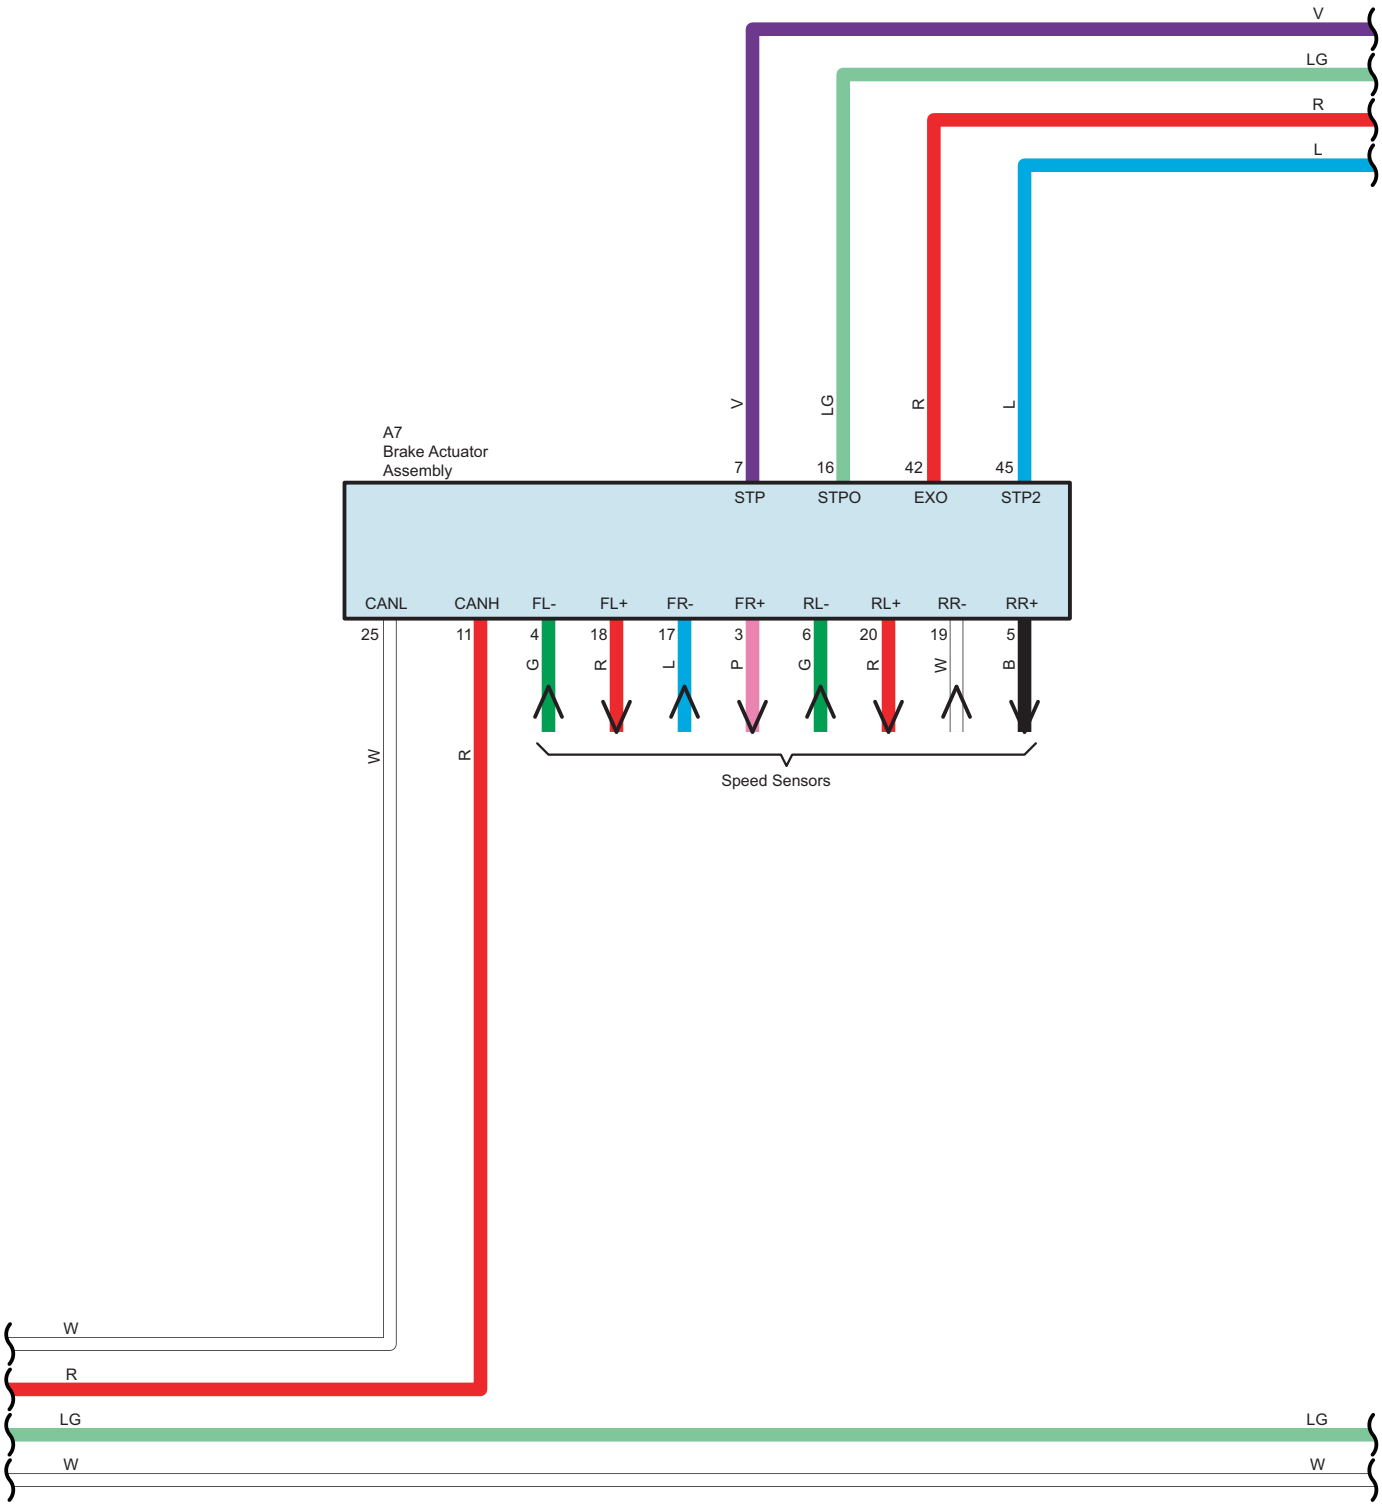
V
LG
R
L
A7
Brake Actuator
Assembly
7
16
42
45
STP
STPO
EXO
STP2
CANL
CANH
FL-
FL+
FR-
FR+
RL-
RL+
RR-
RR+
25
11
4
18
17
3
6
20
19
5
G
R
L
P
G
R
W
B
W
R
Speed Sensors
W
R
LG
W
LG
W

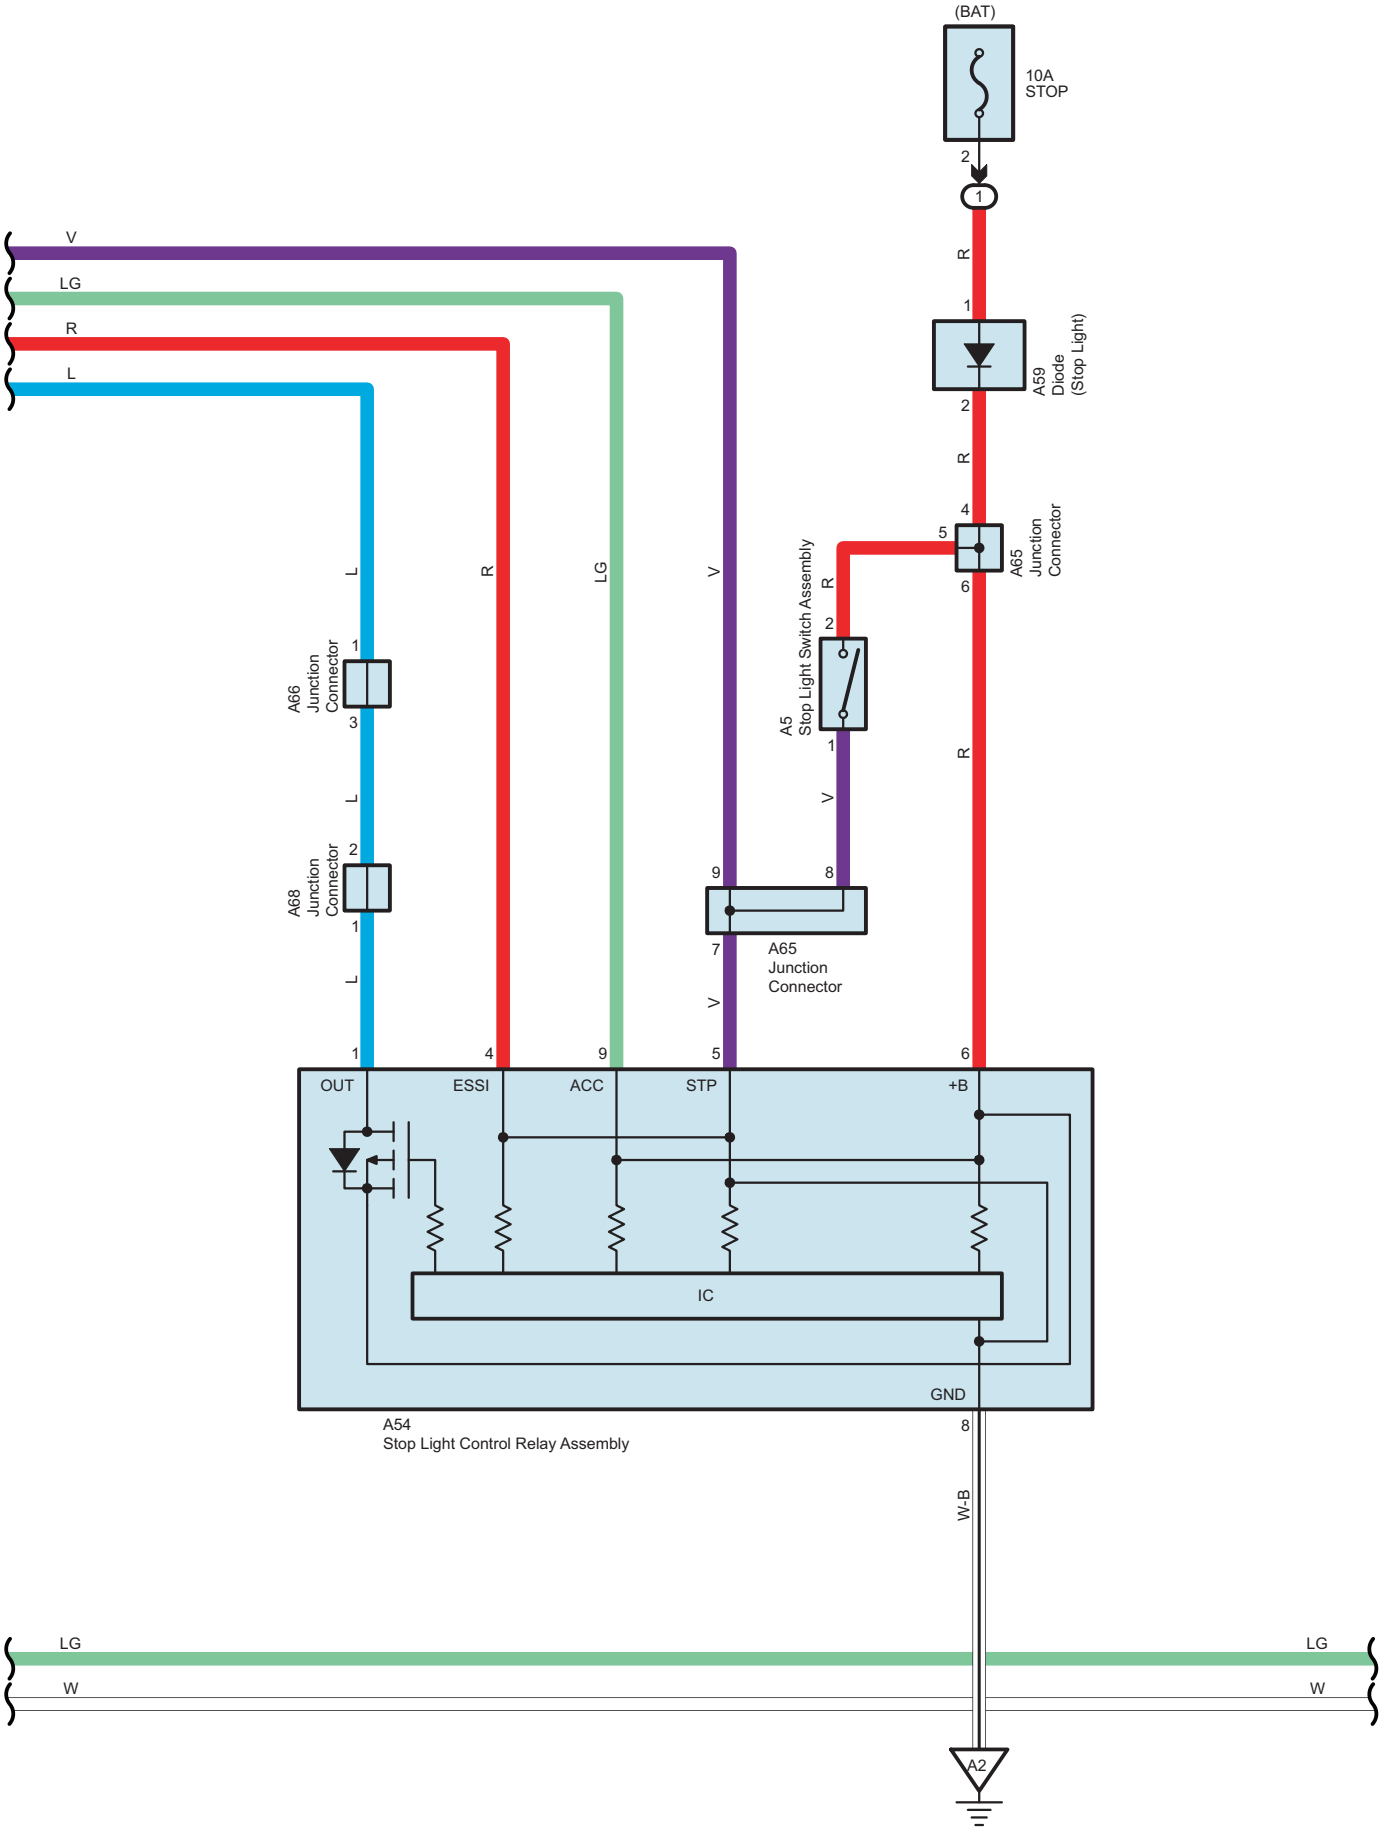

(BAT)
10A
STOP
2
1
R
1
A59
Diode
(Stop Light)
2
R
4
5
A65
Junction
Connector
6
R
V
LG
R
L
L
R
LG
V
A66
Junction
Connector
1
3
L
A68
Junction
Connector
2
1
L
A5
Stop Light Switch Assembly
R
2
1
V
9
8
7
A65
Junction
Connector
V
1
4
9
5
6
OUT
ESSI
ACC
STP
+B
IC
GND
A54
Stop Light Control Relay Assembly
8
W-B
LG
W
LG
W
A2

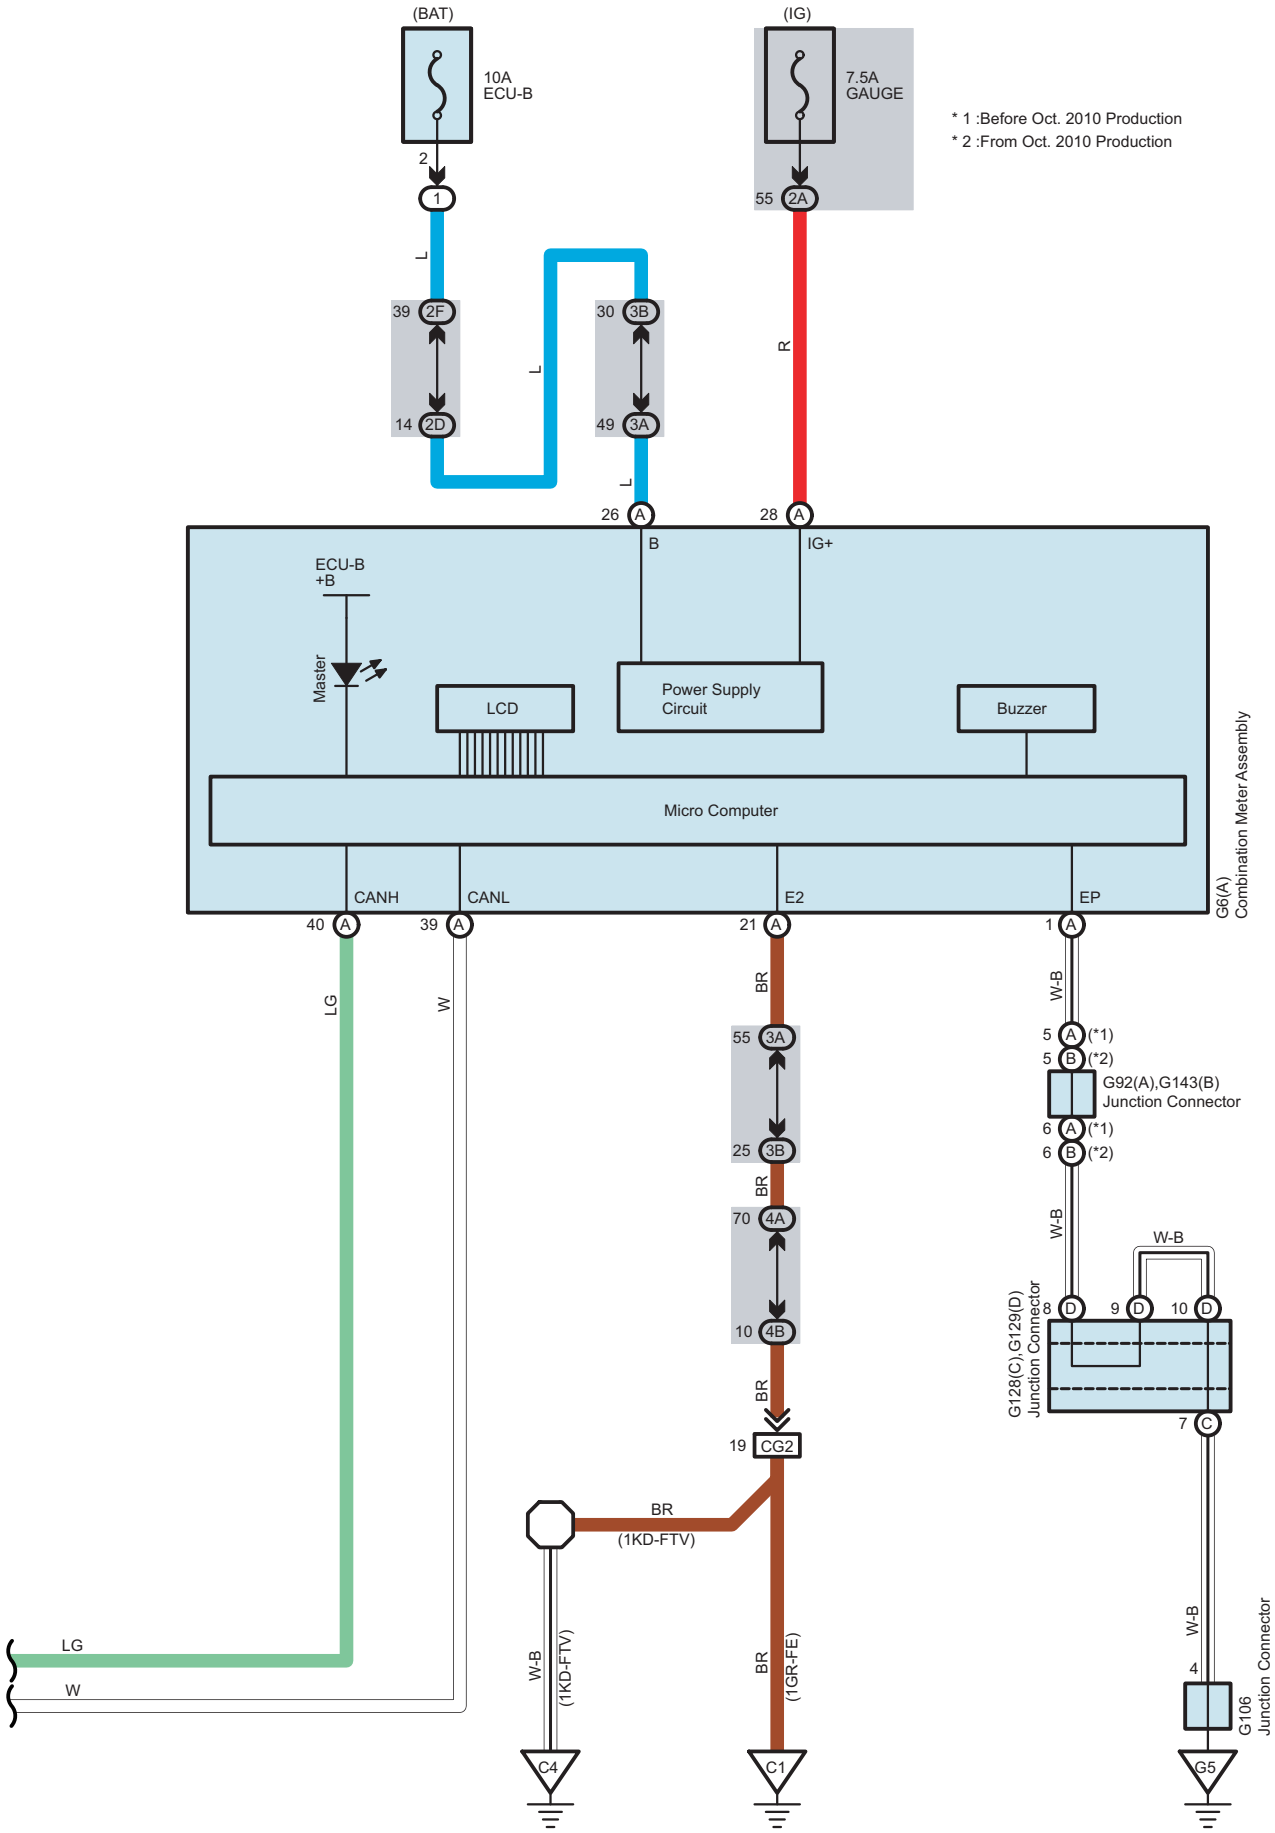
(BAT)
10A
ECU-B
(IG)
7.5A
GAUGE
* 1 :Before Oct. 2010 Production
* 2 :From Oct. 2010 Production
2
1
L
39 2F
14 2D
L
30 3B
49 3A
L
R
55 2A
26 A
28 A
B
IG+
ECU-B
+B
Master
LCD
Power Supply
Circuit
Buzzer
Micro Computer
CANH
CANL
E2
EP
G6(A)
Combination Meter Assembly
40 A
39 A
21 A
1 A
LG
W
BR
55 3A
25 3B
BR
70 4A
10 4B
BR
19 CG2
W-B
5 A (*1)
5 B (*2)
G92(A),G143(B)
Junction Connector
6 A (*1)
6 B (*2)
W-B
W-B
8 D
9 D
10 D
G128(C),G129(D)
Junction Connector
7 C
BR
(1KD-FTV)
W-B
(1KD-FTV)
BR
(1GR-FE)
W-B
4
G106
Junction Connector
C4
C1
G5
LG
W


A5
White




A7
Black

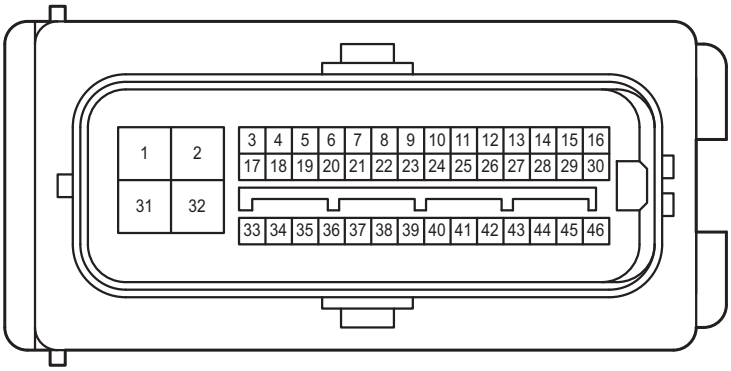

A13
Gray

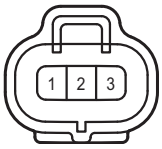

A14
Black

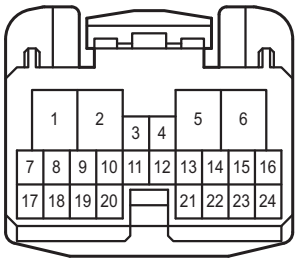


A47
Gray




A48
Gray



A49
Black

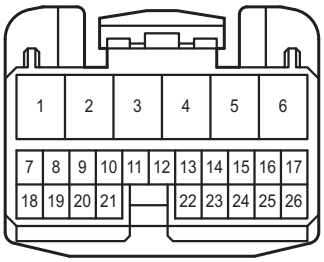

A54
Black

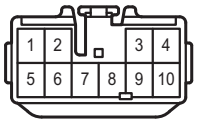

A56
Black




A57
Black




A59
Black




A65
White

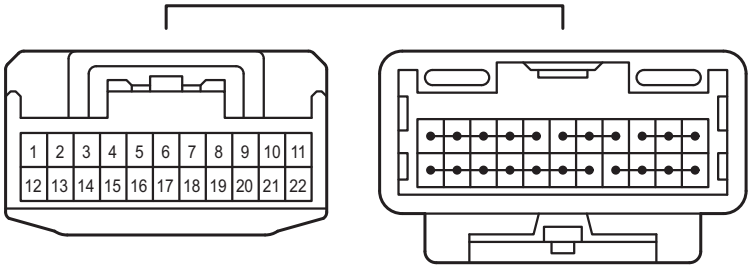


A66
White

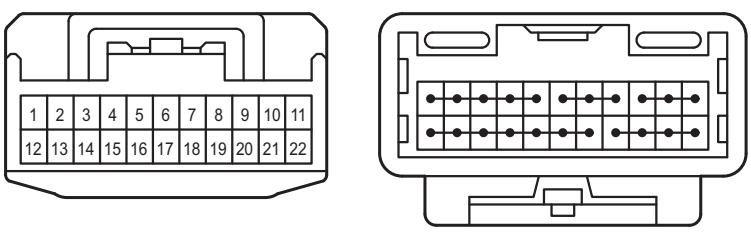


A68
Dark Gray

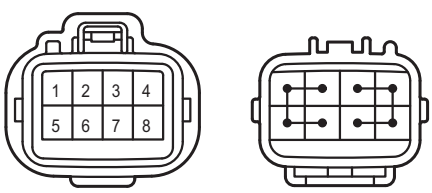


A70
White

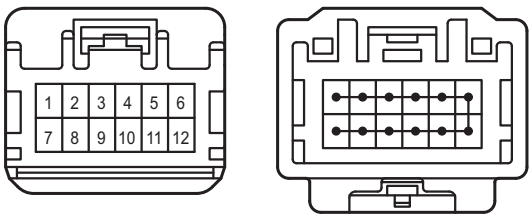


A72
White

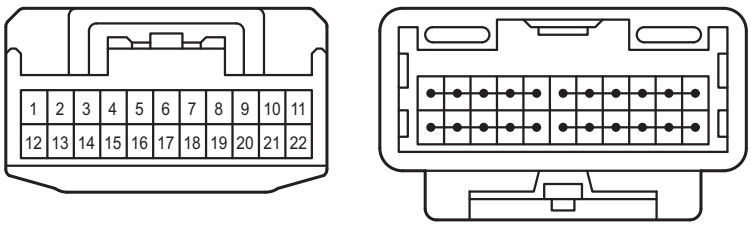


G6
Black

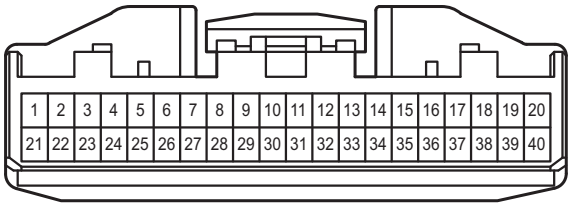


G33
White

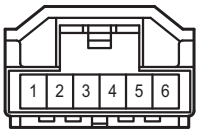


G51
Black

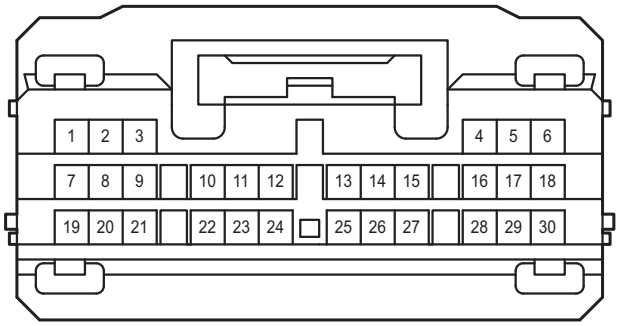


G92
White

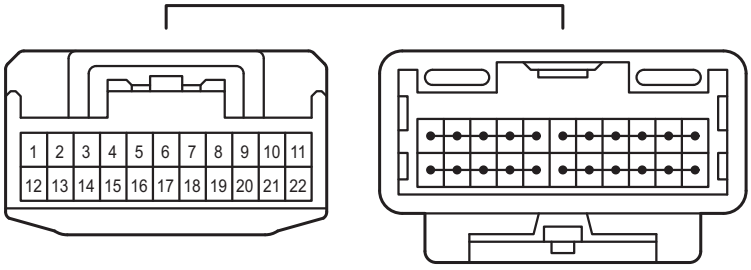


G98
White

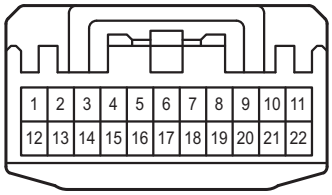


G106
White

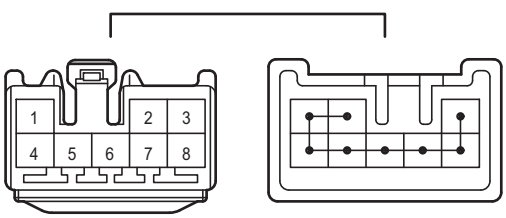


G111
White

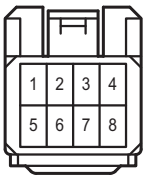


G112
Black

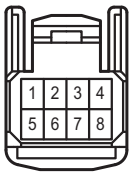


G113
White

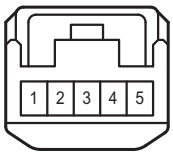


G128
Black

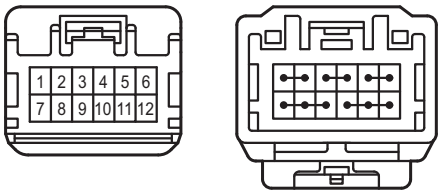


G129
Black

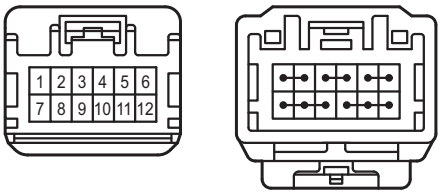


G132
Gray

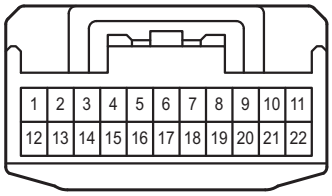

G134
Gray

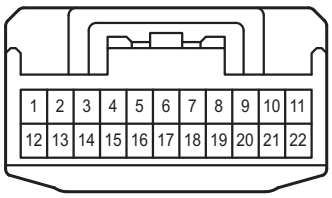


G143
Black

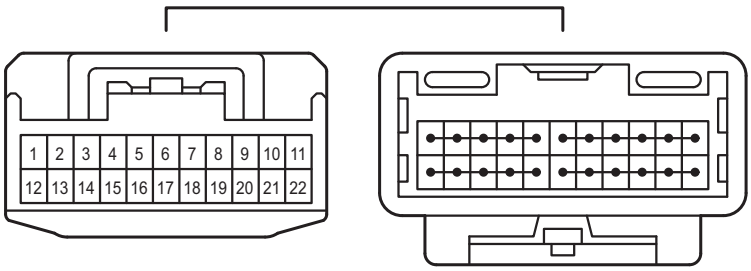


R18
Gray



R19
Black

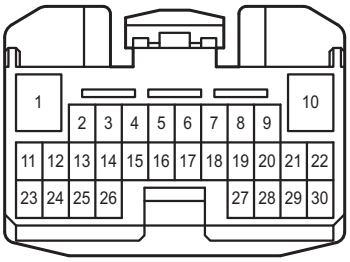

R31
White

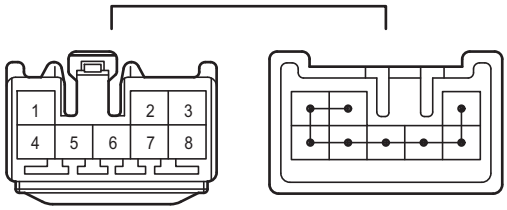

S1
Black



S3
Black



S4
Black



S6
Black



S7
Black




S10
Black




S11
Gray




2 A
White

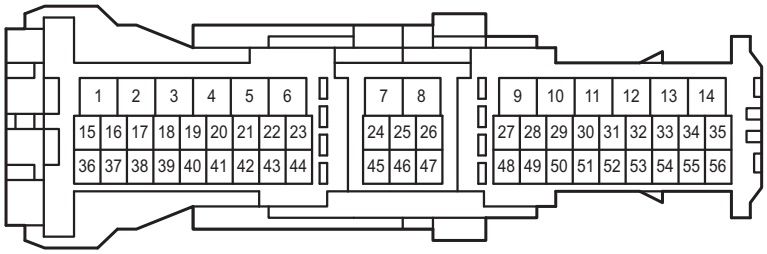


2 D
White

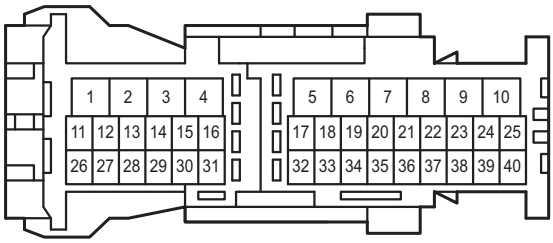


2 F
White

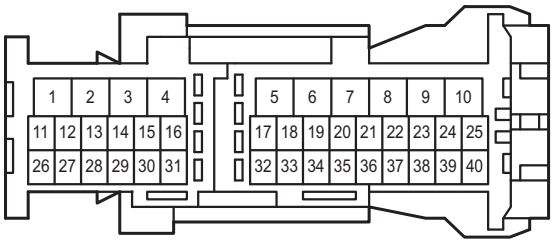


3 A
White

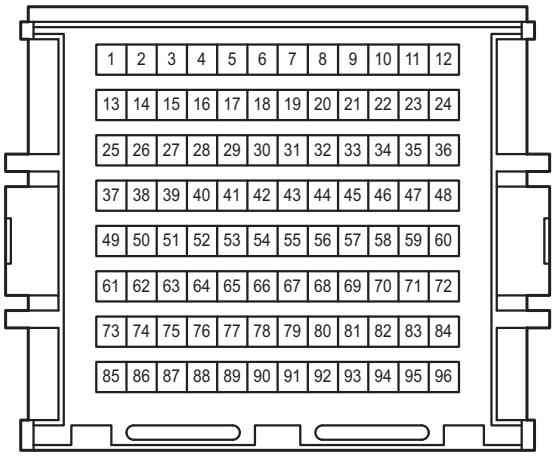


3 B
White

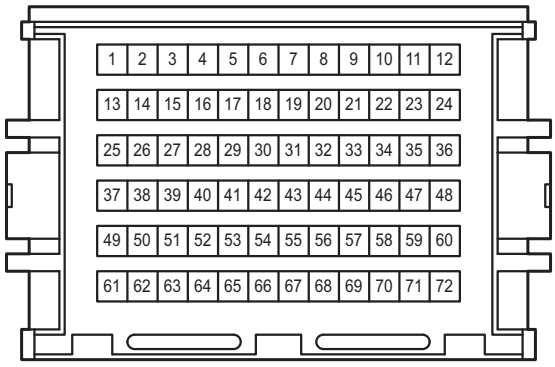


4 A
White

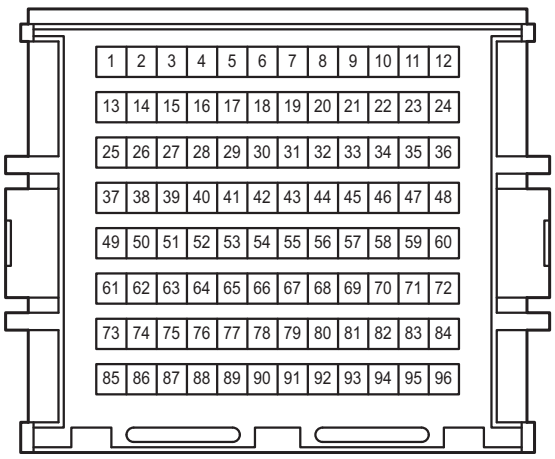


4 B
White

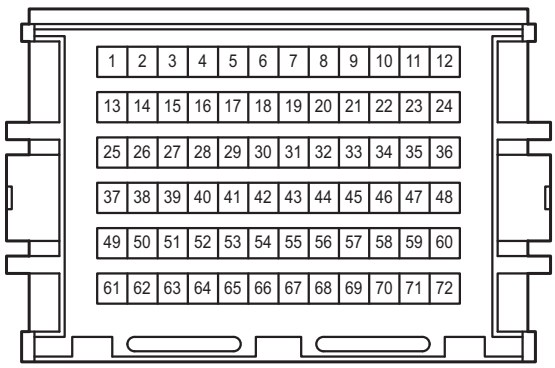

AR1
White

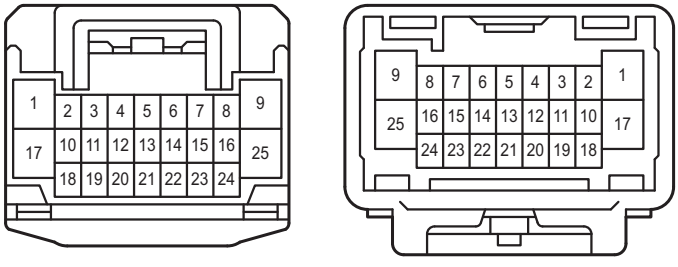


AR2
Gray

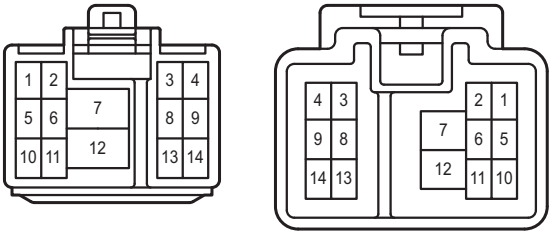


CG2

White

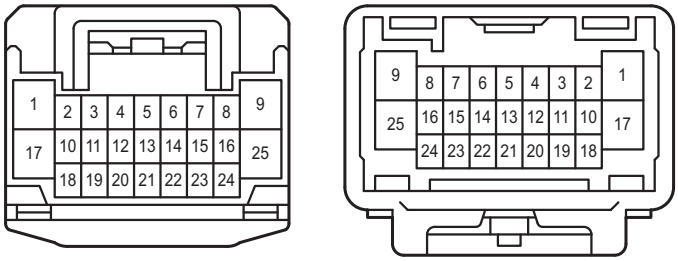


GA1

White

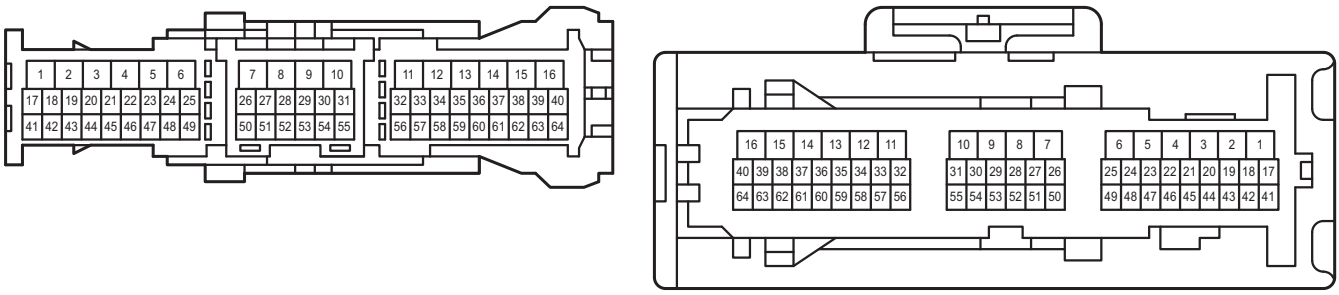


GA2


White

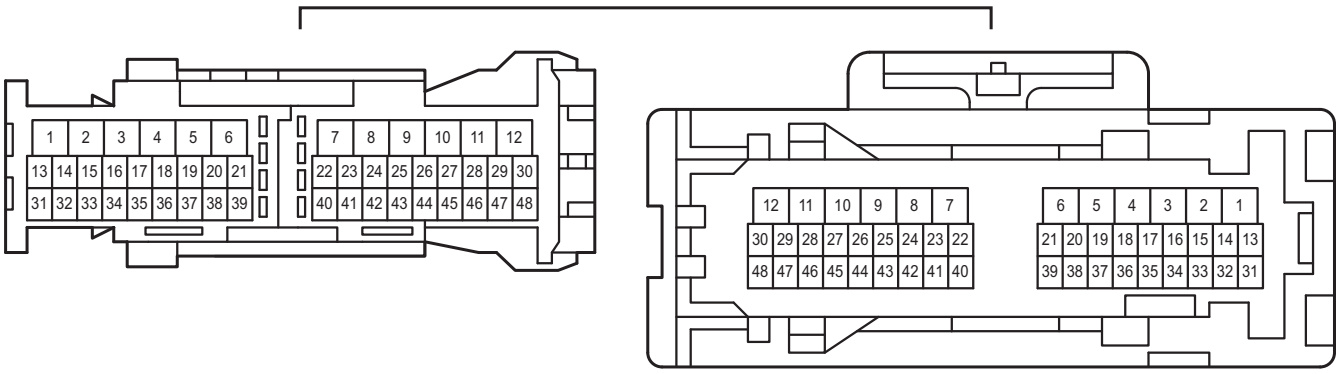

GA6

White

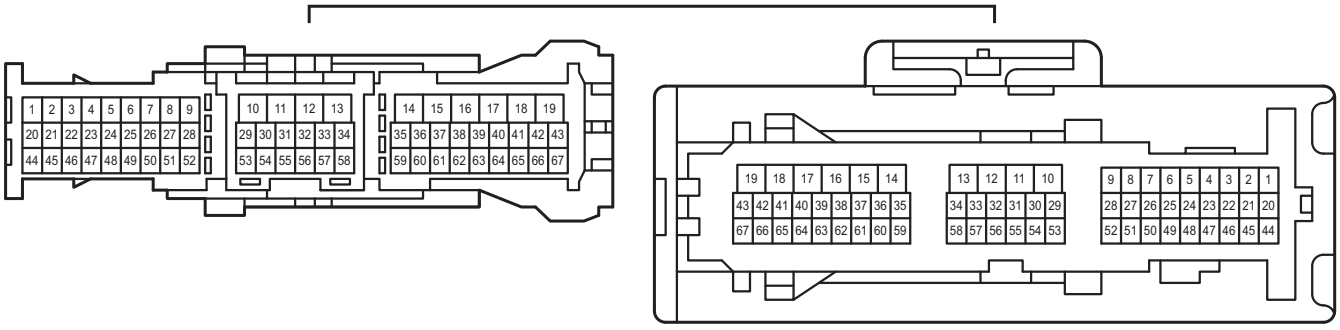

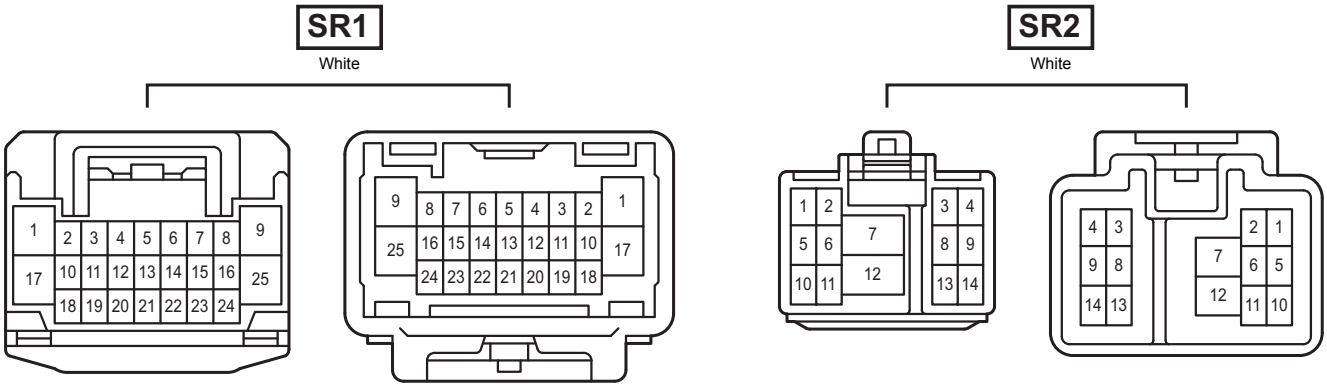
SR1
White
1 2 3 4 5 6 7 8 9
17 10 11 12 13 14 15 16 25
18 19 20 21 22 23 24
9 8 7 6 5 4 3 2 1
25 16 15 14 13 12 11 10 17
24 23 22 21 20 19 18
SR2
White
1 2 3 4
5 6 7 8 9
10 11 12 13 14
4 3 2 1
9 8 7 6 5
14 13 12 11 10