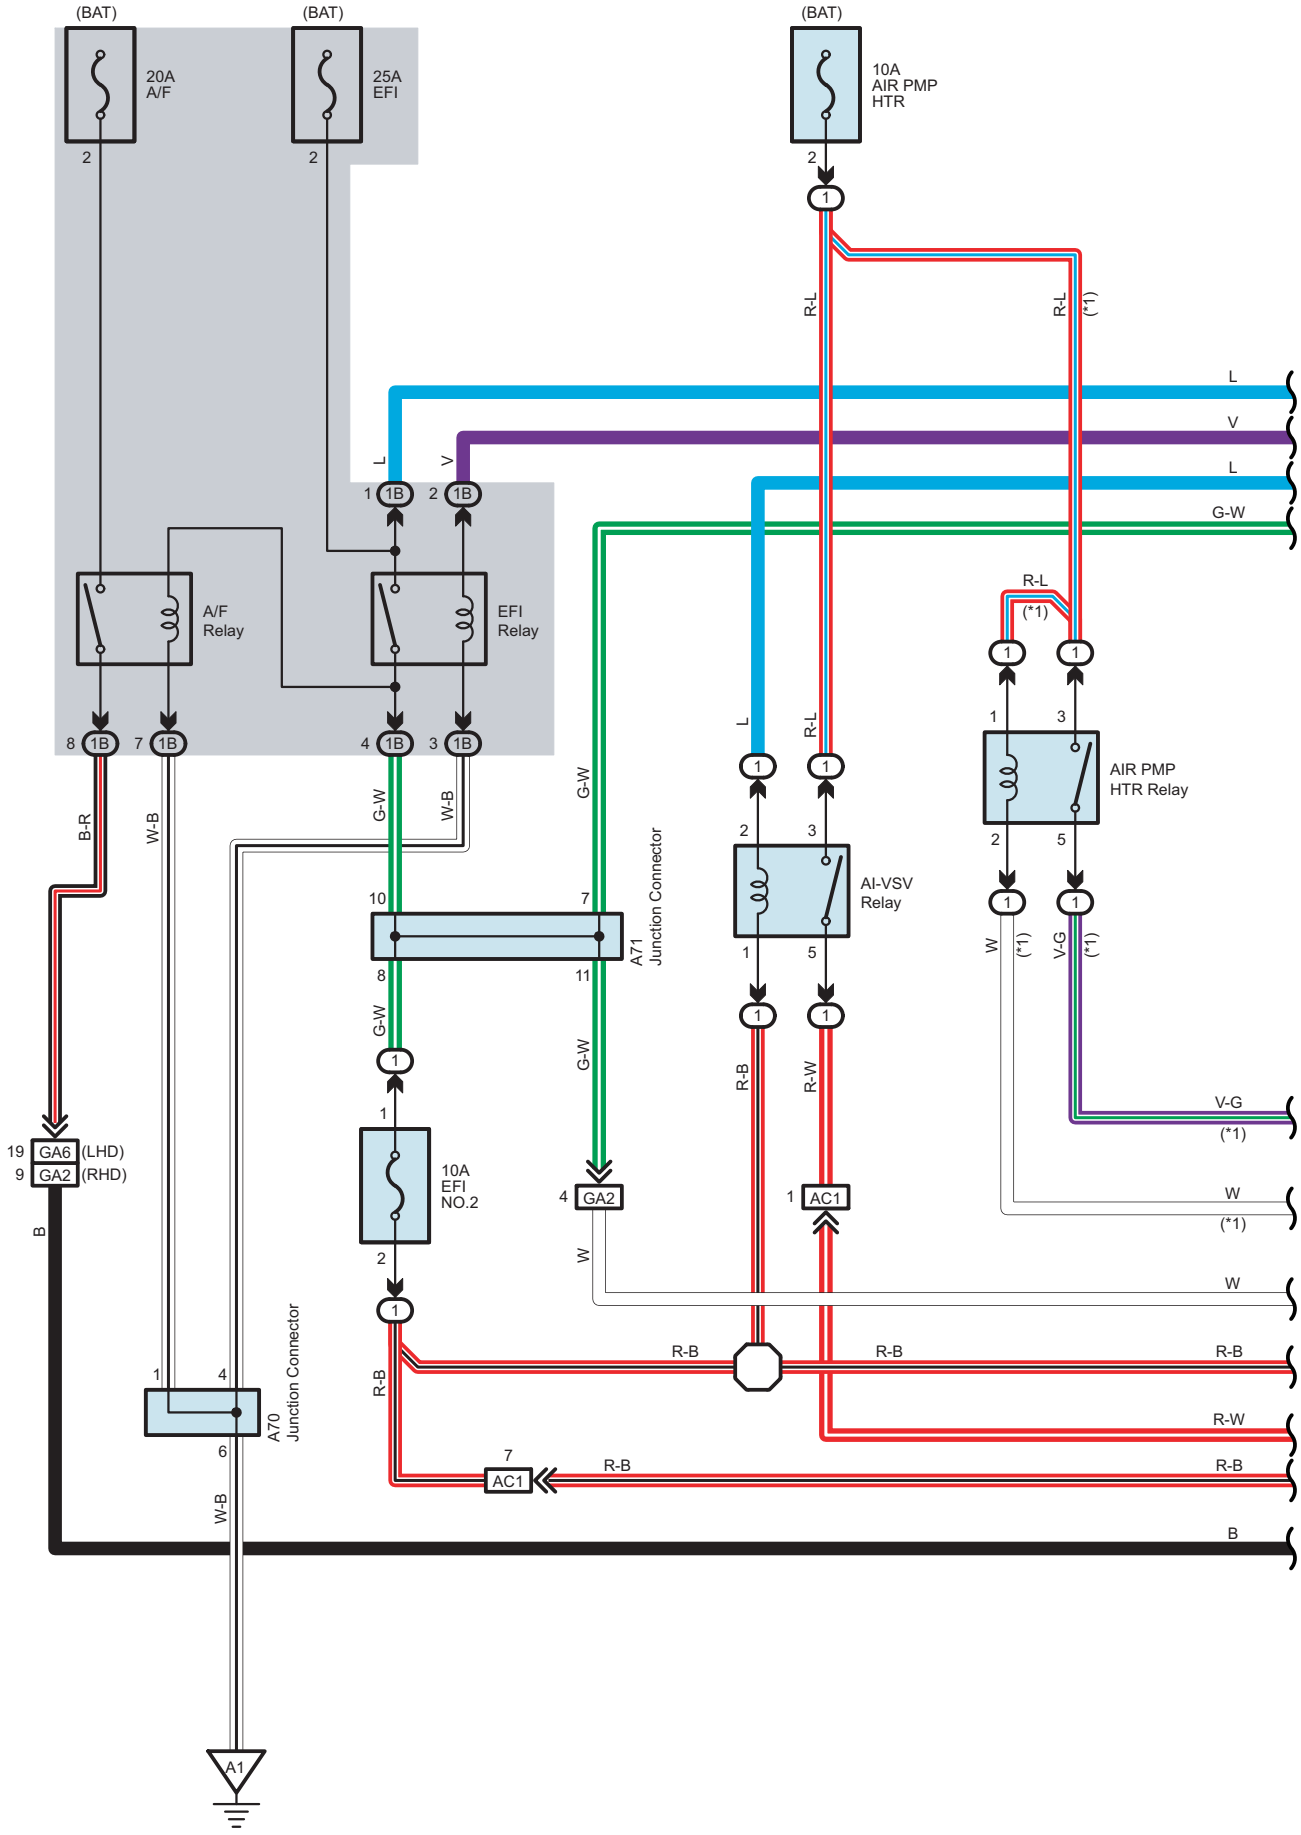
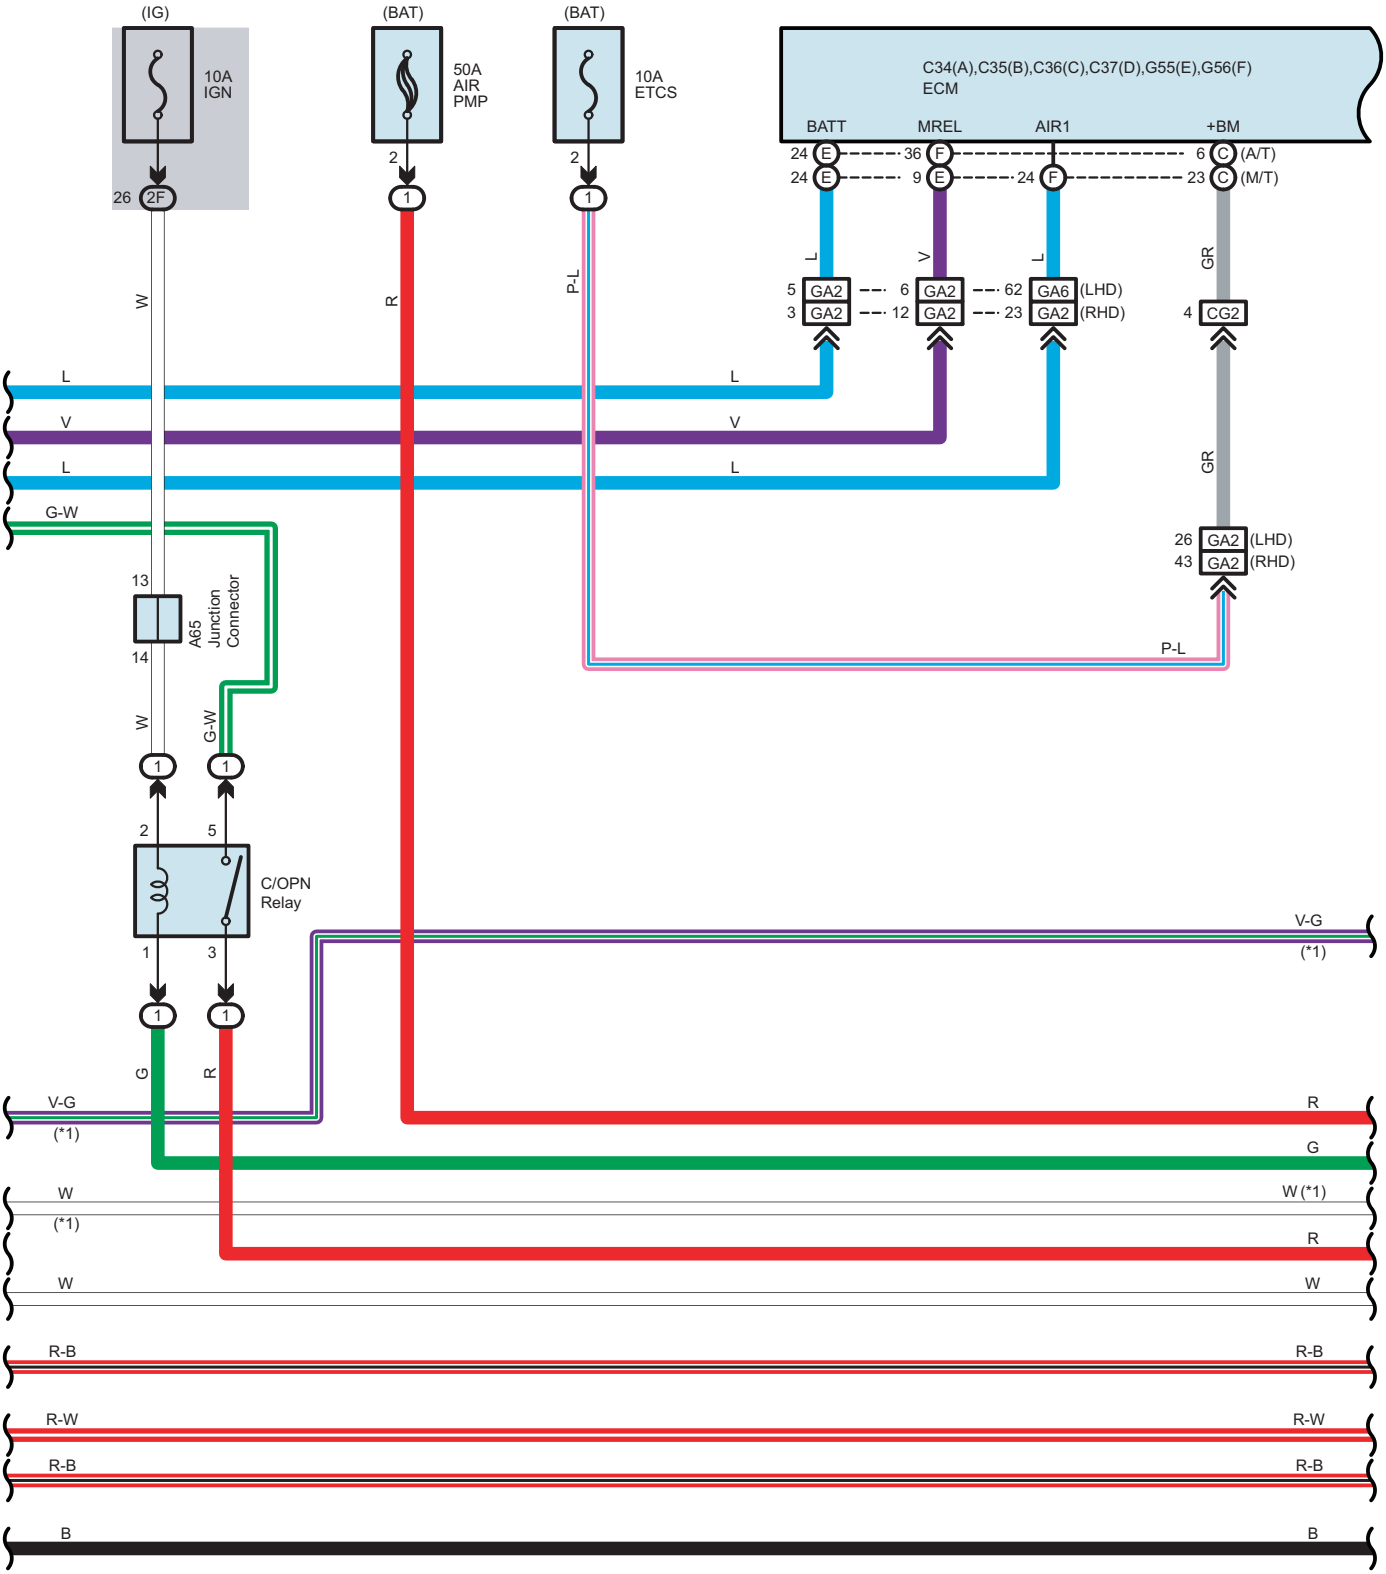
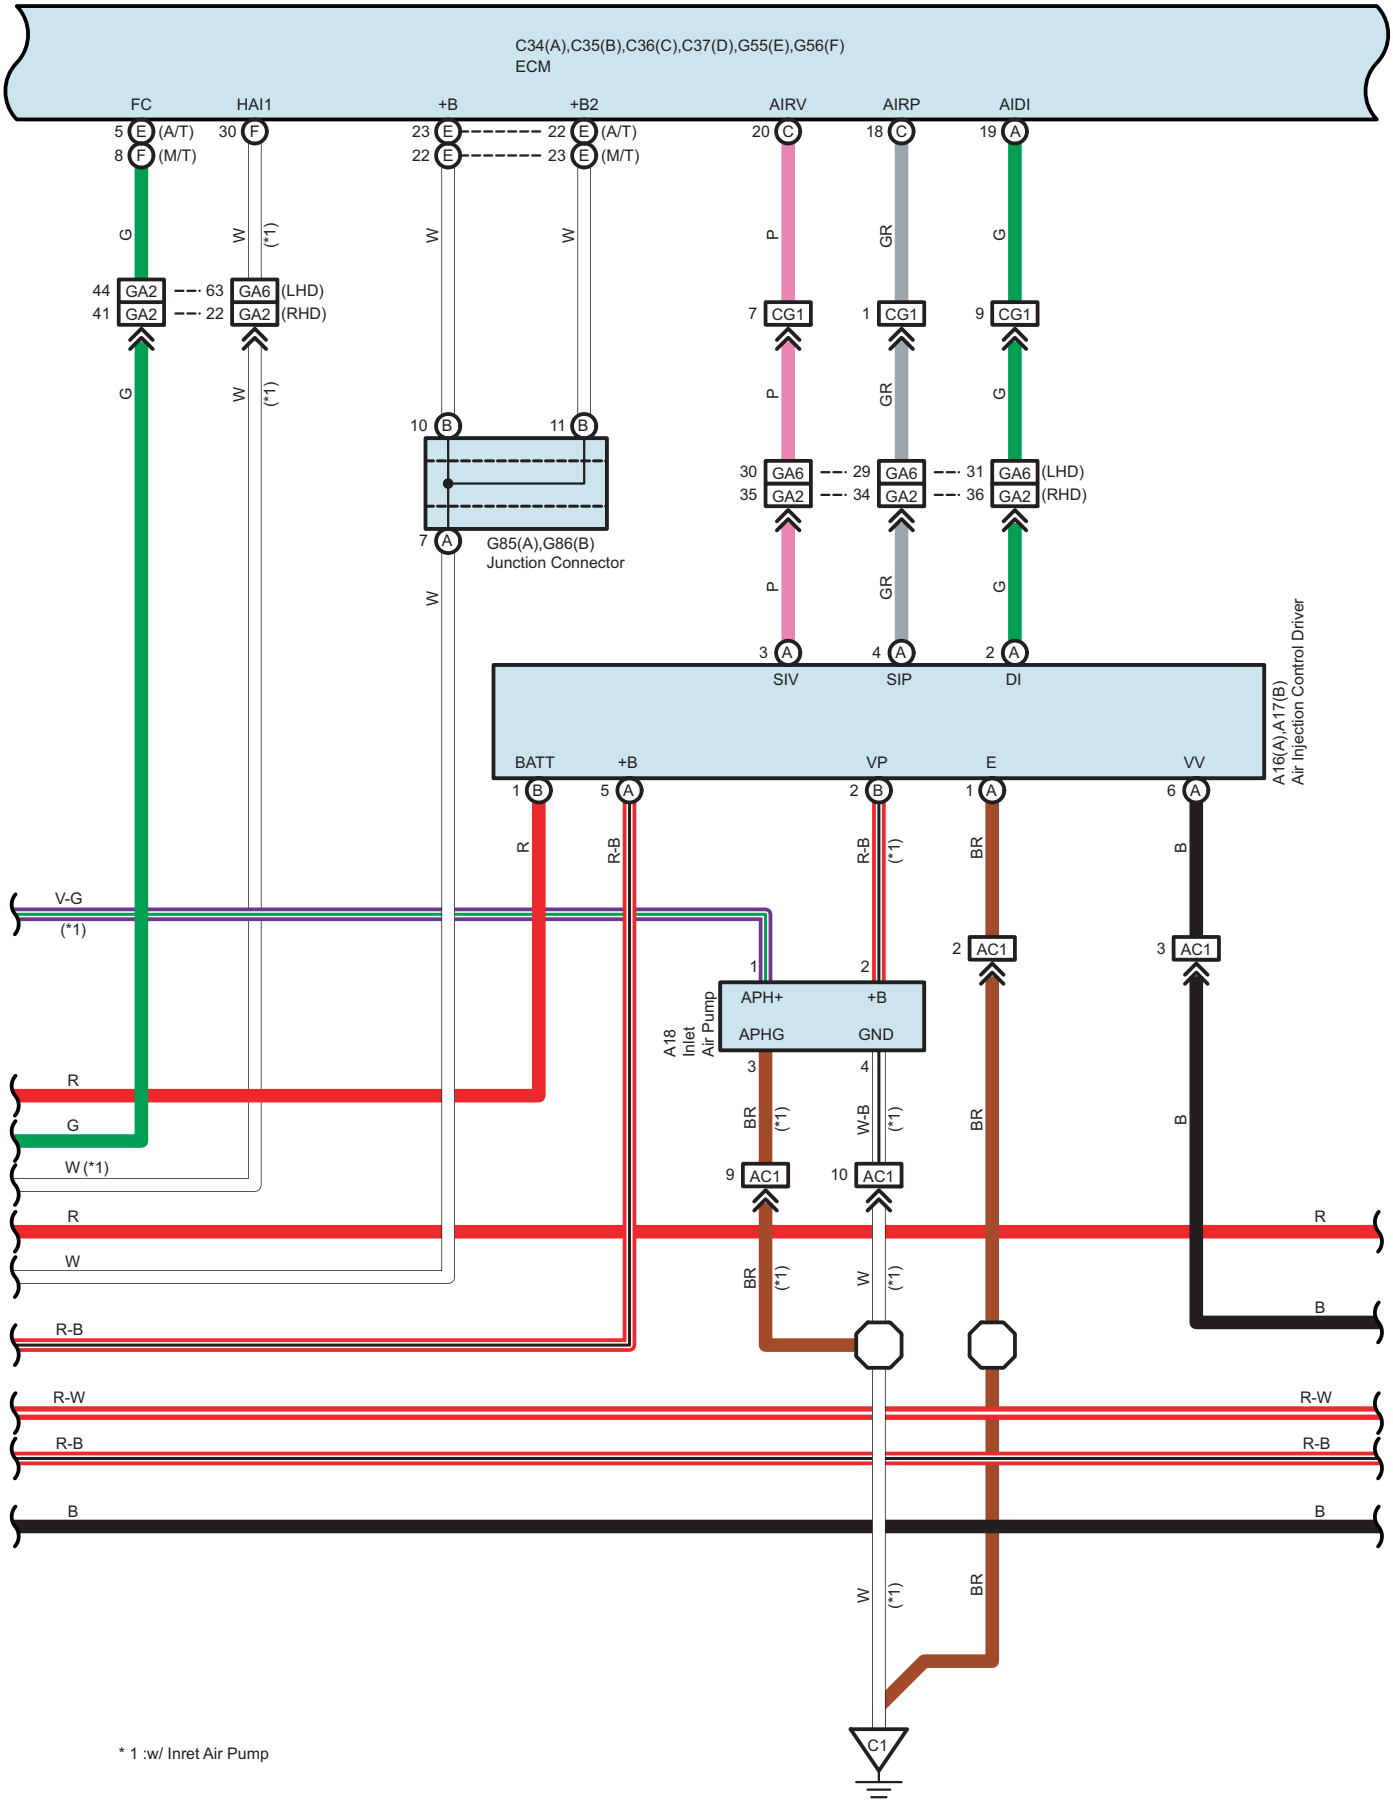
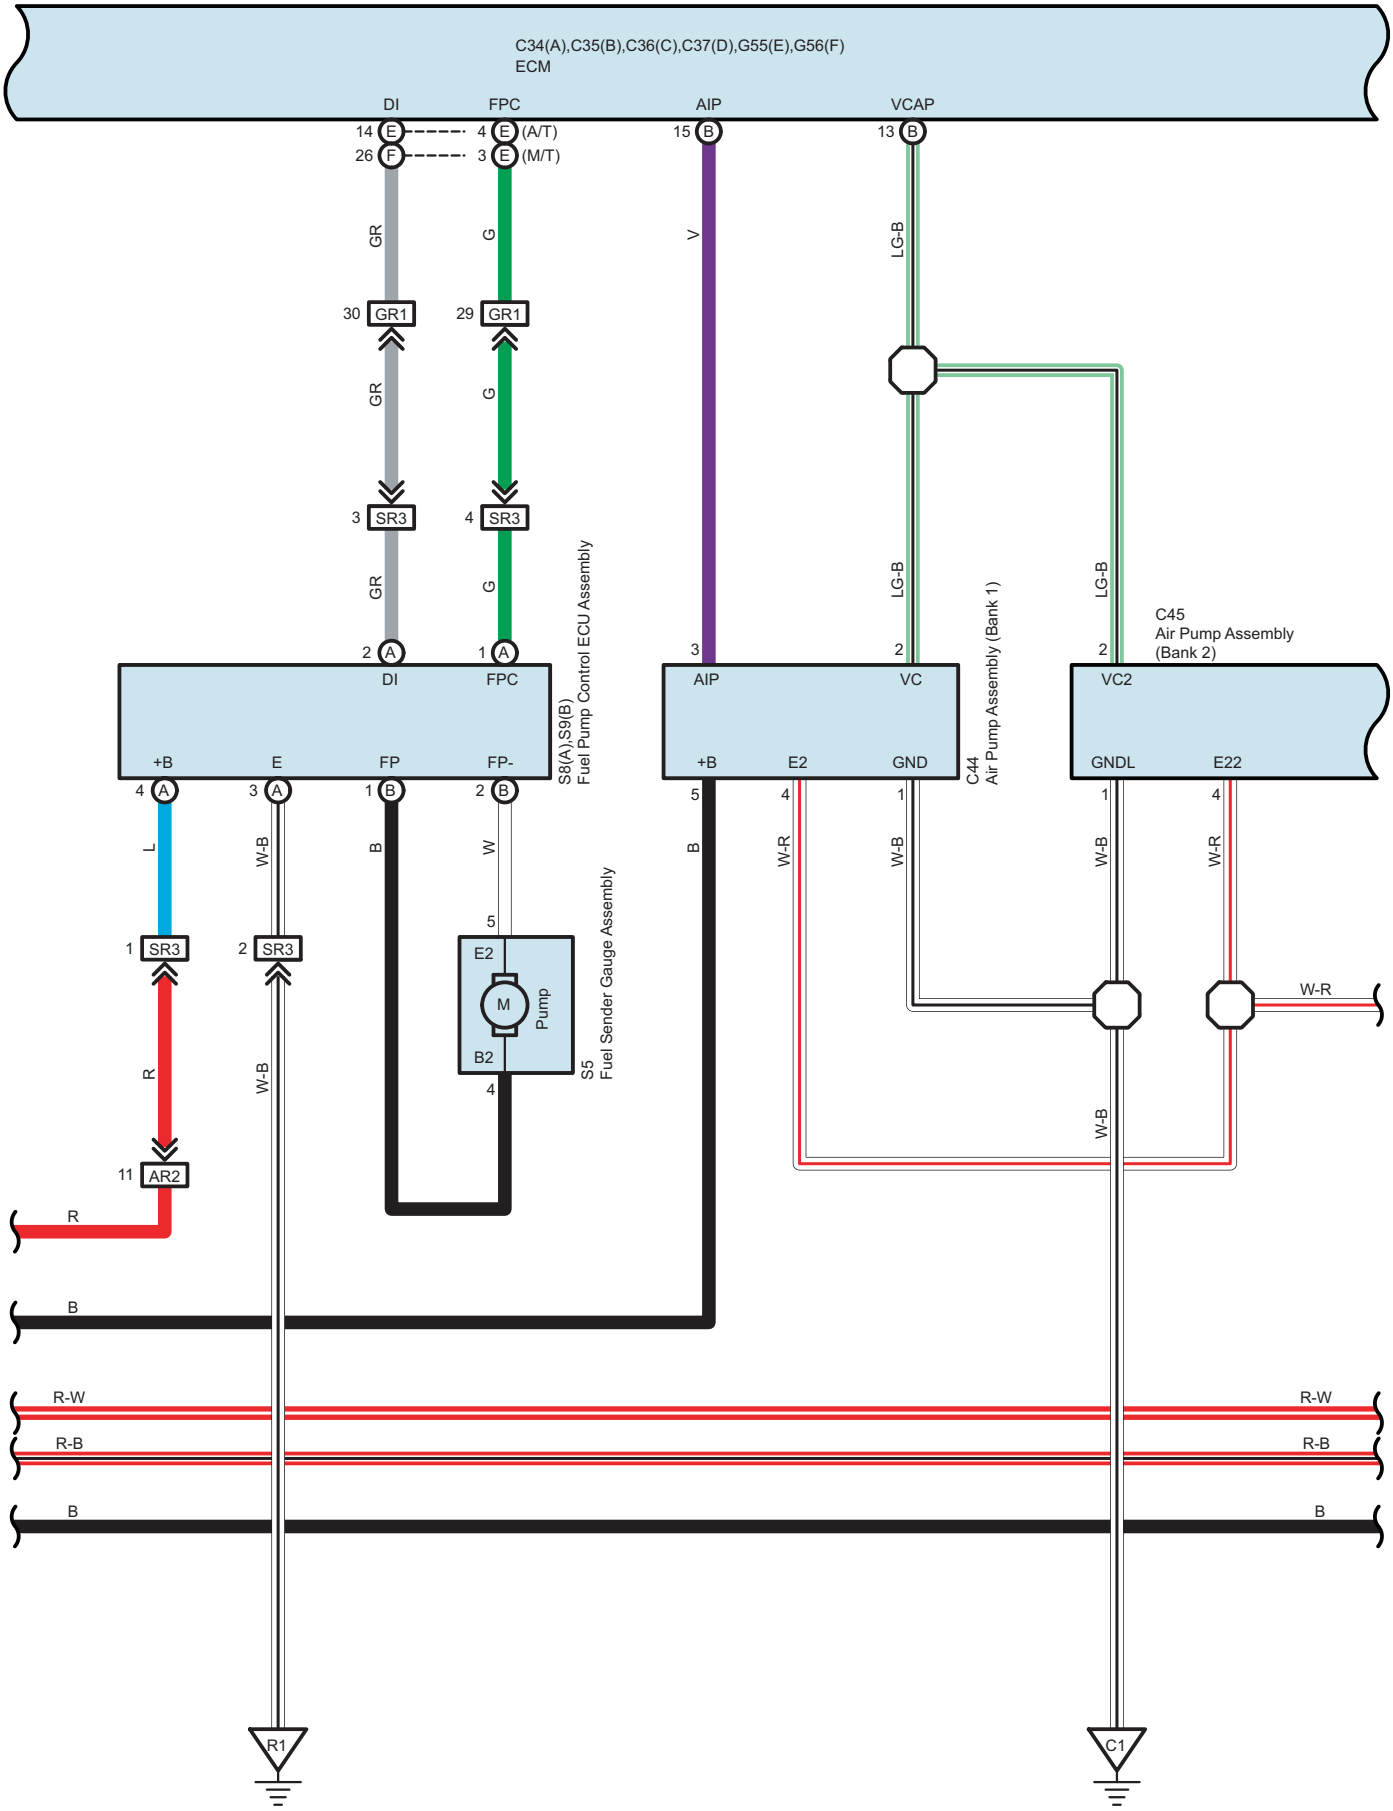
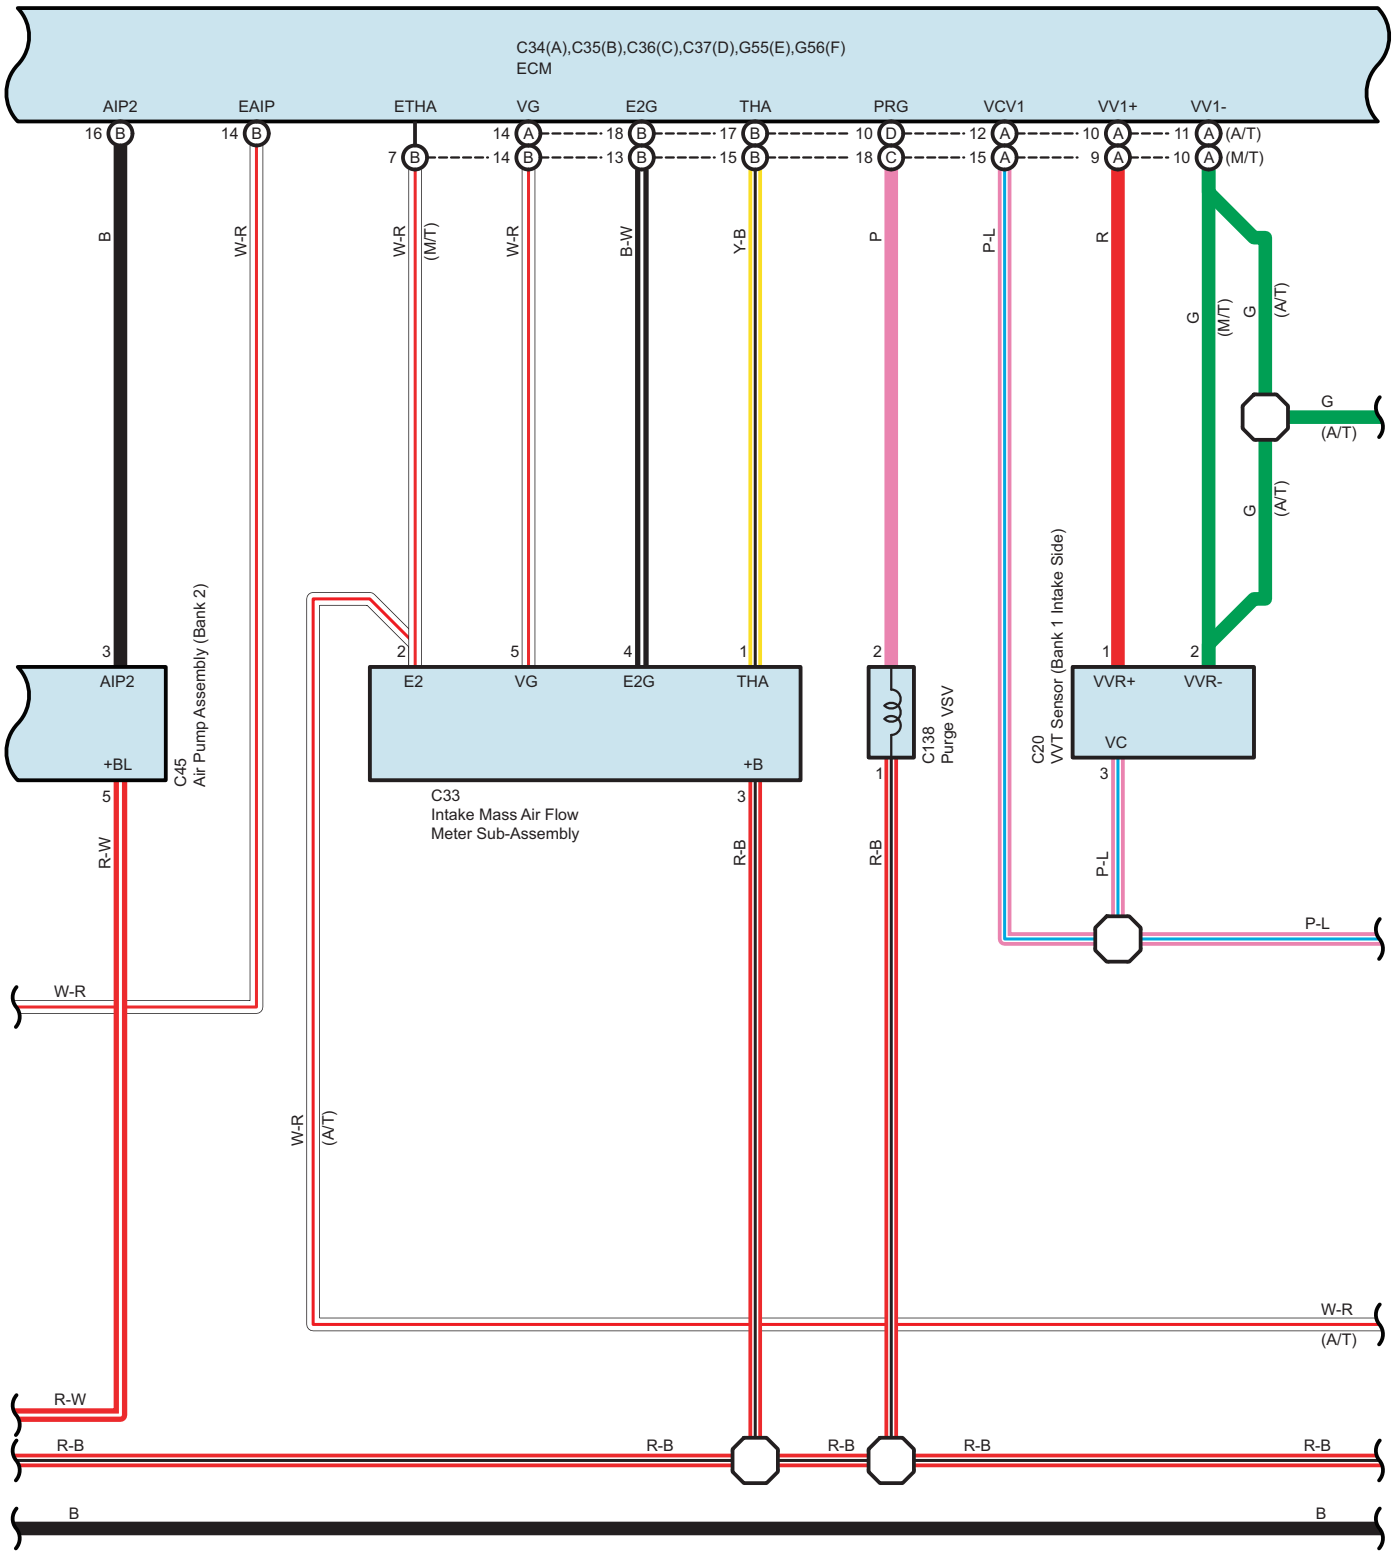

(BAT)
(BAT)
(BAT)
20A
A/F
25A
EFI
10A
AIR PMP
HTR
A/F
Relay
EFI
Relay
AIR PMP
HTR Relay
AI-VSV
Relay
10A
EFI
NO.2
A71
Junction Connector
A70
Junction Connector
GA6 (LHD)
GA2 (RHD)
GA2
AC1
AC1
A1
L
V
G-W
R-L
(*1)
B-R
W-B
R-B
R-W
V-G
W
B

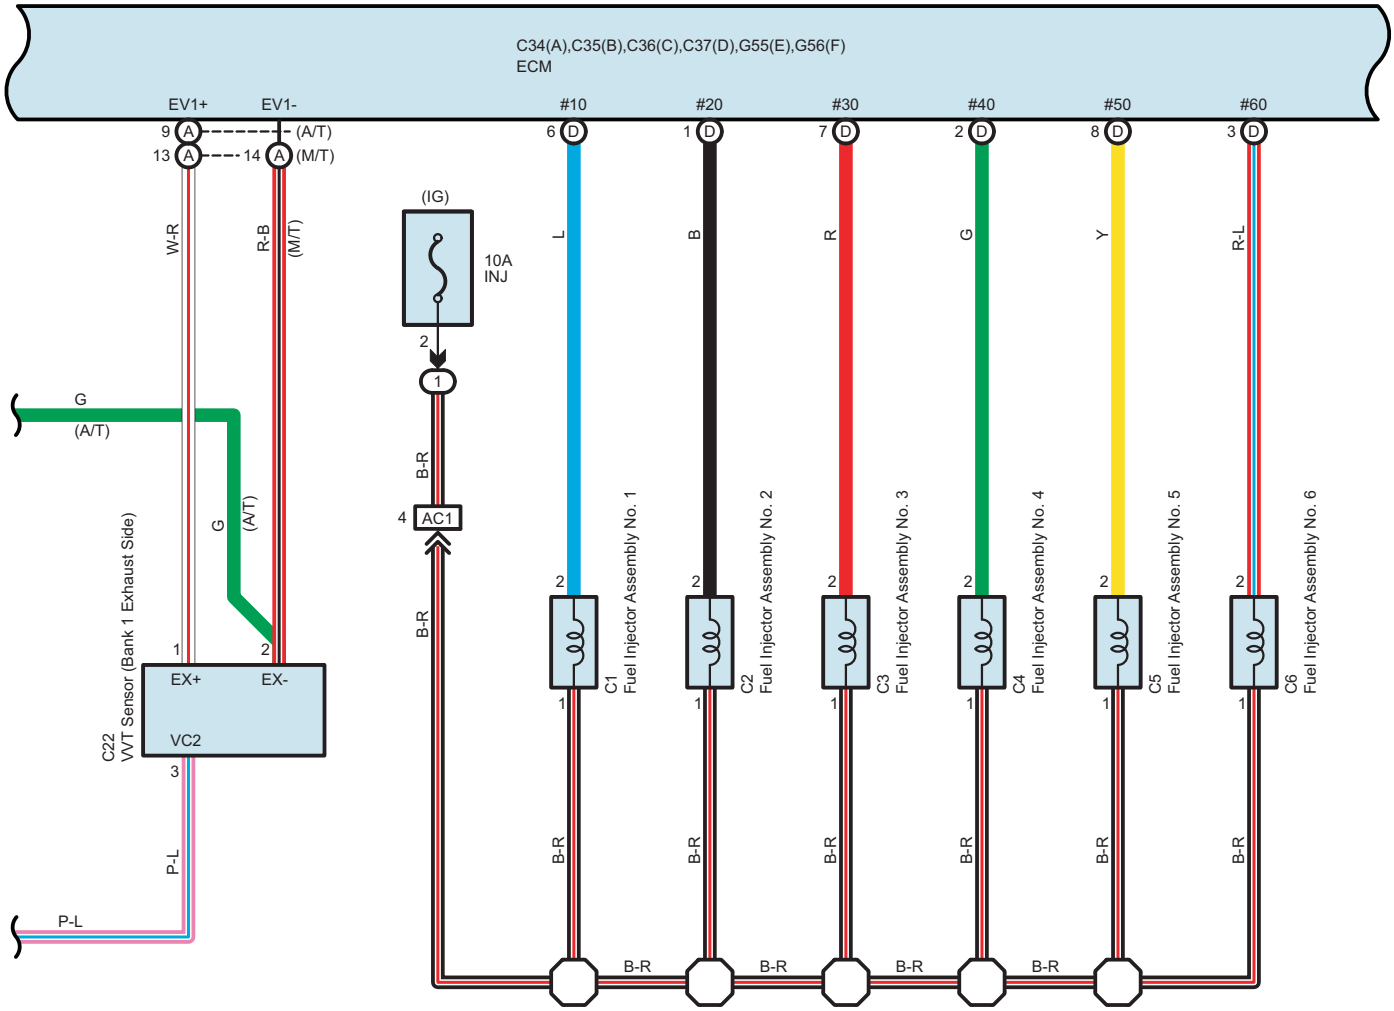



* 1 :w/ Inret Air Pump

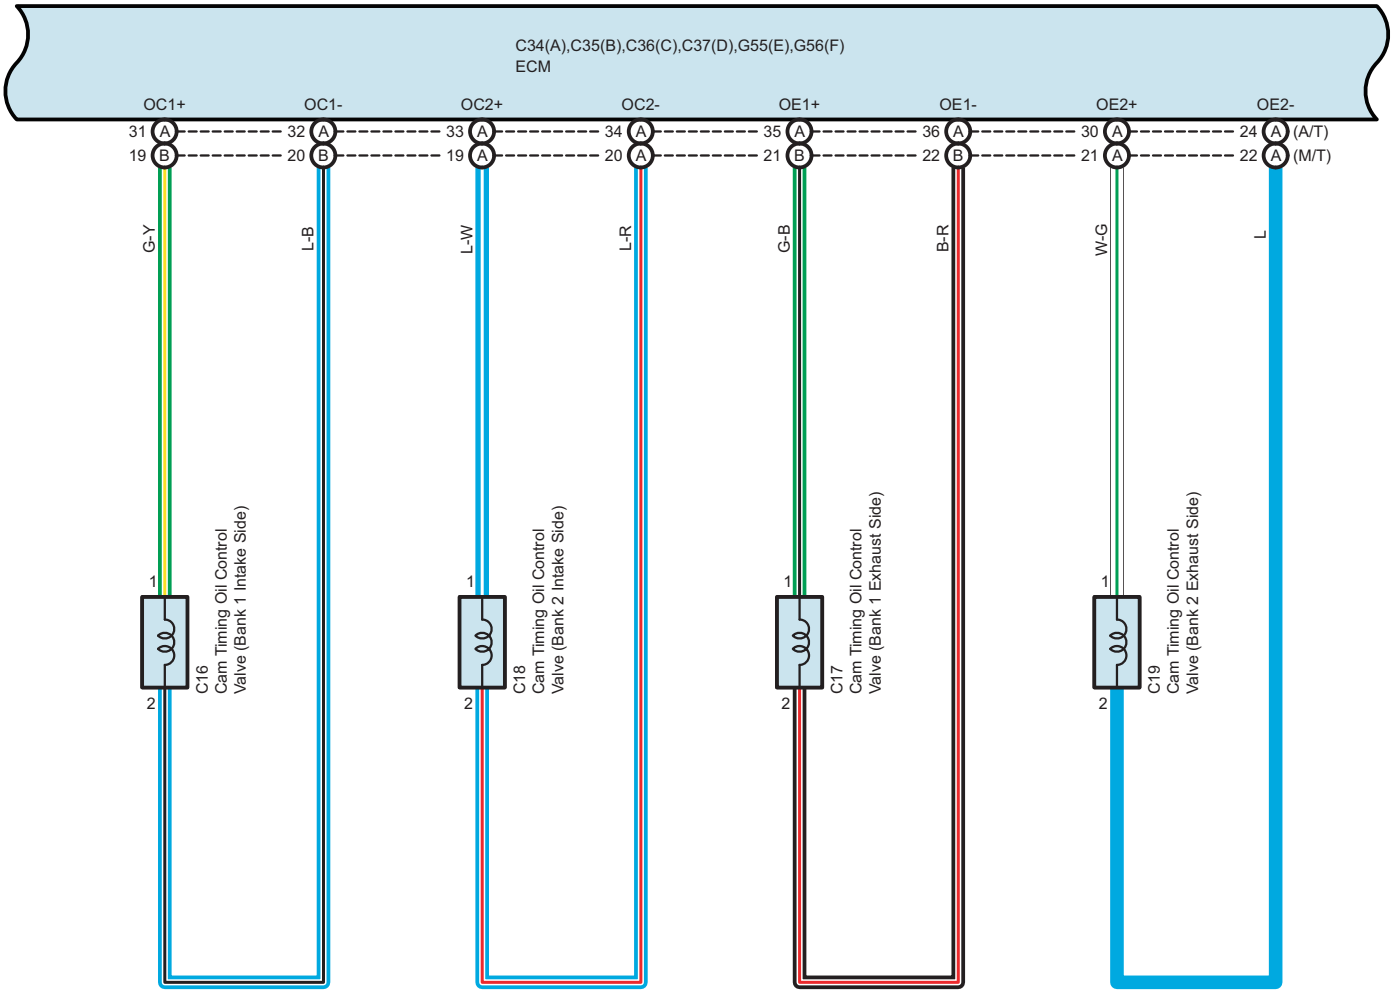

C34(A),C35(B),C36(C),C37(D),G55(E),G56(F)
ECM
FC
HAI1
+B
+B2
AIRV
AIRP
AIDI
5 E (A/T)
8 F (M/T)
30 F
23 E
22 E
22 E (A/T)
23 E (M/T)
20 C
18 C
19 A
G
W
(*1)
P
GR
44 GA2
41 GA2
63 GA6 (LHD)
22 GA2 (RHD)
7 CG1
1 CG1
9 CG1
10 B
11 B
7 A
G85(A),G86(B)
Junction Connector
30 GA6
35 GA2
29 GA6
34 GA2
31 GA6 (LHD)
36 GA2 (RHD)
3 A
4 A
2 A
SIV
SIP
DI
A16(A),A17(B)
Air Injection Control Driver
BATT
+B
VP
E
VV
1 B
5 A
2 B
1 A
6 A
R
R-B
BR
B
V-G
(*1)
1
2
APH+
+B
APHG
GND
A18
Inlet
Air Pump
3
4
2 AC1
3 AC1
9 AC1
10 AC1
W-B
R
G
W (*1)
W
R-B
R-W
B
C1
* 1 :w/ Inret Air Pump


C34(A),C35(B),C36(C),C37(D),G55(E),G56(F)
ECM
DI
FPC
AIP
VCAP
14 E
26 F
4 E (A/T)
3 E (M/T)
15 B
13 B
GR
G
V
LG-B
30 GR1
29 GR1
3 SR3
4 SR3
2 A
1 A
3
2
2
DI
FPC
AIP
VC
VC2
S8(A),S9(B)
Fuel Pump Control ECU Assembly
C44
Air Pump Assembly (Bank 1)
C45
Air Pump Assembly
(Bank 2)
+B
E
FP
FP-
+B
E2
GND
GNDL
E22
4 A
3 A
1 B
2 B
5
4
1
1
4
L
W-B
B
W
B
W-R
W-B
W-B
W-R
1 SR3
2 SR3
5
E2
M
Pump
B2
4
S5
Fuel Sender Gauge Assembly
R
W-B
W-R
11 AR2
R
B
R-W
R-B
B
R-W
R-B
B
R1
C1

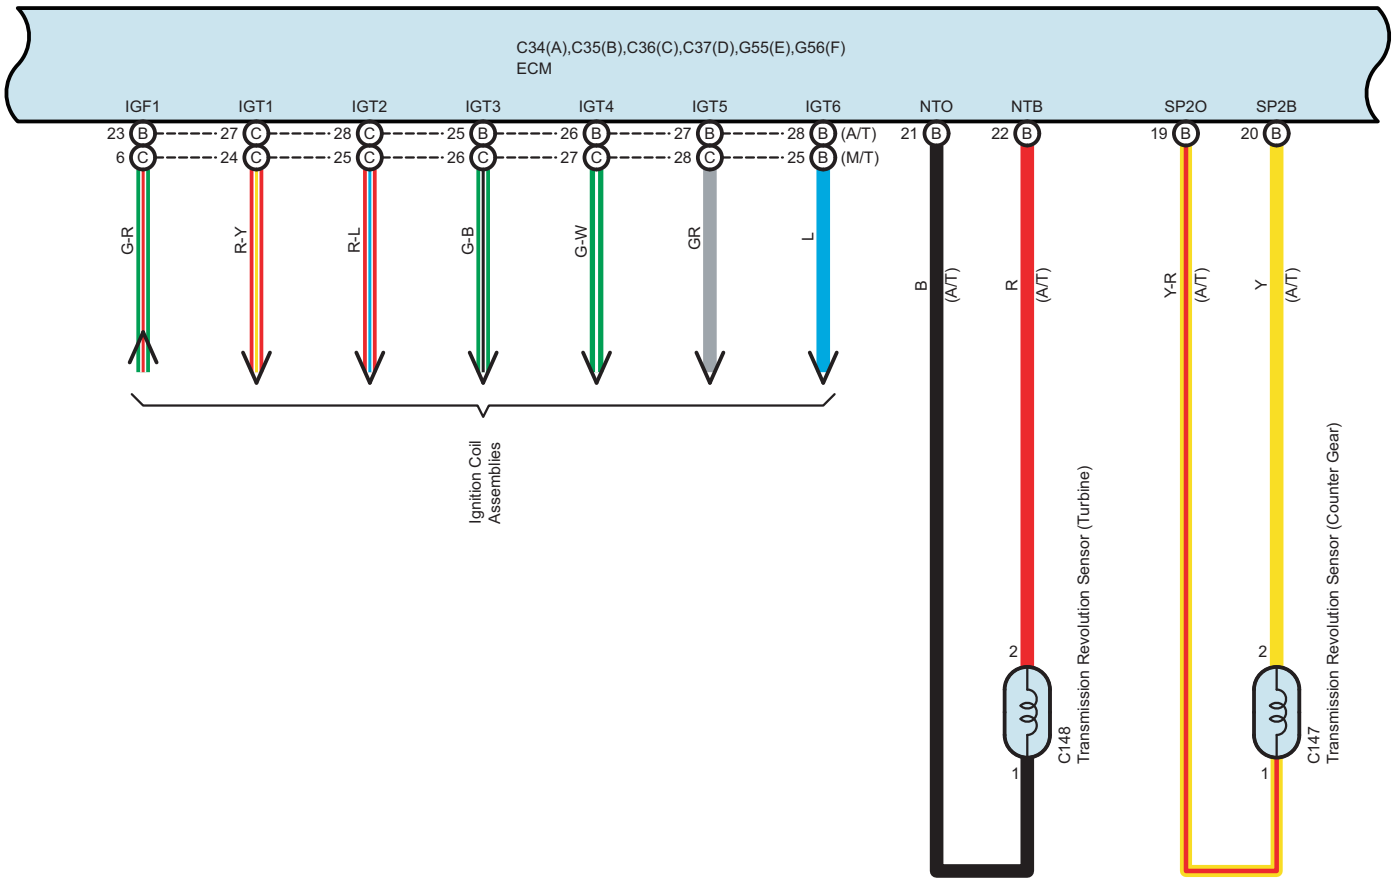

C34(A),C35(B),C36(C),C37(D),G55(E),G56(F)
ECM
AIP2
EAIP
ETHA
VG
E2G
THA
PRG
VCV1
VV1+
VV1-
(A/T)
(M/T)
B
W-R
W-R
(M/T)
W-R
B-W
Y-B
P
P-L
R
G
(M/T)
G
(A/T)
G
(A/T)
G
(A/T)
C45
Air Pump Assembly (Bank 2)
AIP2
+BL
C33
Intake Mass Air Flow
Meter Sub-Assembly
E2
VG
E2G
THA
+B
C138
Purge VSV
C20
VVT Sensor (Bank 1 Intake Side)
VVR+
VVR-
VC
R-W
R-B
R-B
P-L
W-R
W-R
(A/T)
W-R
(A/T)
R-W
R-B
R-B
R-B
R-B
R-B
B
B


C34(A),C35(B),C36(C),C37(D),G55(E),G56(F)
ECM
EV1+
EV1-
#10
#20
#30
#40
#50
#60
9 A
13 A
14 A
(A/T)
(M/T)
W-R
R-B
(M/T)
(IG)
10A
INJ
2
1
B-R
4 AC1
G
(A/T)
G
(A/T)
1
2
EX+
EX-
VC2
3
C22
VVT Sensor (Bank 1 Exhaust Side)
P-L
P-L
6 D
1 D
7 D
2 D
8 D
3 D
L
B
R
G
Y
R-L
2
1
C1 Fuel Injector Assembly No. 1
C2 Fuel Injector Assembly No. 2
C3 Fuel Injector Assembly No. 3
C4 Fuel Injector Assembly No. 4
C5 Fuel Injector Assembly No. 5
C6 Fuel Injector Assembly No. 6
B-R
B-R
B-R
B-R
B-R
B-R

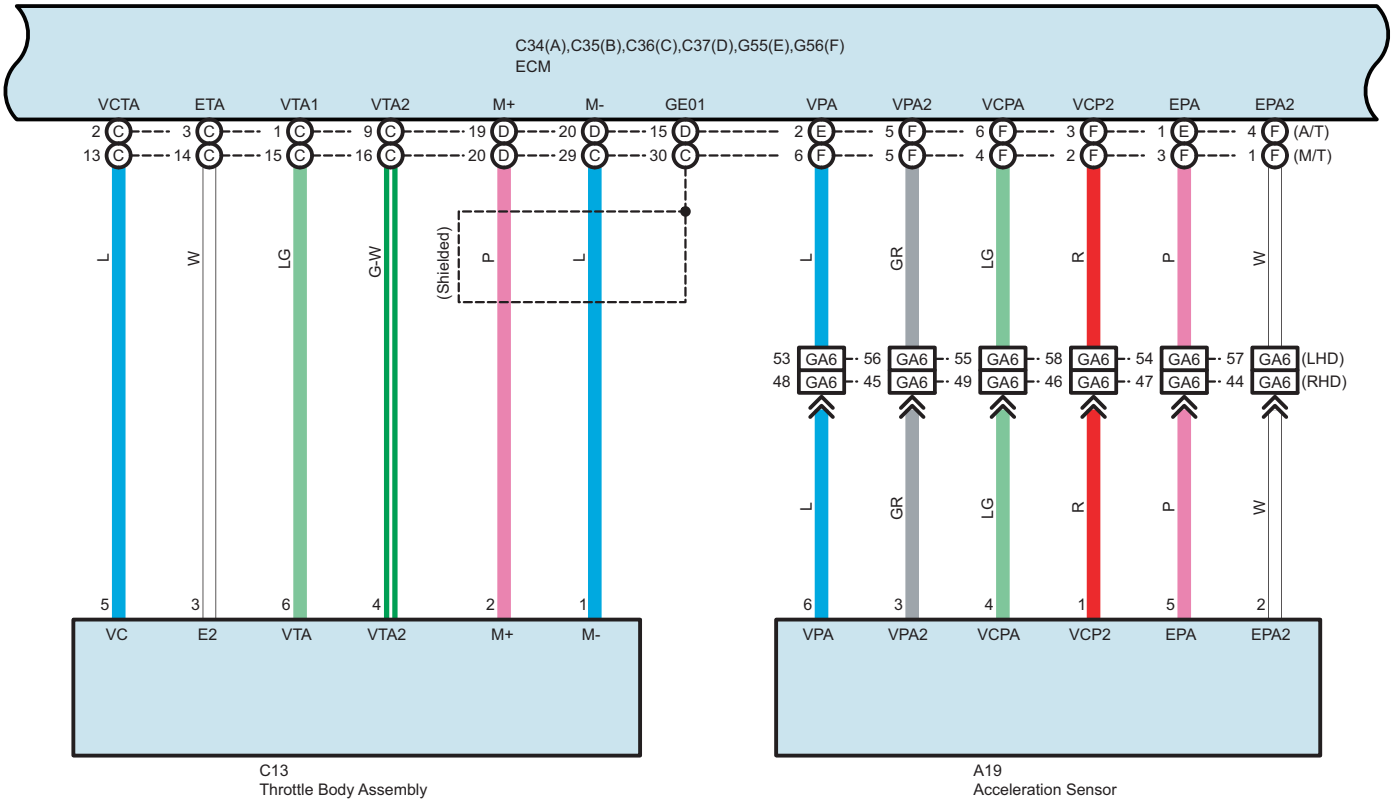

W-R
(A/T)
W-R
(A/T)
R-B
R-B
B
B


C34(A),C35(B),C36(C),C37(D),G55(E),G56(F)
ECM
OC1+
OC1-
OC2+
OC2-
OE1+
OE1-
OE2+
OE2-
31 A
19 B
32 A
20 B
33 A
19 A
34 A
20 A
35 A
21 B
36 A
22 B
30 A
21 A
24 A (A/T)
22 A (M/T)
G-Y
L-B
L-W
L-R
G-B
B-R
W-G
L
1
2
C16
Cam Timing Oil Control Valve (Bank 1 Intake Side)
C18
Cam Timing Oil Control Valve (Bank 2 Intake Side)
C17
Cam Timing Oil Control Valve (Bank 1 Exhaust Side)
C19
Cam Timing Oil Control Valve (Bank 2 Exhaust Side)

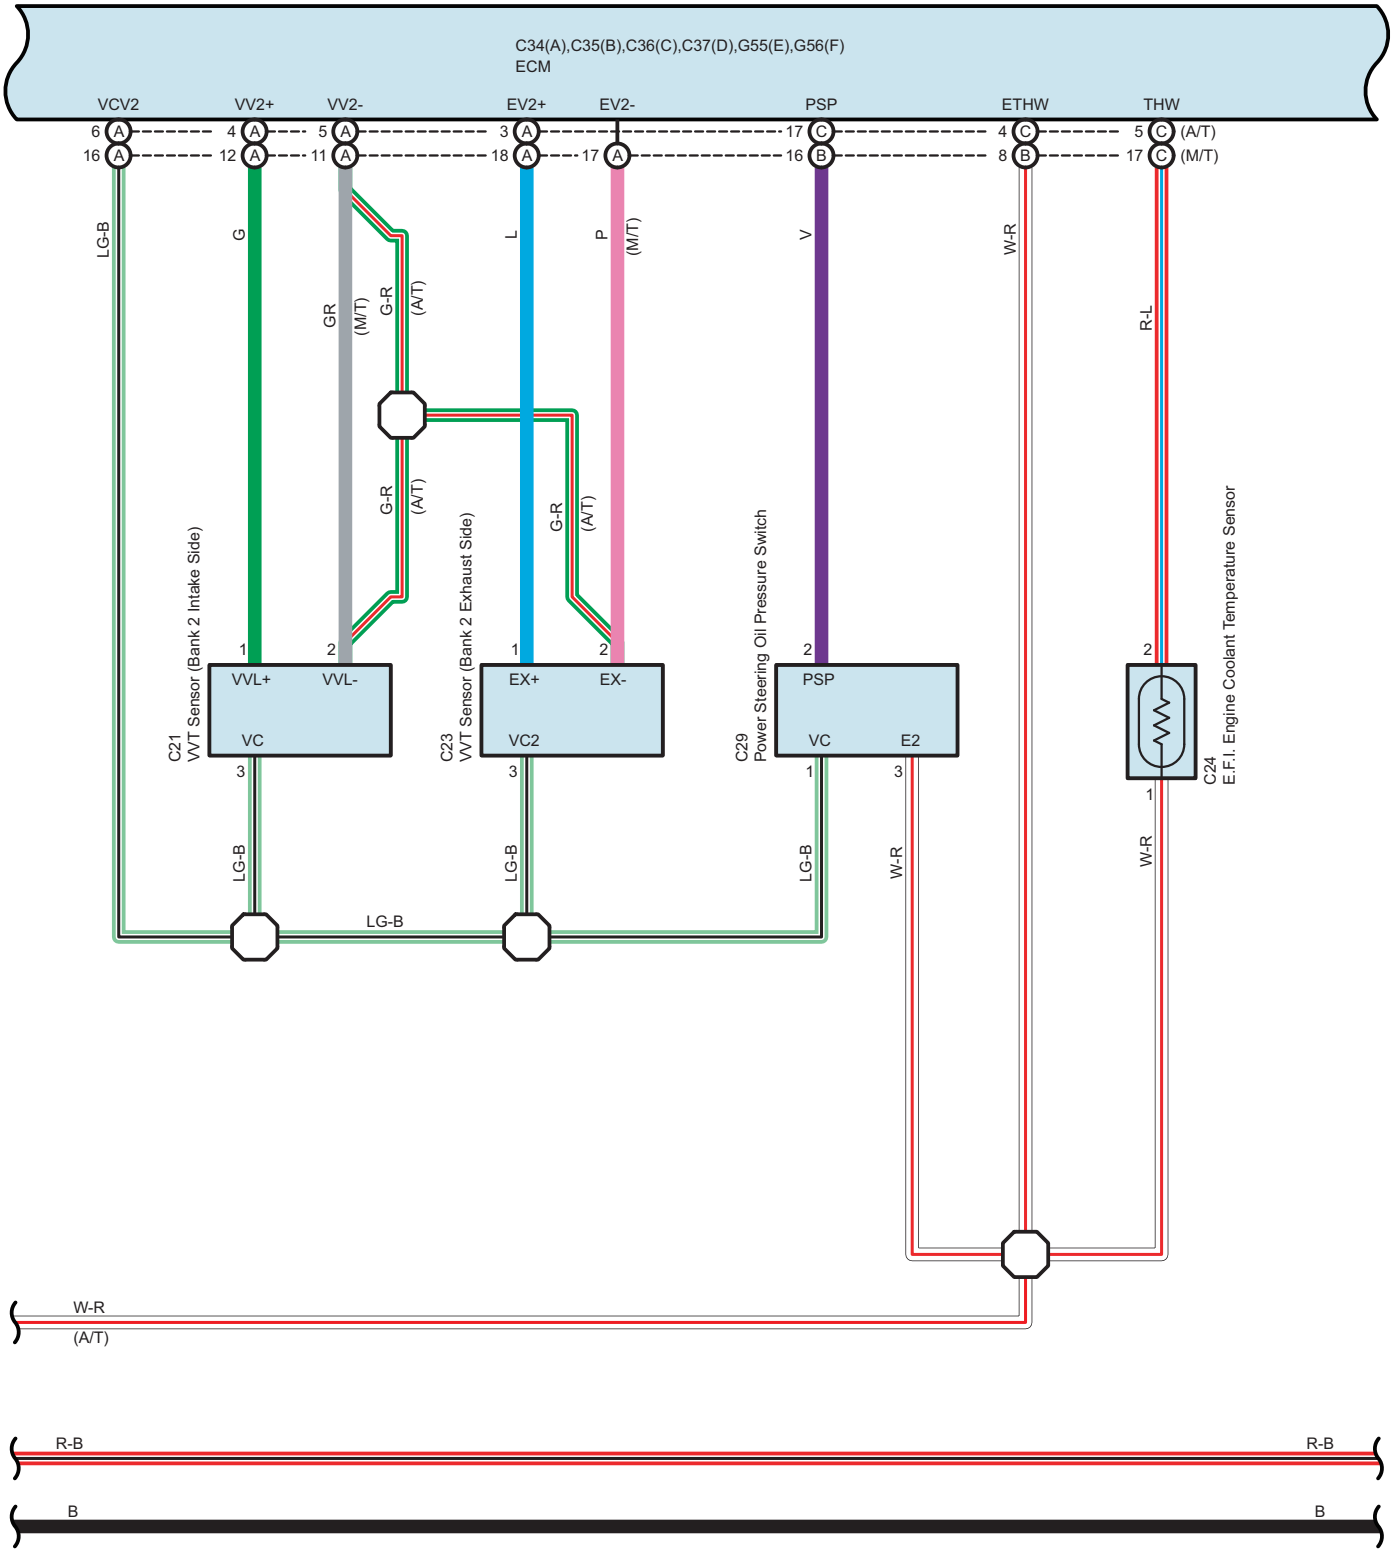

W-R
(A/T)
W-R
(A/T)
R-B
R-B
B
B

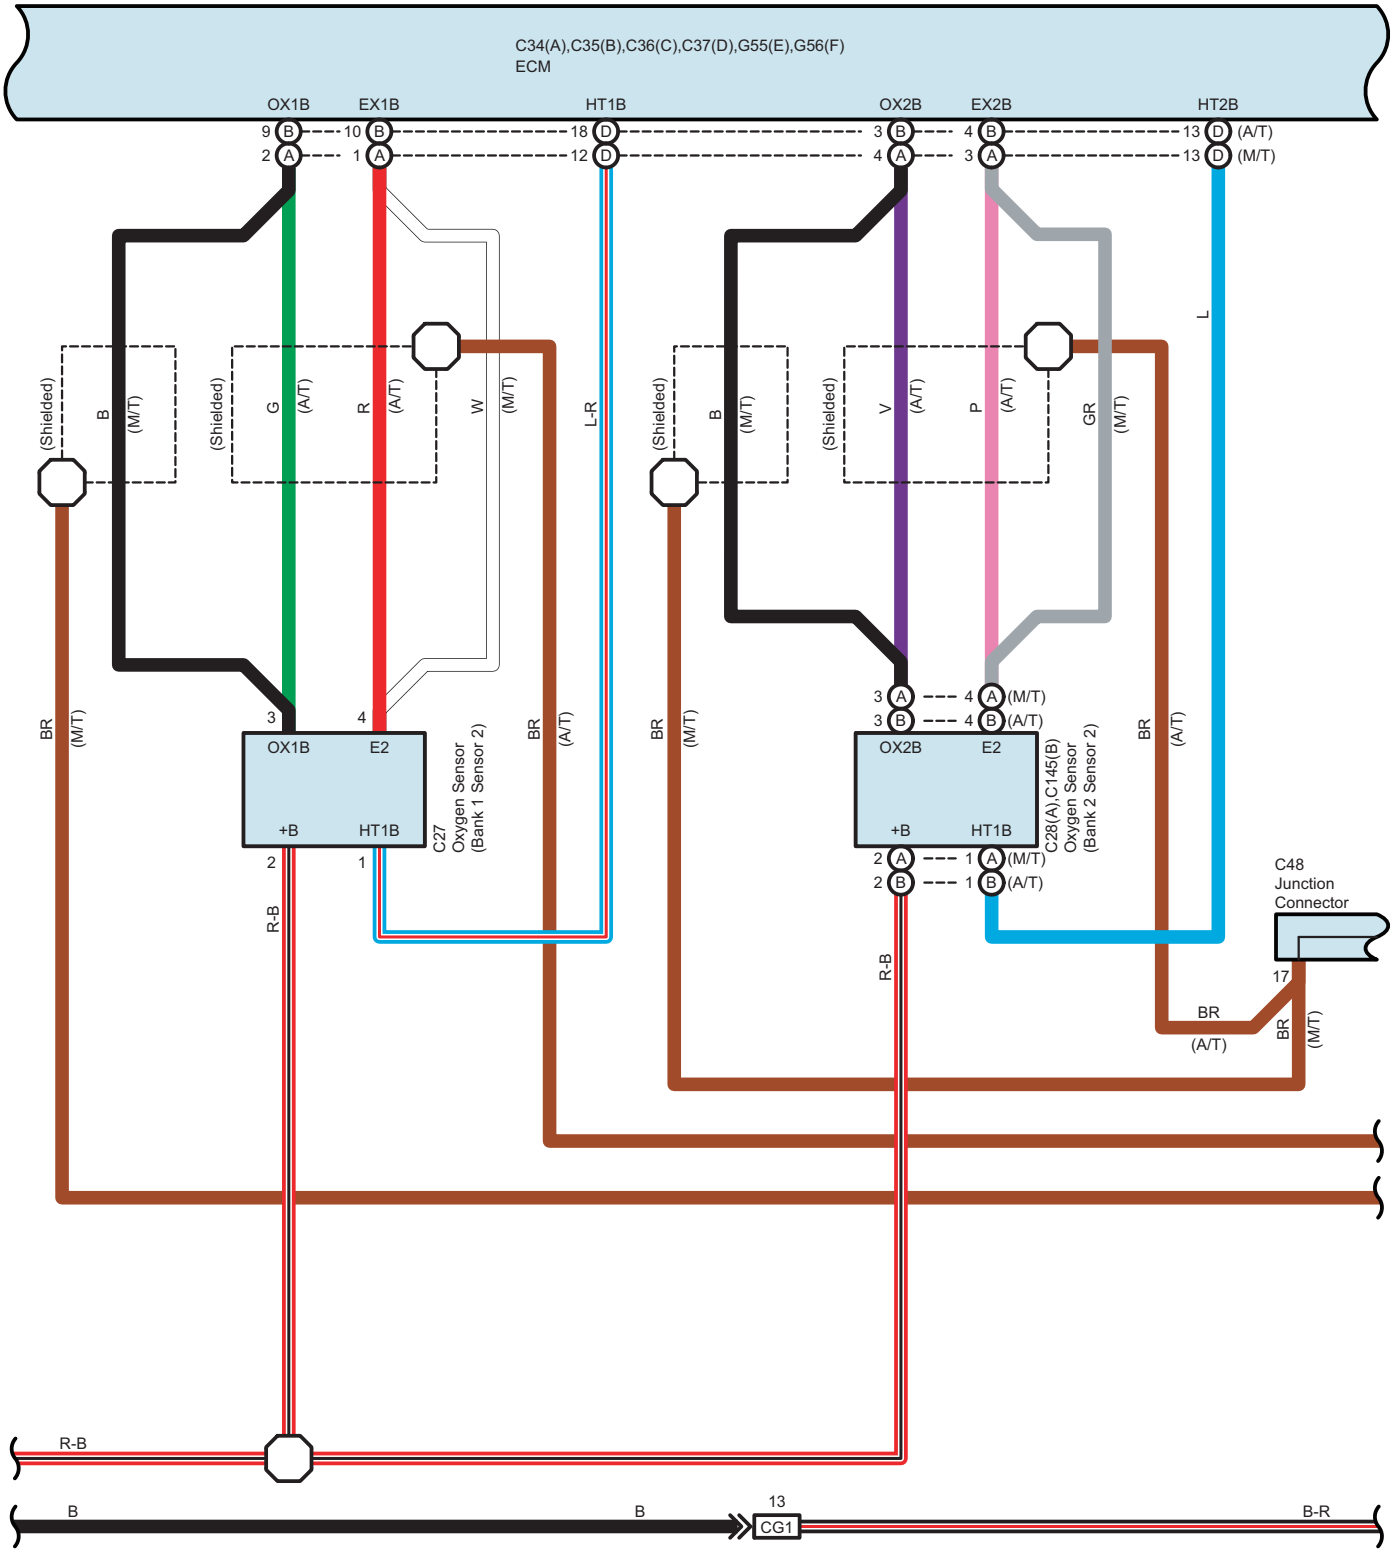

C34(A),C35(B),C36(C),C37(D),G55(E),G56(F)
ECM
IGF1
IGT1
IGT2
IGT3
IGT4
IGT5
IGT6
NTO
NTB
SP2O
SP2B
23 B
6 C
27 C
24 C
28 C
25 C
25 B
26 C
26 B
27 C
27 B
28 C
28 B (A/T)
25 B (M/T)
21 B
22 B
19 B
20 B
G-R
R-Y
R-L
G-B
G-W
GR
L
B (A/T)
R (A/T)
Y-R (A/T)
Y (A/T)
Ignition Coil Assemblies
2
1
C148
Transmission Revolution Sensor (Turbine)
C147
Transmission Revolution Sensor (Counter Gear)

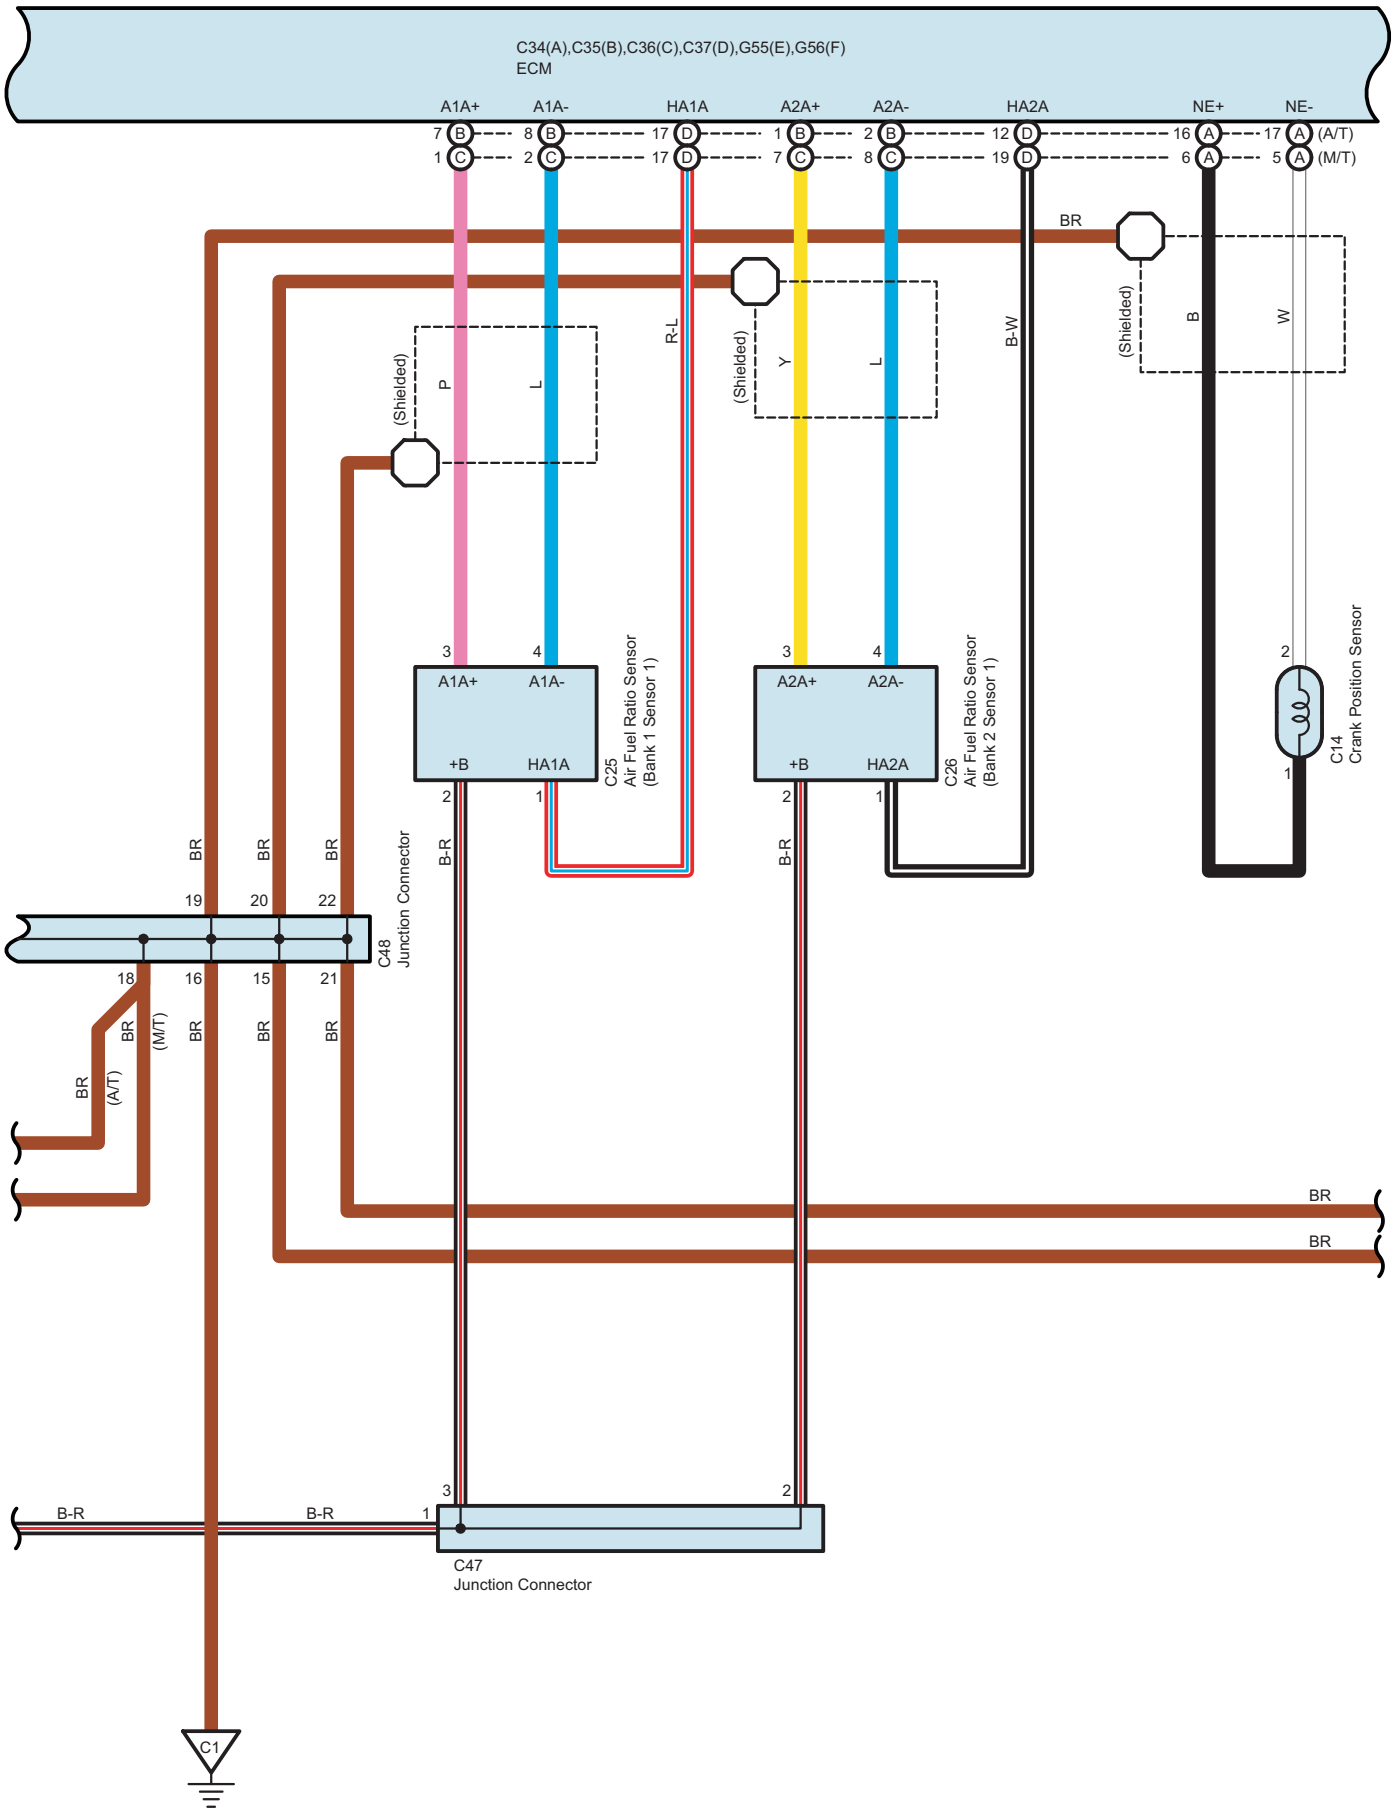

W-R
(A/T)
W-R
(A/T)
R-B
R-B
B
B

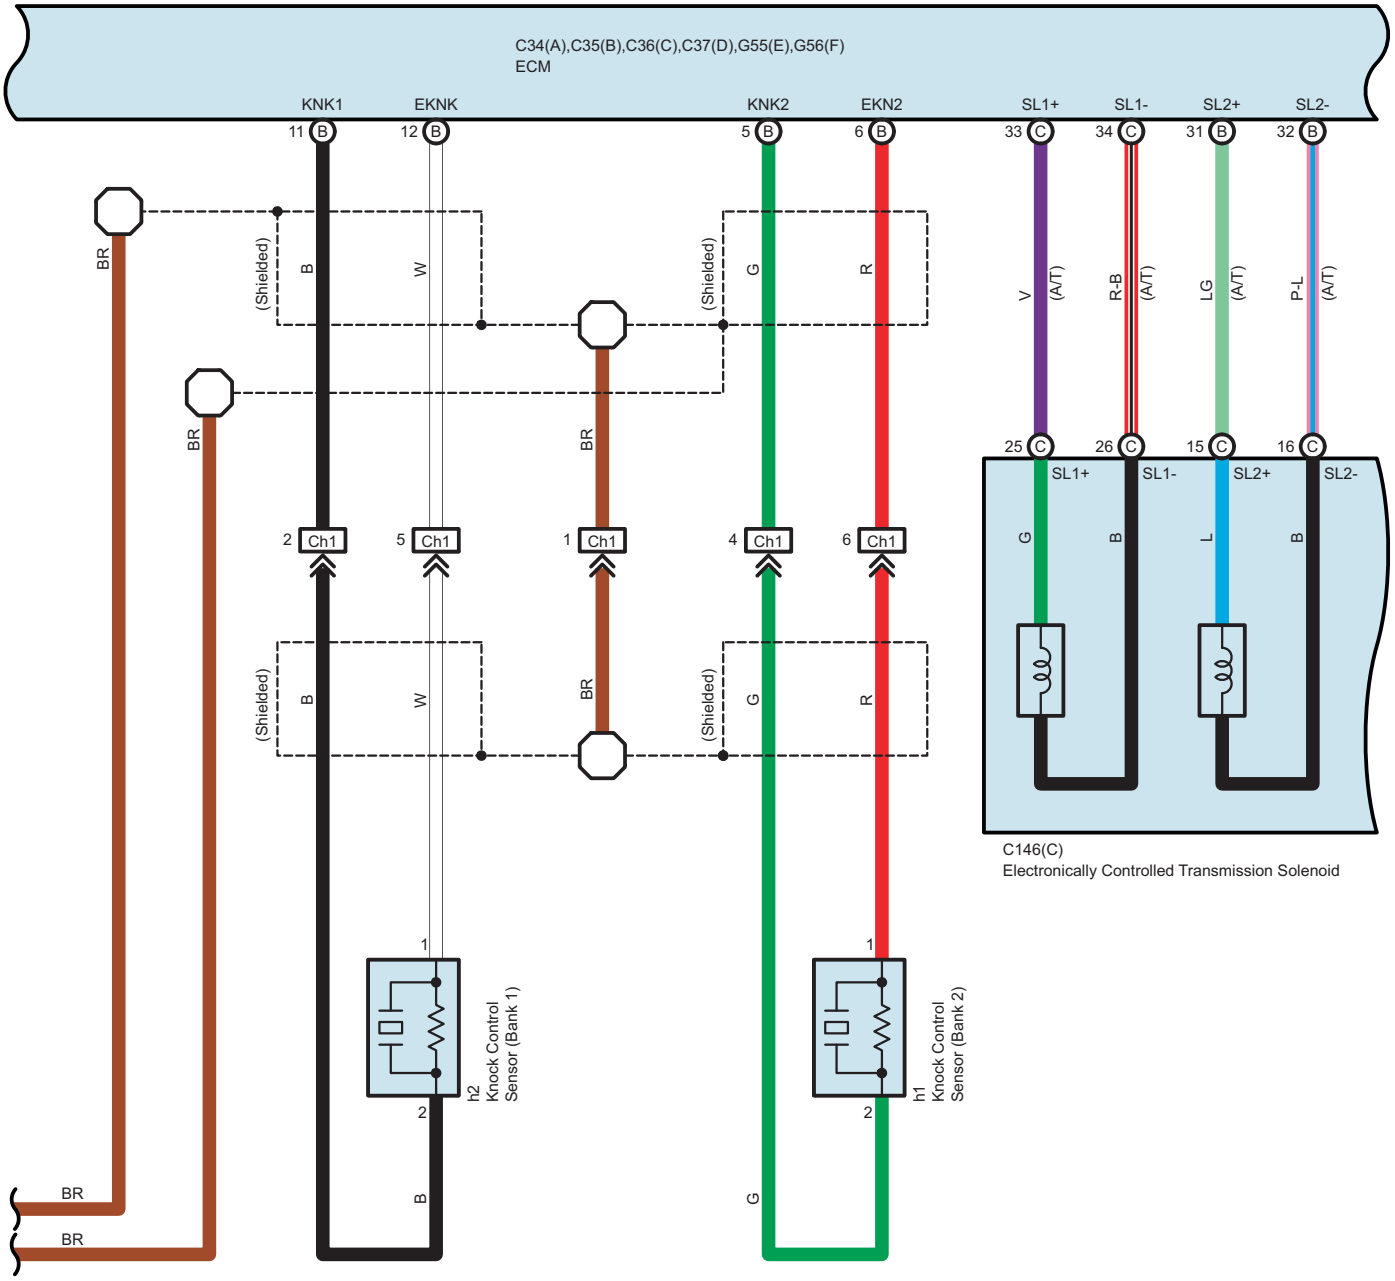

C34(A),C35(B),C36(C),C37(D),G55(E),G56(F)
ECM
VCTA
ETA
VTA1
VTA2
M+
M-
GE01
VPA
VPA2
VCPA
VCP2
EPA
EPA2
(A/T)
(M/T)
L
W
LG
G-W
(Shielded)
P
L
L
GR
LG
R
P
W
GA6
(LHD)
(RHD)
VC
E2
VTA
VTA2
M+
M-
VPA
VPA2
VCPA
VCP2
EPA
EPA2
C13
Throttle Body Assembly
A19
Acceleration Sensor

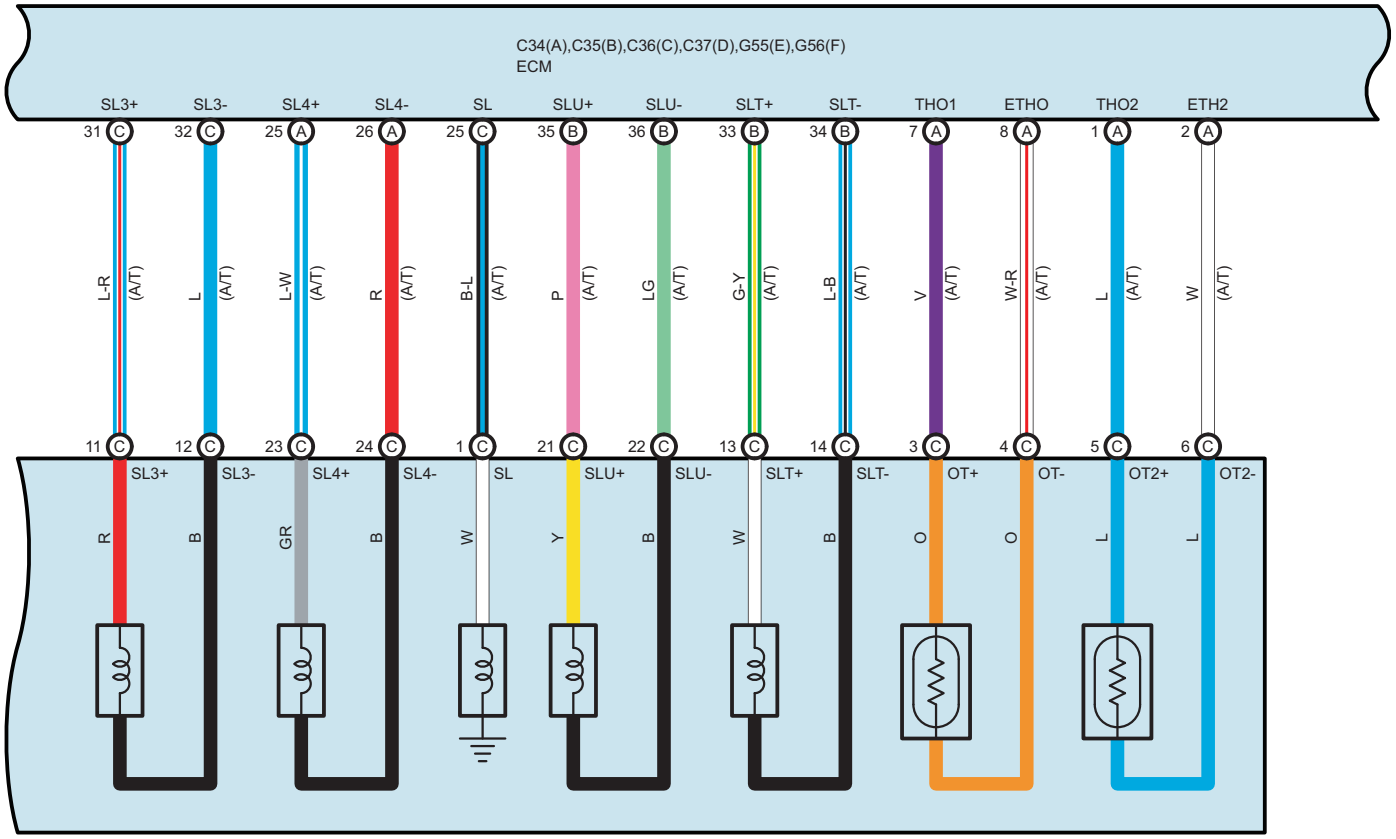

W-R
(A/T)
W-R
(A/T)
R-B
R-B
B
B


C34(A),C35(B),C36(C),C37(D),G55(E),G56(F)
ECM
VCV2
VV2+
VV2-
EV2+
EV2-
PSP
ETHW
THW
6 A
16 A
4 A
12 A
5 A
11 A
3 A
18 A
17 A
17 C
16 B
4 C
8 B
5 C (A/T)
17 C (M/T)
LG-B
G
GR
(M/T)
G-R
(A/T)
L
P
(M/T)
V
W-R
R-L
C21
VVT Sensor (Bank 2 Intake Side)
VVL+
VVL-
VC
C23
VVT Sensor (Bank 2 Exhaust Side)
EX+
EX-
VC2
C29
Power Steering Oil Pressure Switch
PSP
VC
E2
C24
E.F.I. Engine Coolant Temperature Sensor
W-R
(A/T)
R-B
B

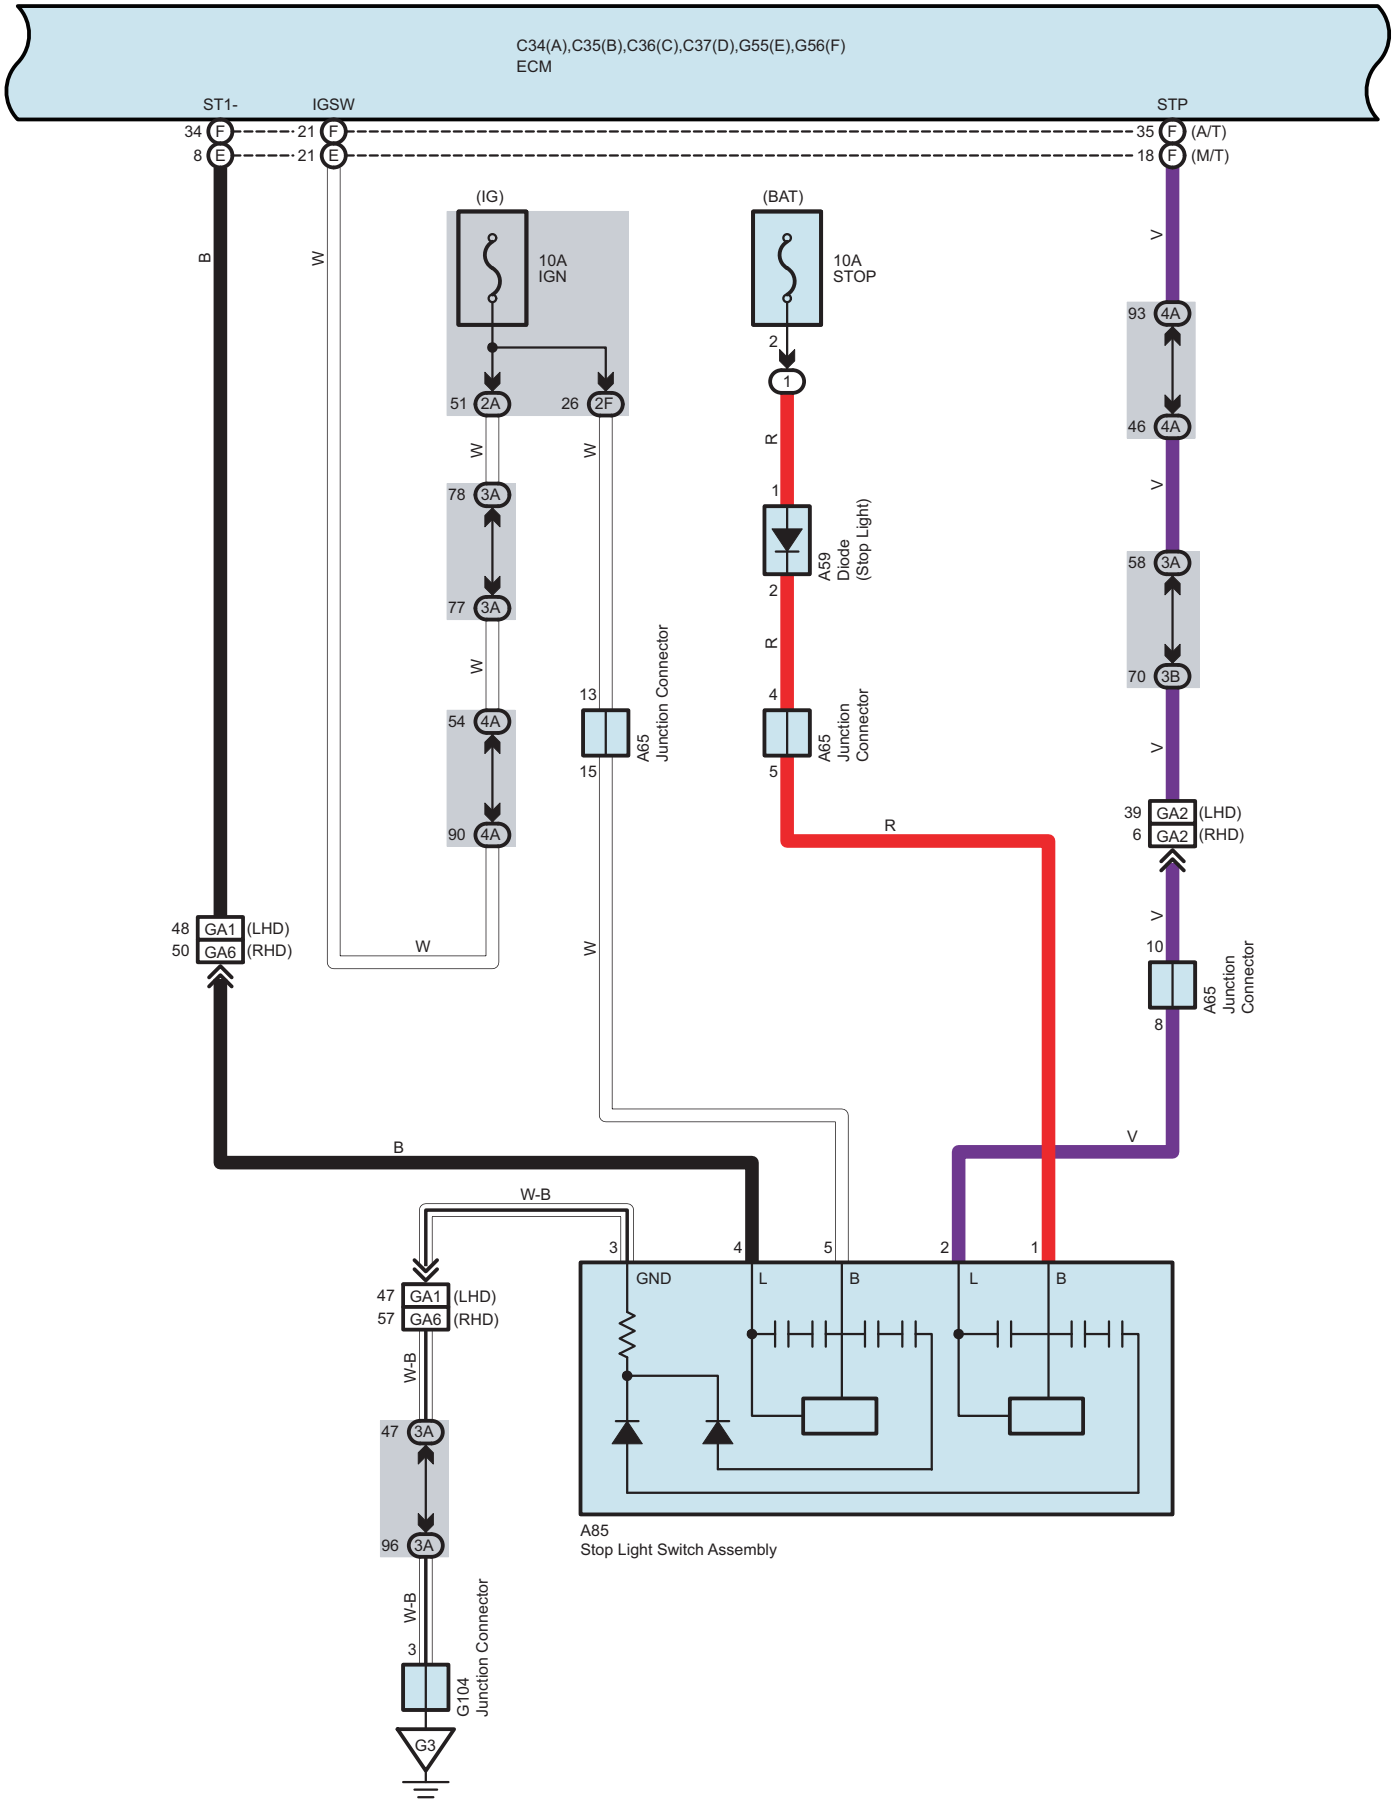

C34(A),C35(B),C36(C),C37(D),G55(E),G56(F)
ECM
OX1B
EX1B
HT1B
OX2B
EX2B
HT2B
(A/T)
(M/T)
(Shielded)
B
G
R
W
L-R
V
P
GR
L
BR
R-B
OX1B
E2
+B
HT1B
C27
Oxygen Sensor
(Bank 1 Sensor 2)
OX2B
C28(A),C145(B)
Oxygen Sensor
(Bank 2 Sensor 2)
C48
Junction
Connector
17
13
CG1
B-R

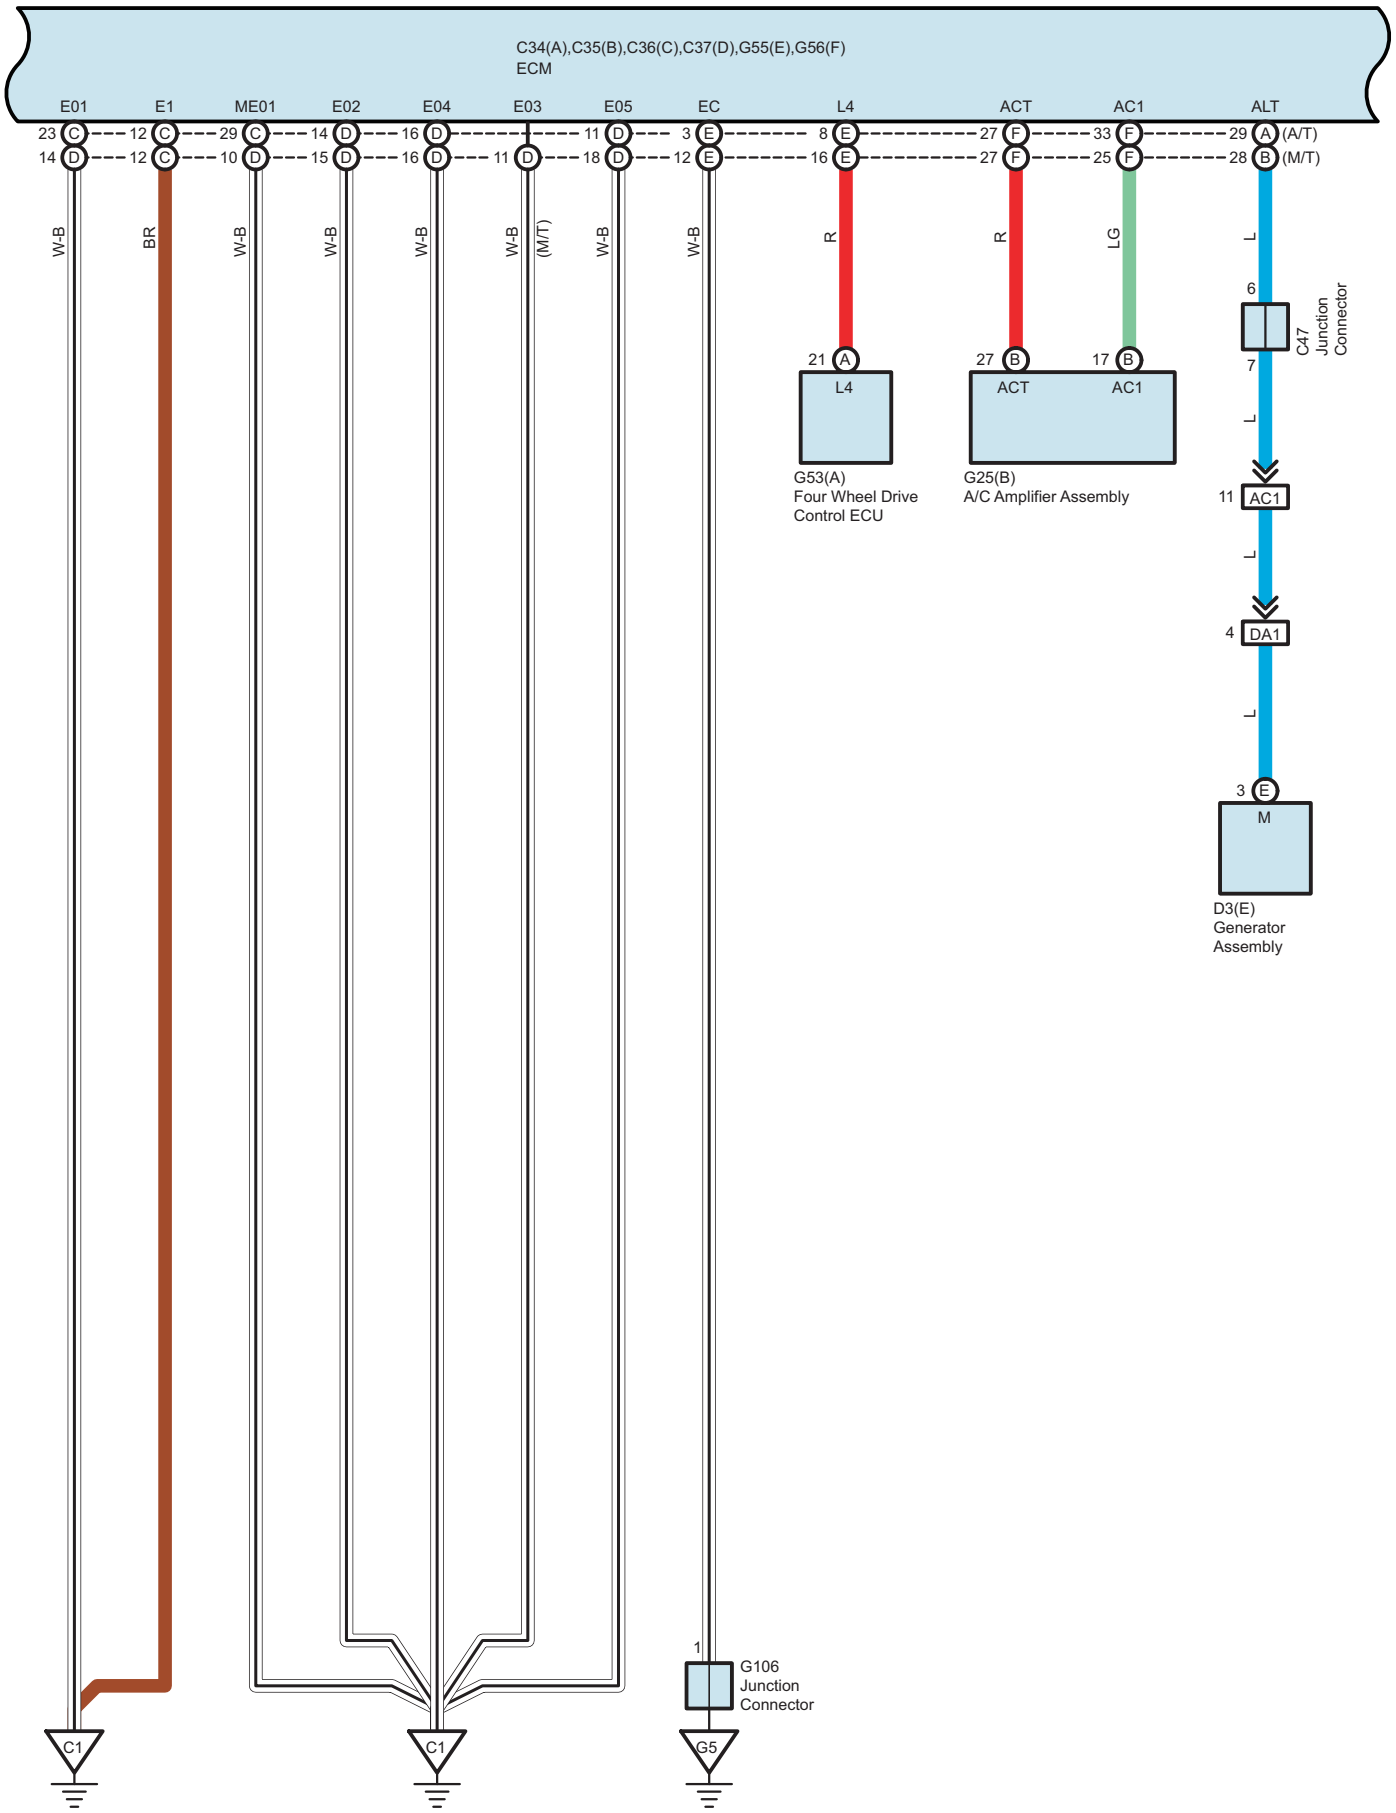

C34(A),C35(B),C36(C),C37(D),G55(E),G56(F)
ECM
A1A+
A1A-
HA1A
A2A+
A2A-
HA2A
NE+
NE-
(A/T)
(M/T)
BR
(Shielded)
P
L
R-L
Y
B-W
B
W
C25
Air Fuel Ratio Sensor
(Bank 1 Sensor 1)
C26
Air Fuel Ratio Sensor
(Bank 2 Sensor 1)
C14
Crank Position Sensor
+B
B-R
C48
Junction Connector
C47
Junction Connector
C1

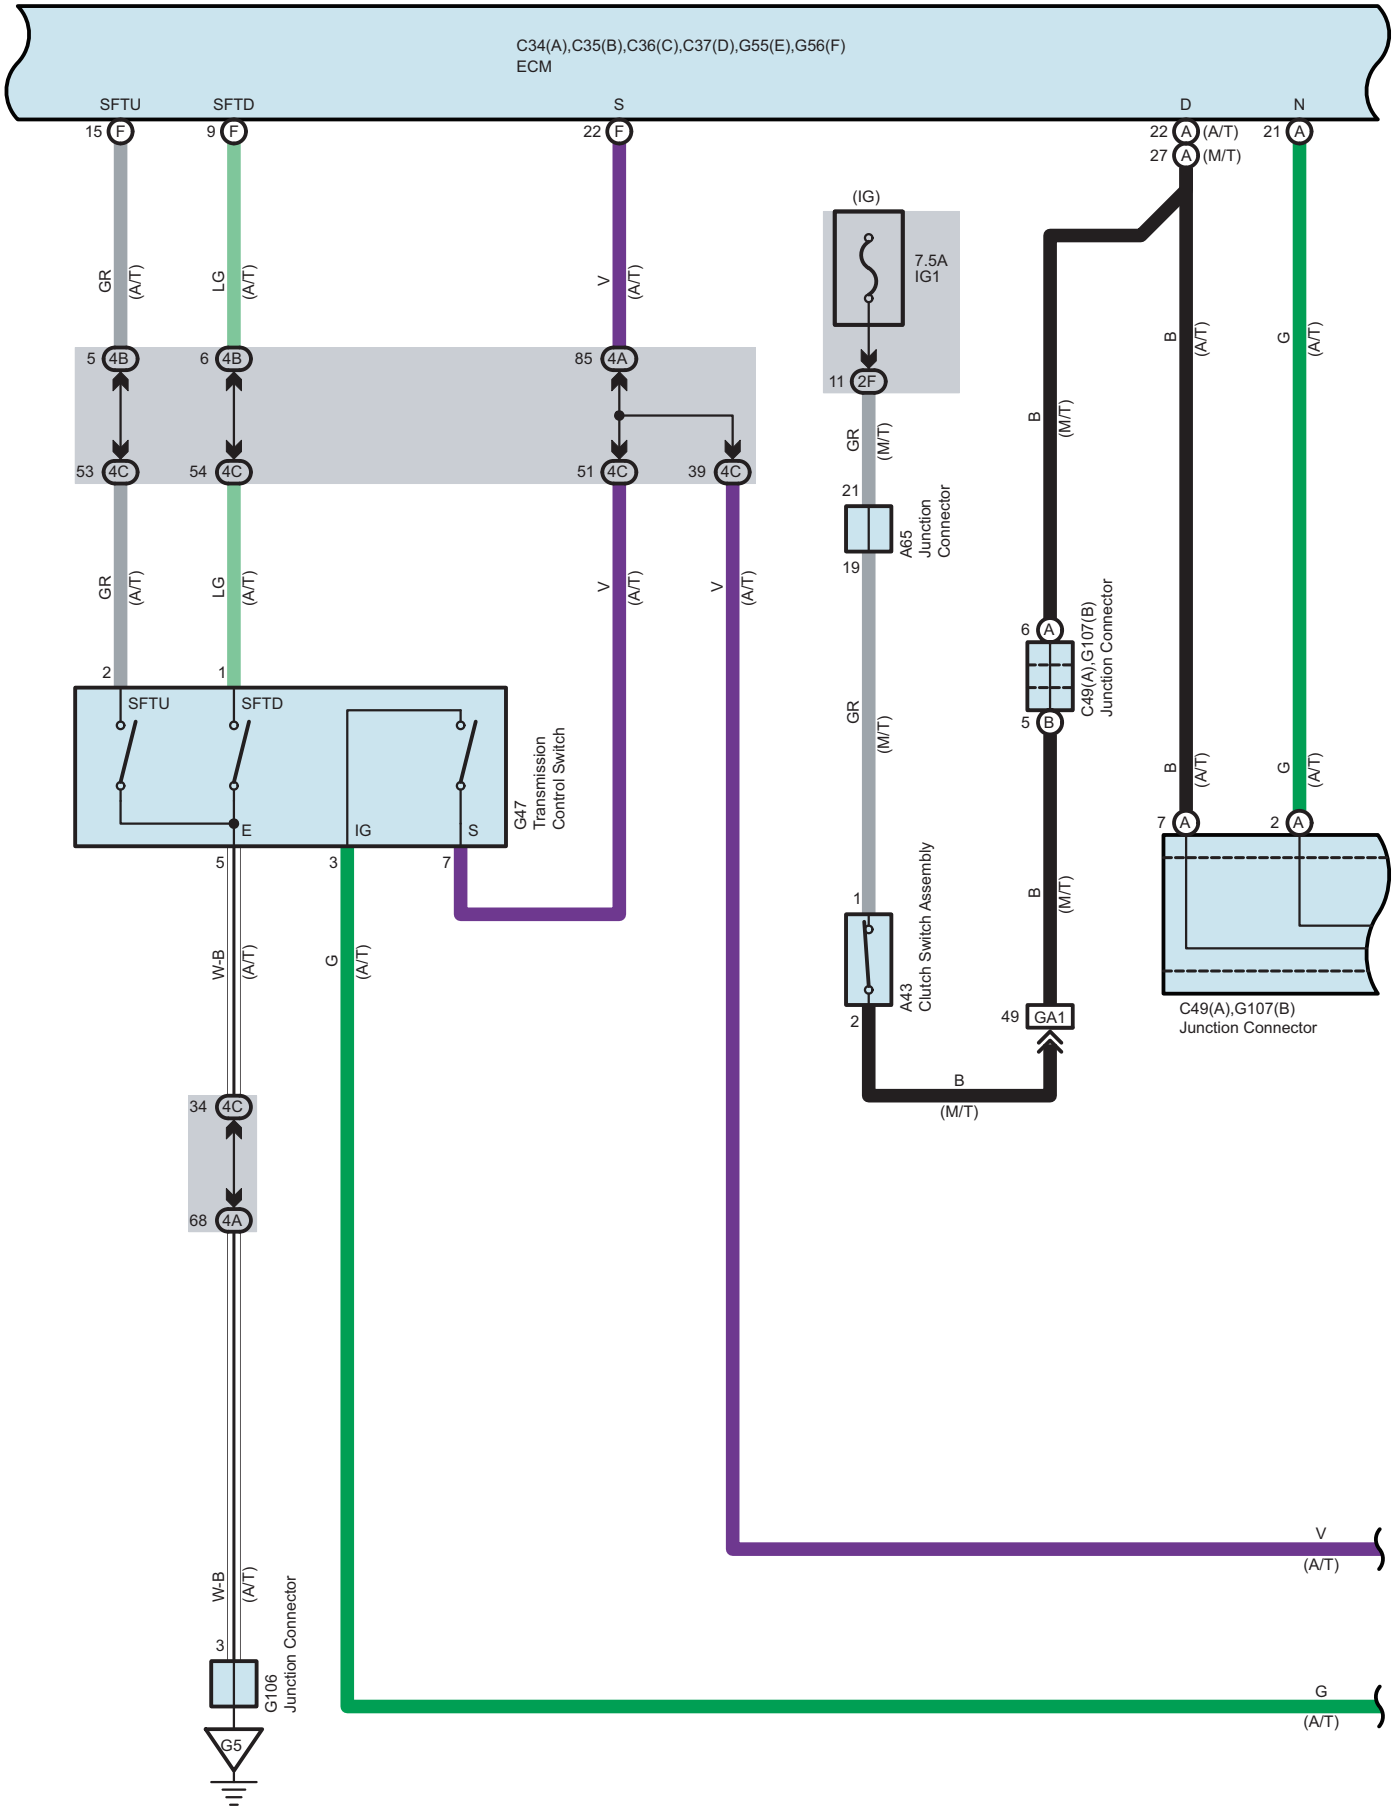

C34(A),C35(B),C36(C),C37(D),G55(E),G56(F)
ECM
KNK1
EKNK
KNK2
EKN2
SL1+
SL1-
SL2+
SL2-
11 B
12 B
5 B
6 B
33 C
34 C
31 B
32 B
BR
(Shielded)
B
W
G
R
V (A/T)
R-B (A/T)
LG (A/T)
P-L (A/T)
25 C
26 C
15 C
16 C
2 Ch1
5 Ch1
1 Ch1
4 Ch1
6 Ch1
G
B
L
1
2
h2
Knock Control Sensor (Bank 1)
h1
Knock Control Sensor (Bank 2)
C146(C)
Electronically Controlled Transmission Solenoid

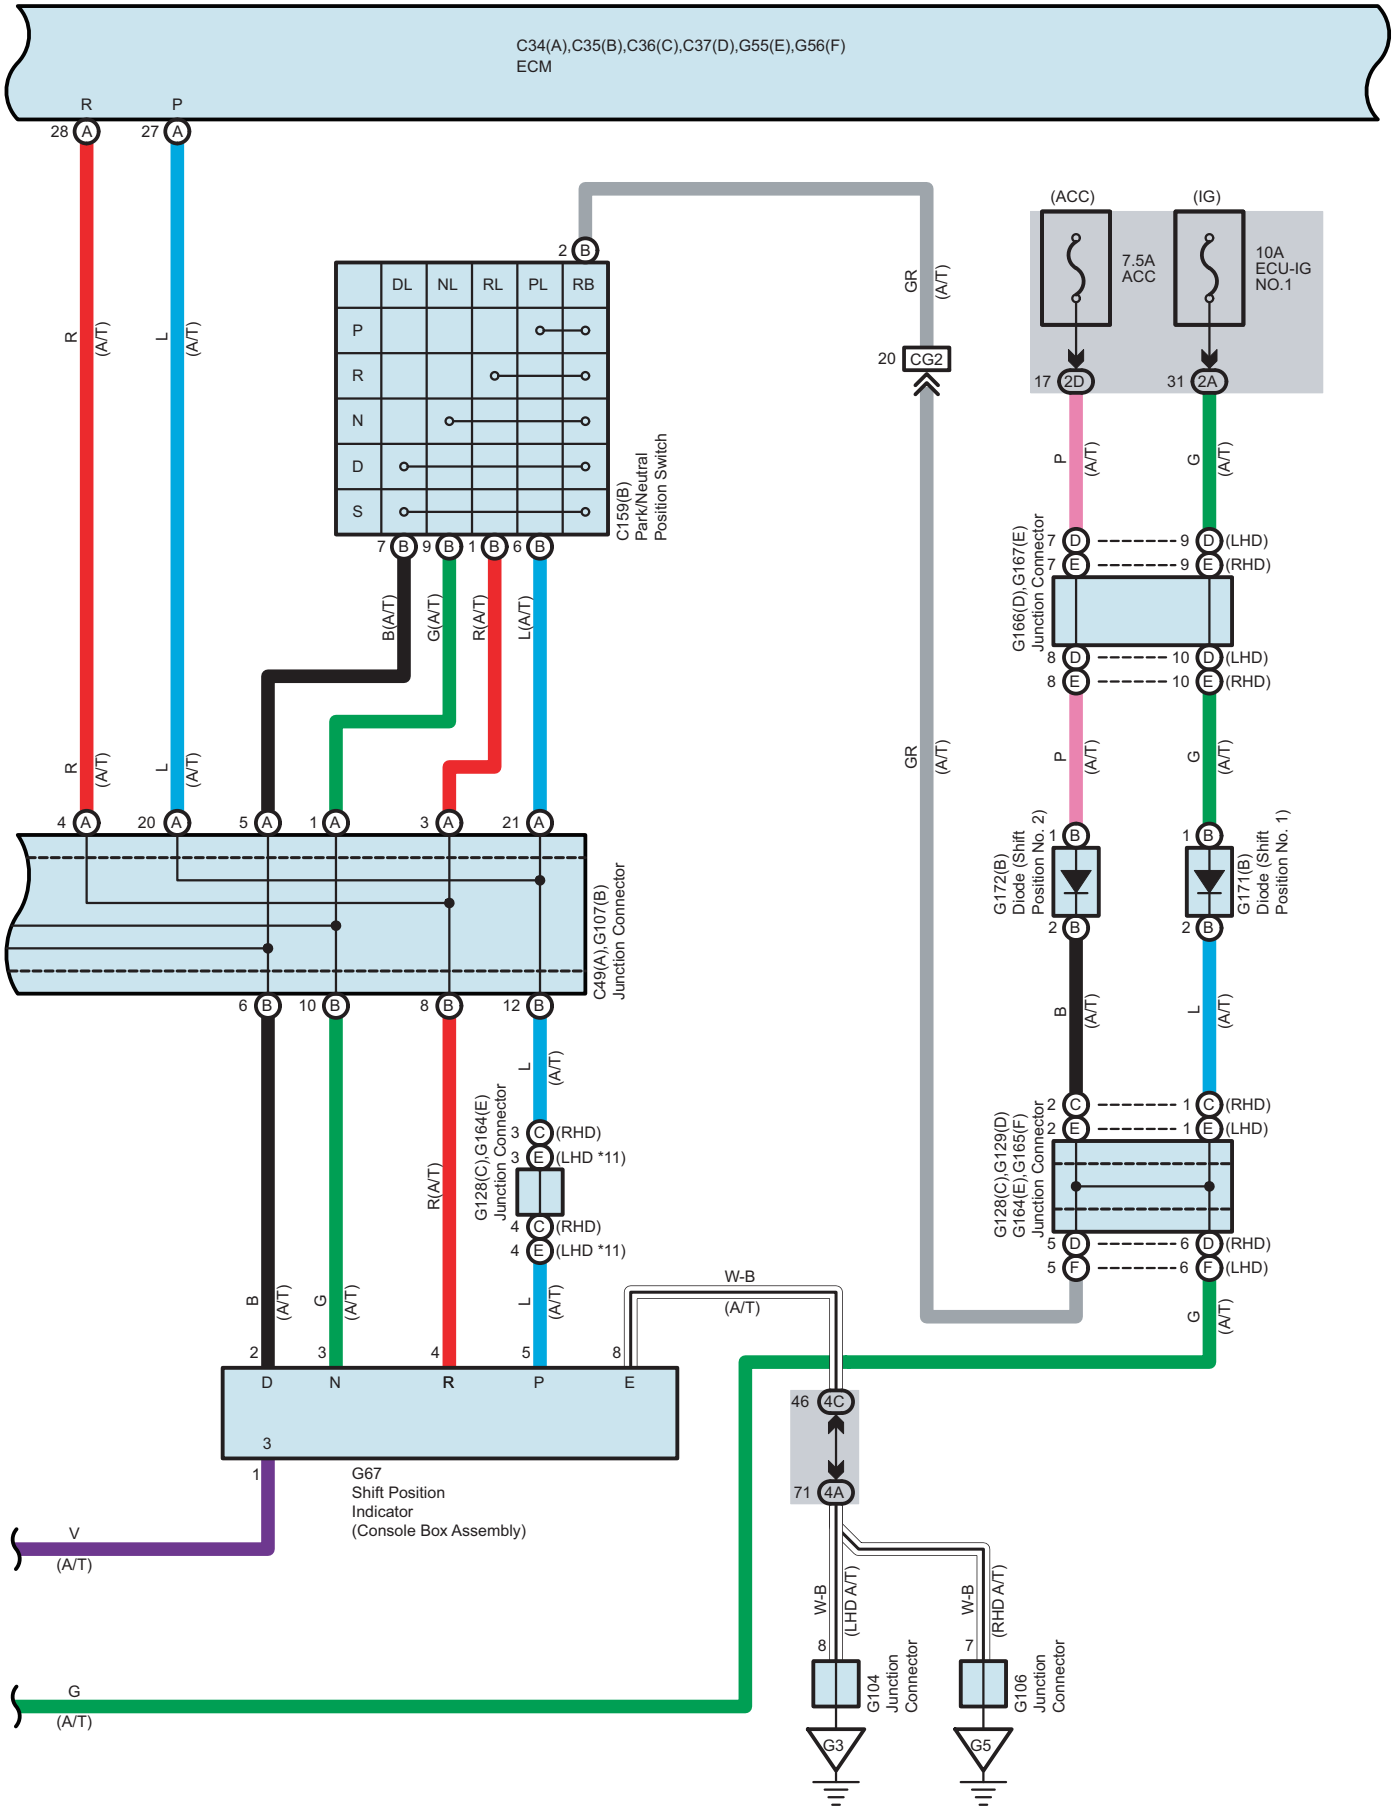


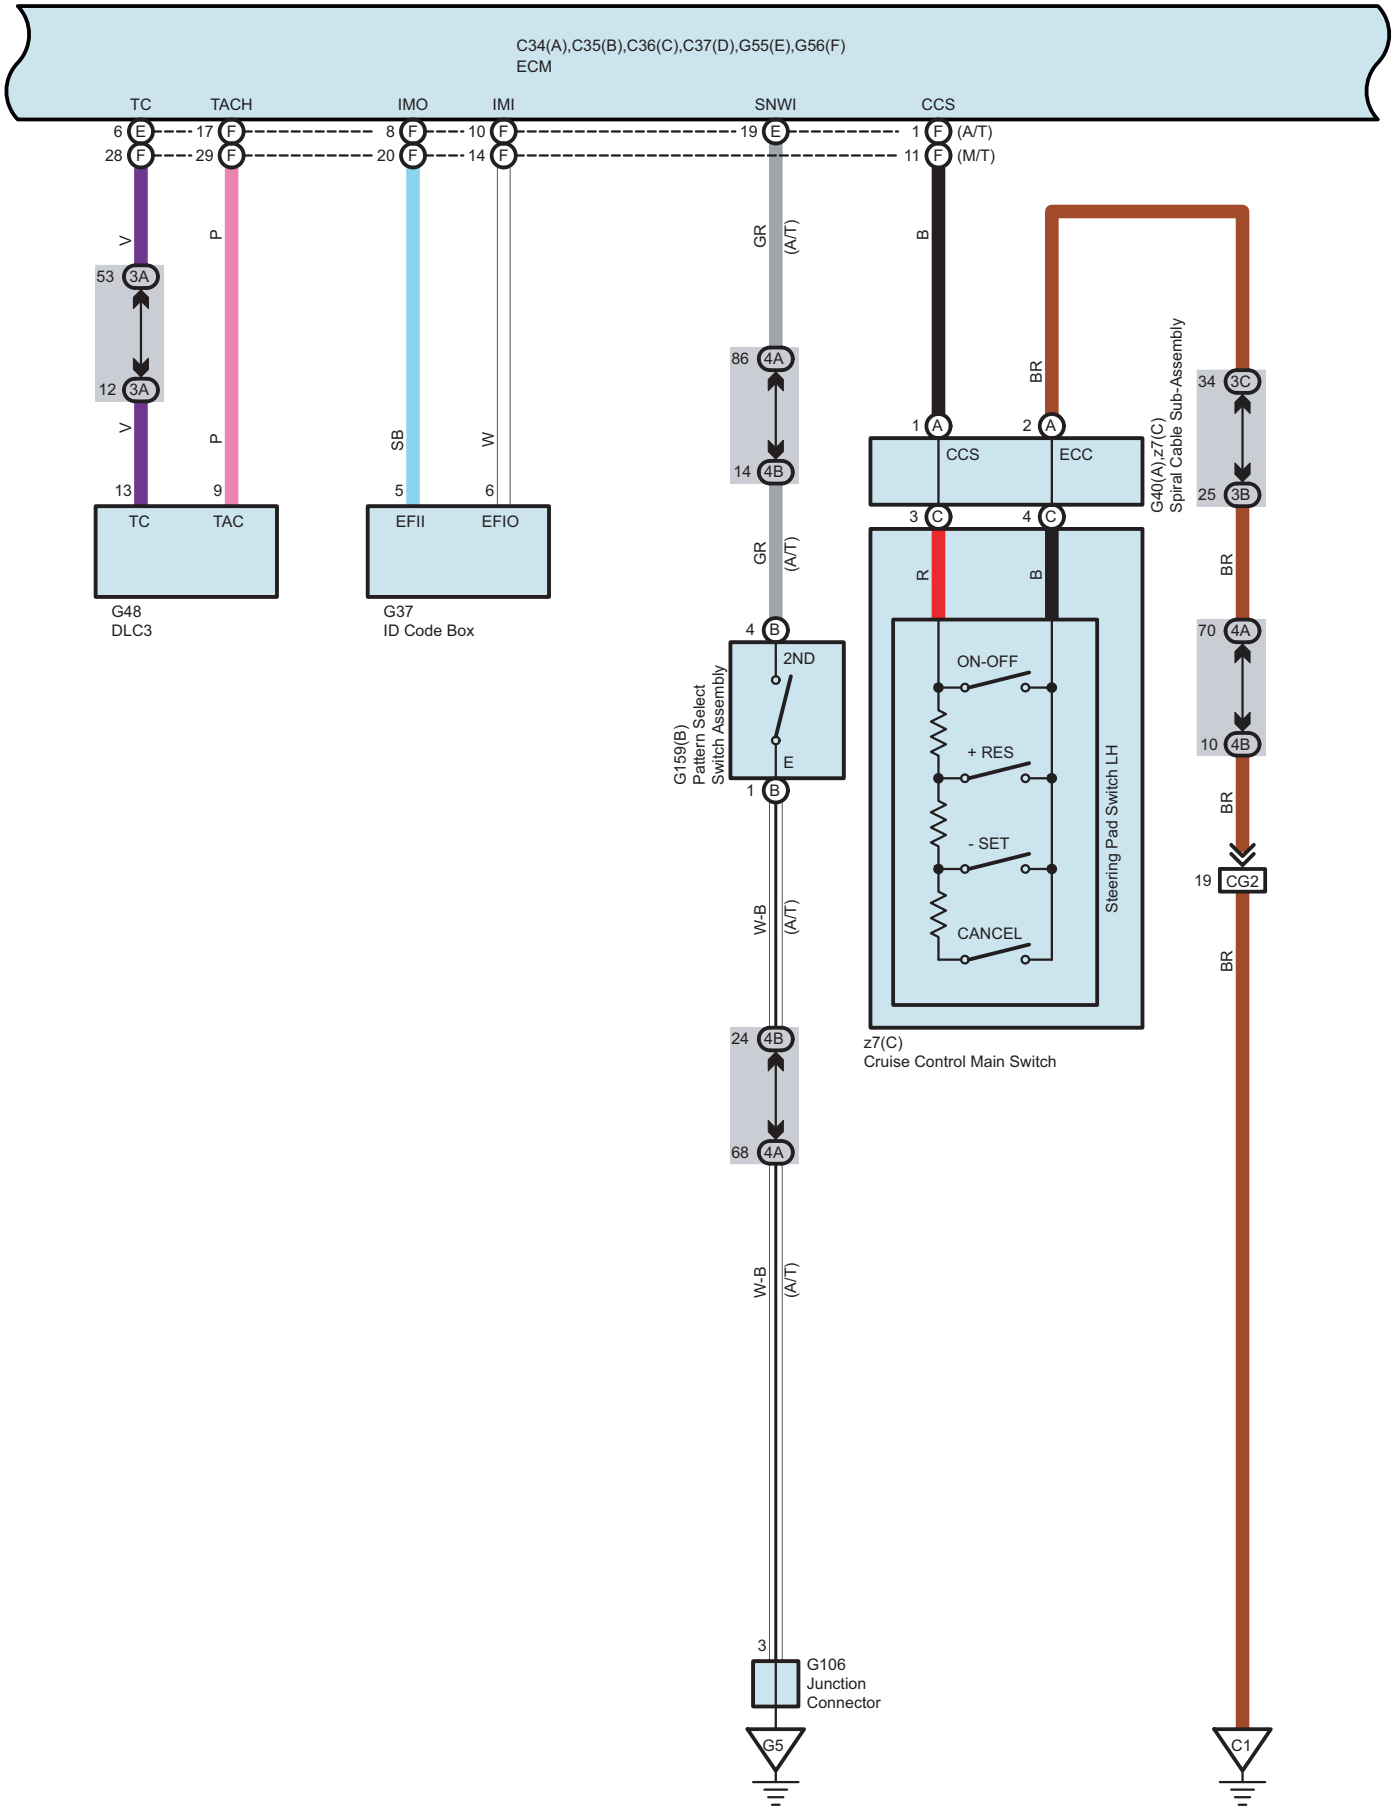

C146(C)
Electronically Controlled Transmission Solenoid

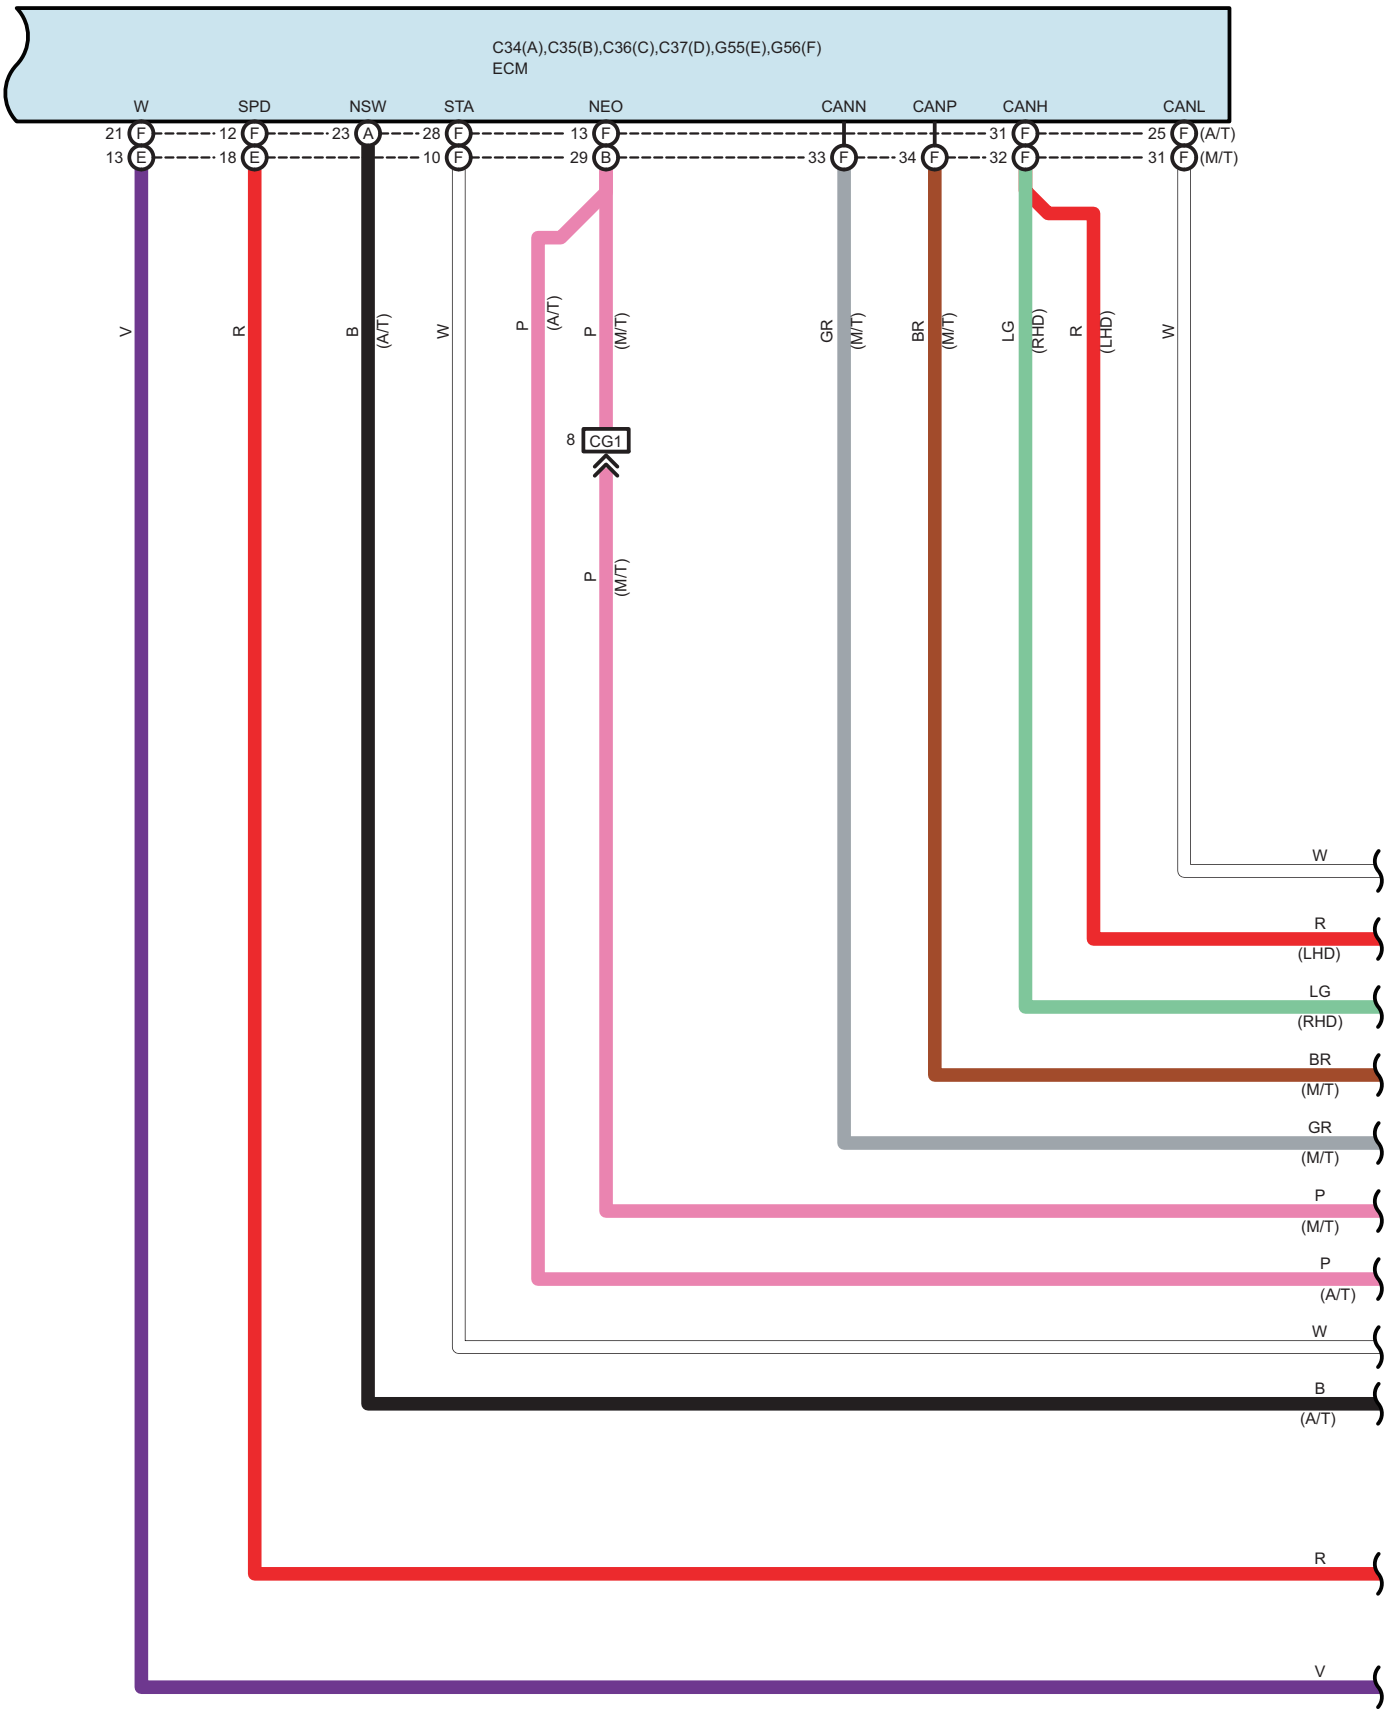

C34(A),C35(B),C36(C),C37(D),G55(E),G56(F)
ECM
ST1-
IGSW
STP
34 F
8 E
21 F
21 E
35 F (A/T)
18 F (M/T)
(IG)
(BAT)
10A IGN
10A STOP
51 2A
26 2F
2
1
93 4A
46 4A
78 3A
77 3A
58 3A
70 3B
54 4A
90 4A
13
15
A65 Junction Connector
A59 Diode (Stop Light)
4
5
39 GA2 (LHD)
6 GA2 (RHD)
10
8
48 GA1 (LHD)
50 GA6 (RHD)
47 GA1 (LHD)
57 GA6 (RHD)
47 3A
96 3A
3
G104 Junction Connector
G3
B
W
R
V
W-B
GND
L
A85
Stop Light Switch Assembly

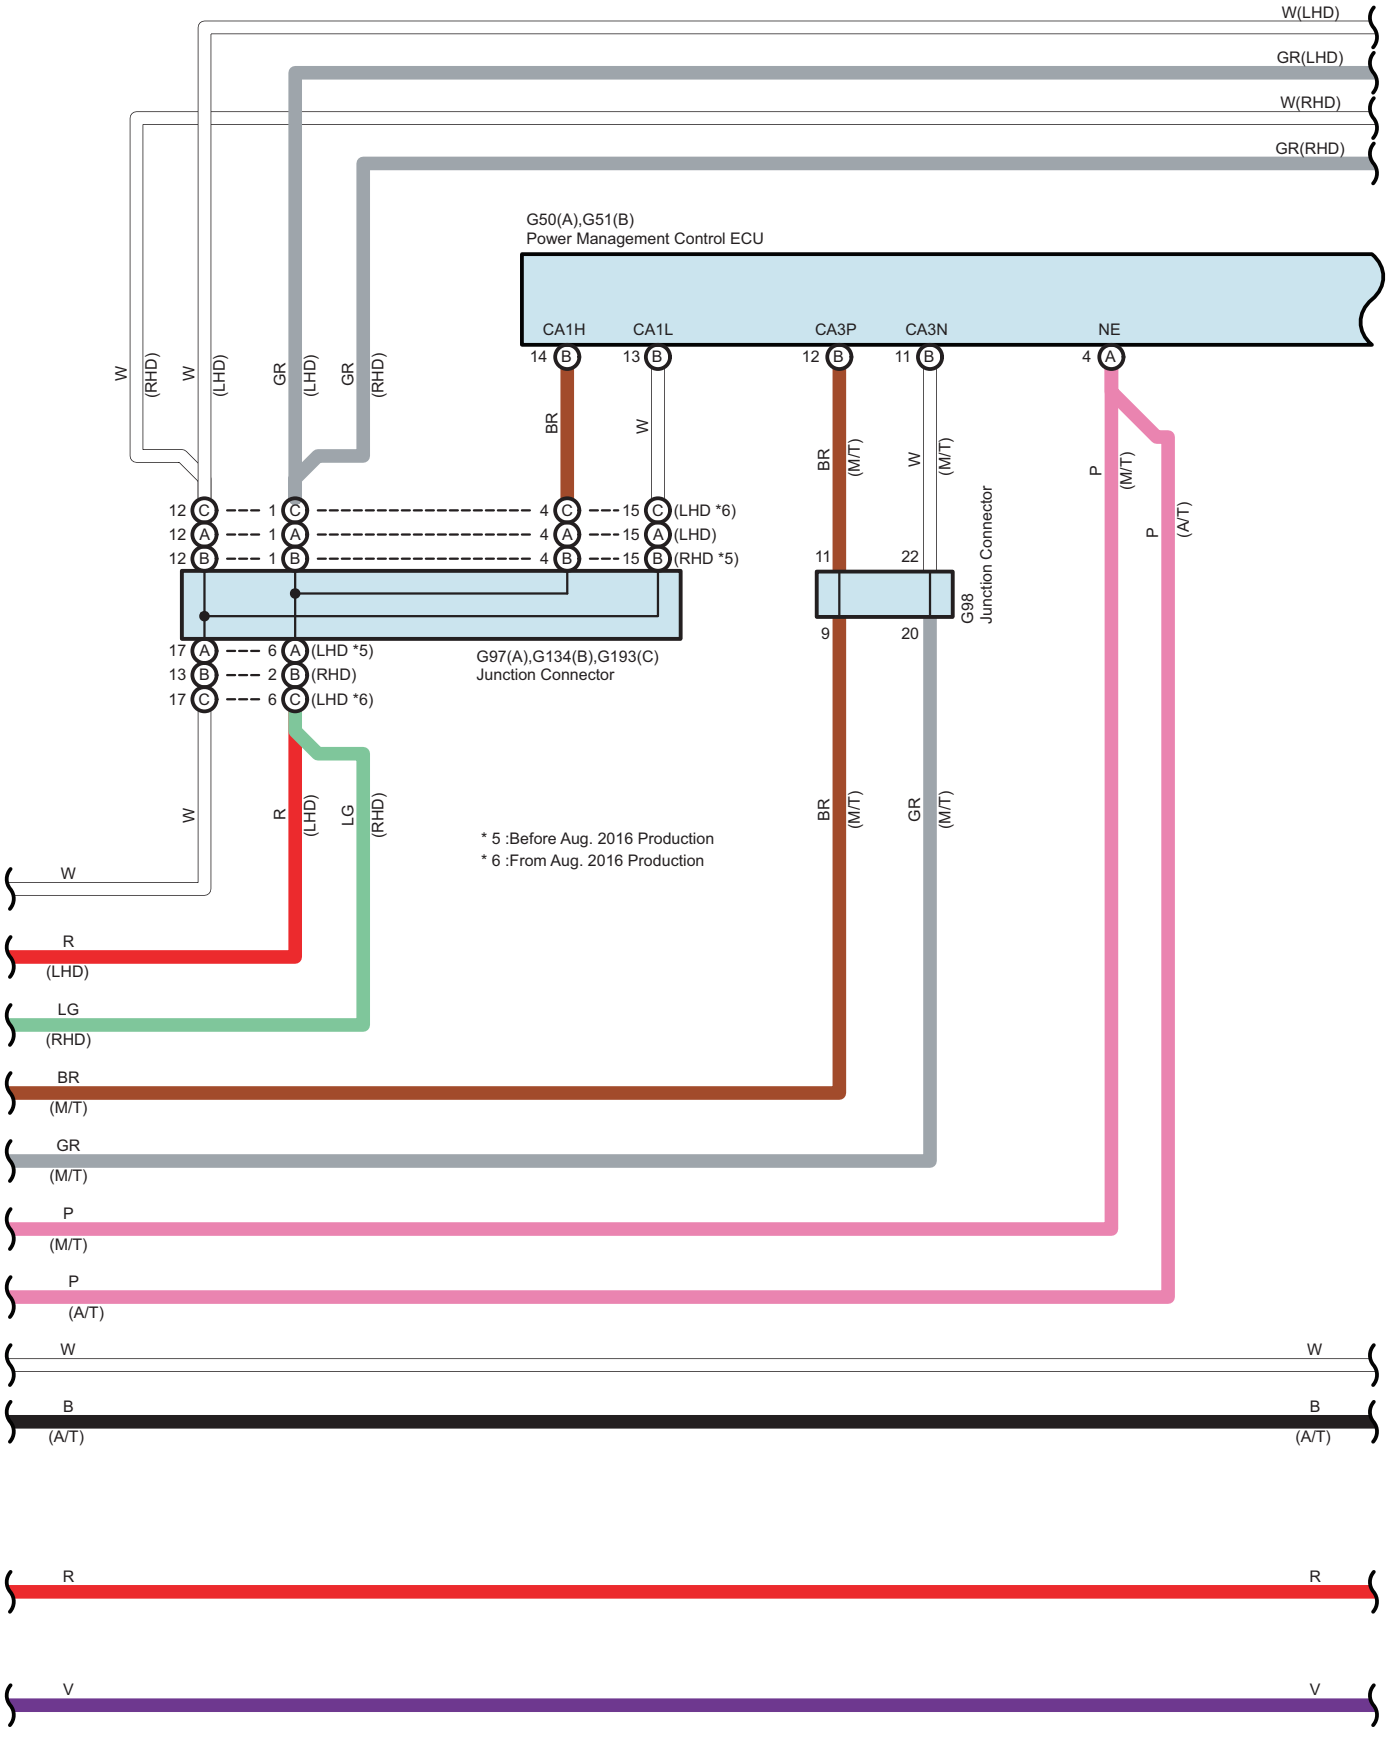

C34(A),C35(B),C36(C),C37(D),G55(E),G56(F)
ECM
E01
E1
ME01
E02
E04
E03
E05
EC
L4
ACT
AC1
ALT
23 C
14 D
12 C
12 C
29 C
10 D
14 D
15 D
16 D
16 D
11 D
11 D
18 D
12 D
3 E
16 E
8 E
27 E
27 F
33 F
25 F
29 A (A/T)
28 B (M/T)
W-B
BR
W-B
W-B
W-B
W-B
(M/T)
W-B
W-B
R
R
LG
L
6
C47
Junction
Connector
7
L
11 AC1
L
4 DA1
L
3 E
M
21 A
L4
27 B
ACT
17 B
AC1
G53(A)
Four Wheel Drive
Control ECU
G25(B)
A/C Amplifier Assembly
D3(E)
Generator
Assembly
1
G106
Junction
Connector
C1
C1
G5

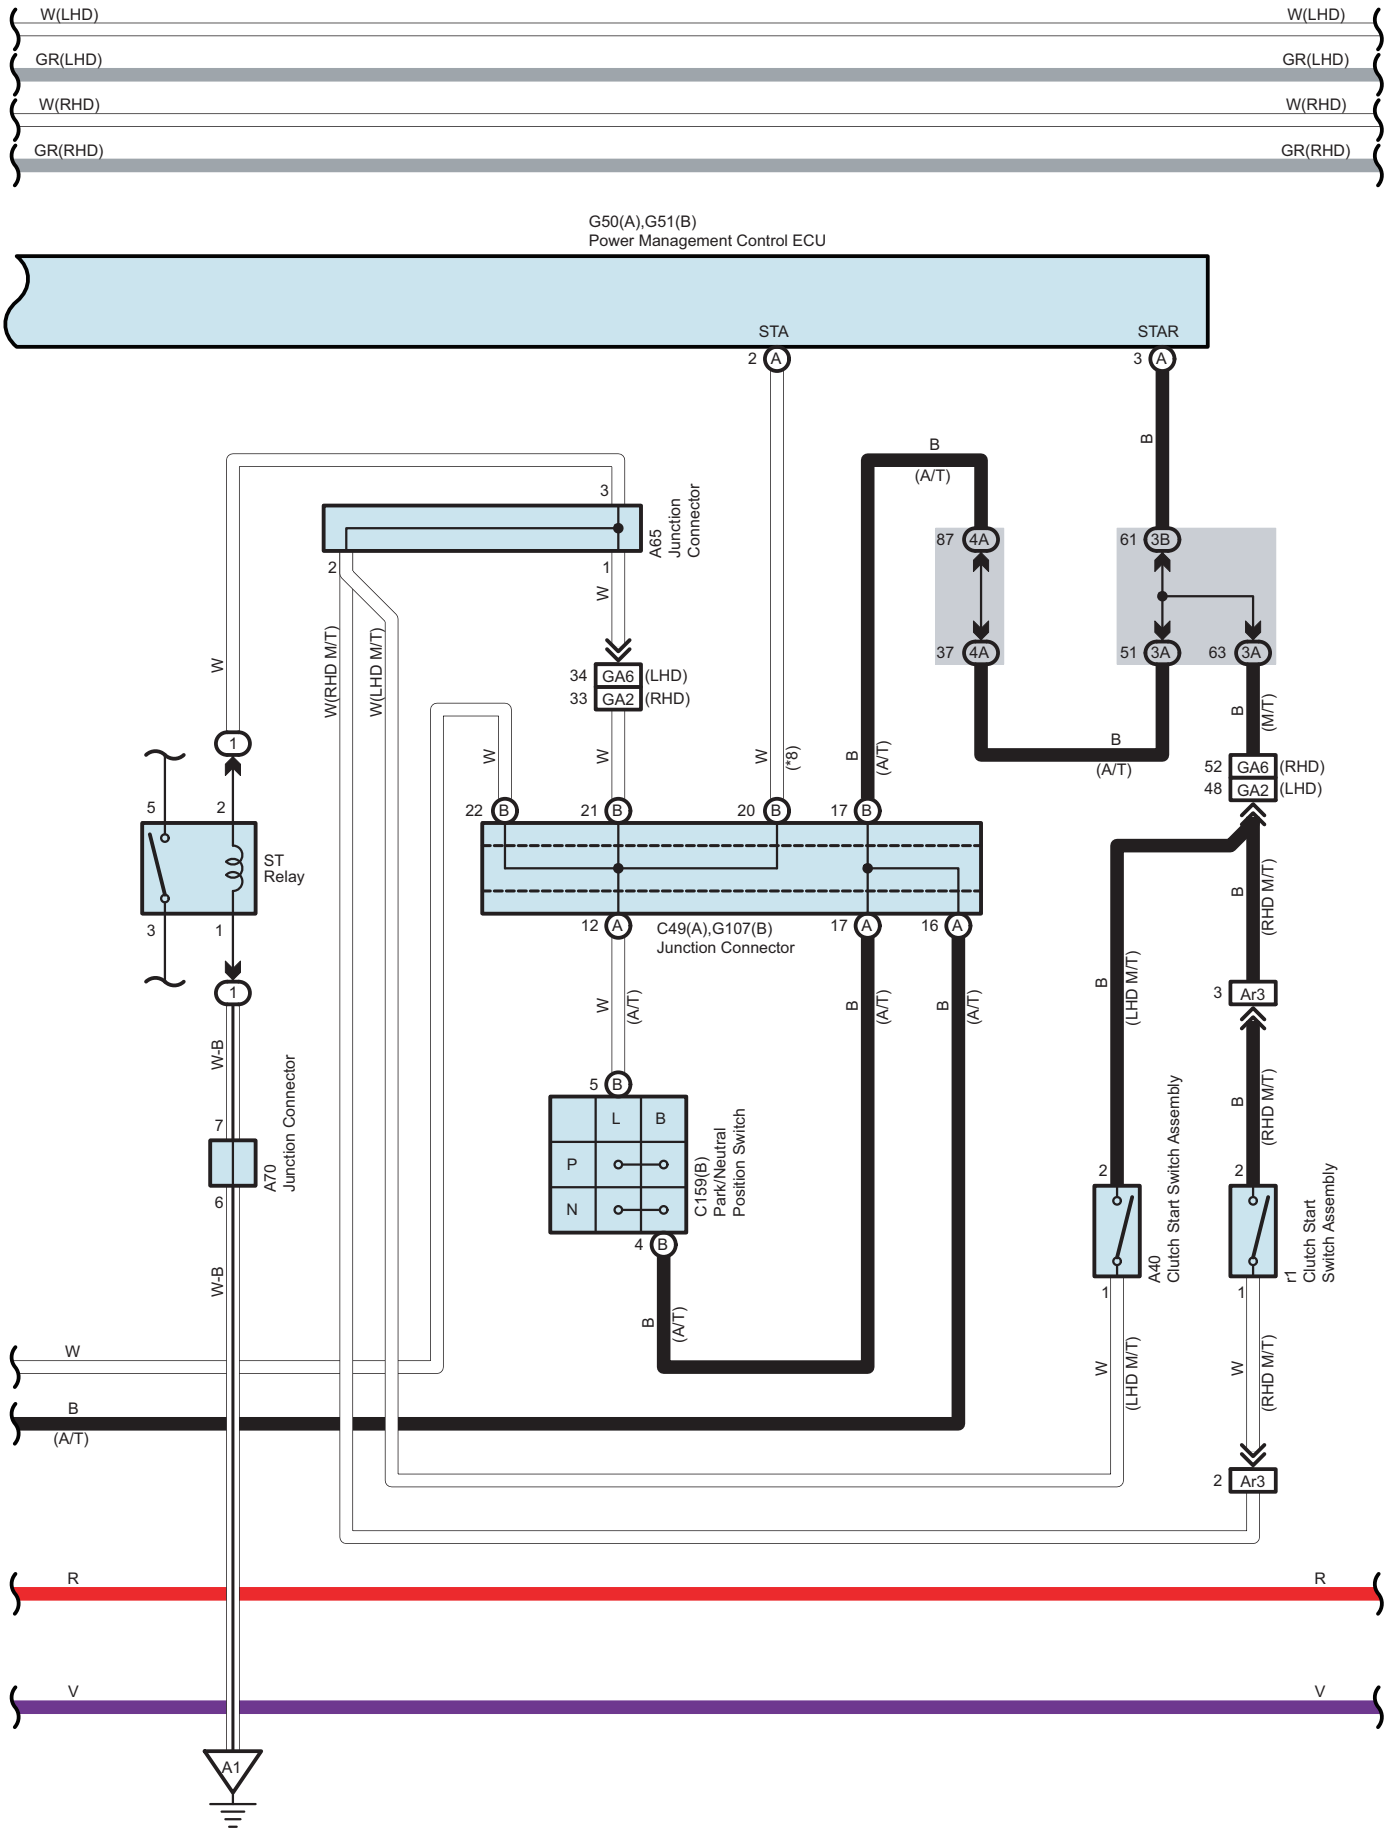

C34(A),C35(B),C36(C),C37(D),G55(E),G56(F)
ECM
SFTU
SFTD
S
D
N
15 F
9 F
22 F
22 A (A/T)
27 A (M/T)
21 A
(IG)
7.5A
IG1
11 2F
GR (A/T)
LG (A/T)
V (A/T)
B (A/T)
G (A/T)
5 4B
6 4B
85 4A
53 4C
54 4C
51 4C
39 4C
GR (M/T)
B (M/T)
21
A65
Junction
Connector
19
2
1
SFTU
SFTD
E
IG
S
G47
Transmission
Control Switch
6 A
5 B
C49(A),G107(B)
Junction Connector
7 A
2 A
5
3
7
W-B (A/T)
G (A/T)
1
A43
Clutch Switch Assembly
2
49 GA1
B (M/T)
34 4C
68 4A
V
(A/T)
G
(A/T)
W-B (A/T)
3
G106
Junction Connector
G5

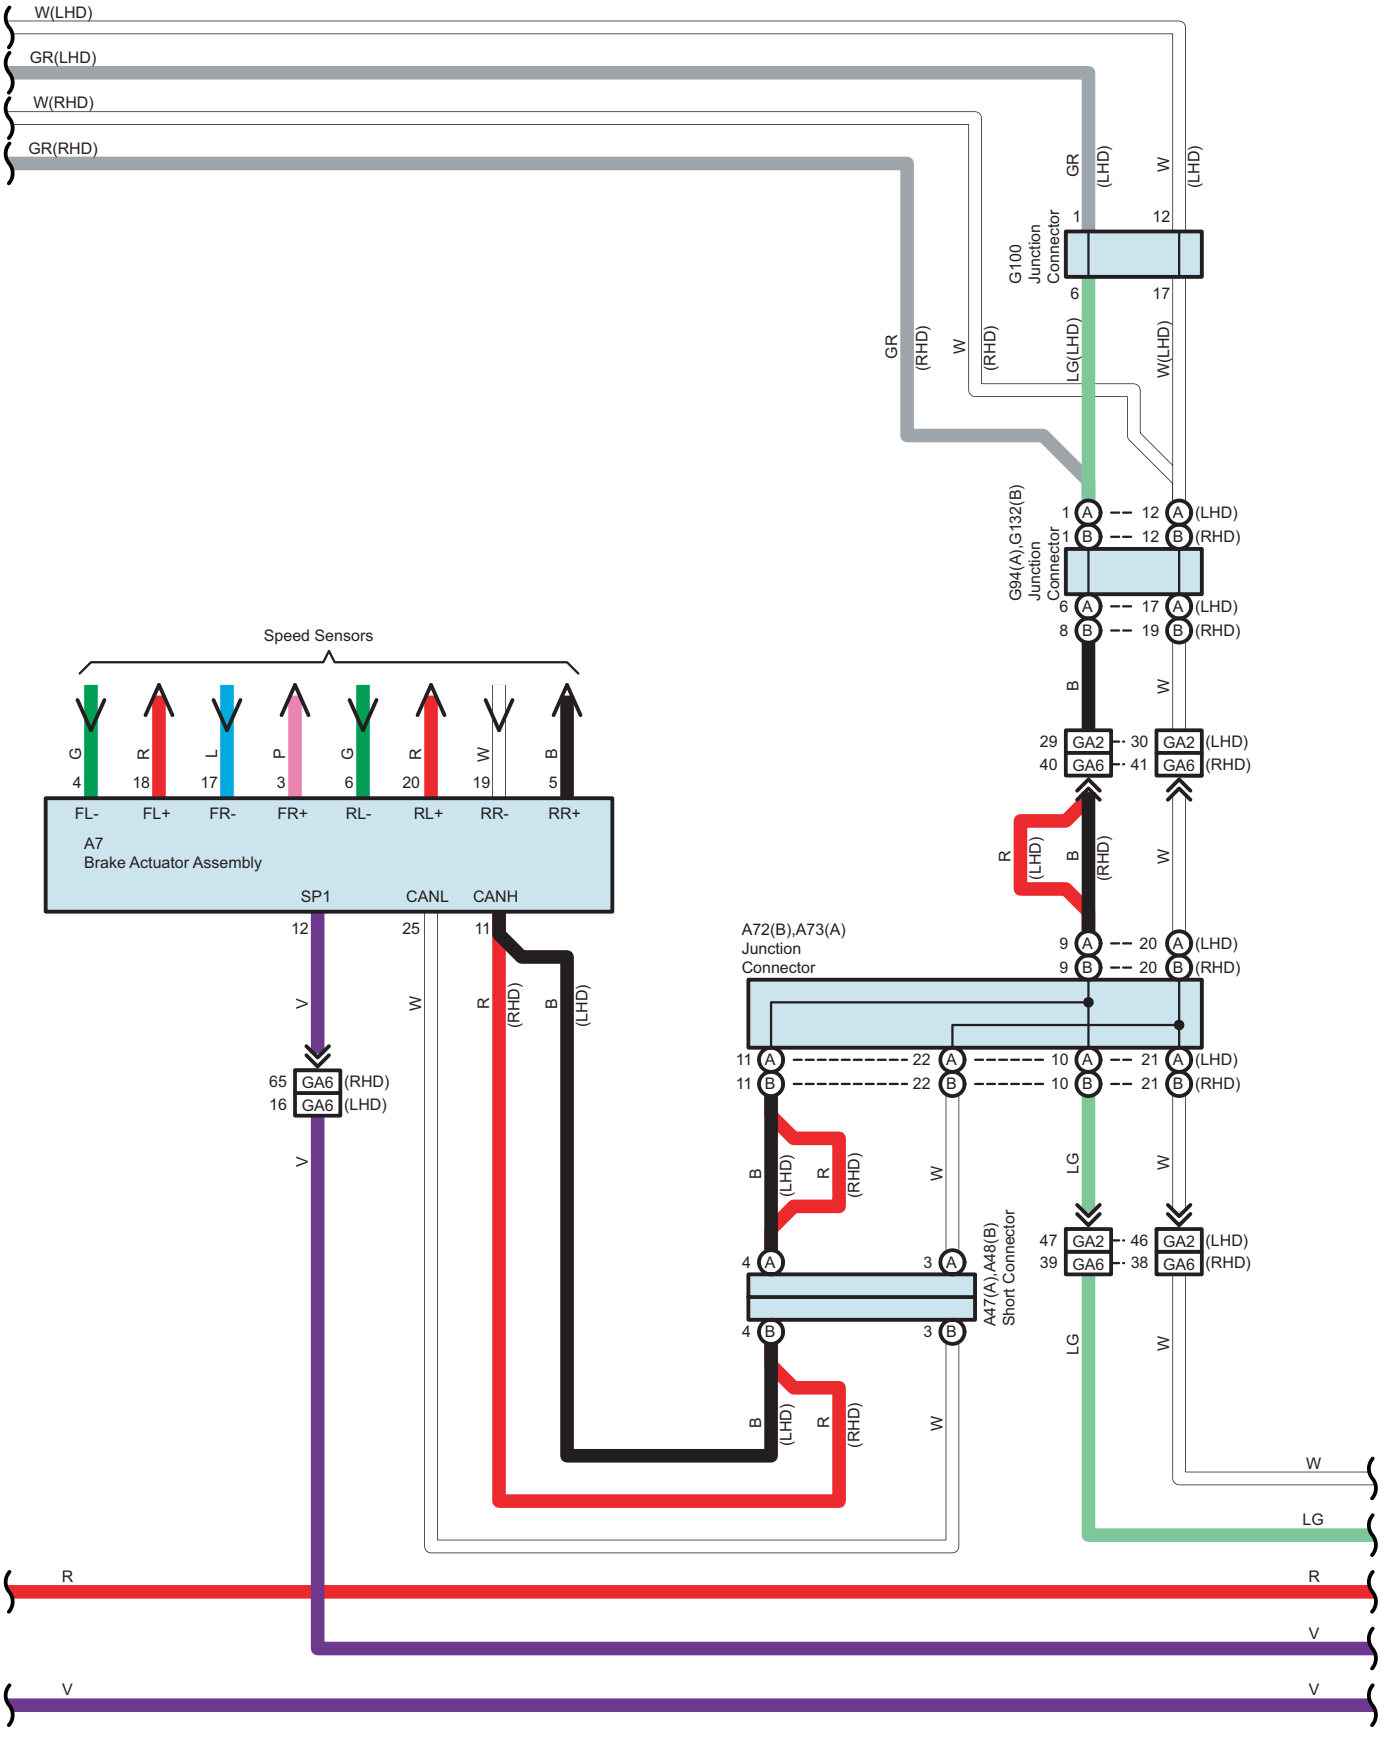

C34(A),C35(B),C36(C),C37(D),G55(E),G56(F)
ECM
R
P
28 A
27 A
R (A/T)
L (A/T)
2 B
DL
NL
RL
PL
RB
P
R
N
D
S
C159(B)
Park/Neutral
Position Switch
7 B
9 B
1 B
6 B
B(A/T)
G(A/T)
R(A/T)
L(A/T)
4 A
20 A
5 A
1 A
3 A
21 A
C49(A),G107(B)
Junction Connector
6 B
10 B
8 B
12 B
L (A/T)
G128(C),G164(E)
Junction Connector
3 C (RHD)
3 E (LHD *11)
4 C (RHD)
4 E (LHD *11)
R(A/T)
B (A/T)
G (A/T)
L (A/T)
W-B
(A/T)
2
3
4
5
8
D
N
R
P
E
3
1
G67
Shift Position
Indicator
(Console Box Assembly)
V
(A/T)
G
(A/T)
GR (A/T)
20 CG2
(ACC)
(IG)
7.5A
ACC
10A
ECU-IG
NO.1
17 2D
31 2A
P (A/T)
G (A/T)
G166(D),G167(E)
Junction Connector
7 D
7 E
9 D (LHD)
9 E (RHD)
8 D
8 E
10 D (LHD)
10 E (RHD)
G172(B)
Diode (Shift
Position No. 2)
G171(B)
Diode (Shift
Position No. 1)
1 B
2 B
B (A/T)
L (A/T)
G128(C),G129(D)
G164(E),G165(F)
Junction Connector
2 C
2 E
1 C (RHD)
1 E (LHD)
5 D
5 F
6 D (RHD)
6 F (LHD)
46 4C
71 4A
W-B
(LHD A/T)
W-B
(RHD A/T)
8
7
G104
Junction
Connector
G106
Junction
Connector
G3
G5

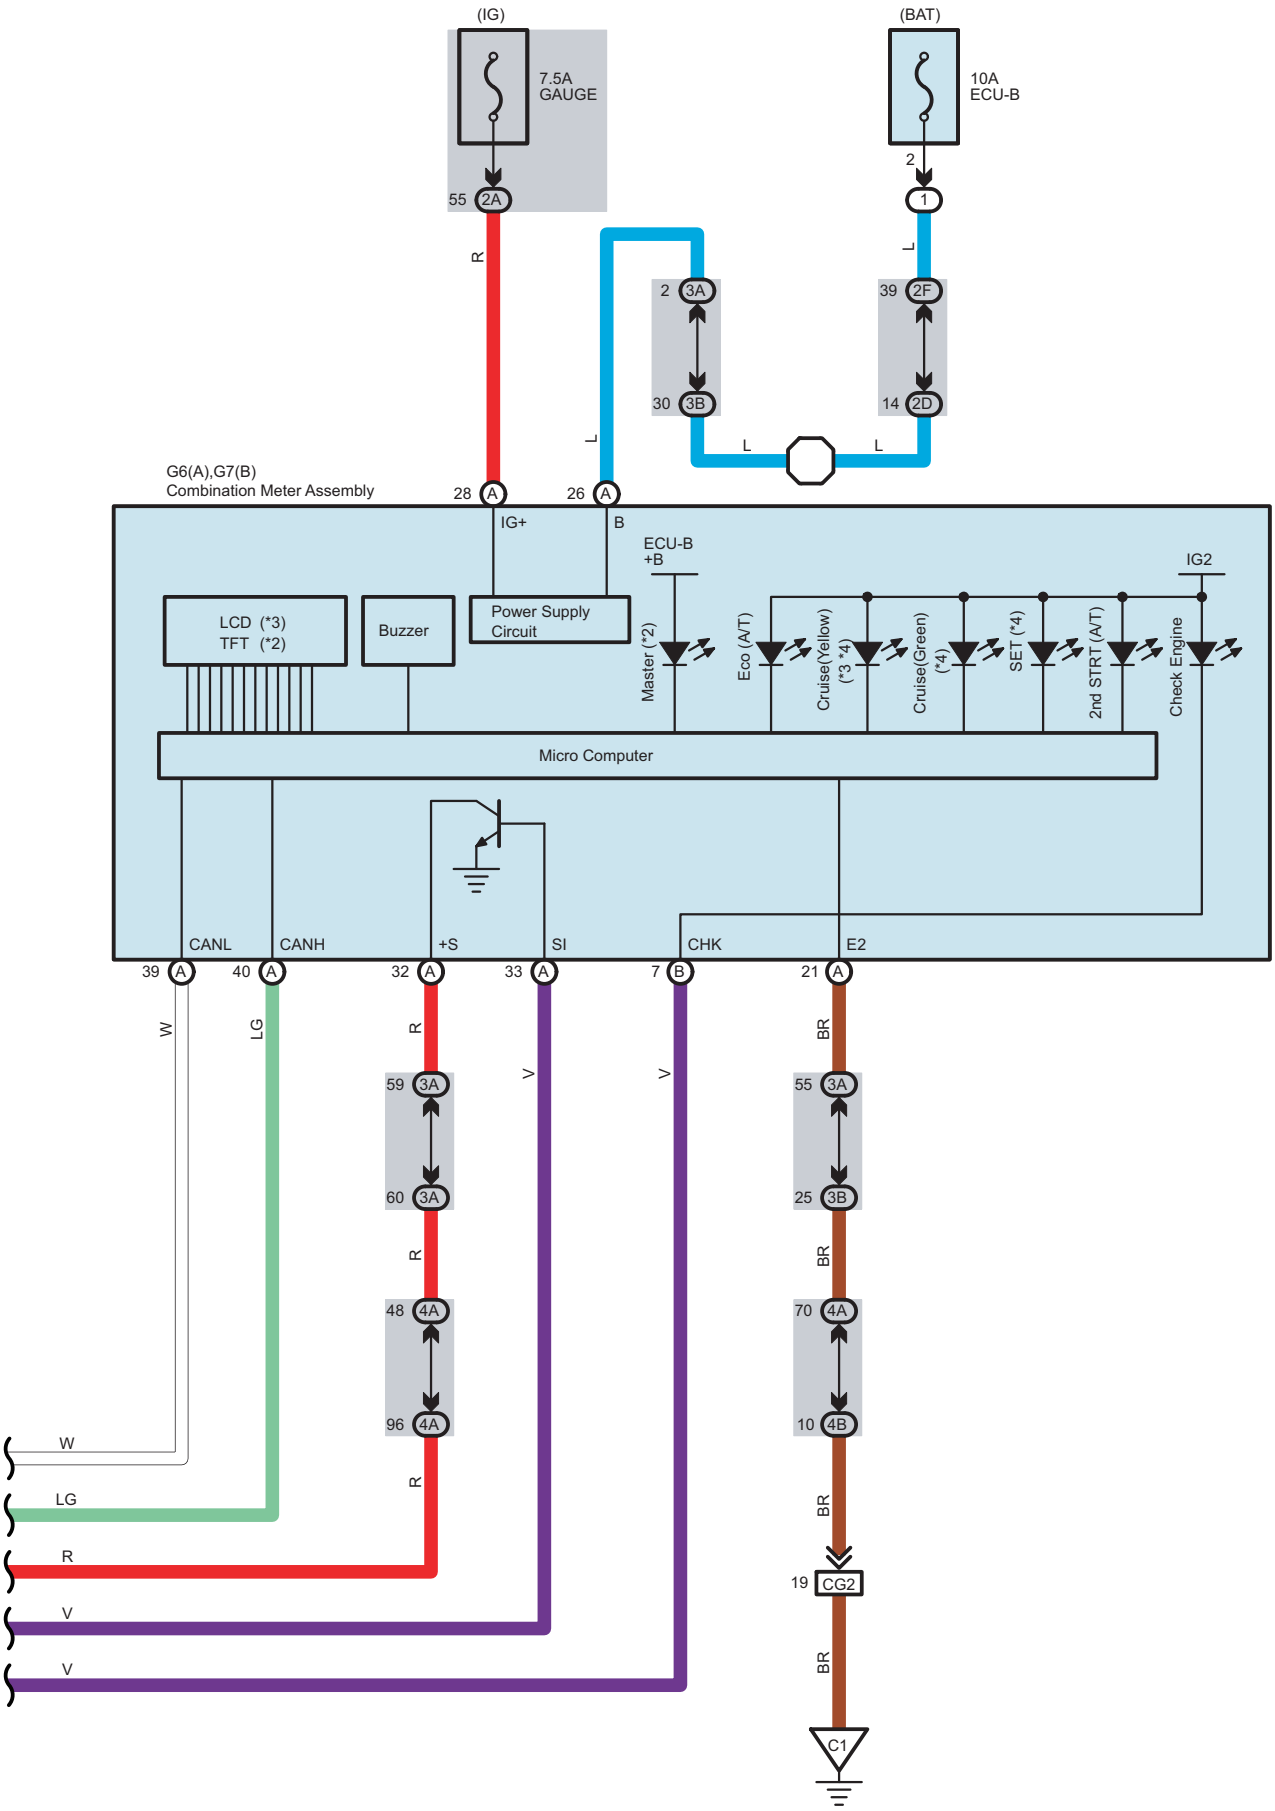

C34(A),C35(B),C36(C),C37(D),G55(E),G56(F)
ECM
TC
TACH
IMO
IMI
SNWI
CCS
6 E
28 F
17 F
29 F
8 F
20 F
10 F
14 F
19 E
1 F (A/T)
11 F (M/T)
V
P
SB
W
GR (A/T)
B
53 3A
12 3A
13
9
5
6
TC
TAC
EFII
EFIO
G48
DLC3
G37
ID Code Box
86 4A
14 4B
4 B
2ND
E
1 B
G159(B)
Pattern Select
Switch Assembly
W-B (A/T)
24 4B
68 4A
3
G106
Junction
Connector
G5
BR
1 A
2 A
CCS
ECC
3 C
4 C
R
B
ON-OFF
+ RES
- SET
CANCEL
Steering Pad Switch LH
z7(C)
Cruise Control Main Switch
G40(A),z7(C)
Spiral Cable Sub-Assembly
34 3C
25 3B
70 4A
10 4B
19 CG2
C1


C34(A),C35(B),C36(C),C37(D),G55(E),G56(F)
ECM
W
SPD
NSW
STA
NEO
CANN
CANP
CANH
CANL
21 F
13 E
12 F
18 E
23 A
28 F
10 F
13 F
29 B
33 F
34 F
31 F
32 F
25 F (A/T)
31 F (M/T)
V
R
B (A/T)
W
P (A/T)
P (M/T)
8 CG1
P (M/T)
GR (M/T)
BR (M/T)
LG (RHD)
R (LHD)
W
W
R (LHD)
LG (RHD)
BR (M/T)
GR (M/T)
P (M/T)
P (A/T)
W
B (A/T)
R
V

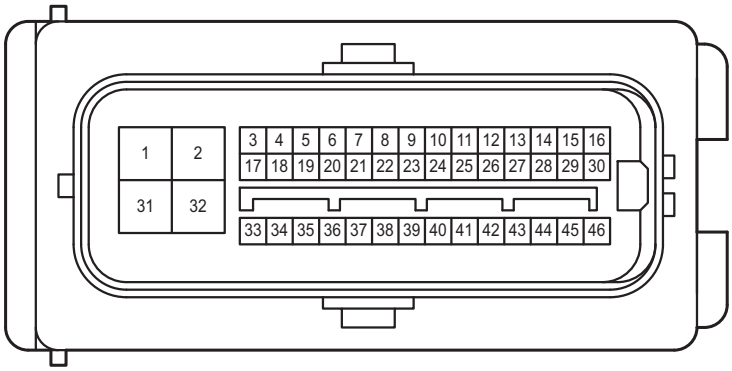

W(LHD)
GR(LHD)
W(RHD)
GR(RHD)
G50(A),G51(B)
Power Management Control ECU
CA1H
CA1L
CA3P
CA3N
NE
14 B
13 B
12 B
11 B
4 A
W (RHD)
W (LHD)
GR (LHD)
GR (RHD)
BR
W
BR (M/T)
W (M/T)
P (M/T)
P (A/T)
12 C --- 1 C ---------- 4 C --- 15 C (LHD *6)
12 A --- 1 A ---------- 4 A --- 15 A (LHD)
12 B --- 1 B ---------- 4 B --- 15 B (RHD *5)
11
22
9
20
G98 Junction Connector
17 A --- 6 A (LHD *5)
13 B --- 2 B (RHD)
17 C --- 6 C (LHD *6)
G97(A),G134(B),G193(C)
Junction Connector
W
R (LHD)
LG (RHD)
BR (M/T)
GR (M/T)
* 5 :Before Aug. 2016 Production
* 6 :From Aug. 2016 Production
W
R (LHD)
LG (RHD)
BR (M/T)
GR (M/T)
P (M/T)
P (A/T)
W
B (A/T)
W
B (A/T)
R
R
V
V


W(LHD)
GR(LHD)
W(RHD)
GR(RHD)
G50(A),G51(B)
Power Management Control ECU
STA
STAR
A65
Junction
Connector
GA6 (LHD)
GA2 (RHD)
ST
Relay
A70
Junction Connector
C49(A),G107(B)
Junction Connector
C159(B)
Park/Neutral
Position Switch
A40
Clutch Start Switch Assembly
r1
Clutch Start
Switch Assembly
W(RHD M/T)
W(LHD M/T)
(RHD M/T)
(LHD M/T)
(M/T)
(A/T)
(*8)
W-B
A1


W(LHD)
GR(LHD)
W(RHD)
GR(RHD)
G100 Junction Connector
G94(A),G132(B) Junction Connector
Speed Sensors
A7 Brake Actuator Assembly
FL- FL+ FR- FR+ RL- RL+ RR- RR+
SP1 CANL CANH
A72(B),A73(A) Junction Connector
A47(A),A48(B) Short Connector
GA6 (RHD)
GA6 (LHD)
GA2 (LHD)
GA2 (RHD)
(LHD)
(RHD)

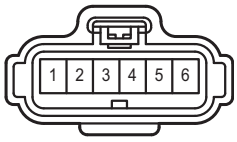

(IG)
7.5A
GAUGE
55 2A
R
(BAT)
10A
ECU-B
2
1
L
2 3A
30 3B
39 2F
14 2D
L
L
L
G6(A),G7(B)
Combination Meter Assembly
28 A
26 A
IG+
B
ECU-B
+B
IG2
LCD (*3)
TFT (*2)
Buzzer
Power Supply
Circuit
Master (*2)
Eco (A/T)
Cruise(Yellow)
(*3 *4)
Cruise(Green)
(*4)
SET (*4)
2nd STRT (A/T)
Check Engine
Micro Computer
CANL
CANH
+S
SI
CHK
E2
39 A
40 A
32 A
33 A
7 B
21 A
W
LG
R
V
V
BR
59 3A
60 3A
48 4A
96 4A
55 3A
25 3B
70 4A
10 4B
19 CG2
C1
W
LG
R
V
V

A7
Black



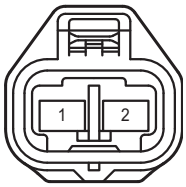

90980-12297

A16
Black



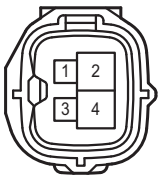

90980-11858

A17
Black



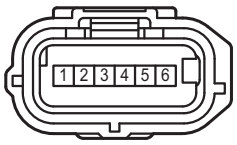

90980-12068

A18
Black




90980-12294

A19
Black




90980-12303

A40
Black




90980-10825

A43
White




90980-10906

A47
Gray




90980-10945

A48
Gray



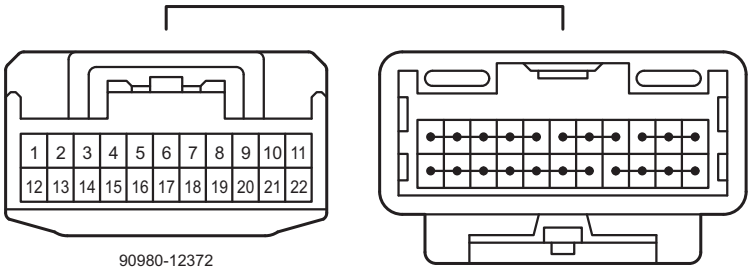

90980-10946

A59
Black



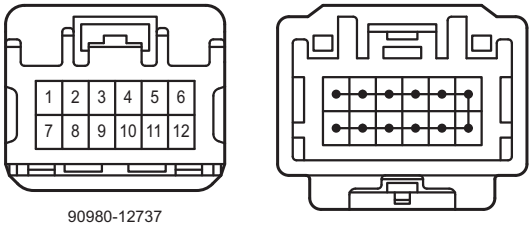

90980-10962

A65
White



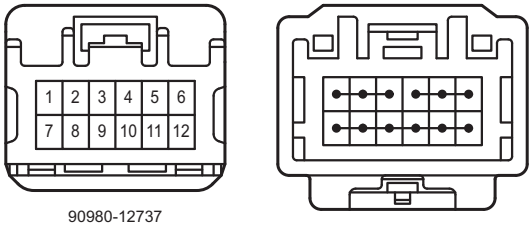

90980-12372

A70
White



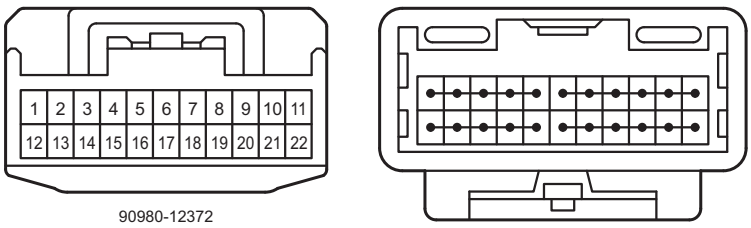

90980-12737

A71
White



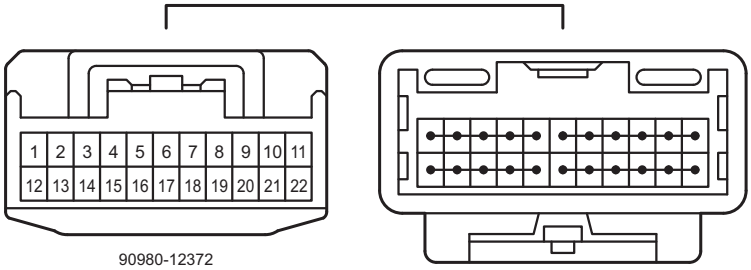

90980-12737

A72
White



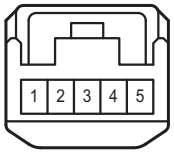

90980-12372

A73
White





90980-12372

A85
White





90980-12366

C1
Gray





90980-11875

C2
Gray





90980-11875

C3
Gray





90980-11875

C4
Gray





90980-11875

C5
Gray



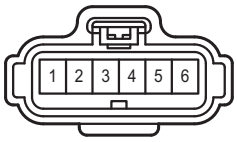

90980-11875

C6
Gray



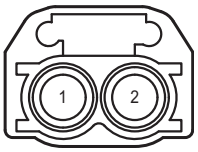

90980-11875

C13
Black




90980-11858

C14
Black




90980-12028

C16
Black




90980-11162

C17
Black




90980-11162

C18
Black




90980-11162

C19
Black




90980-11162

C20
Black



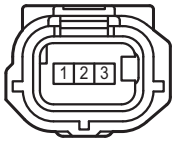

90980-12353

C21
Black




90980-12353

C22
Black




90980-12353

C23
Black




90980-12353

C24
Black (1GR-FE 2TR-FE 1KD-FTV ,1GD-FTV Before Jun. 2018 Production ,1GD-FTV w/o Urea SCR From Jun. 2018 Production) / White (1GD-FTV w/ Urea SCR From Jun. 2018 Production)




90980-10735

C25
Dark Gray




90980-10869

C26
Dark Gray




90980-10869

C27
Dark Gray




90980-10869

C28
Dark Gray




90980-11028

C29
Gray



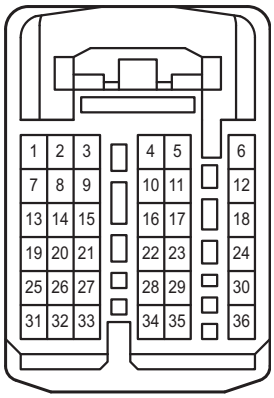

90980-11451

C33
Black



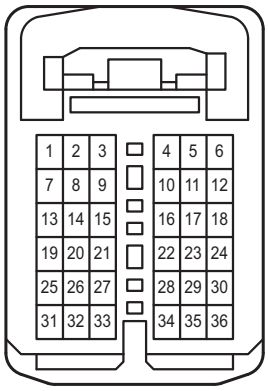

90980-12292

C34
White



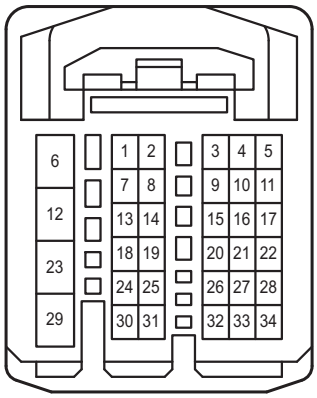

82824-26130

C35
White



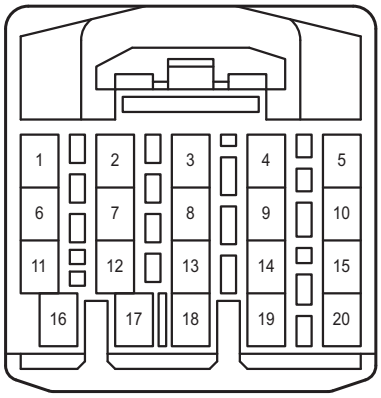

82824-26140

C36
White




82824-26150

C37
White




82824-26160

C44
Black



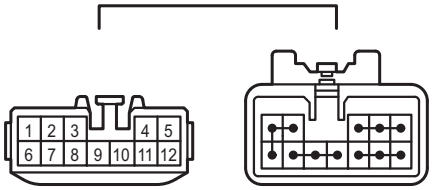

90980-12292

C45
Black



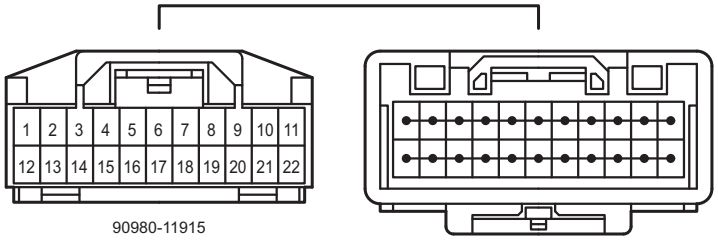

90980-12292

C47
Black



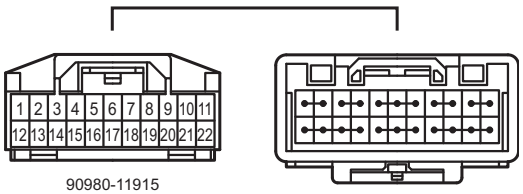

90980-10803

C48
White




90980-11915

C49
Blue




90980-11915

C138
Black



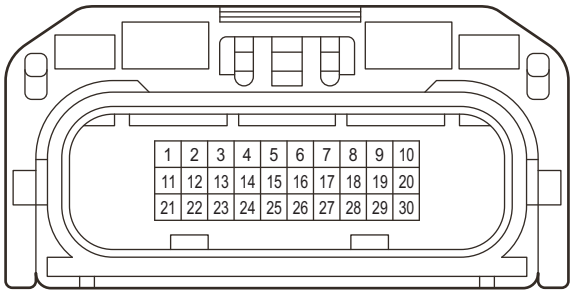

90980-12B06

C145
Dark Gray




90980-10869

C146
Gray




90980-12712

C147
Black



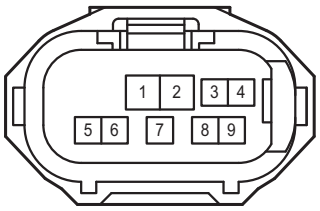

90980-12B06

C148
Black



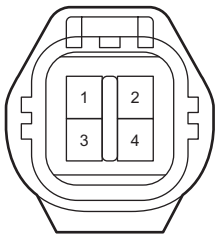

90980-12B06

C159
Gray



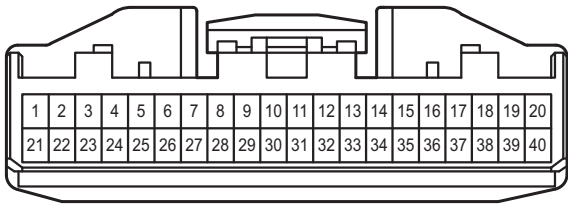

90980-12A23

D3
Black



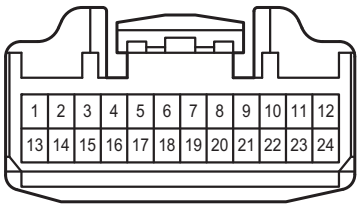

90980-11964

G6
Black



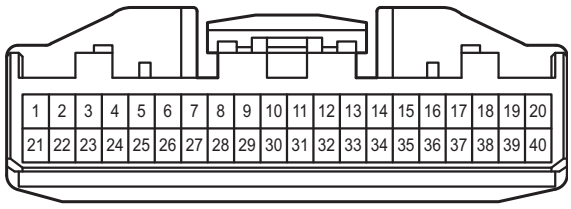

90980-12557

G7
Black



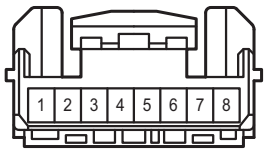

90980-12554

G25
White




90980-12557

G37
White



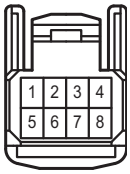

90980-12558

G40
Black



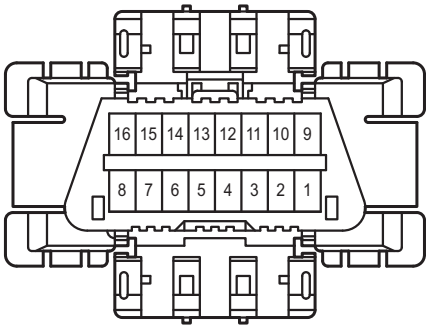

90980-12552

G47
Black



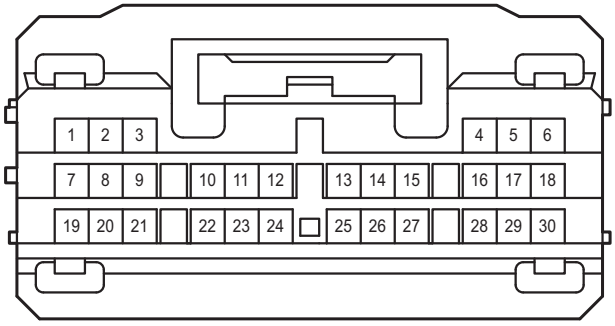

90980-12551

G48
White



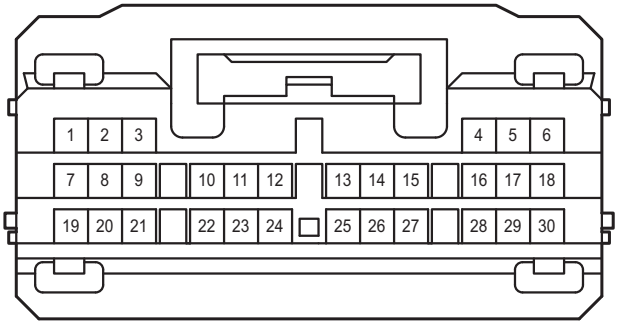

90980-11978

G50
White



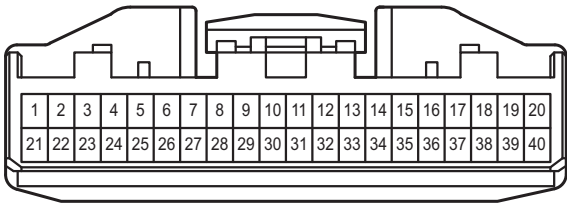

90980-12843

G51
Black



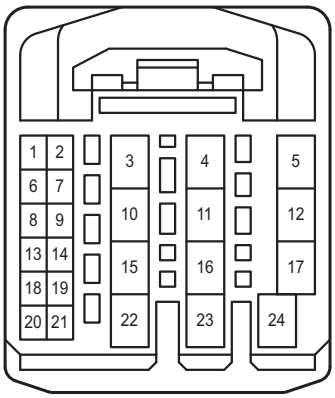

90980-12844

G53
Black



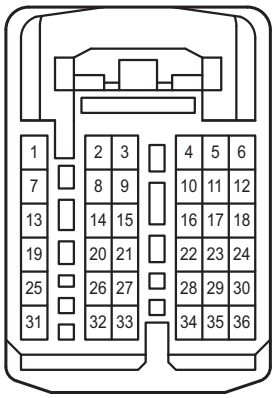

90980-12557

G55
White



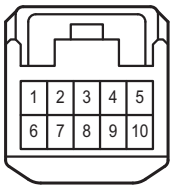

82824-26110

G56
White



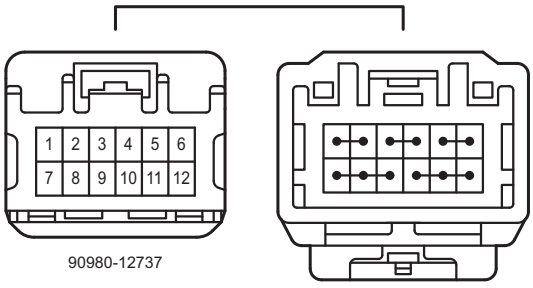

82824-26120

G67
White



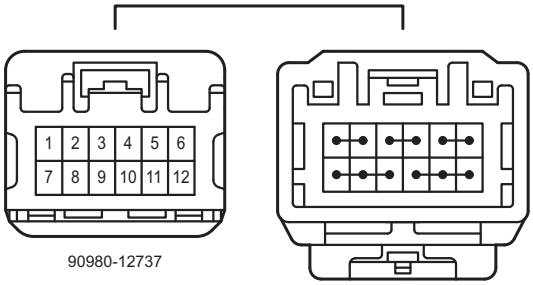

90980-12368

G85
Black



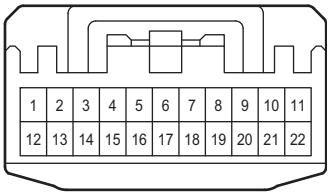

90980-12737

G86
Black



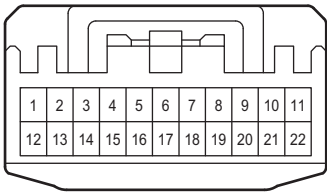

90980-12737

G94
White



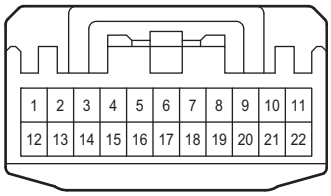

82824-30420

G97
White



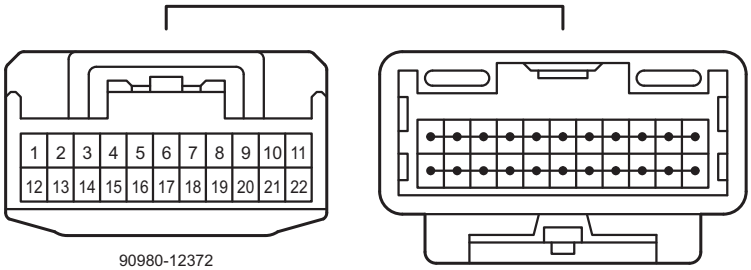

82824-30420

G98
White



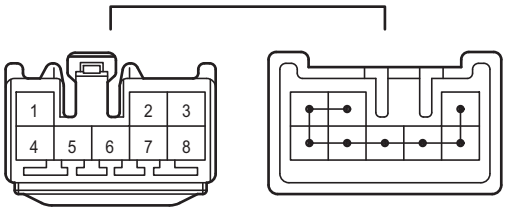

82824-30420

G100
Gray



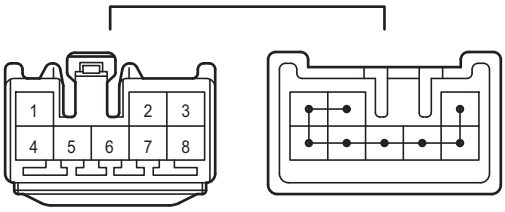

90980-12372

G104
White (Before Aug. 2017 Production) / Gray (From Aug. 2017 Production)



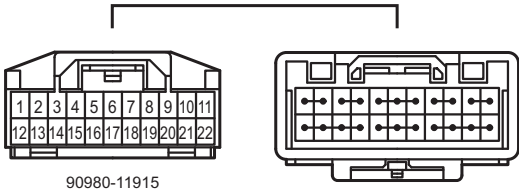

90980-11686

G106
White (Before Aug. 2017 Production) / Gray (From Aug. 2017 Production)



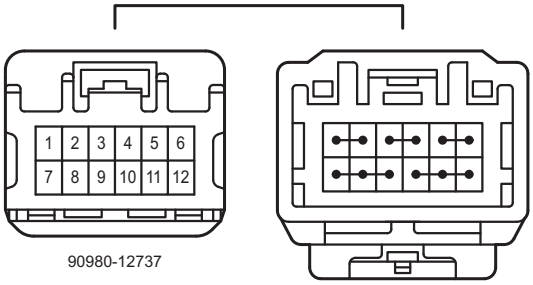

90980-11686

G107
Blue



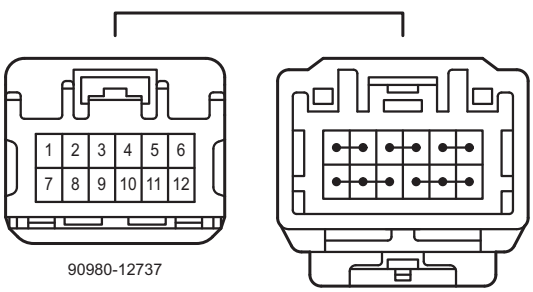

90980-11915

G128
Black



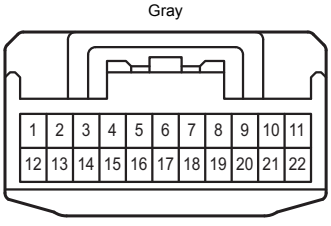

90980-12737

G129
Black



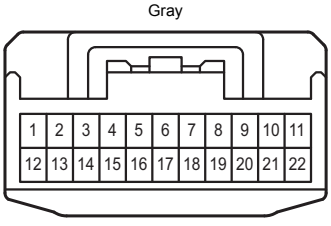

90980-12737

G132
Gray



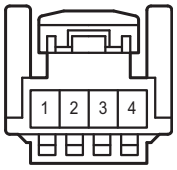

90980-12372

G134
Gray



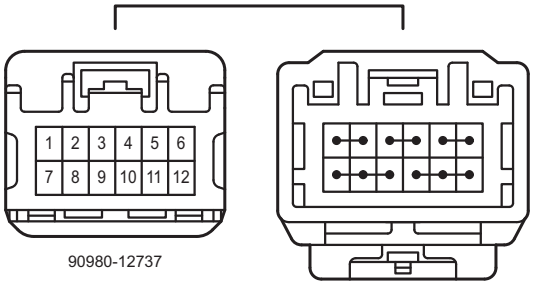

90980-12372

G159
Gray



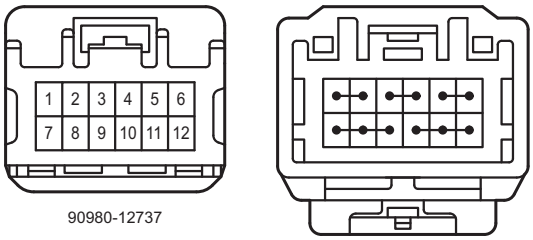

90980-12876

G164
Black



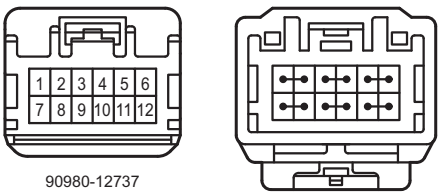

90980-12737

G165
Black



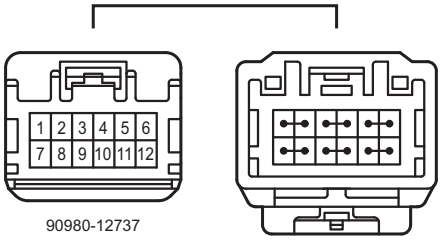

90980-12737

G166
Blue




90980-12737

G167
Blue




90980-12737

G171
Gray



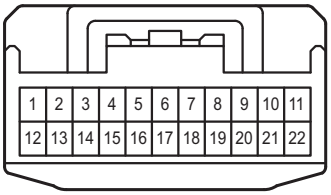

90980-11608

G172
Gray




90980-11608

G193
White




90980-12372

S5
White



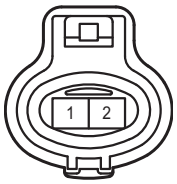

90980-11077

S8
Gray (Before Aug. 2017 Production) / Black (From Aug. 2017 Production)





90980-10844

S9
Black





90980-10928

h1
Black




90980-11875

h2
Black





90980-11875

r1
Black



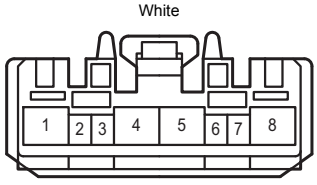

90980-10825

z7
White



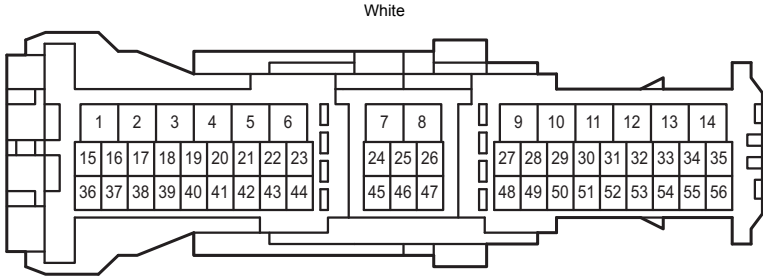

90980-12360

1B
White



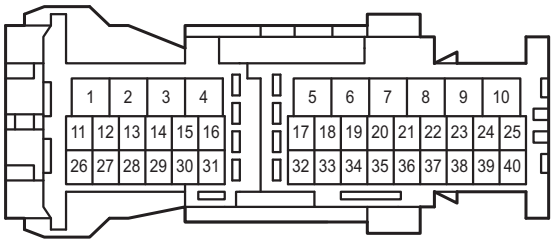

90980-12486

2A
White



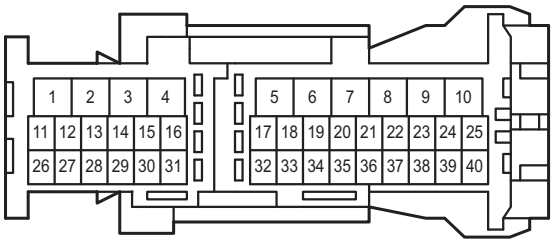

90980-12822

2D
White



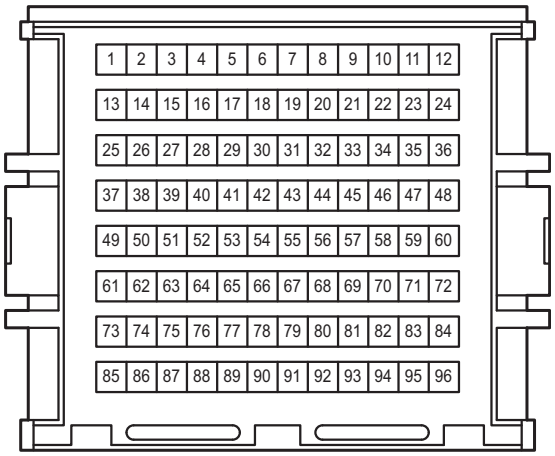

90980-12818

2F
White



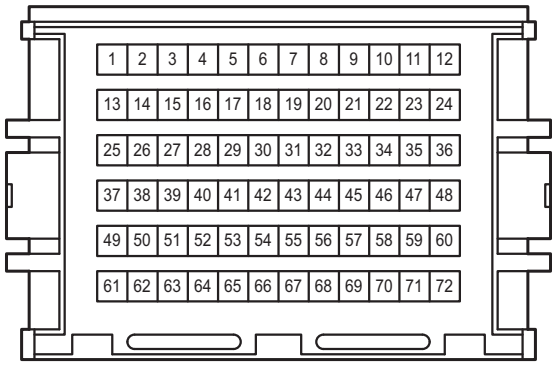

90980-12794

3A
White



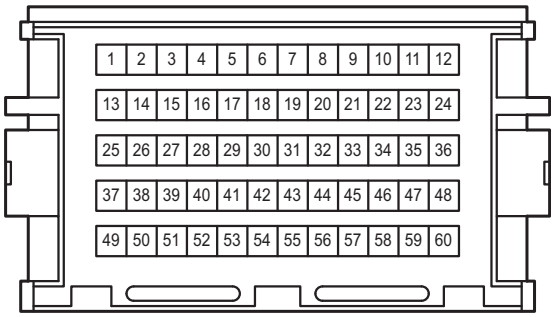

82890-12030

3B
White



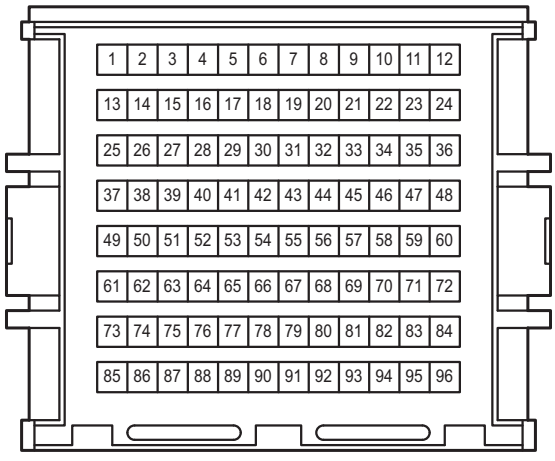

82890-42010

3C
White



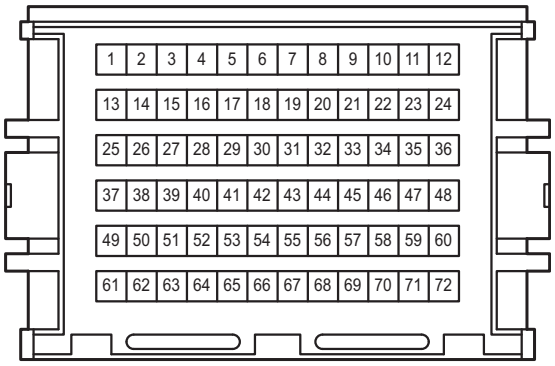

82890-12020

4A
White



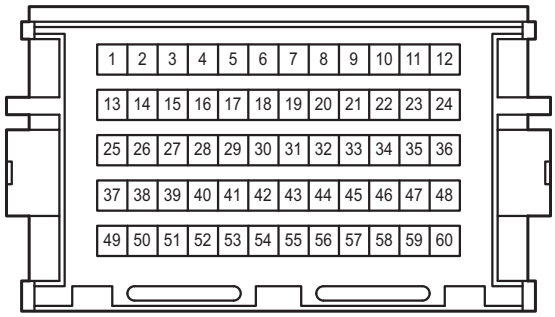

82890-12030

4B
White



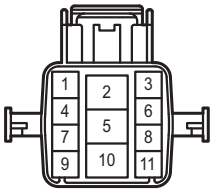

82890-42010

4C
White

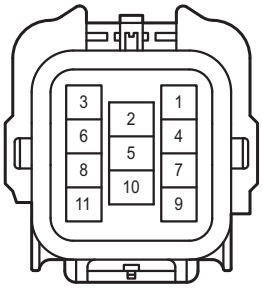



82890-12020

AC1
Black

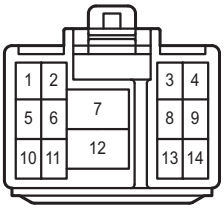



90980-11612

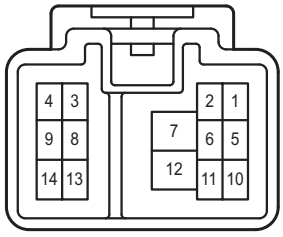



90980-11609

AR2
Gray




90980-10813

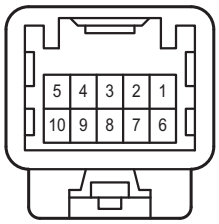



90980-10812

Ar3
Gray

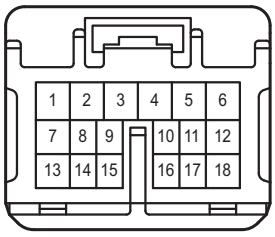



90980-12368

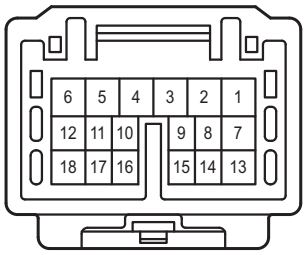



90980-12367

CG1
White

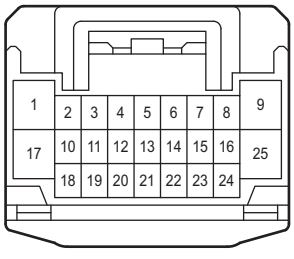



90980-12745

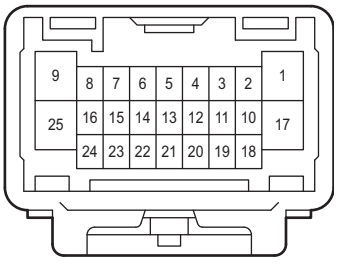



90980-12744

CG2
White




90980-12414




90980-12413

Ch1
Dark Gray

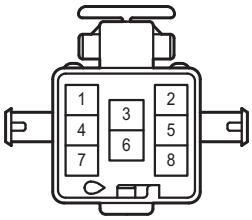



90980-10988

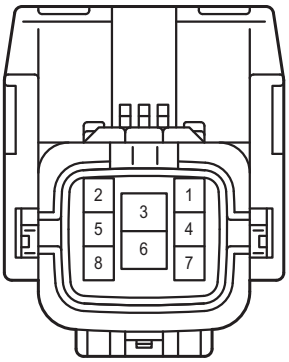



90980-10987

DA1
Black

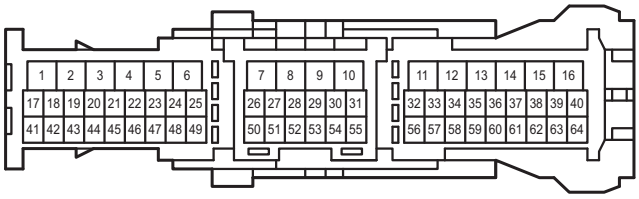



90980-11461

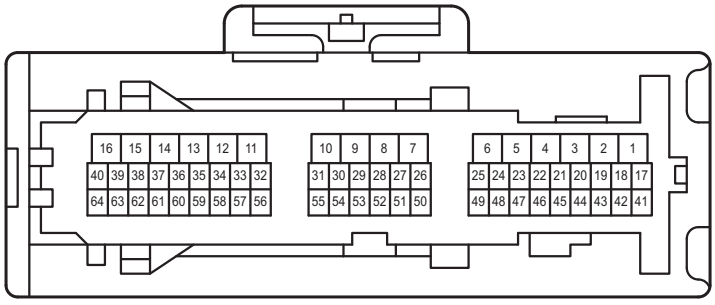



90980-11460

GA1
White

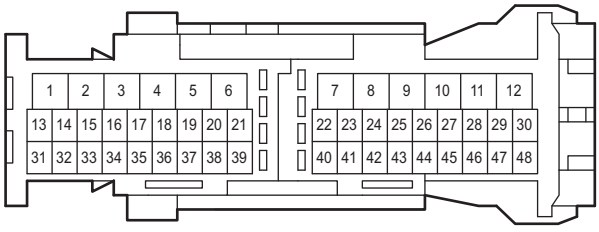



90980-12774

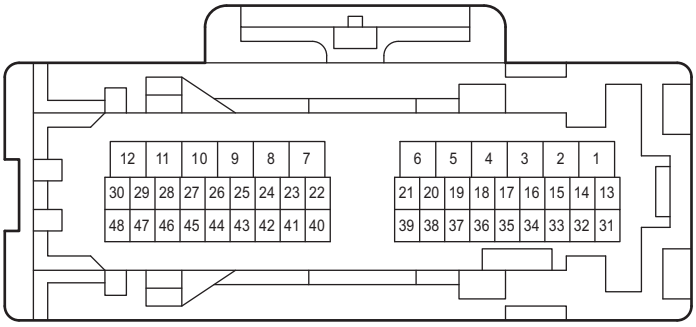



90980-12798

GA2
White

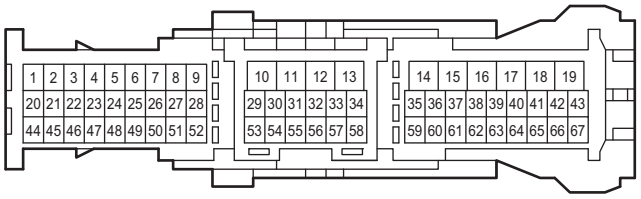



90980-12779

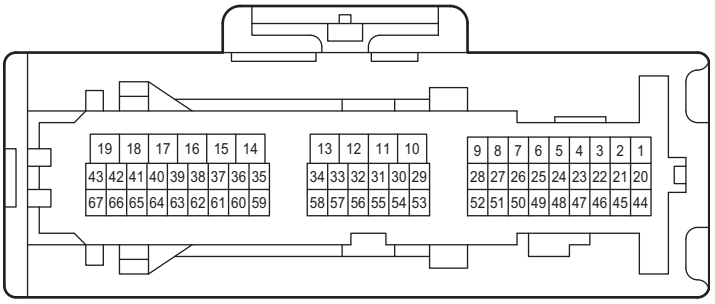



90980-12799

GA6
White

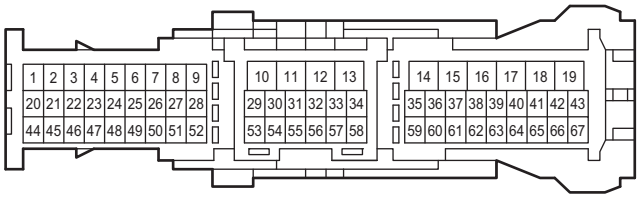



90980-12783

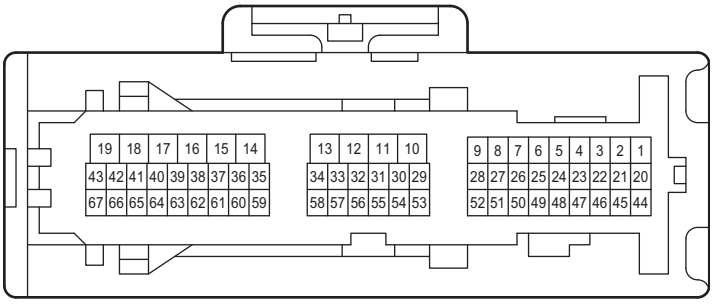



90980-12800

GR1
White




90980-12783




90980-12800

SR3
White




90980-10942




90980-10941