




EDU Relay (IREL) 1 W-B (*80 *82)
INJ NO.2 Relay (E) 1 W-B (*2)
GLOW Relay (-S) 1 W-B (*80) 5
NOISE FILTER (DEF) 1 W-B 10
AIR SUS Relay (-S) 1 W-B 3
IG2 Relay 3 1A W-B 2
BKUP LP NO.2 Relay (-S) 5 W-B (*81)
BKUP LP NO.2 Relay (L) 5 W-B (*81)
BKUP LP NO.2 Relay (L) 1 W-B (*82) 8
BKUP LP NO.2 Relay (-S) 1 W-B (*82)
INV Relay (-S) 1 W-B 12
EFI MAIN1 Relay
EFI MAIN2 Relay
EDU Relay
IG2 Relay 3 1J W-B (*80 *81)
EFI MAIN Relay 7 1B W-B (*80 *82)
GLOW Relay (-S) 1 W-B (*12,*15) 1
A/F Relay 7 1B W-B (*2,*11)
ST Relay (-S) 1 W-B 7
EFI Relay 3 1B W-B 4
STRG HTR Relay (HTR-) 5 W-B (*7) 11
9
6 W-B
A70 Junction Connector
A1
W-B (-S) A3 No. 1 Pressure Switch
W-B (E) A4 Condenser Fan Motor (With Shroud Blower Assembly)
W-B (E) A38 Headlight Cleaner Control Relay
W-B (L) A51 Noise Filter (Condenser Fan)
W-B (*13) 7 BA2 W-B (*13) (E) B6 Fog Light Assembly RH
W-B (*8 *87) (HI) A30 Headlight Assembly LH
W-B (*8 *88) (HI) A31 Headlight Assembly RH
W-B (*8) (E)
W-B (*8) (LO) A87 Headlight Assembly RH
W-B (*8) (E)
W-B (*1 *87) (HI) A33 Headlight Assembly LH
W-B (*1 *88) (HI) A34 Headlight Assembly RH
W-B (*1) (LO) A35 Headlight Assembly LH
W-B (*1 *88) (E) A91 Headlight Assembly RH
W-B (*1 *87) (-) A93 Diode (Clearance Light RH)
W-B (*1) (E) A46 Headlight Assembly RH
W-B (*1) (RH E) A61 Headlight Assembly RH
W-B (*11,*12,*80) W-B (*11,*12,80) (GND2) A7 Brake Actuator Assembly
W-B


* 1 :Except LED Type
* 2 :2TR-FE
* 7 :w/ Heated Steering Wheel System
* 8 :LED Type
*11 :1GR-FE
*12 :1KD-FTV
*13 :w/ Front Fog Light
*15 :5L-E
*79 :w/ Seat Heater (Rear)
*80 :1GD-FTV
*81 :1GD-FTV w/ Urea SCR
*82 :Except *81
*87 :RHD 1GD-FTV w/ Urea SCR
*88 :Except *87

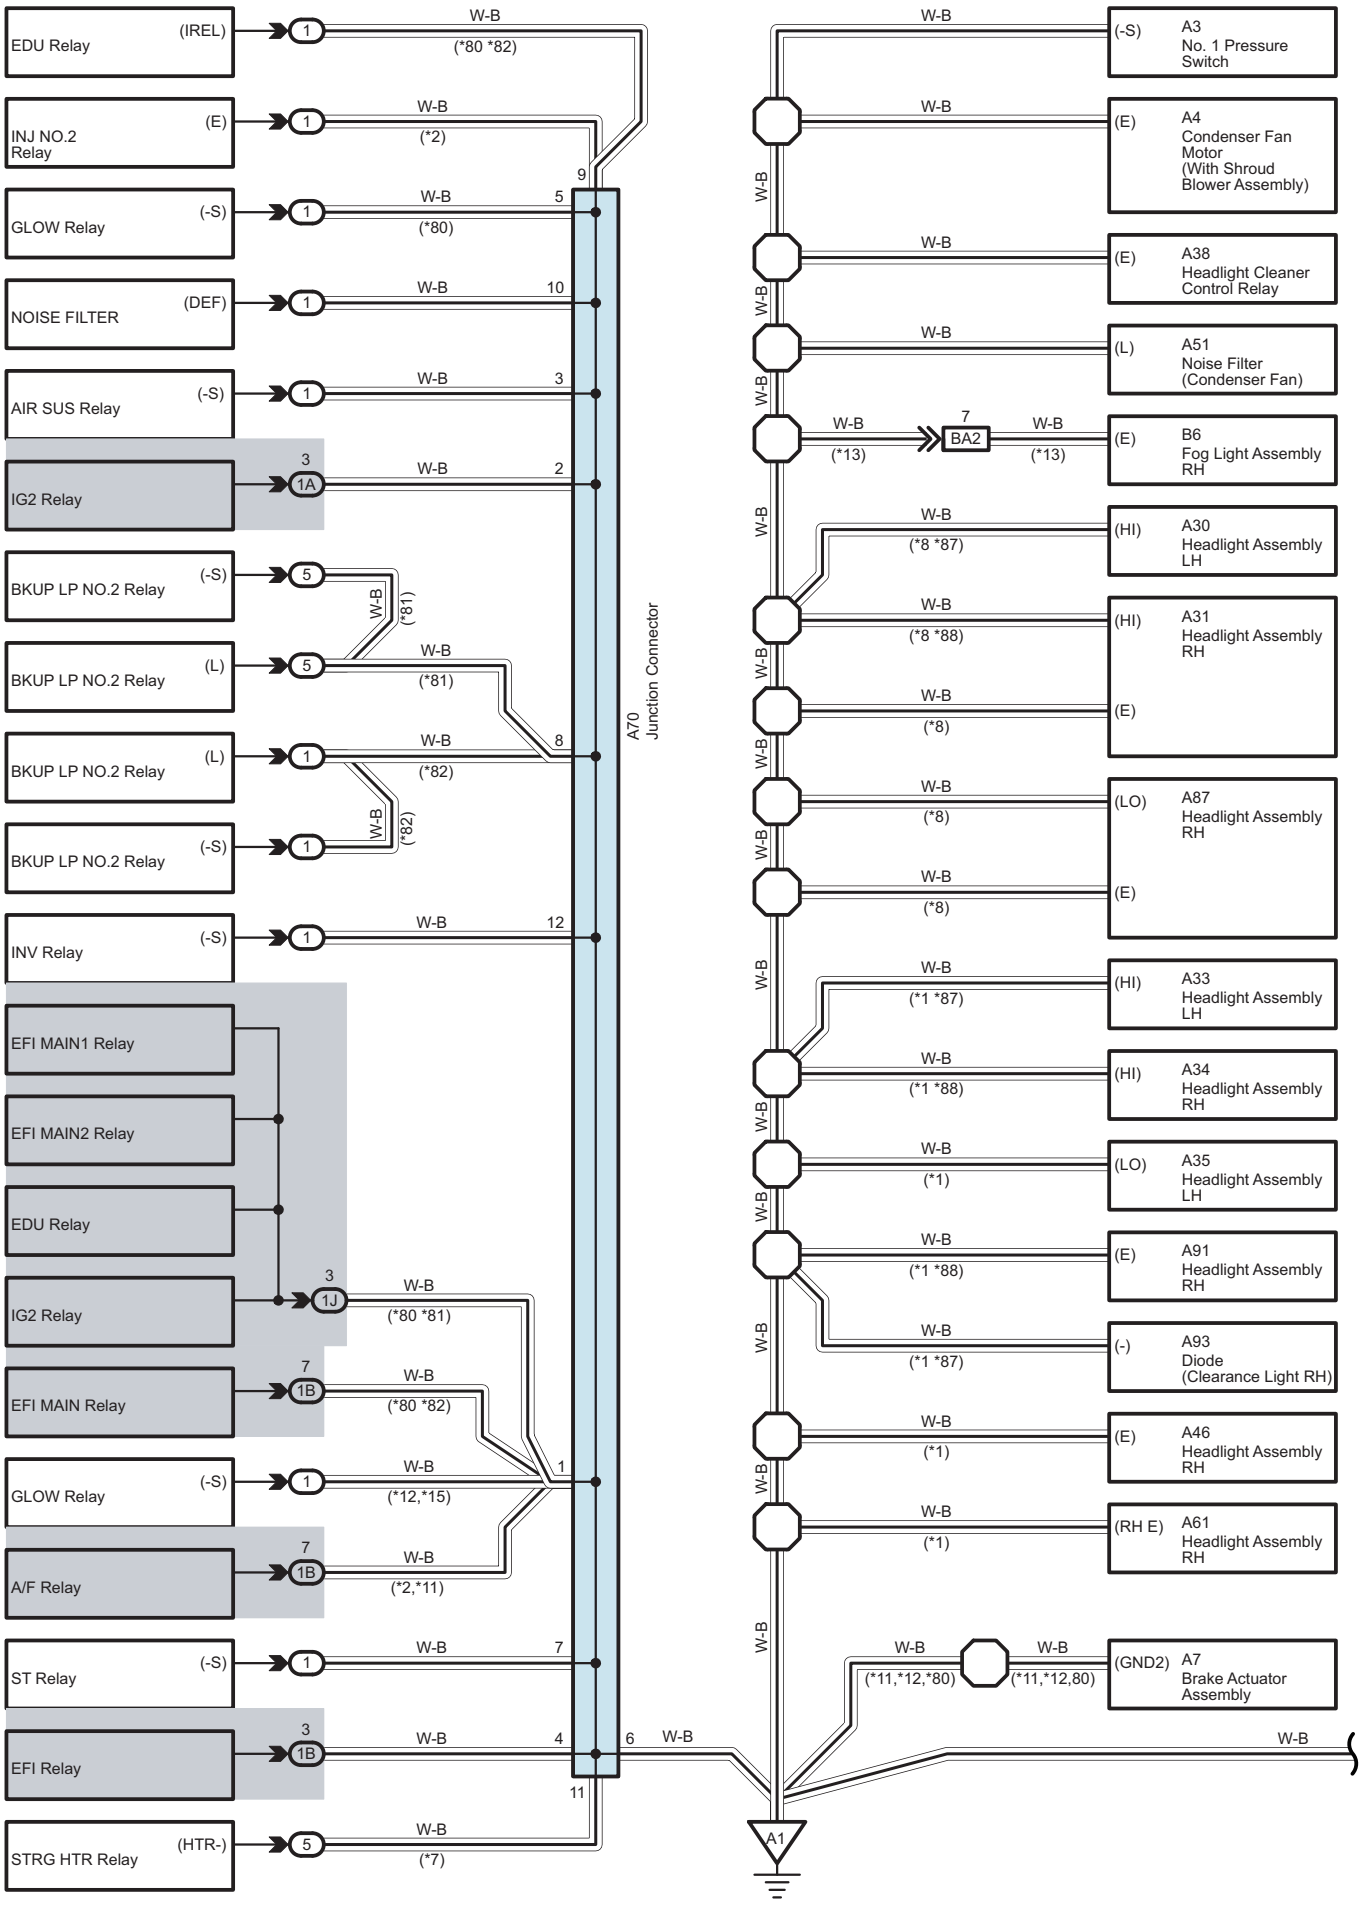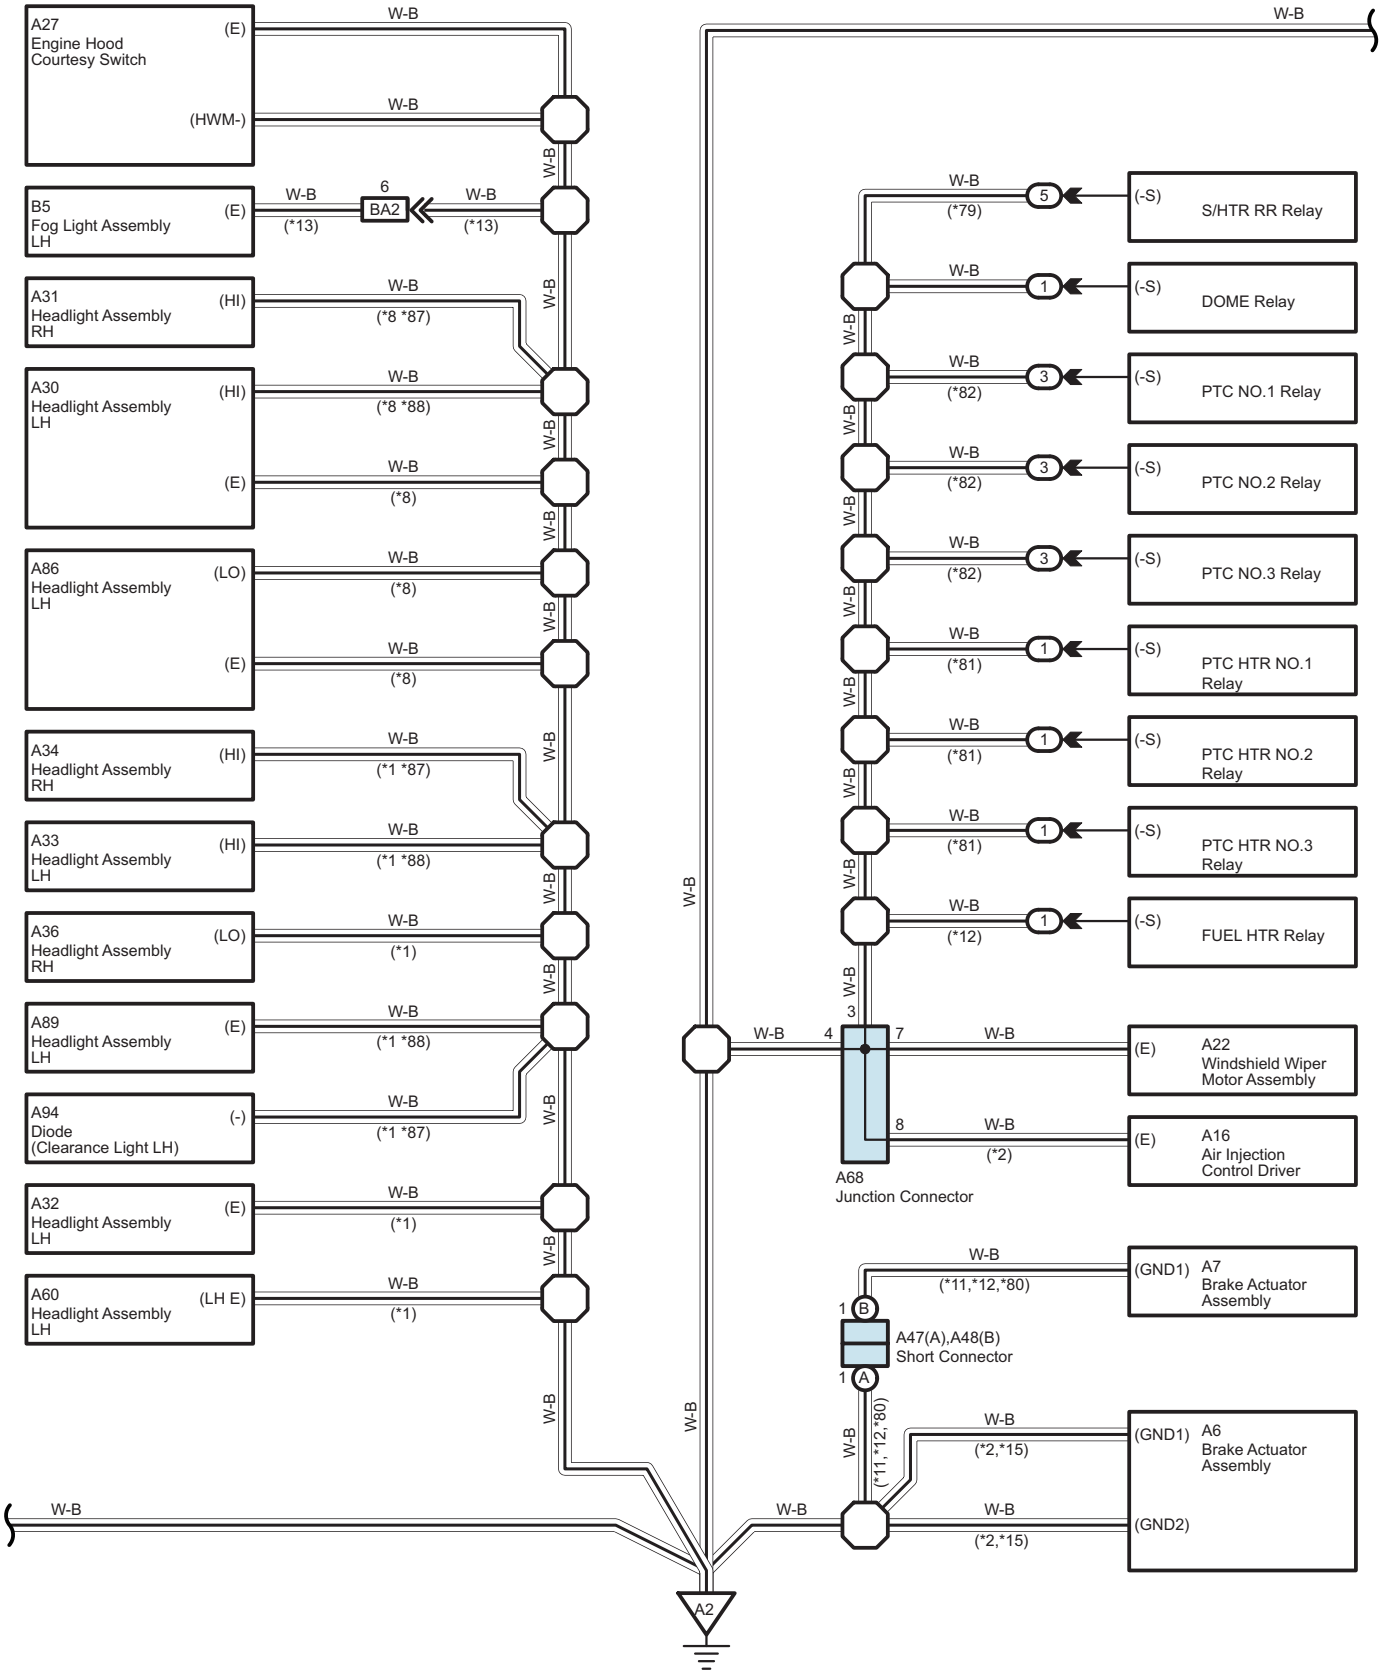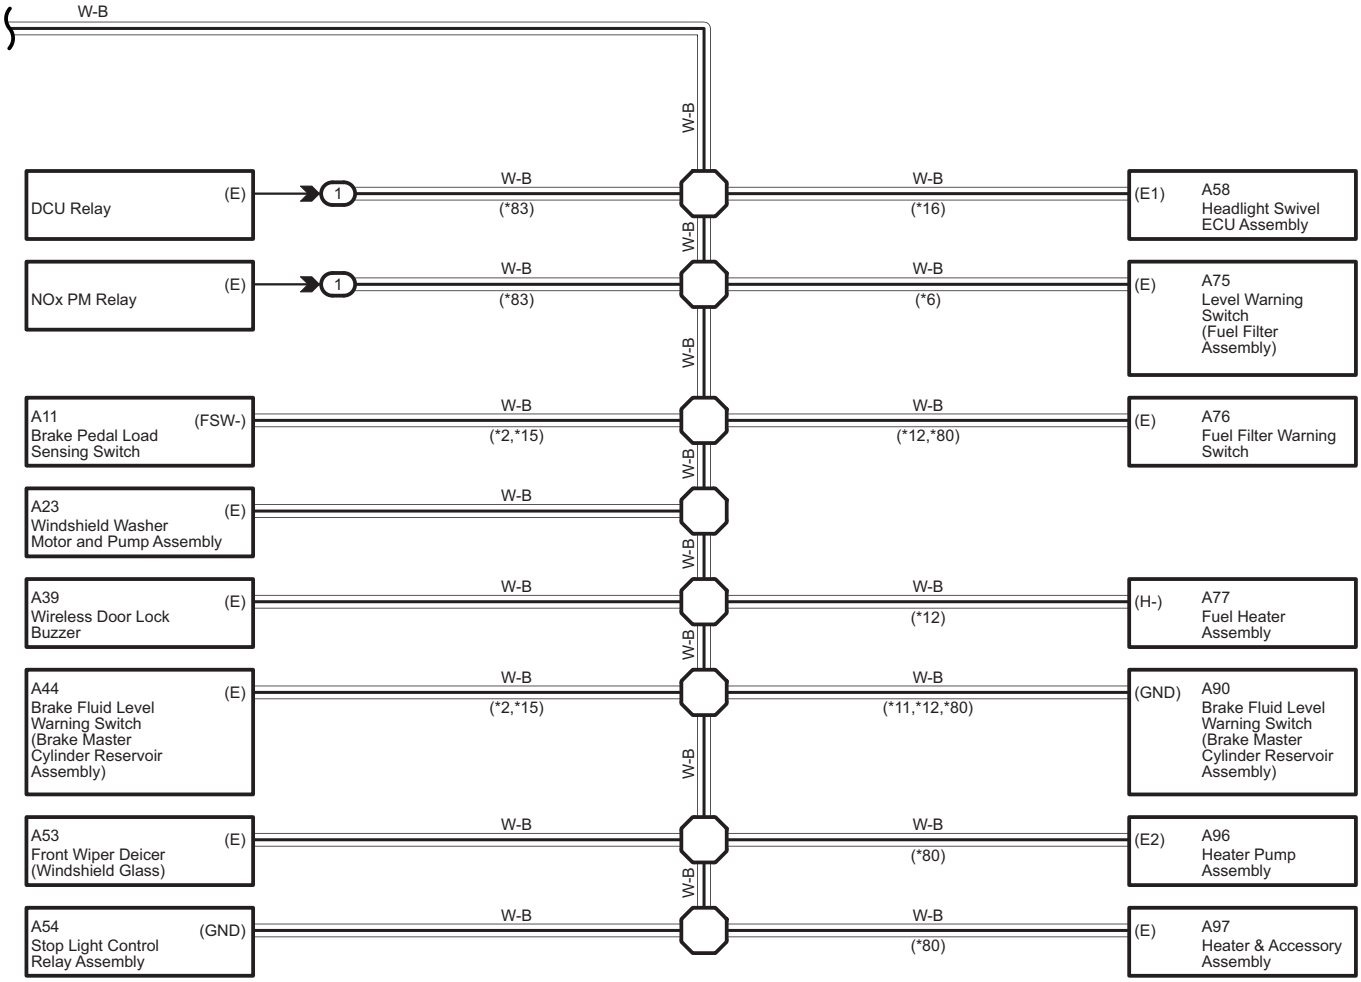


* 2 :2TR-FE
* 6 :Diesel
*11 :1GR-FE
*12 :1KD-FTV
*15 :5L-E
*16 :w/ Adaptive Front-Lighting System
*17 :w/ Tire Pressure Warning System
*80 :1GD-FTV
*83 :Except 1GR-FE

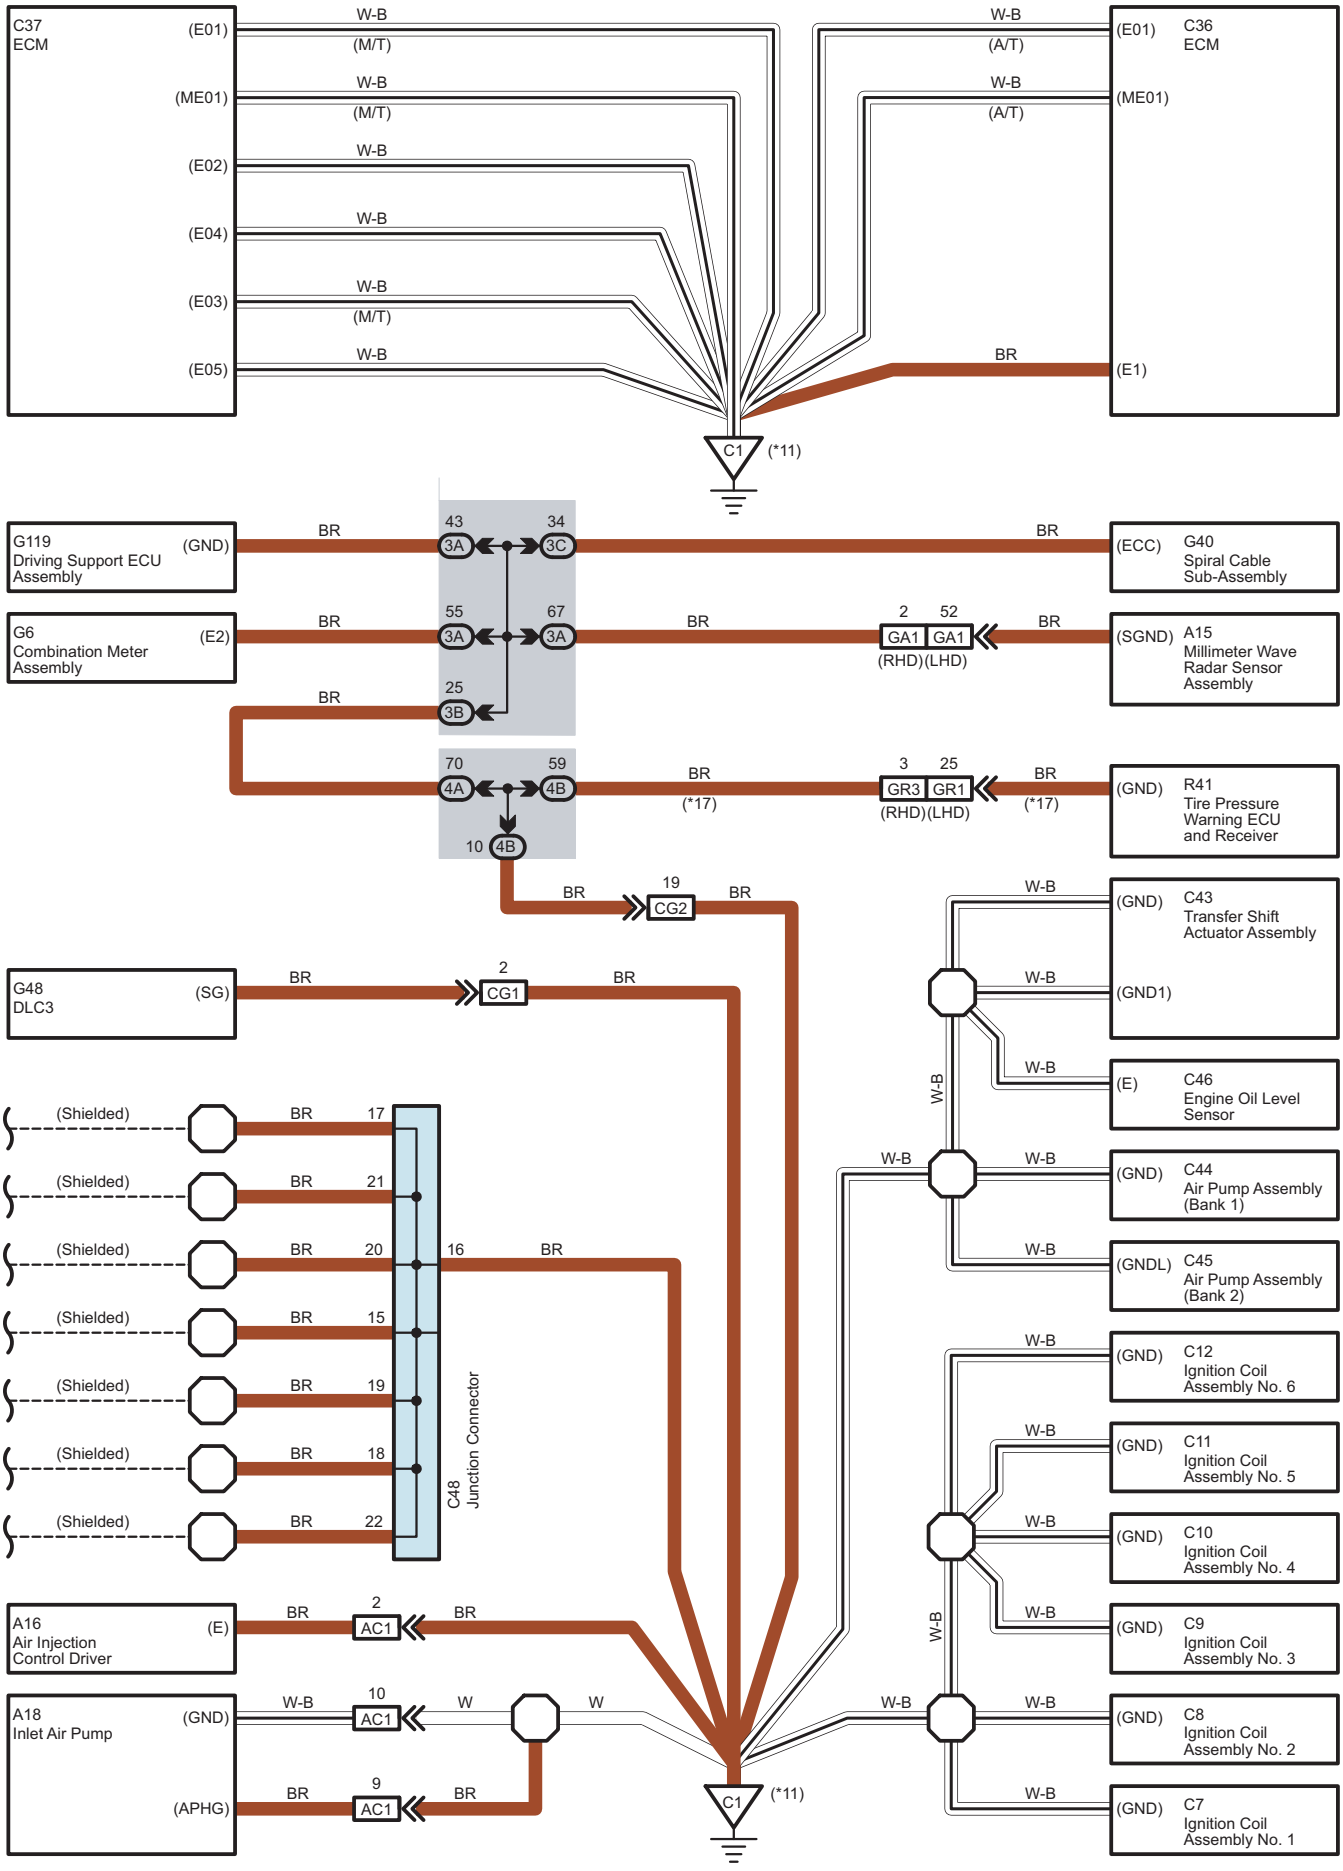



C37
ECM
(E01)
(ME01)
(E02)
(E04)
(E03)
(E05)
W-B
(M/T)
W-B
(A/T)
C36
ECM
(E01)
(ME01)
(E1)
BR
C1
(*11)
G119
Driving Support ECU Assembly
(GND)
G40
Spiral Cable Sub-Assembly
(ECC)
G6
Combination Meter Assembly
(E2)
A15
Millimeter Wave Radar Sensor Assembly
(SGND)
(RHD)(LHD)
R41
Tire Pressure Warning ECU and Receiver
(GND)
(*17)
C43
Transfer Shift Actuator Assembly
(GND)
(GND1)
C46
Engine Oil Level Sensor
(E)
C44
Air Pump Assembly (Bank 1)
(GND)
C45
Air Pump Assembly (Bank 2)
(GNDL)
C12
Ignition Coil Assembly No. 6
(GND)
C11
Ignition Coil Assembly No. 5
(GND)
C10
Ignition Coil Assembly No. 4
(GND)
C9
Ignition Coil Assembly No. 3
(GND)
C8
Ignition Coil Assembly No. 2
(GND)
C7
Ignition Coil Assembly No. 1
(GND)
G48
DLC3
(SG)
CG1
CG2
(Shielded)
C48
Junction Connector
A16
Air Injection Control Driver
(E)
AC1
A18
Inlet Air Pump
(GND)
(APHG)

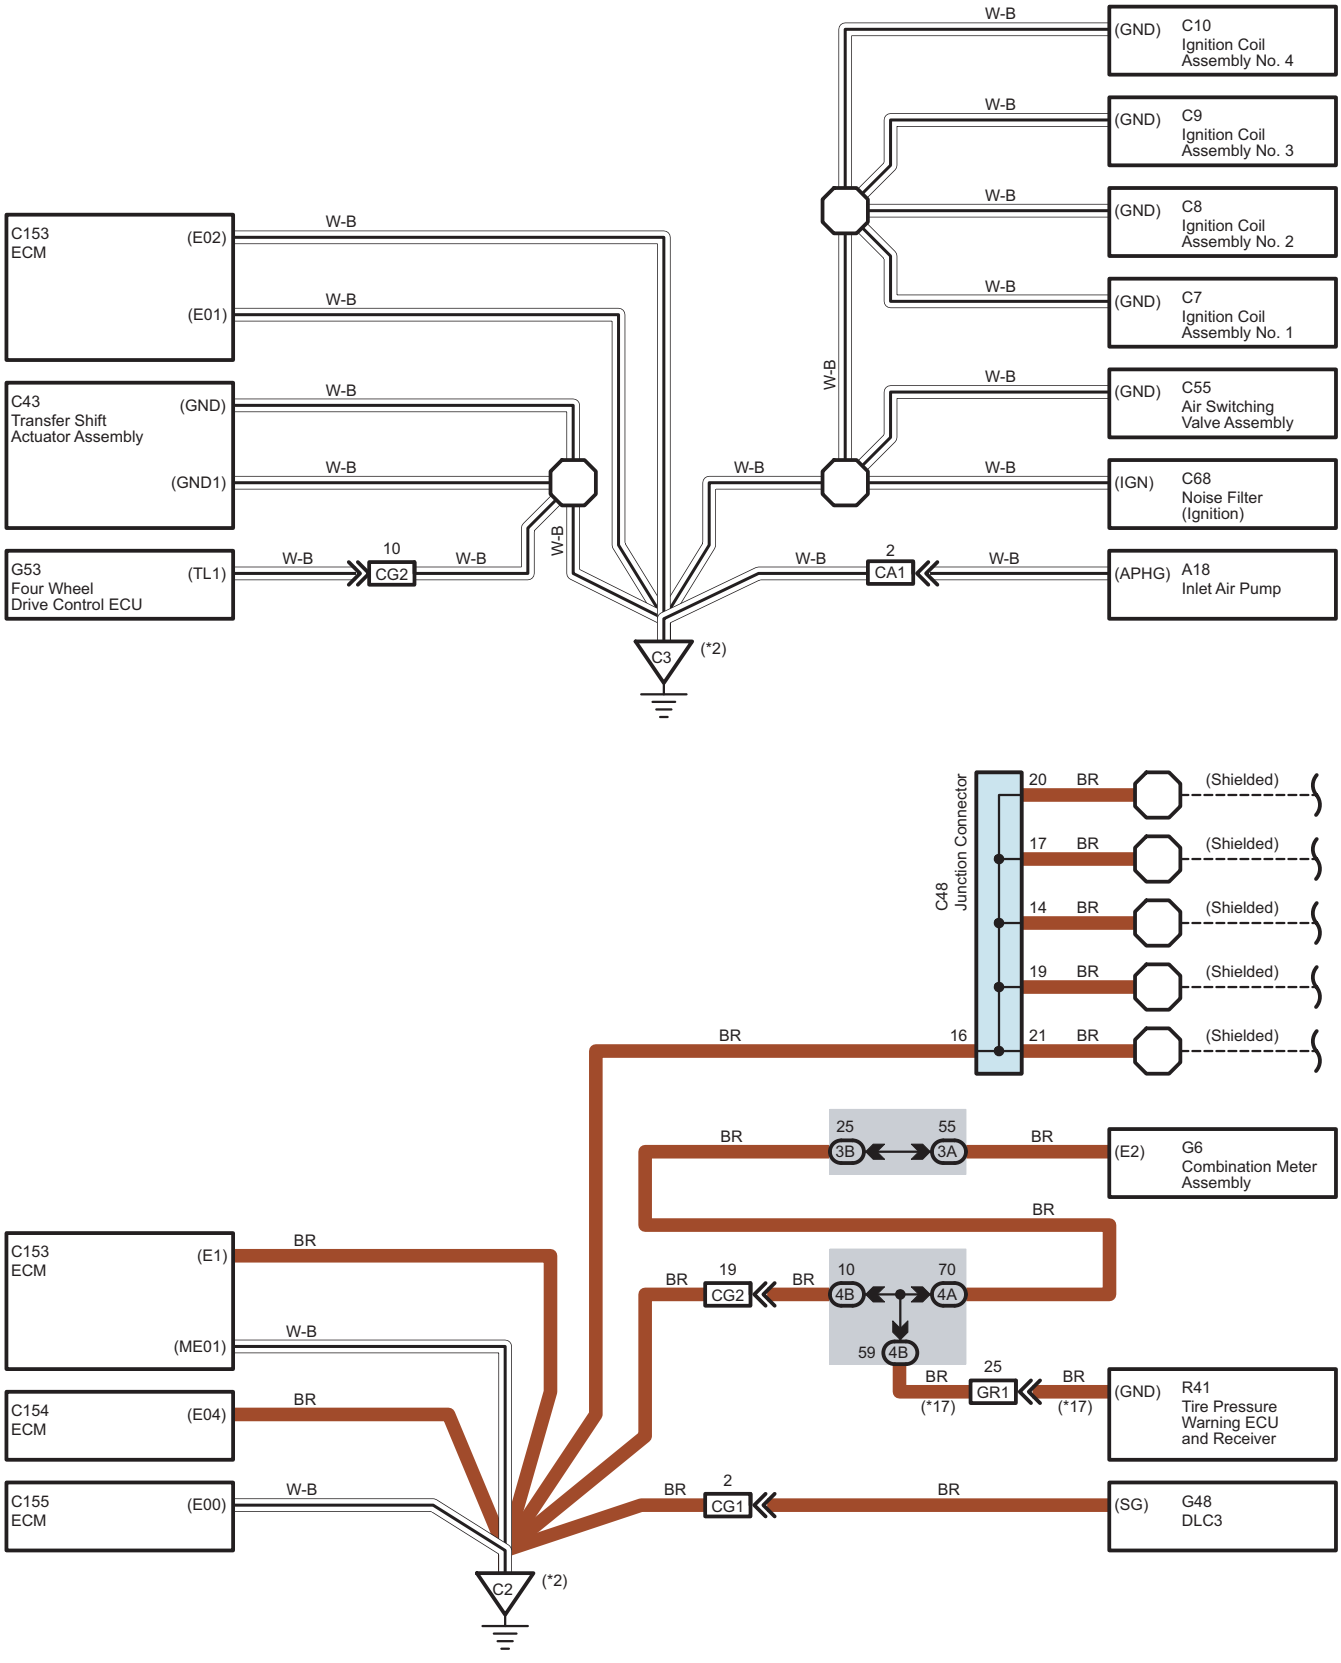

C153
ECM
(E02)
(E01)
C43
Transfer Shift
Actuator Assembly
(GND)
(GND1)
G53
Four Wheel
Drive Control ECU
(TL1)
W-B
10
CG2
C3
(*2)
2
CA1
(GND) C10 Ignition Coil Assembly No. 4
(GND) C9 Ignition Coil Assembly No. 3
(GND) C8 Ignition Coil Assembly No. 2
(GND) C7 Ignition Coil Assembly No. 1
(GND) C55 Air Switching Valve Assembly
(IGN) C68 Noise Filter (Ignition)
(APHG) A18 Inlet Air Pump
C48 Junction Connector
20 BR (Shielded)
17 BR (Shielded)
14 BR (Shielded)
19 BR (Shielded)
16
21 BR (Shielded)
BR
25
3B
55
3A
(E2) G6 Combination Meter Assembly
C153
ECM
(E1)
(ME01)
C154
ECM
(E04)
C155
ECM
(E00)
19
CG2
10
4B
70
4A
59 4B
25
GR1
(*17)
(GND) R41 Tire Pressure Warning ECU and Receiver
2
CG1
(SG) G48 DLC3
C2
(*2)


* 2 :2TR-FE
*12 :1KD-FTV
*17 :w/ Tire Pressure Warning System

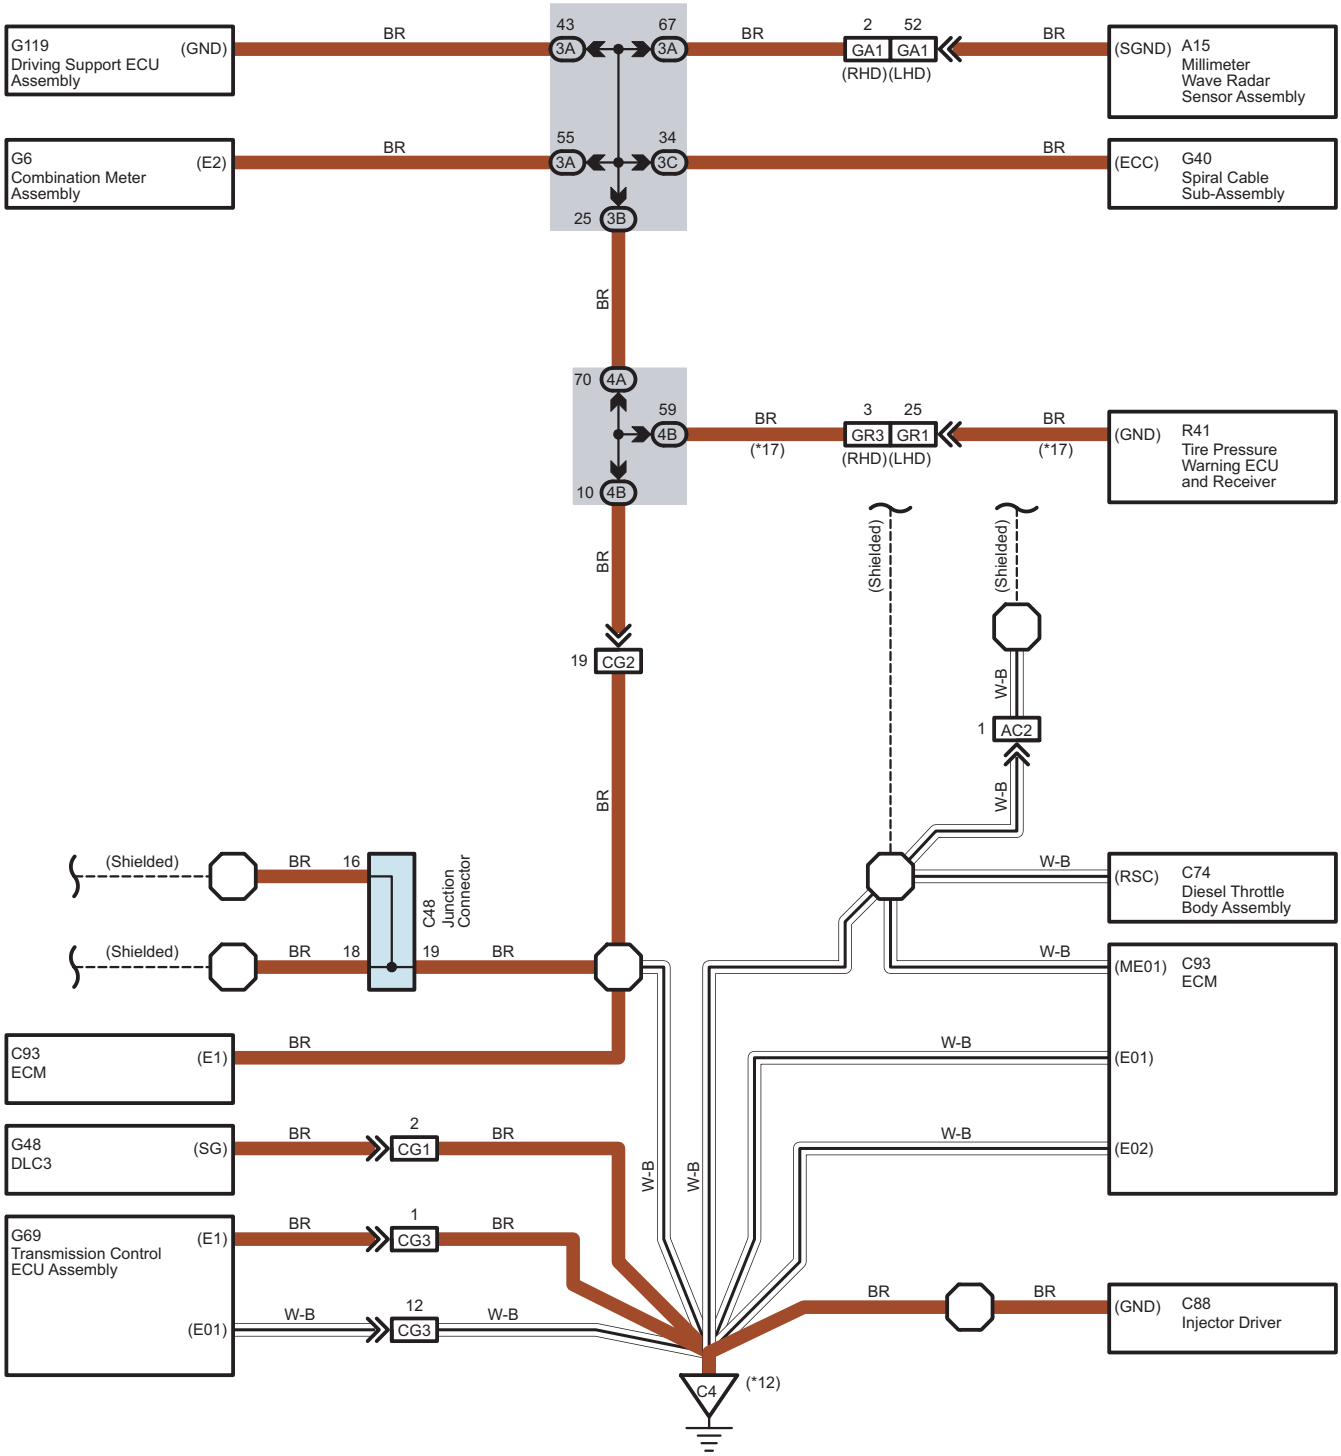


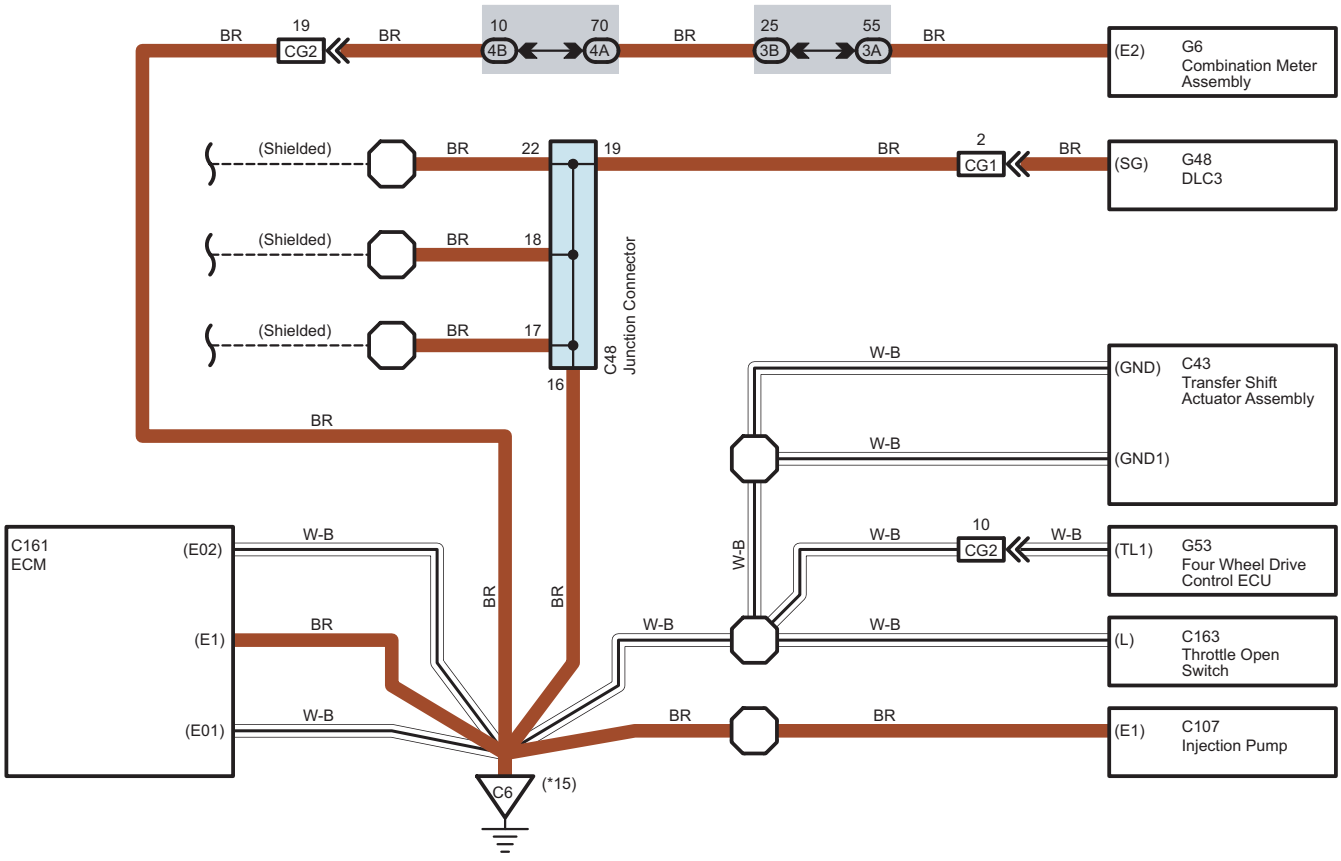
BR
19
CG2
BR
10
70
4B
4A
BR
25
55
3B
3A
BR
(E2)
G6
Combination Meter Assembly
(Shielded)
BR
22
19
BR
2
CG1
BR
(SG)
G48
DLC3
(Shielded)
BR
18
(Shielded)
BR
17
C48
Junction Connector
16
BR
W-B
(GND)
C43
Transfer Shift Actuator Assembly
W-B
(GND1)
C161
ECM
(E02)
W-B
(E1)
BR
(E01)
W-B
BR
BR
W-B
W-B
10
CG2
W-B
(TL1)
G53
Four Wheel Drive Control ECU
W-B
W-B
(L)
C163
Throttle Open Switch
BR
BR
(E1)
C107
Injection Pump
C6
(*15)


*15 :5L-E
*17 :w/ Tire Pressure Warning System
*80 :1GD-FTV

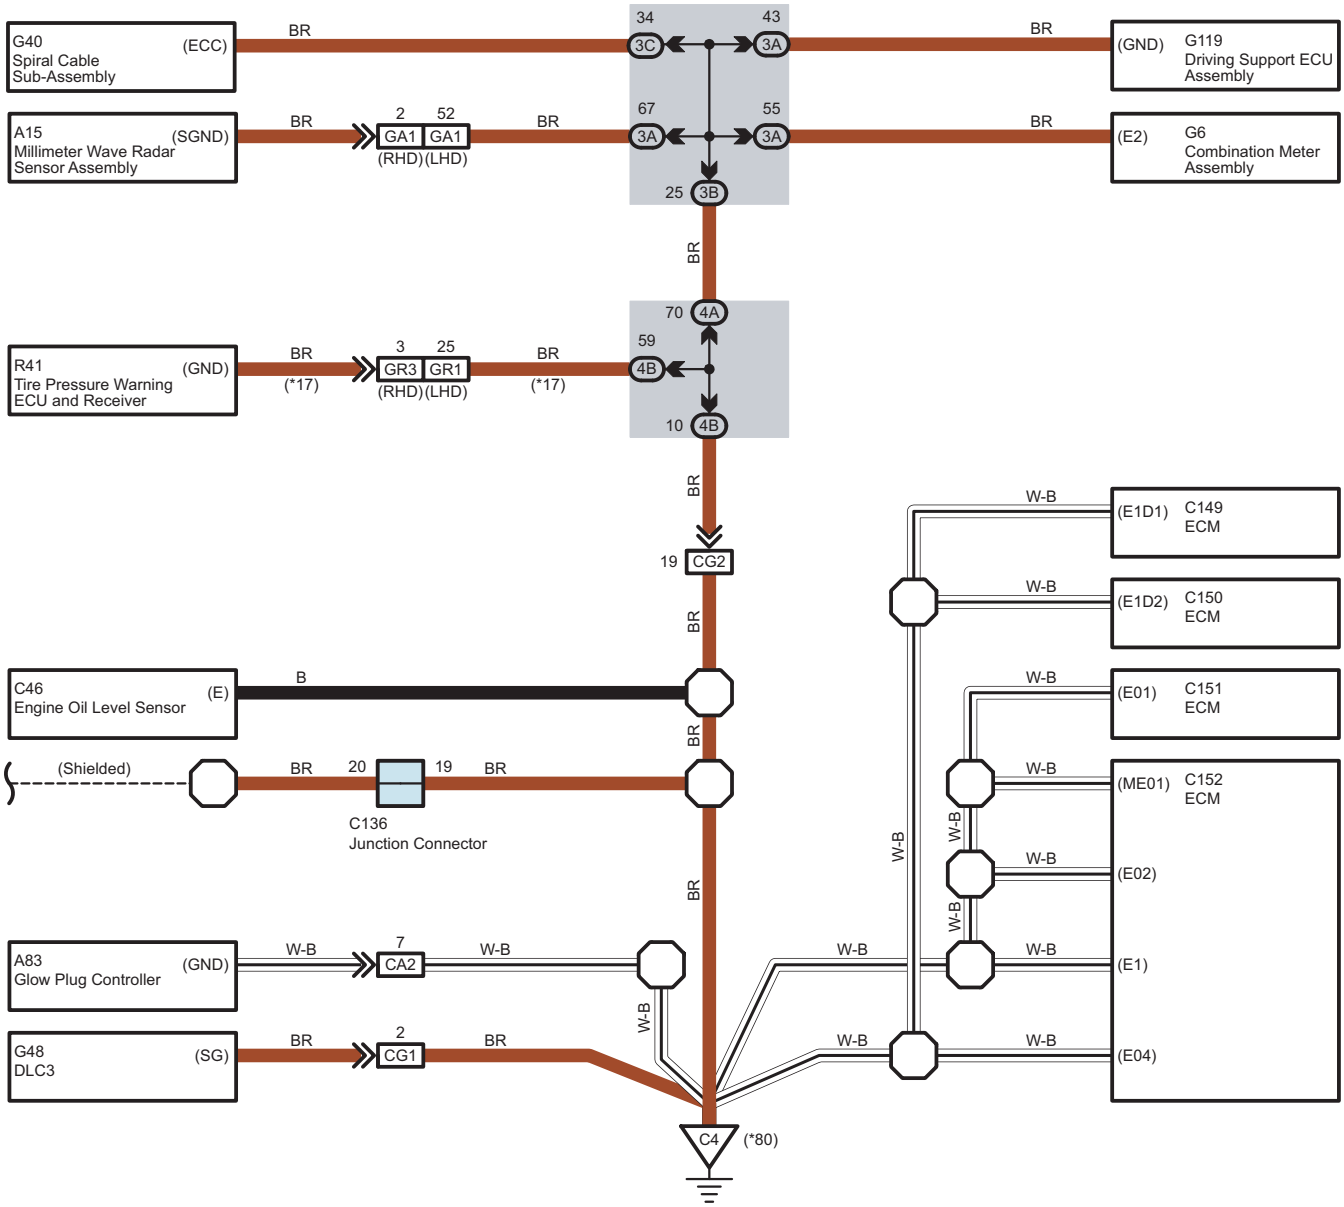

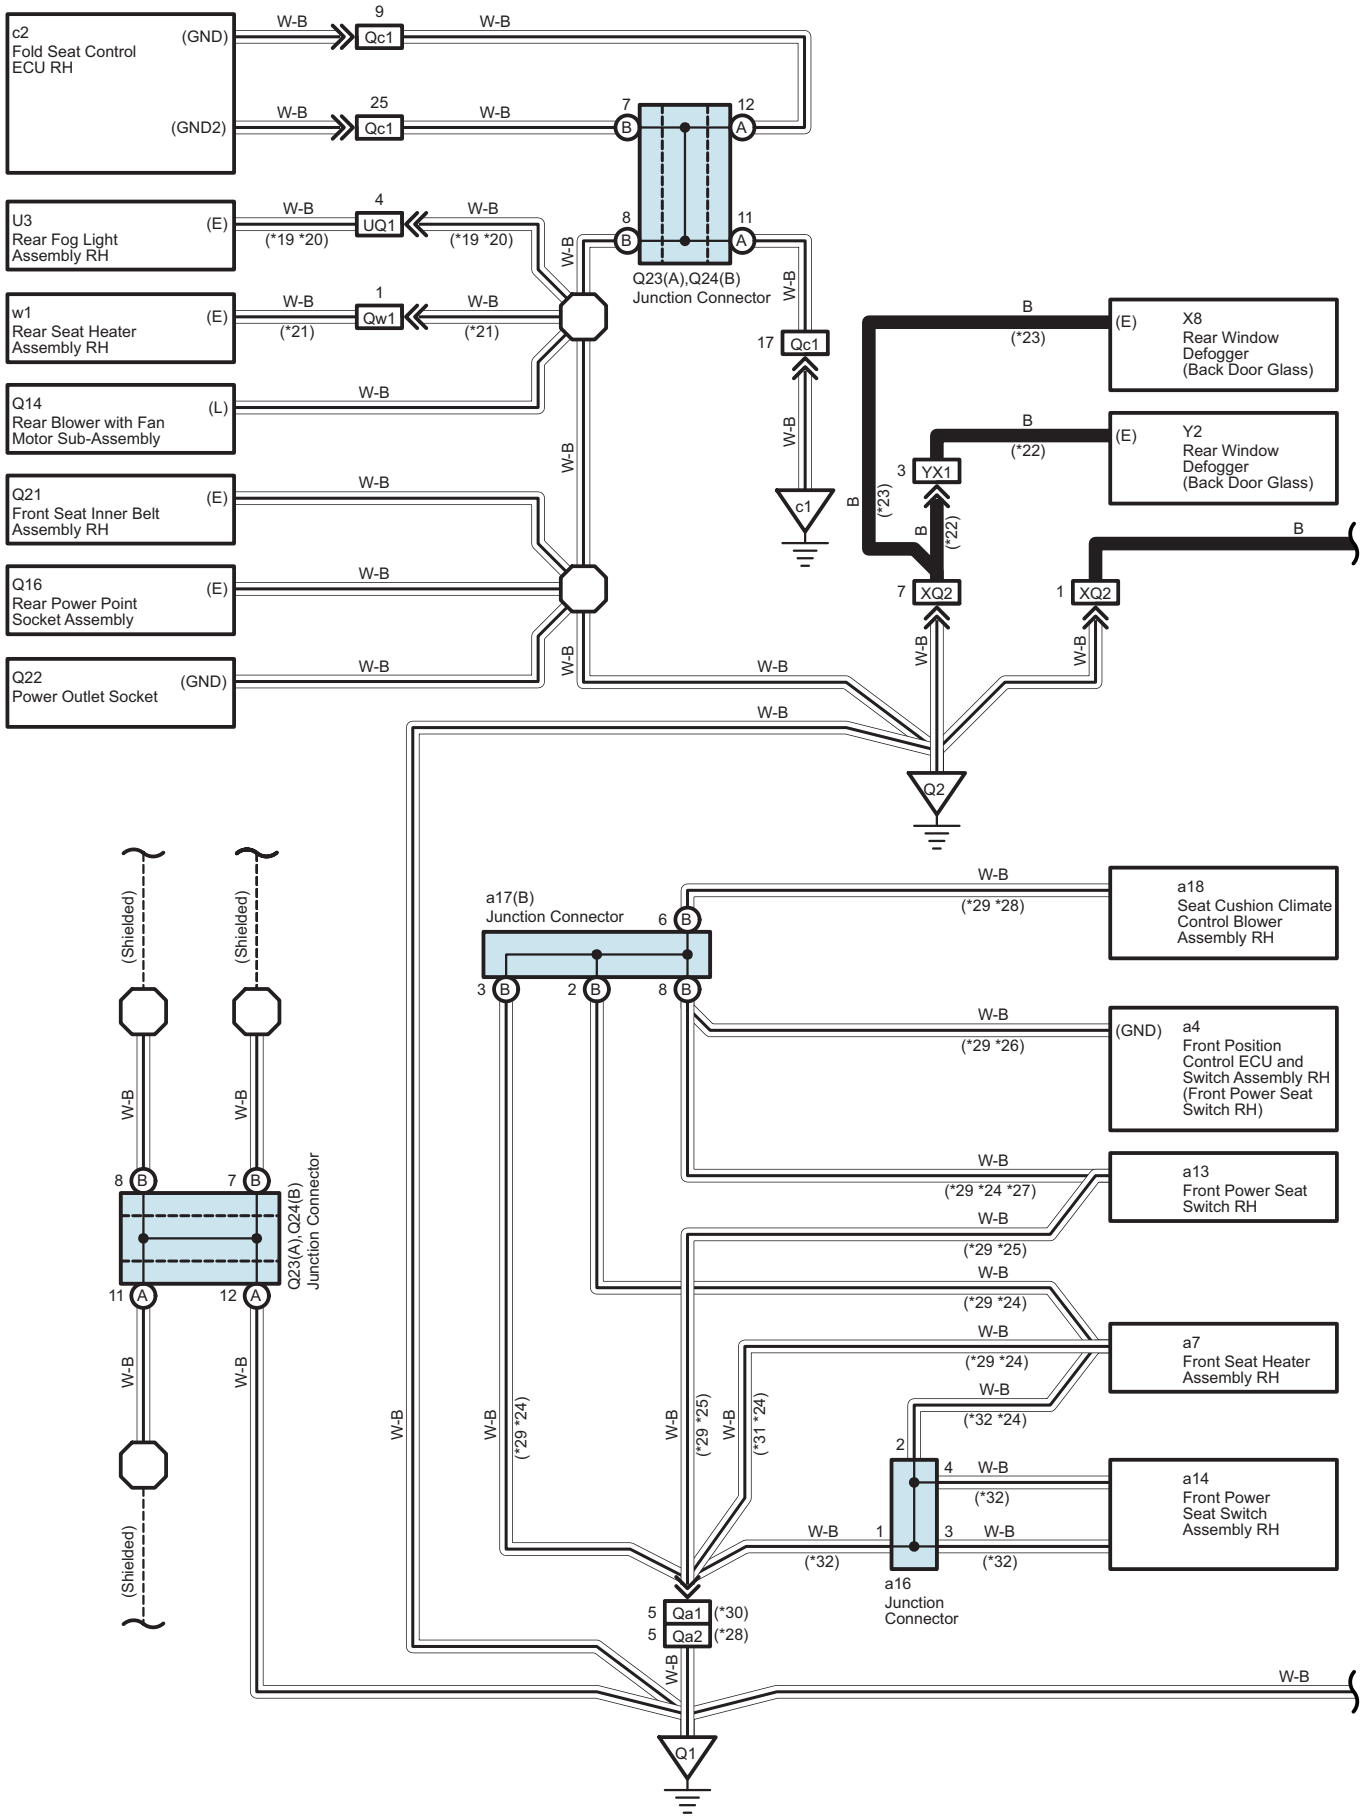

c2
Fold Seat Control ECU RH
(GND)
(GND2)
U3
Rear Fog Light Assembly RH
(E)
w1
Rear Seat Heater Assembly RH
(E)
Q14
Rear Blower with Fan Motor Sub-Assembly
(L)
Q21
Front Seat Inner Belt Assembly RH
(E)
Q16
Rear Power Point Socket Assembly
(E)
Q22
Power Outlet Socket
(GND)
Qc1
UQ1
Qw1
Q23(A),Q24(B) Junction Connector
c1
YX1
XQ2
Q2
Q1
X8
Rear Window Defogger (Back Door Glass)
Y2
Rear Window Defogger (Back Door Glass)
(Shielded)
a17(B) Junction Connector
a18
Seat Cushion Climate Control Blower Assembly RH
a4
Front Position Control ECU and Switch Assembly RH (Front Power Seat Switch RH)
a13
Front Power Seat Switch RH
a7
Front Seat Heater Assembly RH
a14
Front Power Seat Switch Assembly RH
a16 Junction Connector
Qa1
Qa2
W-B
B

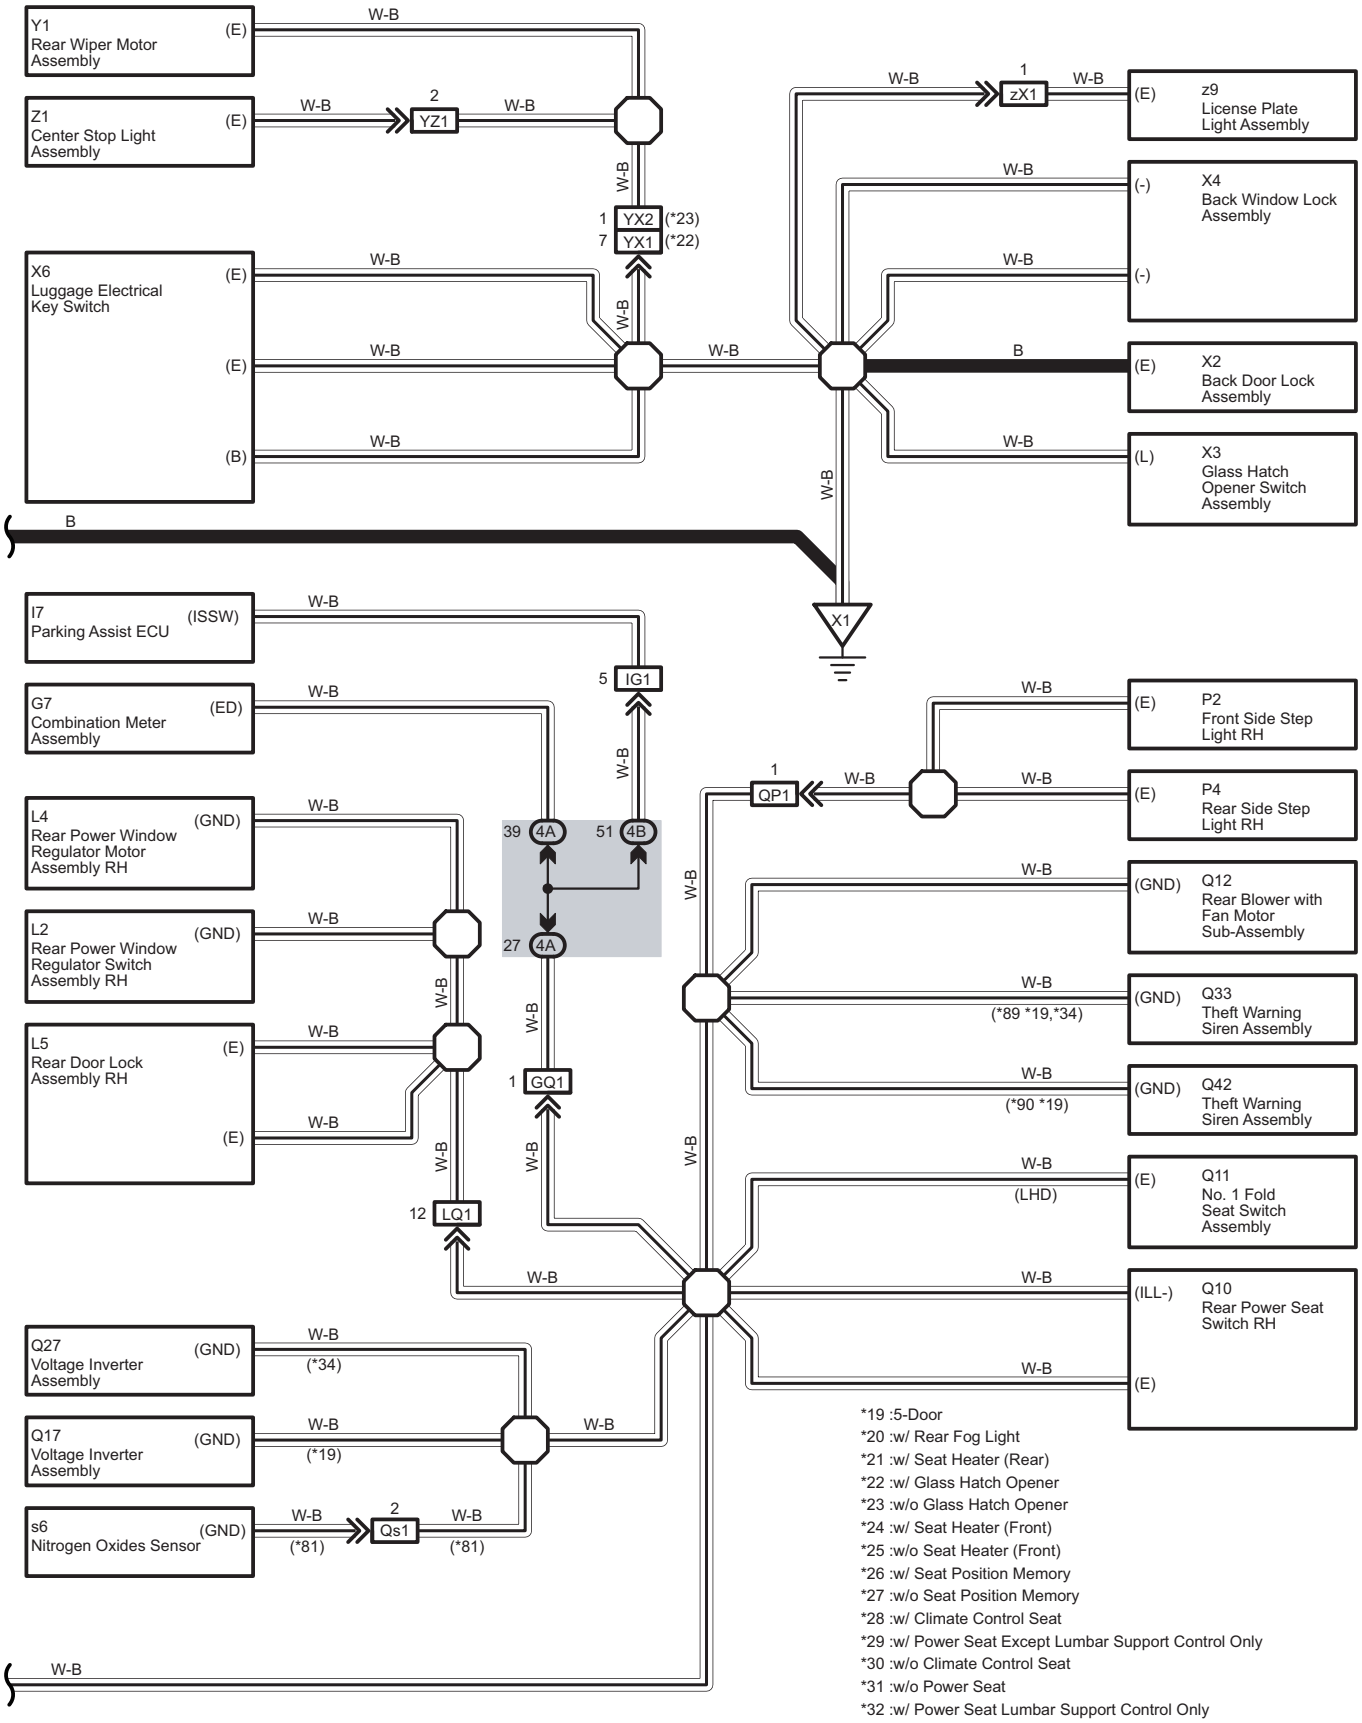



*19 :5-Door
*20 :w/ Rear Fog Light
*21 :w/ Seat Heater (Rear)
*22 :w/ Glass Hatch Opener
*23 :w/o Glass Hatch Opener
*24 :w/ Seat Heater (Front)
*25 :w/o Seat Heater (Front)
*26 :w/ Seat Position Memory
*27 :w/o Seat Position Memory
*28 :w/ Climate Control Seat
*29 :w/ Power Seat Except Lumbar Support Control Only
*30 :w/o Climate Control Seat
*31 :w/o Power Seat
*32 :w/ Power Seat Lumbar Support Control Only
*34 :3-Door
*81 :1GD-FTV w/ Urea SCR
*89 :Before Aug.2016 Production
*90 :From Aug.2016 Production

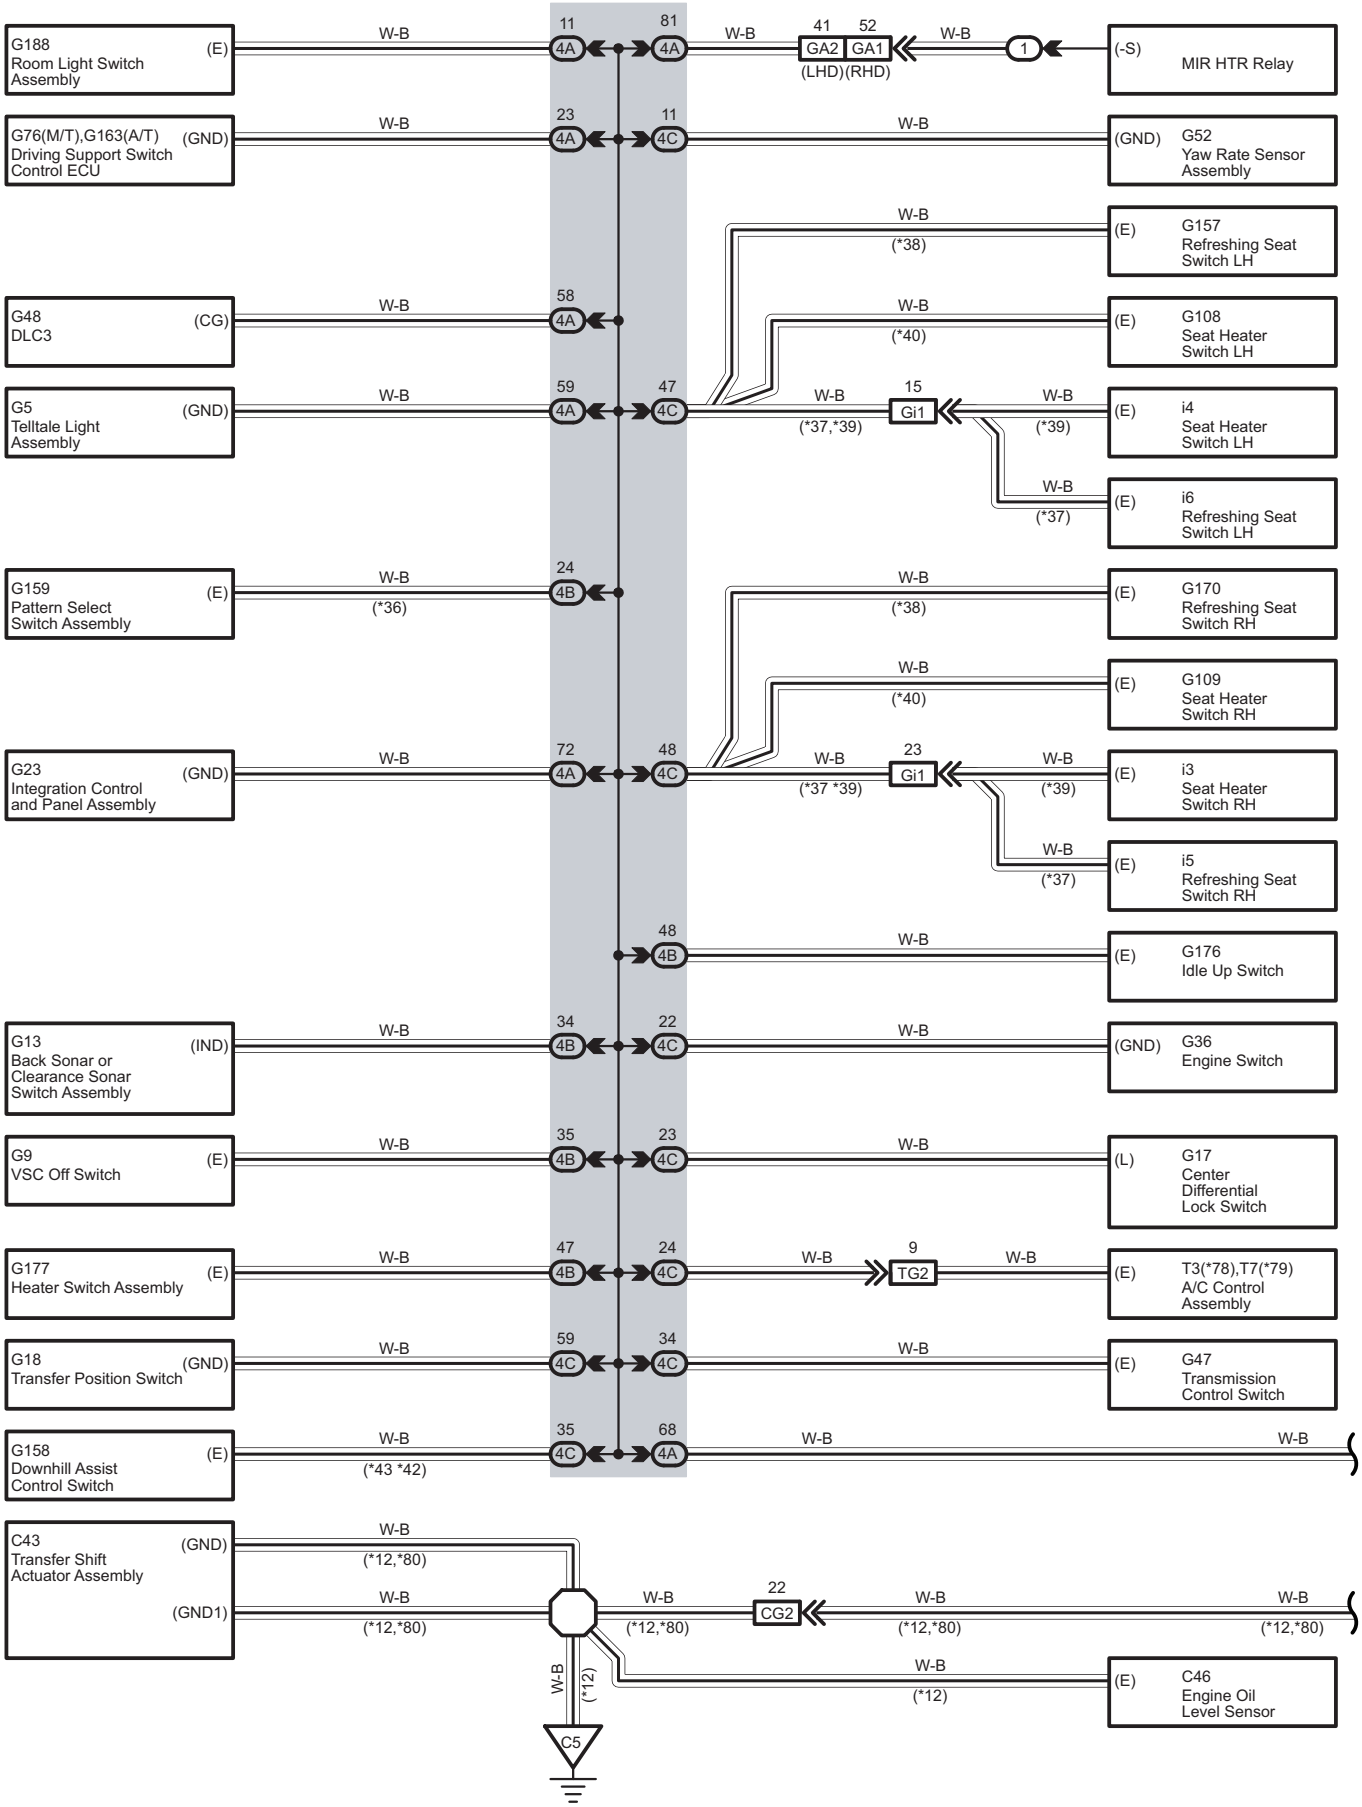

G188
Room Light Switch Assembly
(E)
W-B
11
4A
81
4A
W-B
41
52
GA2
GA1
(LHD)(RHD)
W-B
1
(-S)
MIR HTR Relay
G76(M/T),G163(A/T)
Driving Support Switch Control ECU
(GND)
23
4A
11
4C
W-B
(GND)
G52
Yaw Rate Sensor Assembly
W-B
(*38)
(E)
G157
Refreshing Seat Switch LH
G48
DLC3
(CG)
58
4A
W-B
W-B
(*40)
(E)
G108
Seat Heater Switch LH
G5
Telltale Light Assembly
(GND)
59
4A
47
4C
W-B
(*37,*39)
15
Gi1
W-B
(*39)
(E)
i4
Seat Heater Switch LH
W-B
(*37)
(E)
i6
Refreshing Seat Switch LH
G159
Pattern Select Switch Assembly
(E)
24
4B
W-B
(*36)
W-B
(*38)
(E)
G170
Refreshing Seat Switch RH
W-B
(*40)
(E)
G109
Seat Heater Switch RH
G23
Integration Control and Panel Assembly
(GND)
72
4A
48
4C
W-B
(*37 *39)
23
Gi1
W-B
(*39)
(E)
i3
Seat Heater Switch RH
W-B
(*37)
(E)
i5
Refreshing Seat Switch RH
48
4B
W-B
(E)
G176
Idle Up Switch
G13
Back Sonar or Clearance Sonar Switch Assembly
(IND)
34
4B
22
4C
W-B
W-B
(GND)
G36
Engine Switch
G9
VSC Off Switch
(E)
35
4B
23
4C
W-B
W-B
(L)
G17
Center Differential Lock Switch
G177
Heater Switch Assembly
(E)
47
4B
24
4C
W-B
9
TG2
W-B
(E)
T3(*78),T7(*79)
A/C Control Assembly
G18
Transfer Position Switch
(GND)
59
4C
34
4C
W-B
W-B
(E)
G47
Transmission Control Switch
G158
Downhill Assist Control Switch
(E)
35
4C
68
4A
W-B
(*43 *42)
W-B
W-B
C43
Transfer Shift Actuator Assembly
(GND)
(GND1)
W-B
(*12,*80)
W-B
(*12,*80)
W-B
(*12,*80)
22
CG2
W-B
(*12,*80)
W-B
(*12,*80)
W-B
(*12)
(E)
C46
Engine Oil Level Sensor
W-B
(*12)
C5

* 2 :2TR-FE
*11 :1GR-FE
*12 :1KD-FTV
*36 :w/ Pattern Select Switch Assembly
*37 :A/T w/ Climate Control Seat
*38 :M/T w/ Climate Control Seat
*39 :A/T w/ Seat Heater (Front)
*40 :M/T w/ Seat Heater (Front)
*42 :w/o Crawl
*43 :w/ Downhill Assist Control
*78 :w/o Seat Heater (Rear)
*79 :w/ Seat Heater (Rear)
*80 :1GD-FTV

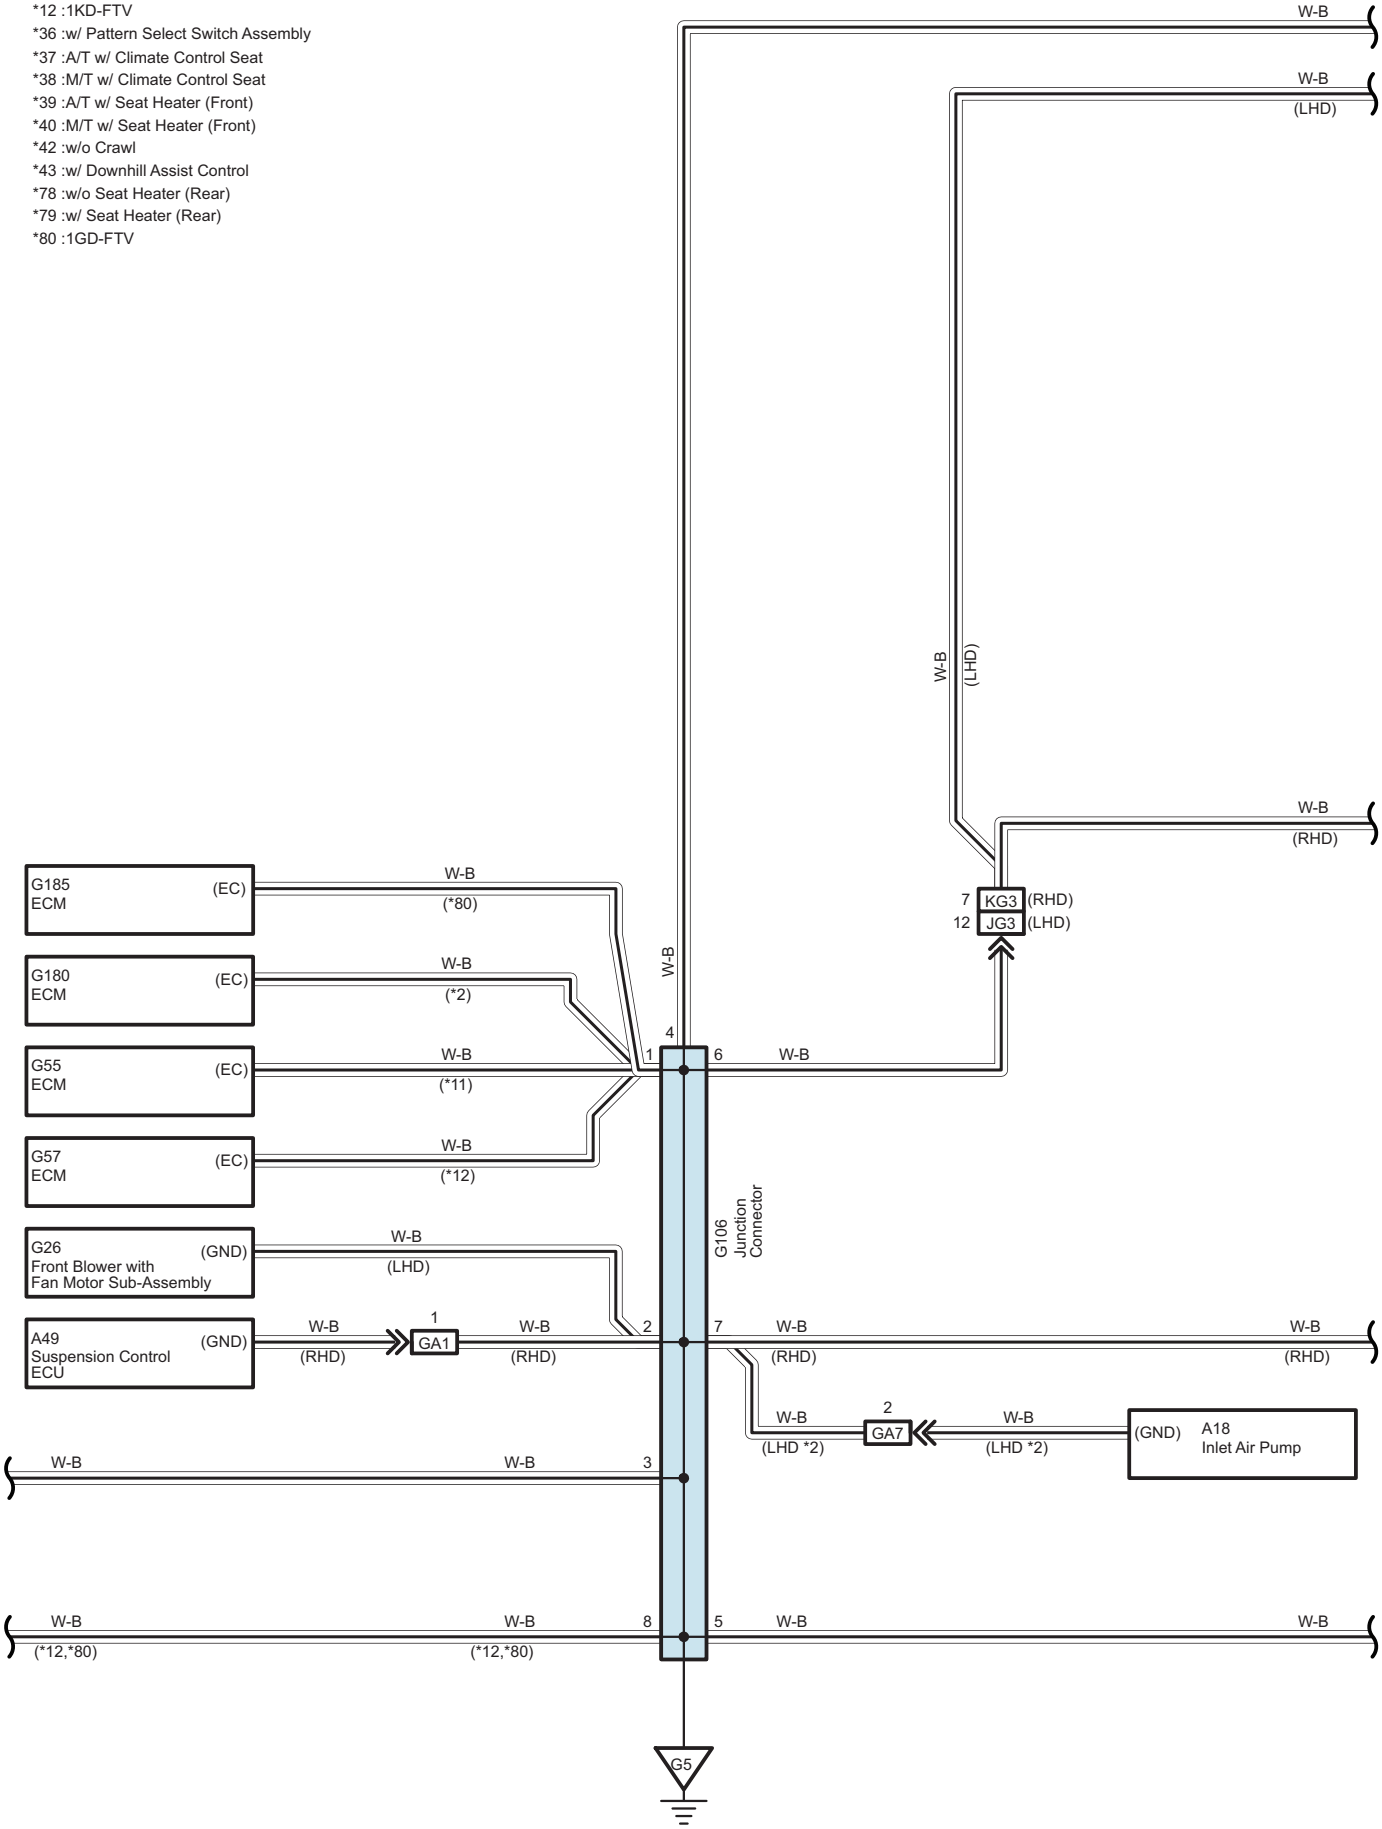


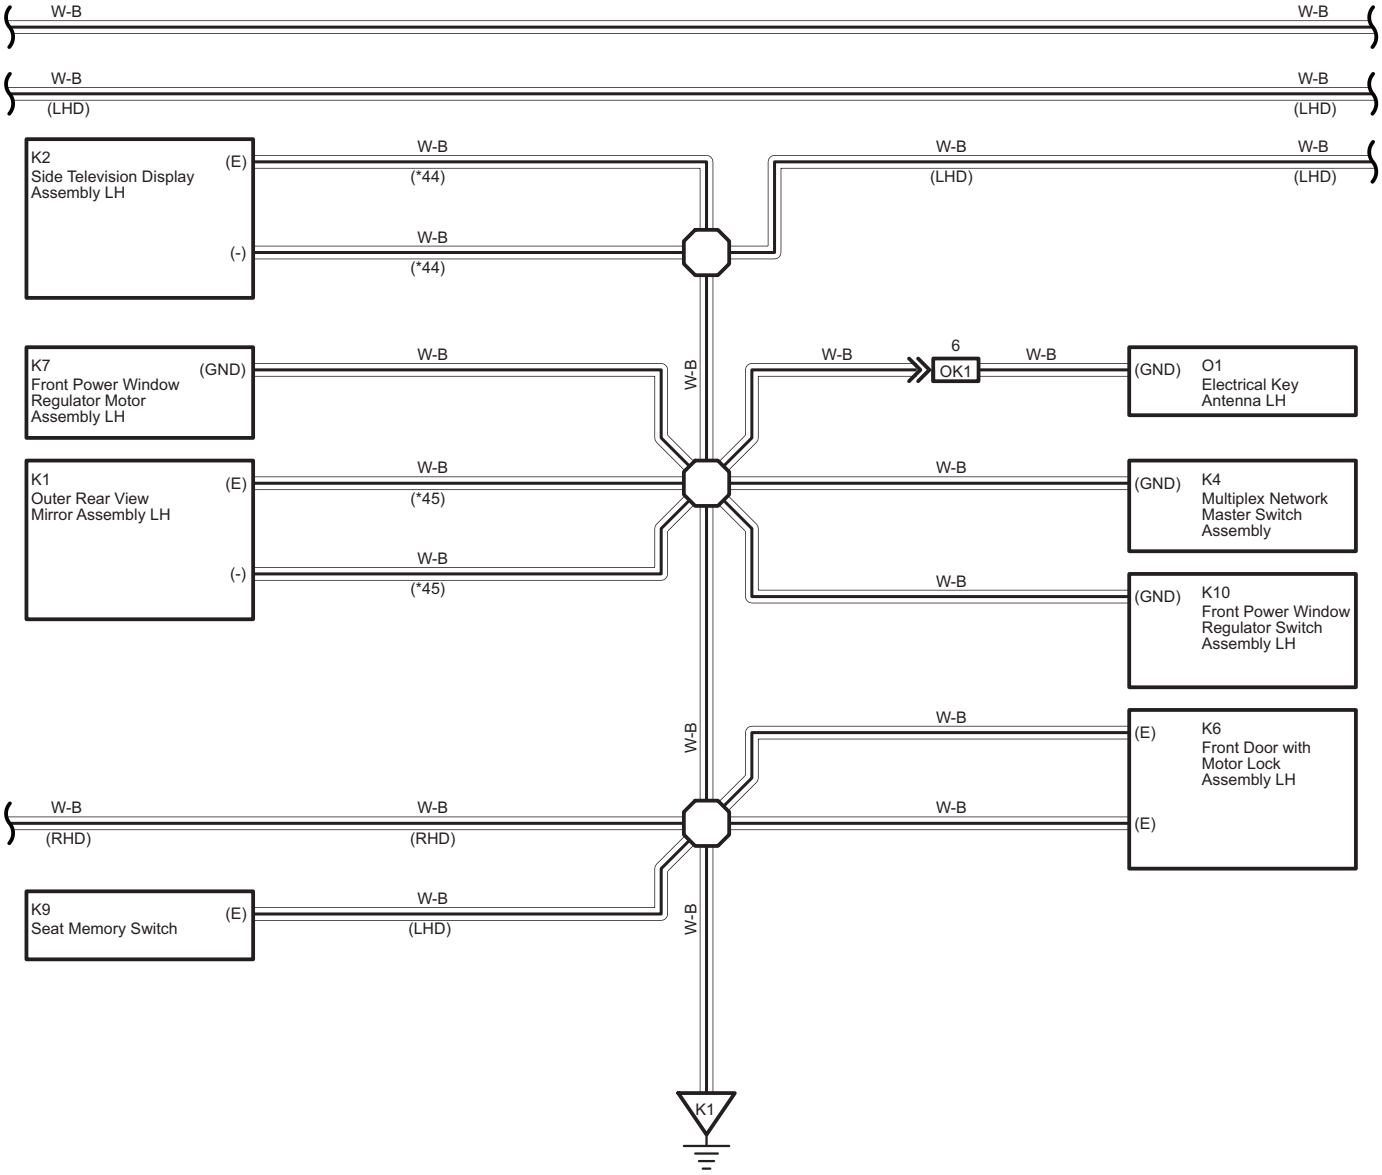
W-B
W-B
W-B
(LHD)
W-B
(LHD)
K2
Side Television Display Assembly LH
(E)
(-)
W-B
(*44)
W-B
(*44)
W-B
(LHD)
W-B
(LHD)
K7
Front Power Window Regulator Motor Assembly LH
(GND)
W-B
W-B
6
OK1
W-B
(GND)
O1
Electrical Key Antenna LH
K1
Outer Rear View Mirror Assembly LH
(E)
(-)
W-B
(*45)
W-B
(*45)
W-B
(GND)
K4
Multiplex Network Master Switch Assembly
W-B
(GND)
K10
Front Power Window Regulator Switch Assembly LH
W-B
W-B
W-B
(E)
K6
Front Door with Motor Lock Assembly LH
(E)
W-B
(RHD)
W-B
(RHD)
W-B
K9
Seat Memory Switch
(E)
W-B
(LHD)
K1

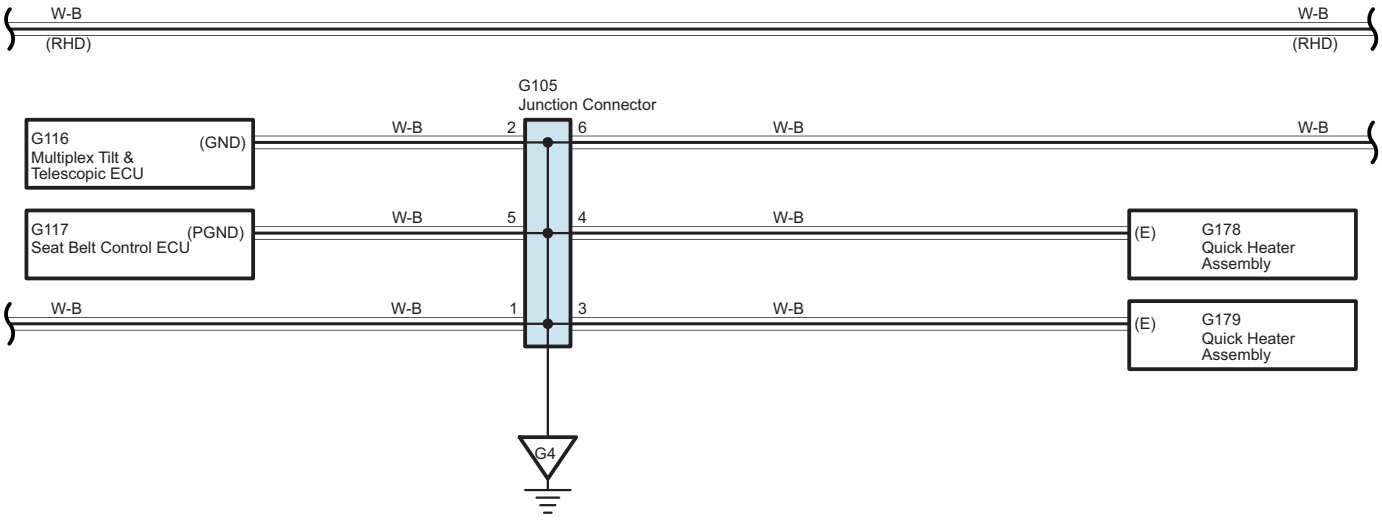

W-B
(RHD)
W-B
(RHD)
G105
Junction Connector
G116
Multiplex Tilt & Telescopic ECU
(GND)
W-B
2
6
W-B
W-B
G117
Seat Belt Control ECU
(PGND)
W-B
5
4
W-B
(E)
G178
Quick Heater Assembly
W-B
W-B
1
3
W-B
(E)
G179
Quick Heater Assembly
G4

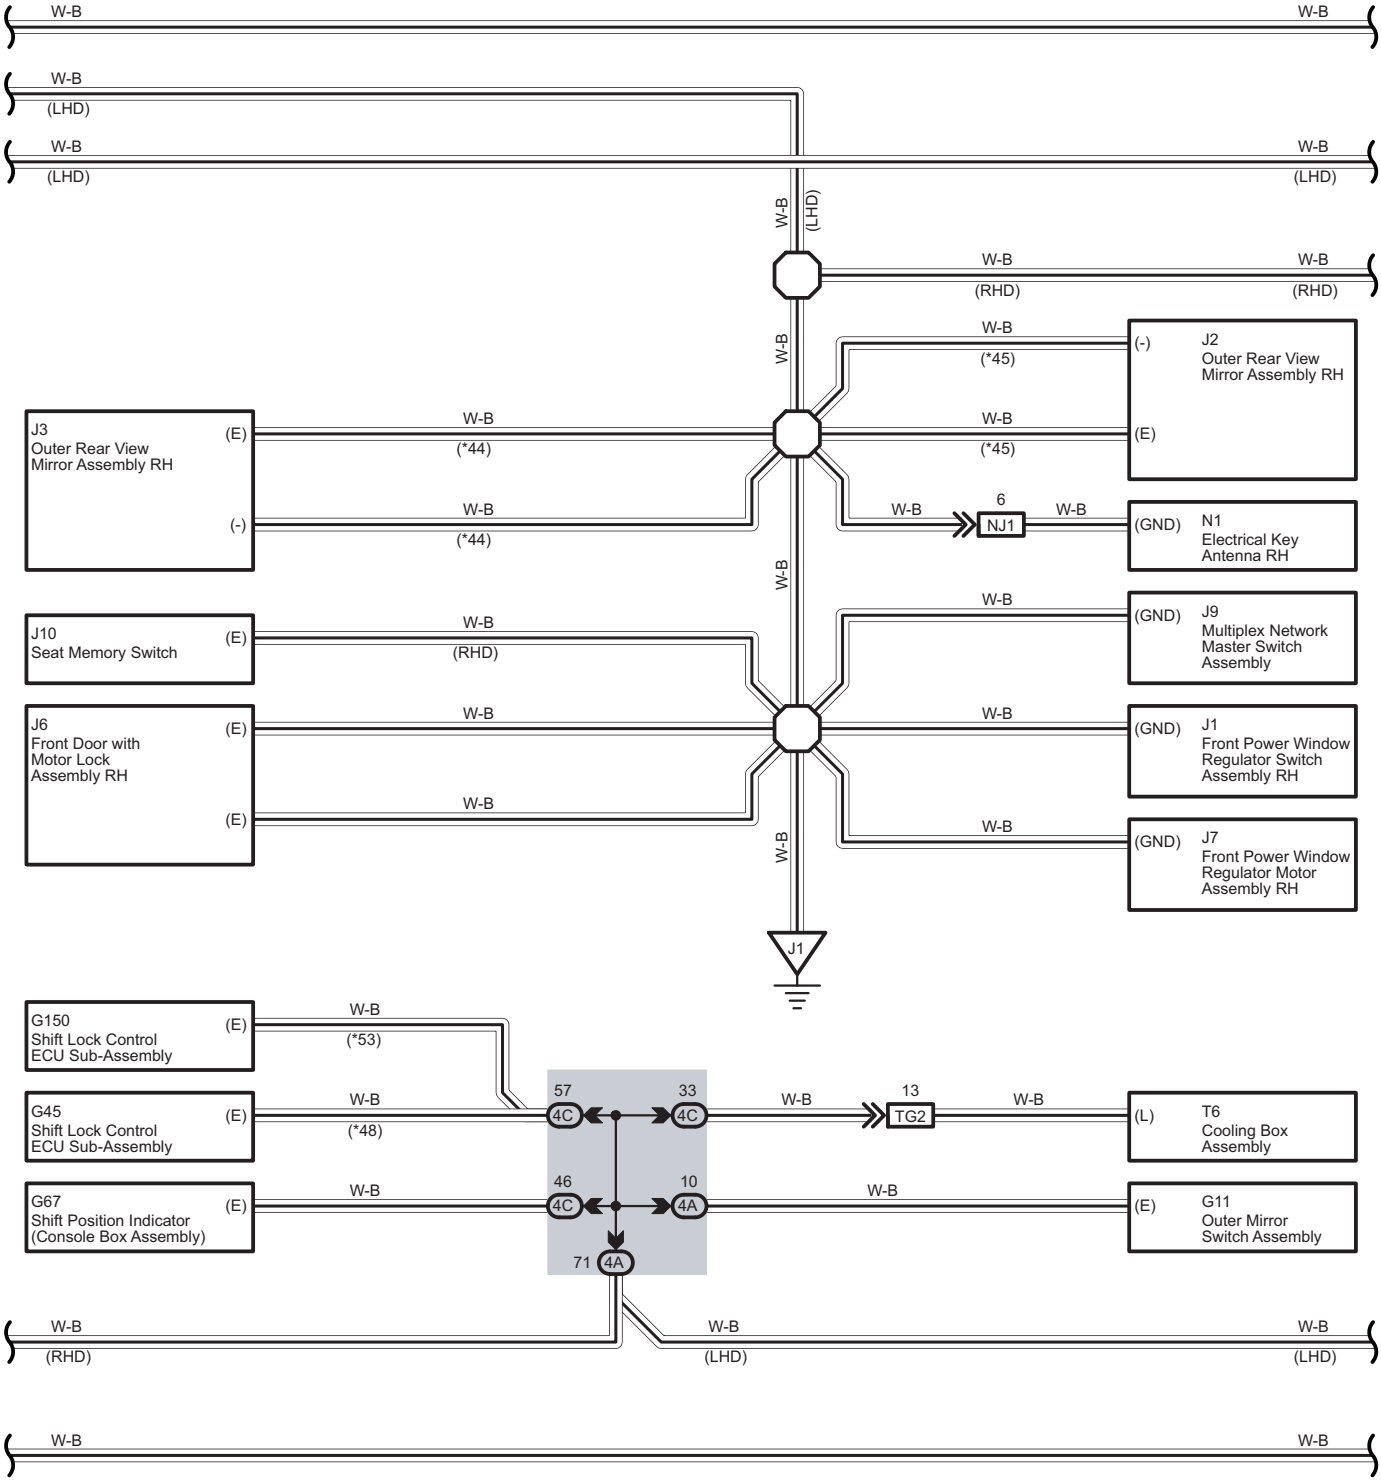



*44 :w/ Side Monitor
*45 :w/o Side Monitor
*48 :w/ Entry & Start System
*53 :w/o Entry & Start System

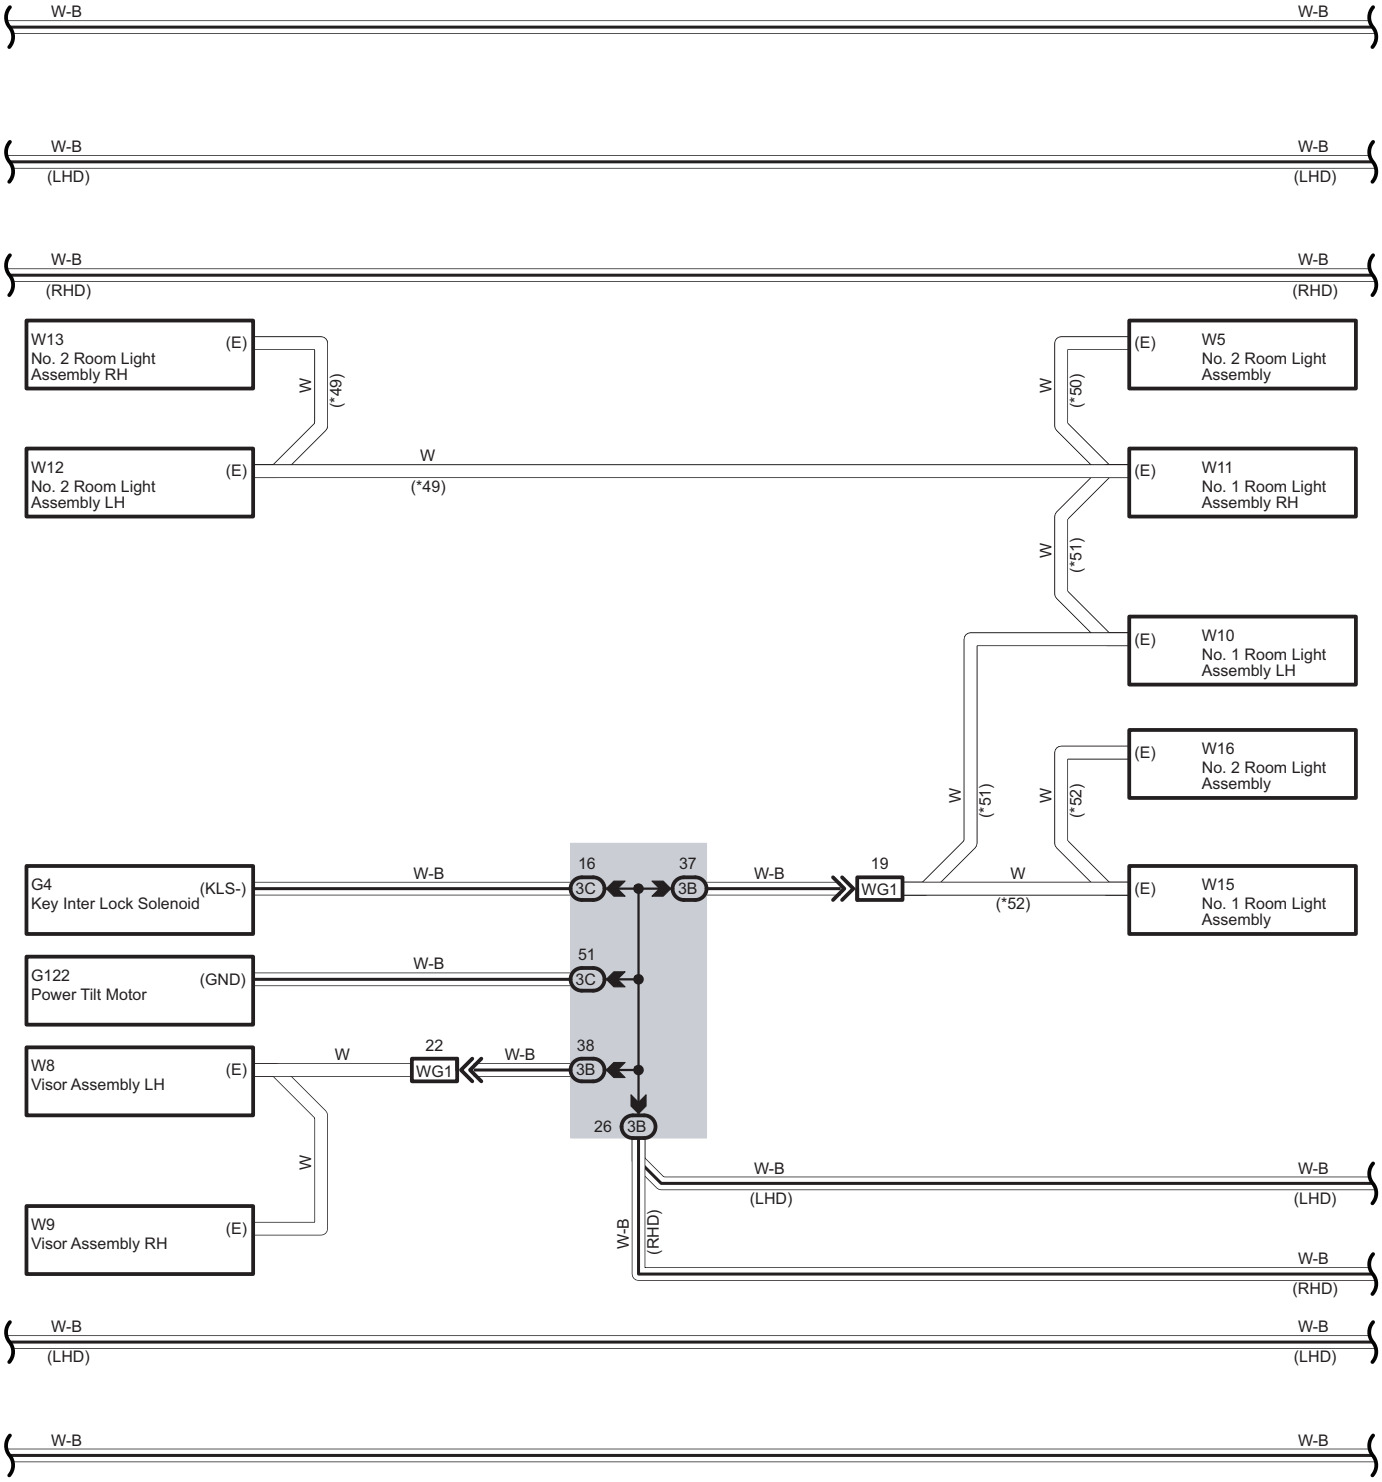


*49 :w/ Reading Light 5-Door Rear No. 2 Seat
*50 :w/ Reading Light 5-Door Except Rear No. 2 Seat
*51 :w/ Reading Light
*52 :w/o Reading Light
*60 :Except 5L-E

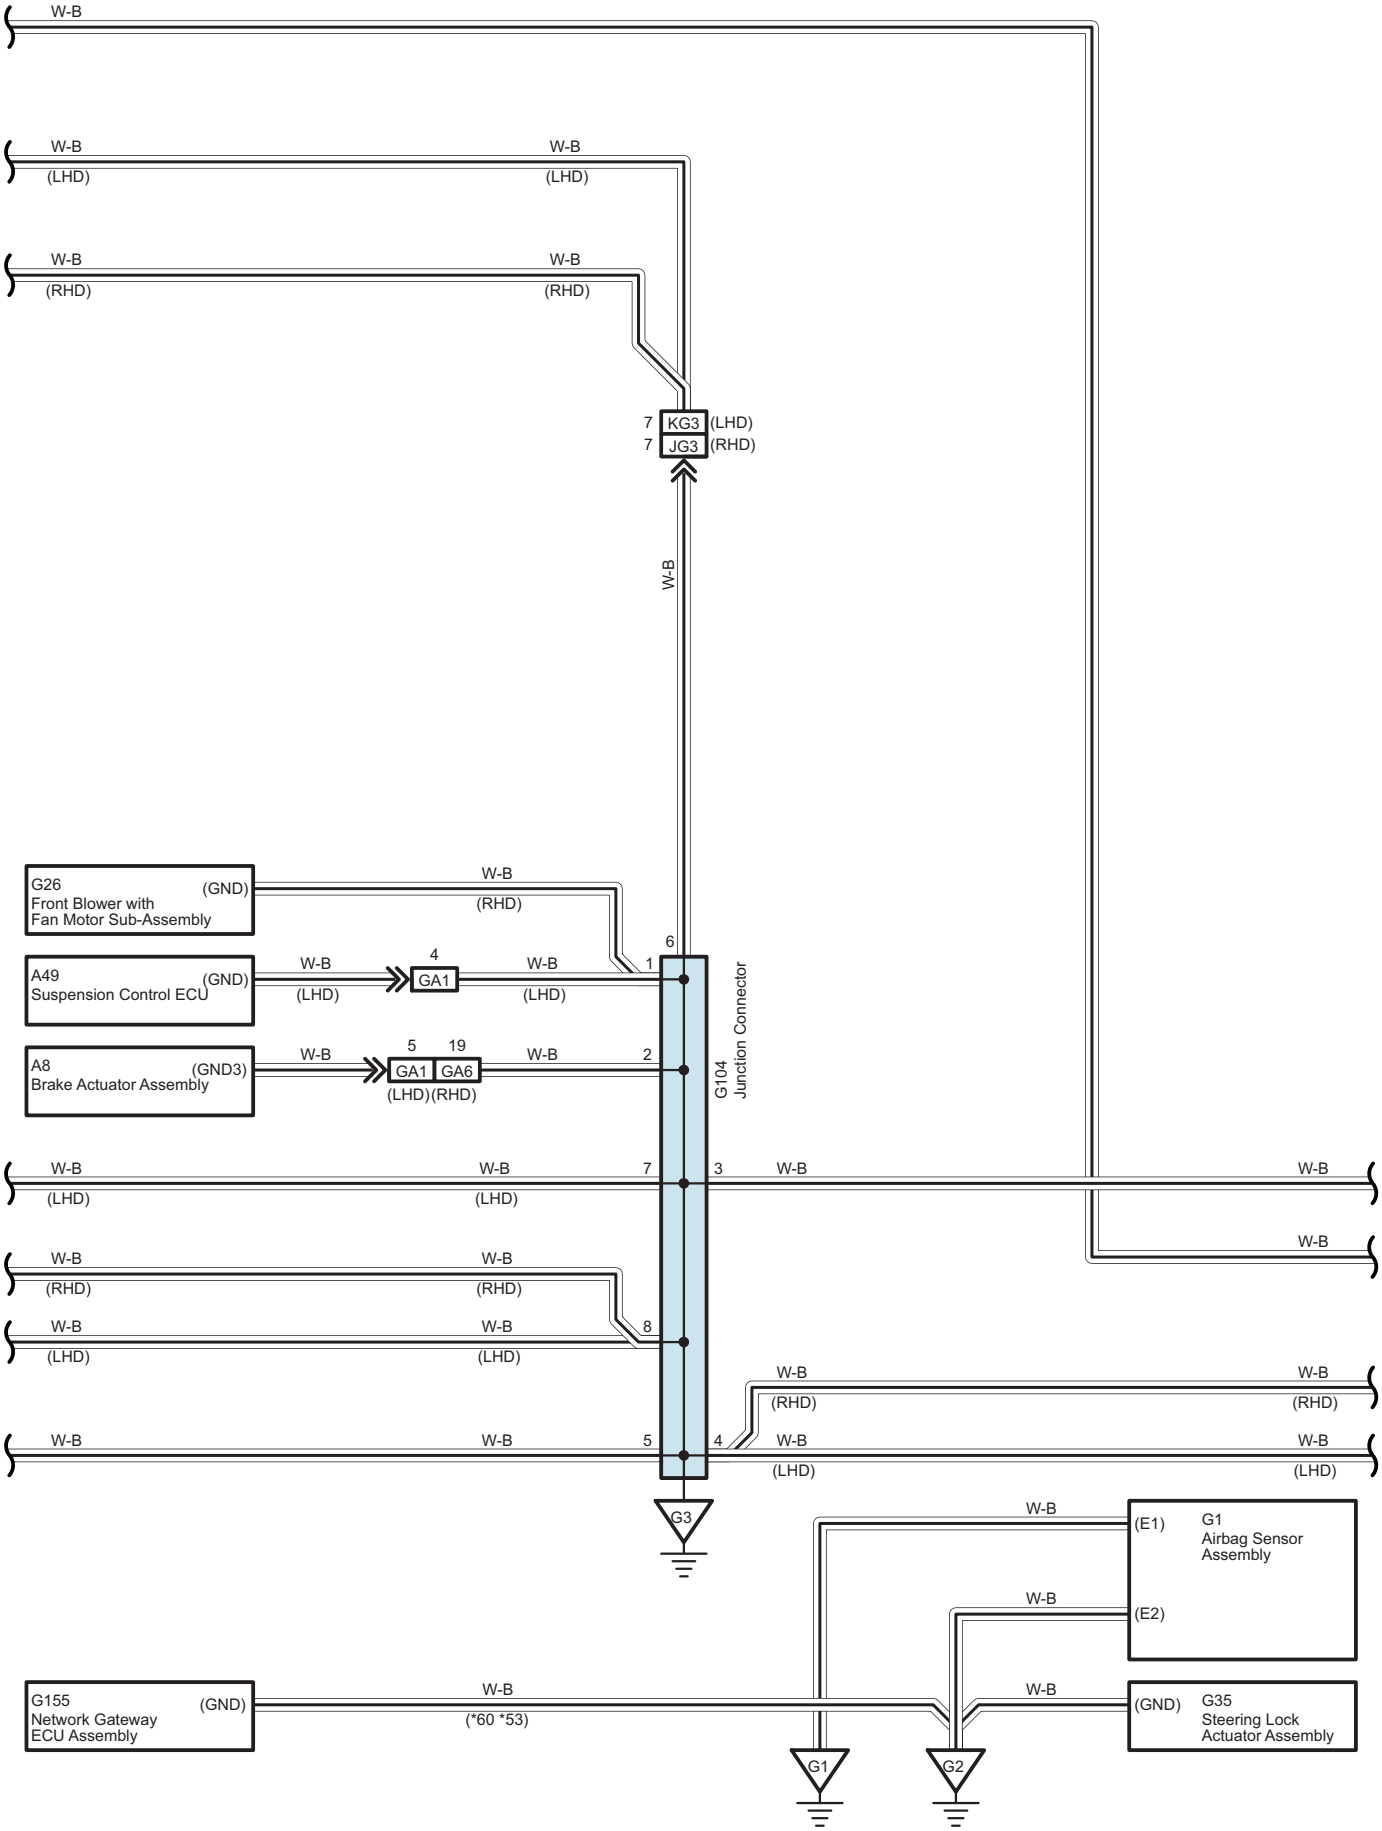
W-B
W-B
(LHD)
W-B
(LHD)
W-B
(RHD)
W-B
(RHD)
7 KG3 (LHD)
7 JG3 (RHD)
W-B
G26
Front Blower with
Fan Motor Sub-Assembly
(GND)
W-B
(RHD)
6
A49
Suspension Control ECU
(GND)
W-B
(LHD)
4
GA1
W-B
(LHD)
1
A8
Brake Actuator Assembly
(GND3)
W-B
5
19
GA1
GA6
W-B
(LHD)(RHD)
2
G104
Junction Connector
W-B
(LHD)
W-B
(LHD)
7
3
W-B
W-B
W-B
(RHD)
W-B
(RHD)
W-B
(LHD)
W-B
(LHD)
8
W-B
(RHD)
W-B
(RHD)
W-B
(LHD)
W-B
(LHD)
5
4
W-B
(LHD)
W-B
(LHD)
G3
W-B
(E1)
G1
Airbag Sensor
Assembly
W-B
(E2)
G155
Network Gateway
ECU Assembly
(GND)
W-B
(*60 *53)
W-B
(GND)
G35
Steering Lock
Actuator Assembly
G1
G2

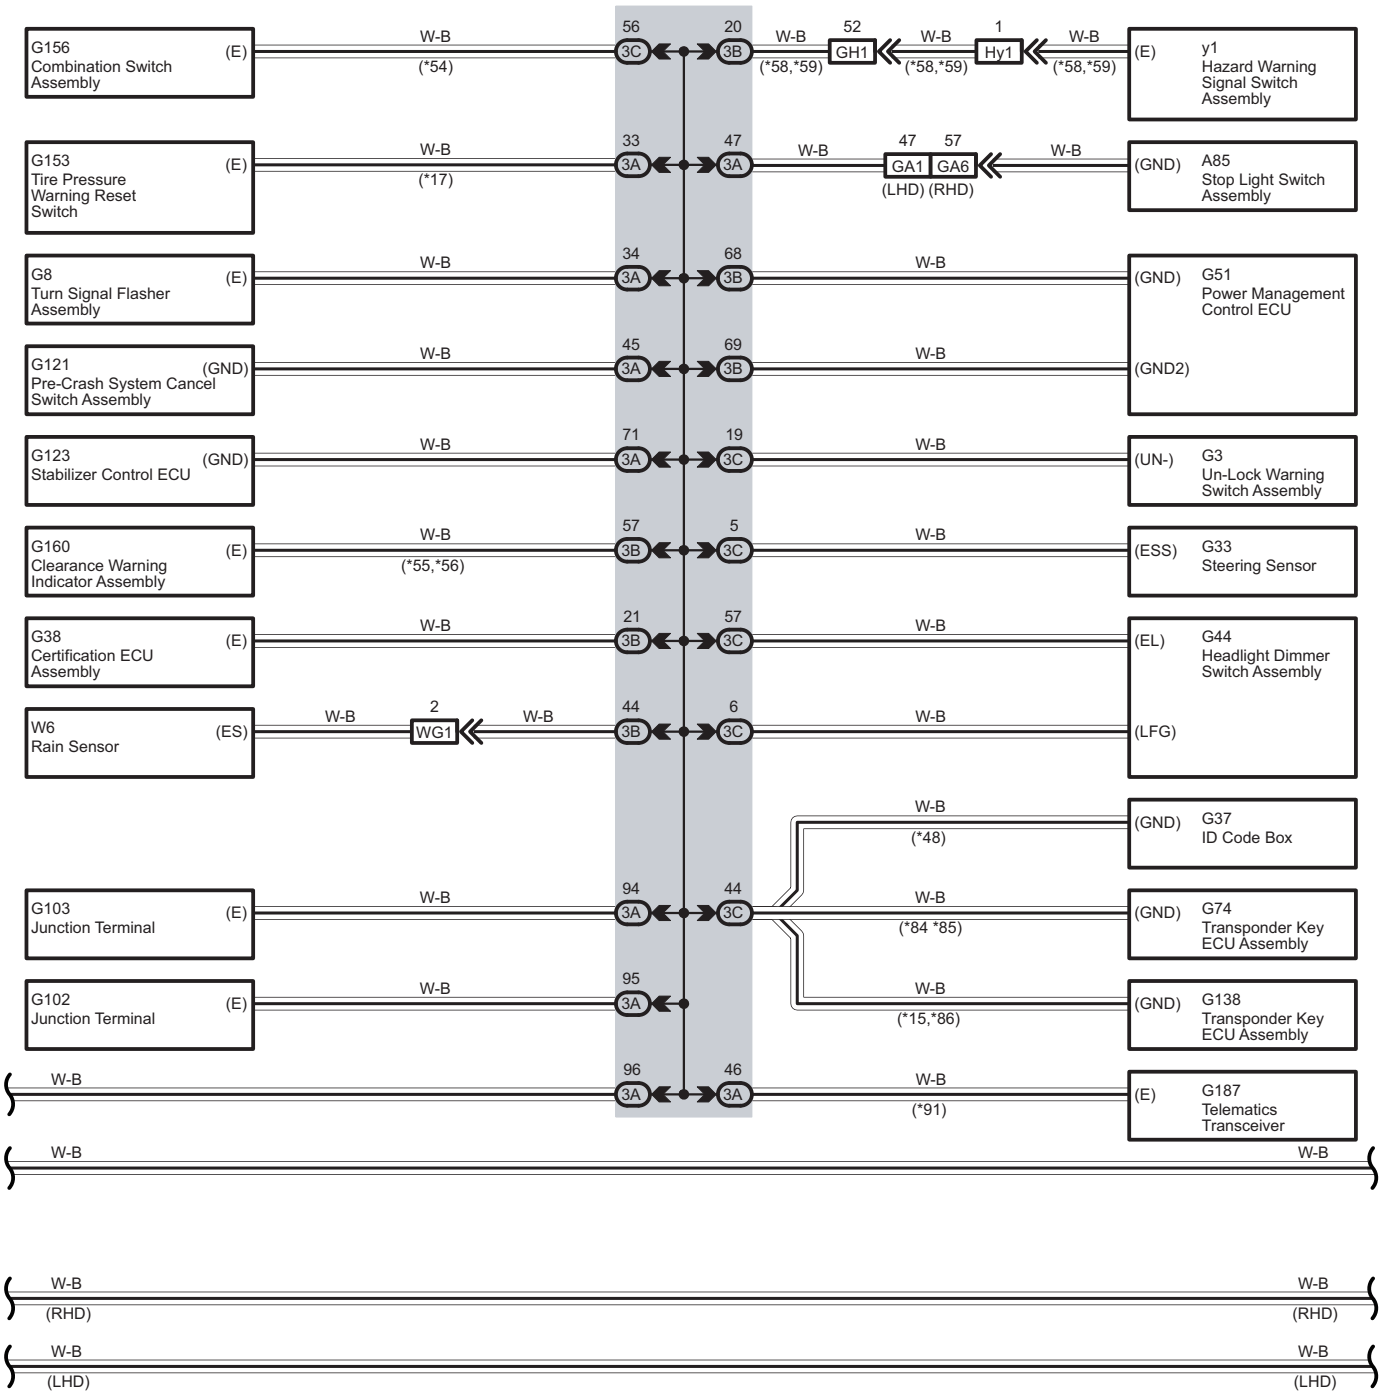

G156
Combination Switch Assembly
(E)
W-B
(*54)
56
3C
20
3B
W-B
(*58,*59)
52
GH1
W-B
(*58,*59)
1
Hy1
W-B
(*58,*59)
(E)
y1
Hazard Warning Signal Switch Assembly
G153
Tire Pressure Warning Reset Switch
(E)
W-B
(*17)
33
3A
47
3A
W-B
47
GA1
57
GA6
(LHD) (RHD)
W-B
(GND)
A85
Stop Light Switch Assembly
G8
Turn Signal Flasher Assembly
(E)
W-B
34
3A
68
3B
W-B
(GND)
G51
Power Management Control ECU
G121
Pre-Crash System Cancel Switch Assembly
(GND)
W-B
45
3A
69
3B
W-B
(GND2)
G123
Stabilizer Control ECU
(GND)
W-B
71
3A
19
3C
W-B
(UN-)
G3
Un-Lock Warning Switch Assembly
G160
Clearance Warning Indicator Assembly
(E)
W-B
(*55,*56)
57
3B
5
3C
W-B
(ESS)
G33
Steering Sensor
G38
Certification ECU Assembly
(E)
W-B
21
3B
57
3C
W-B
(EL)
G44
Headlight Dimmer Switch Assembly
W6
Rain Sensor
(ES)
W-B
2
WG1
W-B
44
3B
6
3C
W-B
(LFG)
W-B
(*48)
(GND)
G37
ID Code Box
G103
Junction Terminal
(E)
W-B
94
3A
44
3C
W-B
(*84 *85)
(GND)
G74
Transponder Key ECU Assembly
G102
Junction Terminal
(E)
W-B
95
3A
W-B
(*15,*86)
(GND)
G138
Transponder Key ECU Assembly
W-B
96
3A
46
3A
W-B
(*91)
(E)
G187
Telematics Transceiver
W-B
W-B
W-B
(RHD)
W-B
(RHD)
W-B
(LHD)
W-B
(LHD)

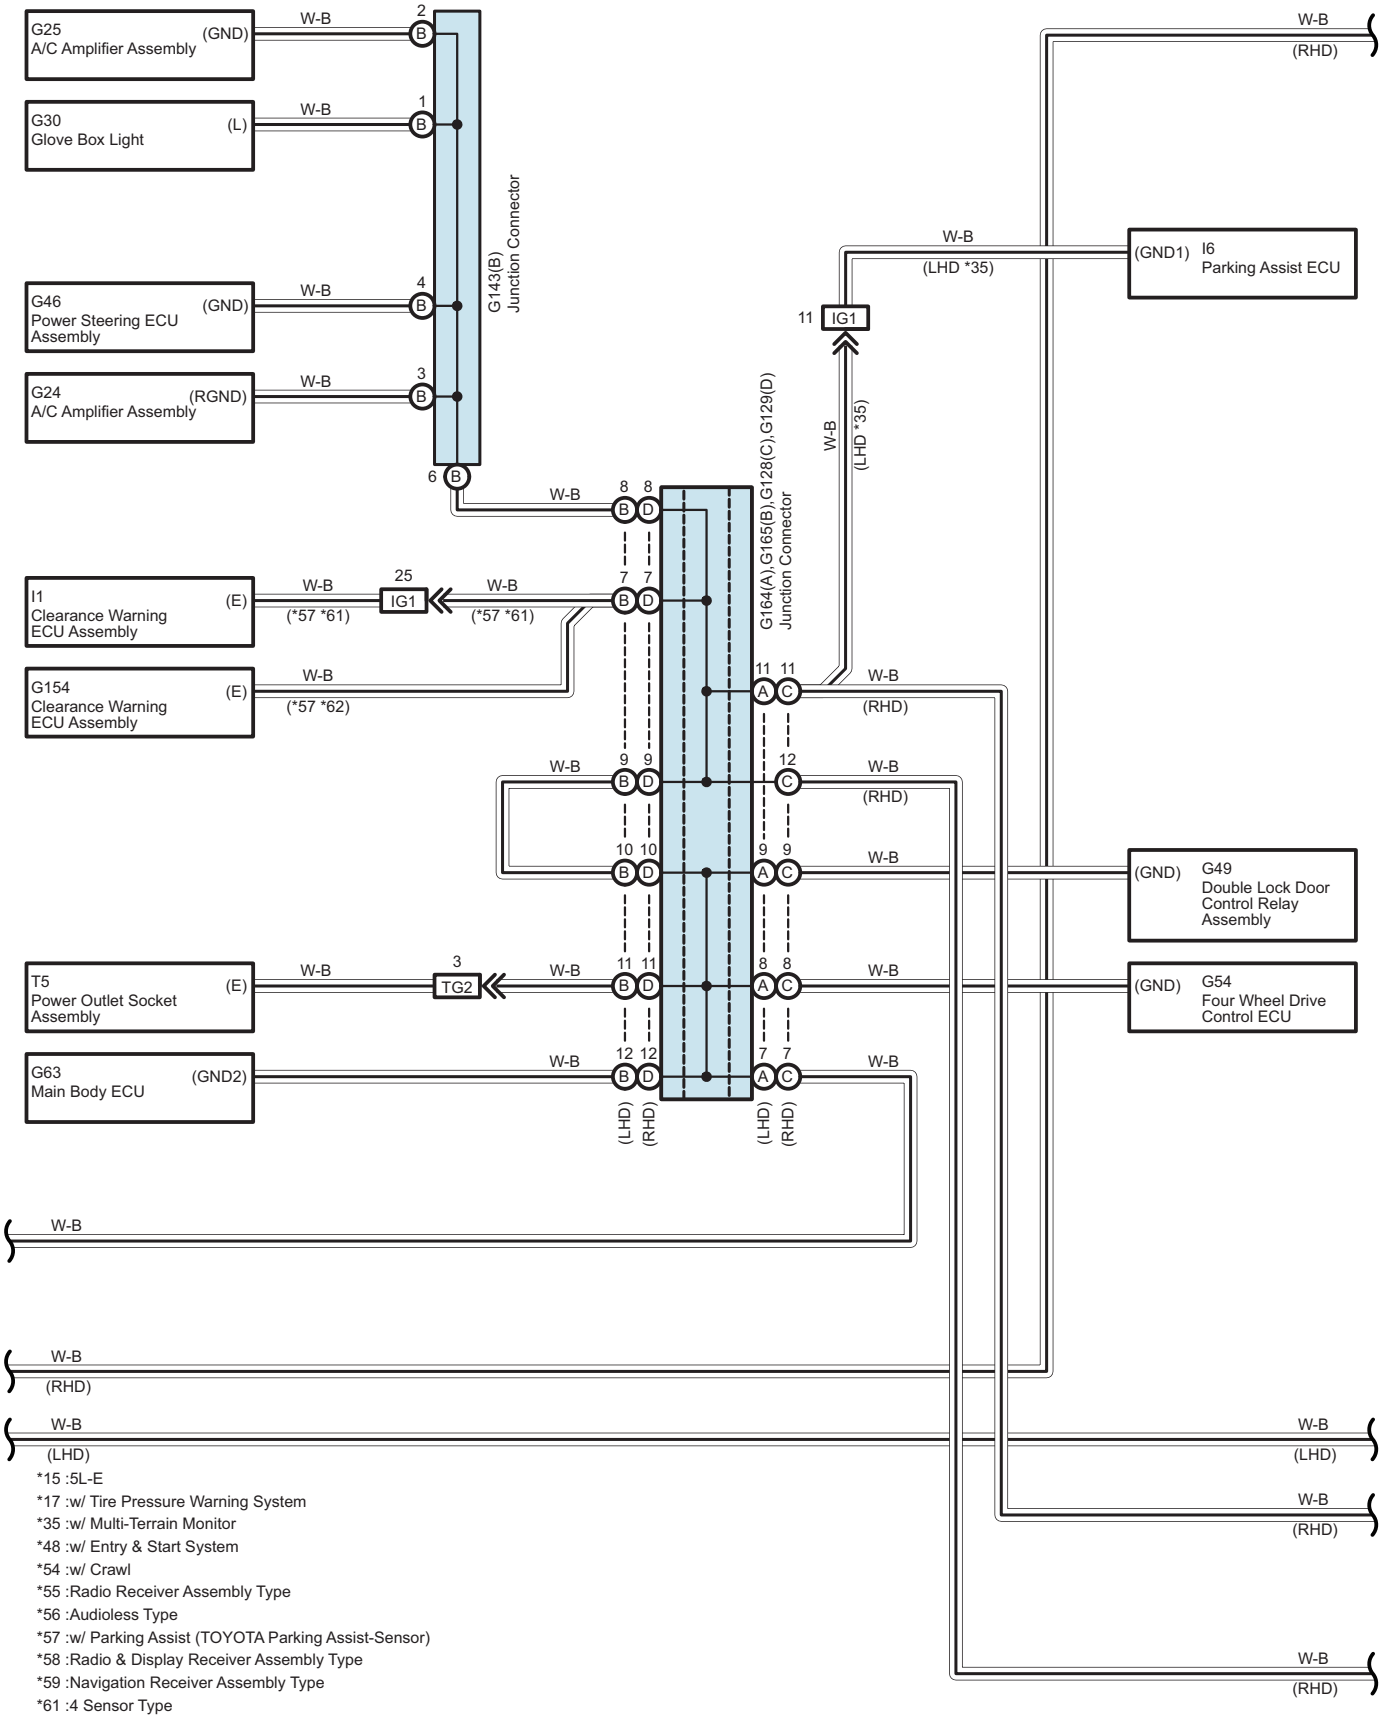


*15 :5L-E
*17 :w/ Tire Pressure Warning System
*35 :w/ Multi-Terrain Monitor
*48 :w/ Entry & Start System
*54 :w/ Crawl
*55 :Radio Receiver Assembly Type
*56 :Audioless Type
*57 :w/ Parking Assist (TOYOTA Parking Assist-Sensor)
*58 :Radio & Display Receiver Assembly Type
*59 :Navigation Receiver Assembly Type
*61 :4 Sensor Type
*62 :8 Sensor Type
*84 :2TR-FE w/o Entry & Start System
*85 :RHD 1KD-FTV w/o Entry & Start System
*85 :RHD 1KD-FTV w/o Entry & Start System
*91 :w/ Telematics System

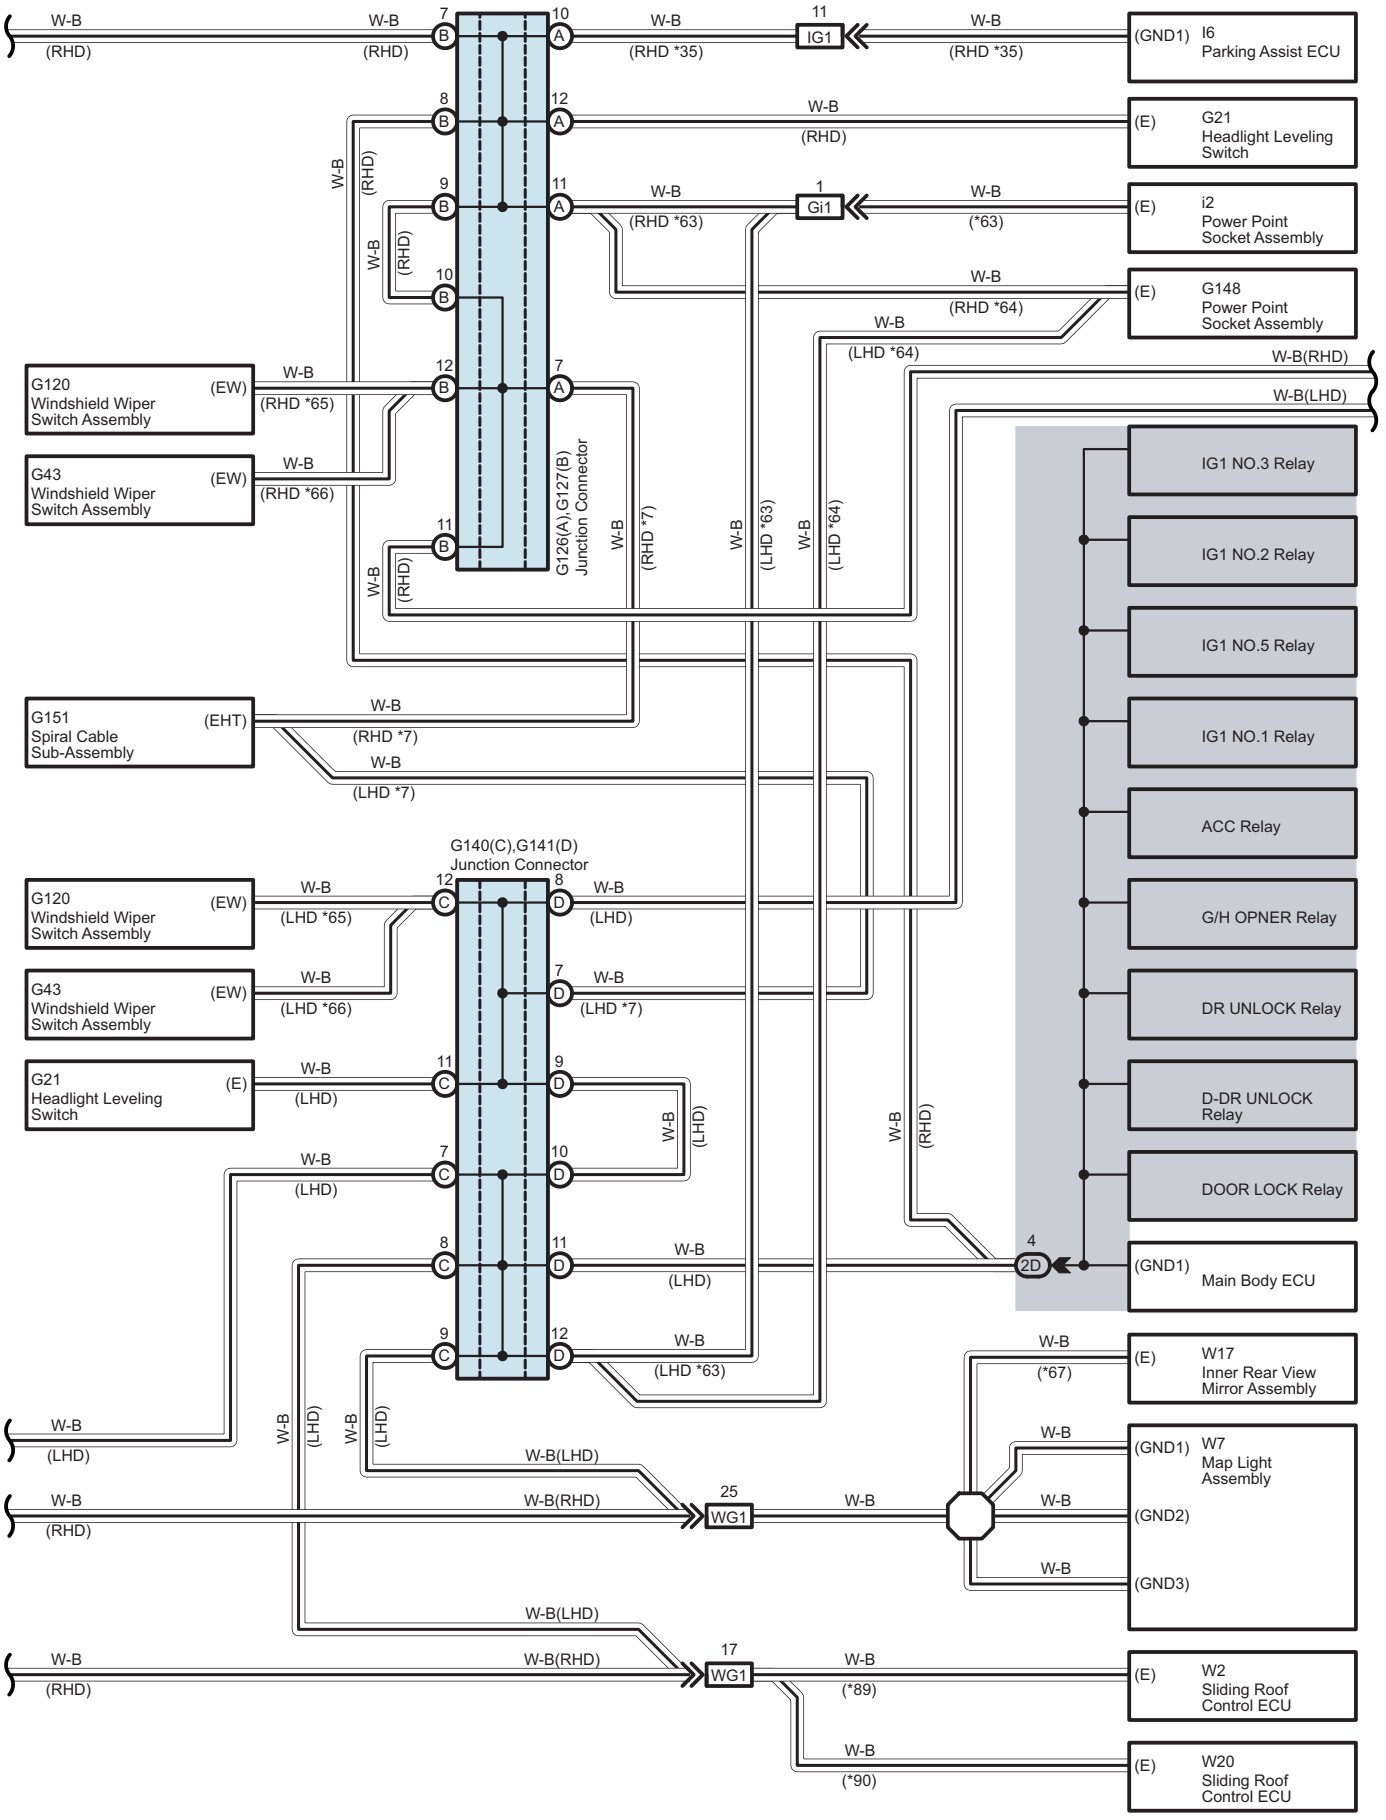

W-B
(RHD)
W-B
(RHD)
7
B
10
A
W-B
(RHD *35)
11
IG1
W-B
(RHD *35)
(GND1)
I6
Parking Assist ECU
8
B
12
A
W-B
(RHD)
(E)
G21
Headlight Leveling Switch
9
B
11
A
W-B
(RHD *63)
1
Gi1
W-B
(*63)
(E)
i2
Power Point Socket Assembly
10
B
W-B
(RHD *64)
(E)
G148
Power Point Socket Assembly
W-B
(LHD *64)
W-B(RHD)
W-B(LHD)
G120
Windshield Wiper Switch Assembly
(EW)
W-B
(RHD *65)
12
B
7
A
G43
Windshield Wiper Switch Assembly
(EW)
W-B
(RHD *66)
11
B
G126(A),G127(B)
Junction Connector
W-B
(RHD)
W-B
(RHD)
W-B
(RHD)
W-B
(RHD *7)
W-B
(LHD *63)
W-B
(LHD *64)
IG1 NO.3 Relay
IG1 NO.2 Relay
IG1 NO.5 Relay
IG1 NO.1 Relay
ACC Relay
G/H OPNER Relay
DR UNLOCK Relay
D-DR UNLOCK Relay
DOOR LOCK Relay
G151
Spiral Cable Sub-Assembly
(EHT)
W-B
(RHD *7)
W-B
(LHD *7)
G140(C),G141(D)
Junction Connector
G120
Windshield Wiper Switch Assembly
(EW)
W-B
(LHD *65)
12
C
8
D
W-B
(LHD)
G43
Windshield Wiper Switch Assembly
(EW)
W-B
(LHD *66)
7
D
W-B
(LHD *7)
G21
Headlight Leveling Switch
(E)
W-B
(LHD)
11
C
9
D
W-B
(LHD)
W-B
(LHD)
7
C
10
D
W-B
(LHD)
8
C
11
D
W-B
(LHD)
4
2D
(GND1)
Main Body ECU
9
C
12
D
W-B
(LHD *63)
W-B
(*67)
(E)
W17
Inner Rear View Mirror Assembly
W-B
(LHD)
W-B
(LHD)
W-B(LHD)
W-B
(RHD)
W-B(RHD)
25
WG1
W-B
W-B
(GND1)
W7
Map Light Assembly
W-B
(GND2)
W-B
(GND3)
W-B(LHD)
W-B
(RHD)
W-B(RHD)
17
WG1
W-B
(*89)
(E)
W2
Sliding Roof Control ECU
W-B
(*90)
(E)
W20
Sliding Roof Control ECU


* 7 :w/ Heated Steering Wheel System
*35 :w/ Multi-Terrain Monitor
*36 :w/ Pattern Select Switch Assembly
*37 :A/T w/ Climate Control Seat
*38 :M/T w/ Climate Control Seat
*39 :A/T w/ Seat Heater (Front)
*40 :M/T w/ Seat Heater (Front)
*42 :w/o Crawl
*43 :w/ Downhill Assist Control
*54 :w/ Crawl
*55 :Radio Receiver Assembly Type
*56 :Audioless Type
*58 :Radio & Display Receiver Assembly Type
*59 :Navigation Receiver Assembly Type
*63 :Separate Seat
*64 :Bench Seat
*65 :w/ Auto Wiper System
*66 :w/o Auto Wiper System
*67 :w/ Automatic Glare-Resistant EC Mirror with Compass
*89 :Before Aug. 2016 Production
*90 :From Aug. 2016 Production

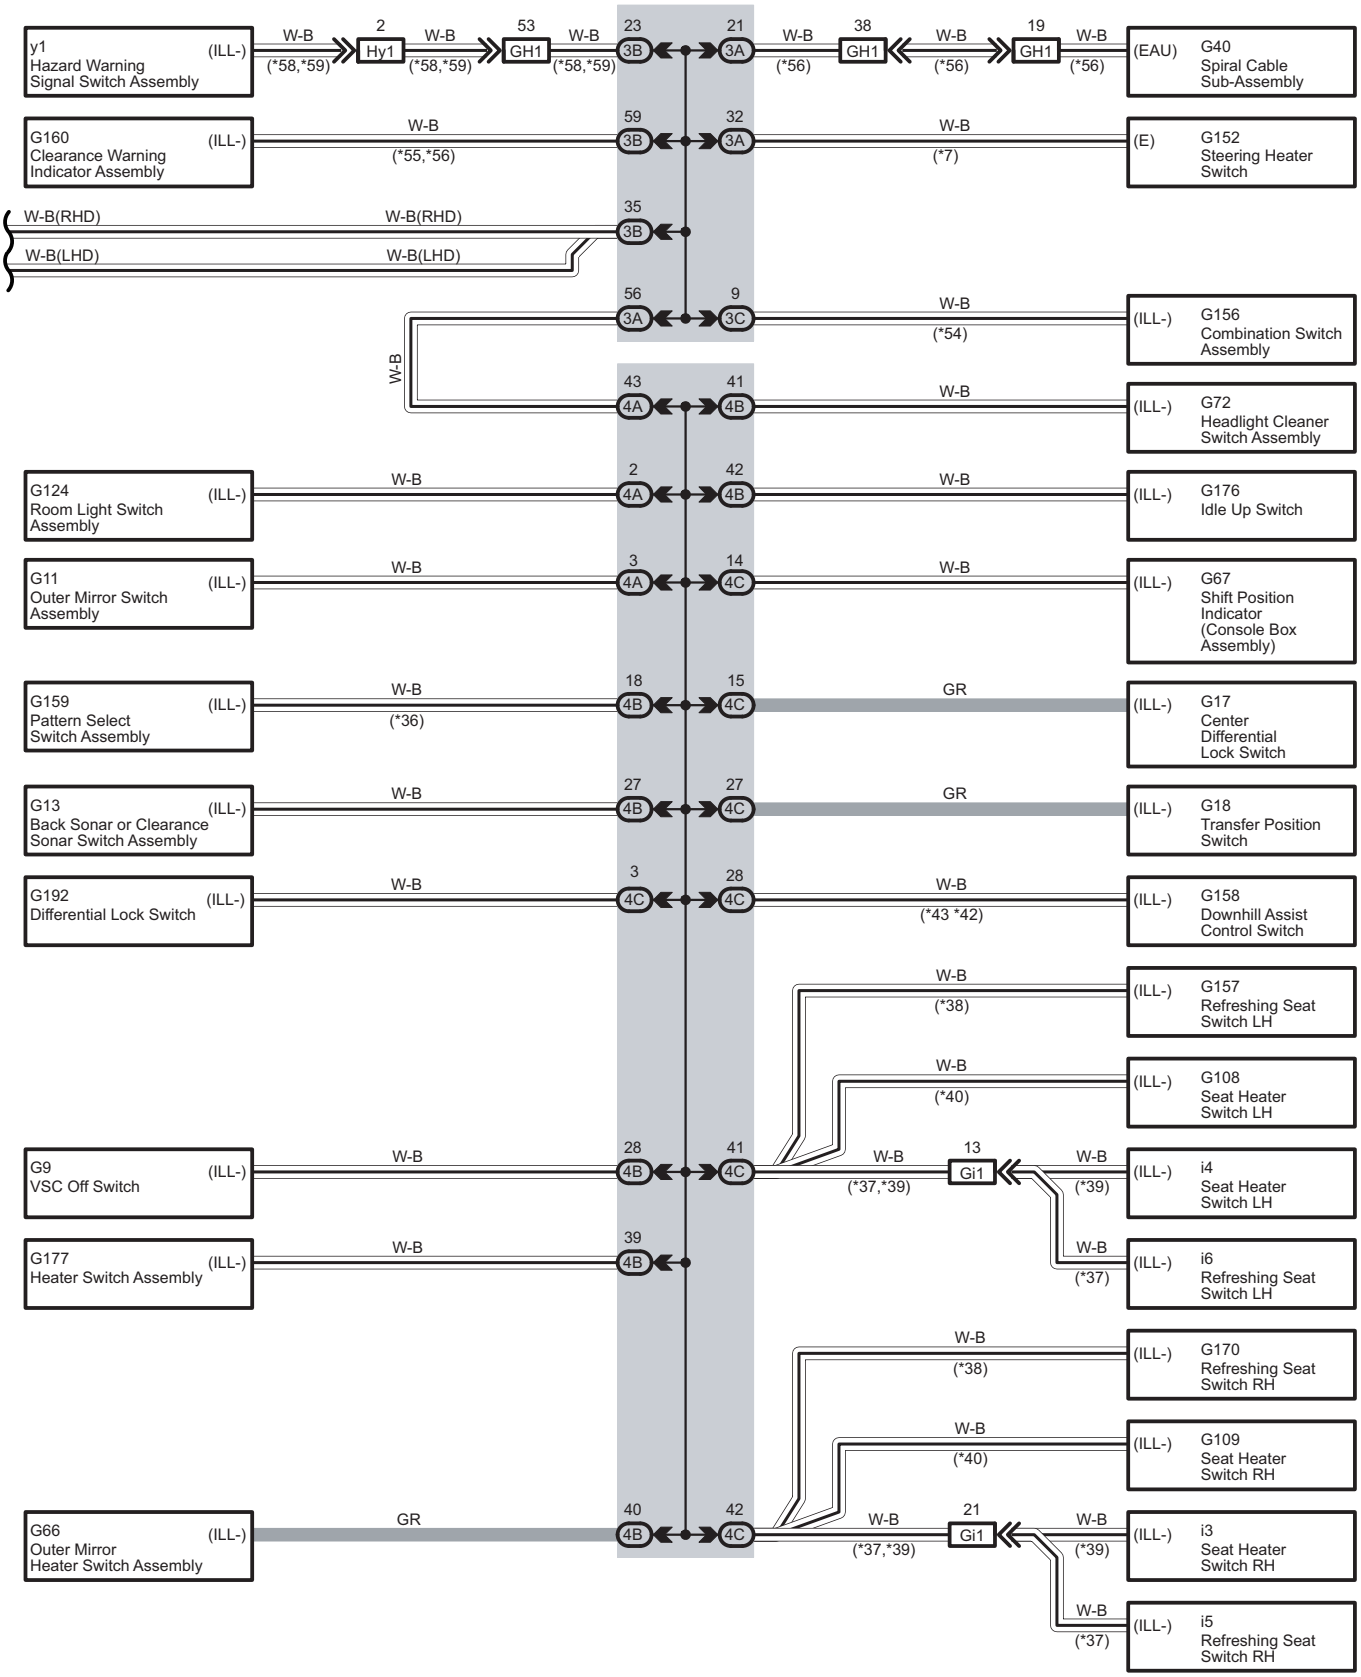


*11 :1GR-FE
*19 :5-Door
*24 :w/ Seat Heater (Front)
*25 :w/o Seat Heater (Front)
*26 :w/ Seat Position Memory
*27 :w/o Seat Position Memory
*28 :w/ Climate Control Seat
*29 :w/ Power Seat Except Lumbar Support Control Only
*31 :w/o Power Seat
*32 :w/ Power Seat Lumbar Support Control Only
*34 :3-Door
*53 :w/o Entry & Start System
*68 :w/ Rear Differential Lock 5-Door
*69 :w/ Power Rear No. 2 Seat with Stowing Function
*73 :w/ Blind Spot Monitor System
*74 :w/ Fuel Sub Tank
*81 :1GD-FTV w/ Urea SCR
*82 :Except *81
*83 :Except 1GR-FE

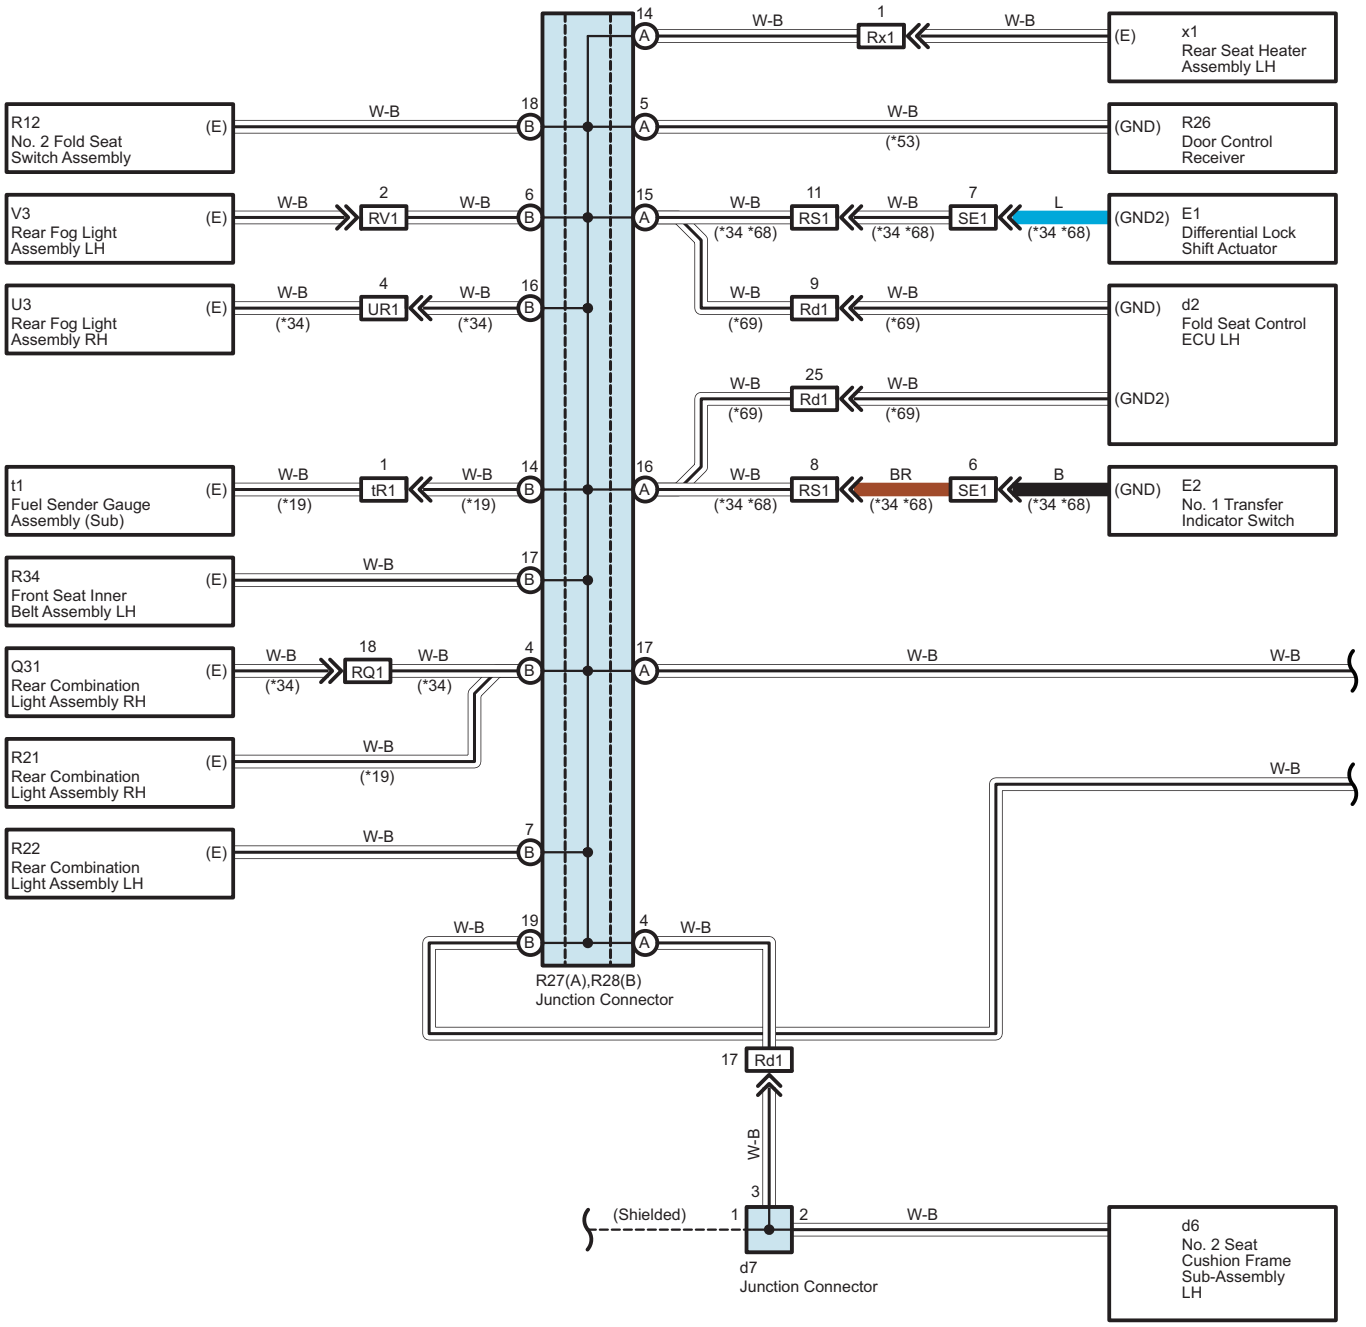

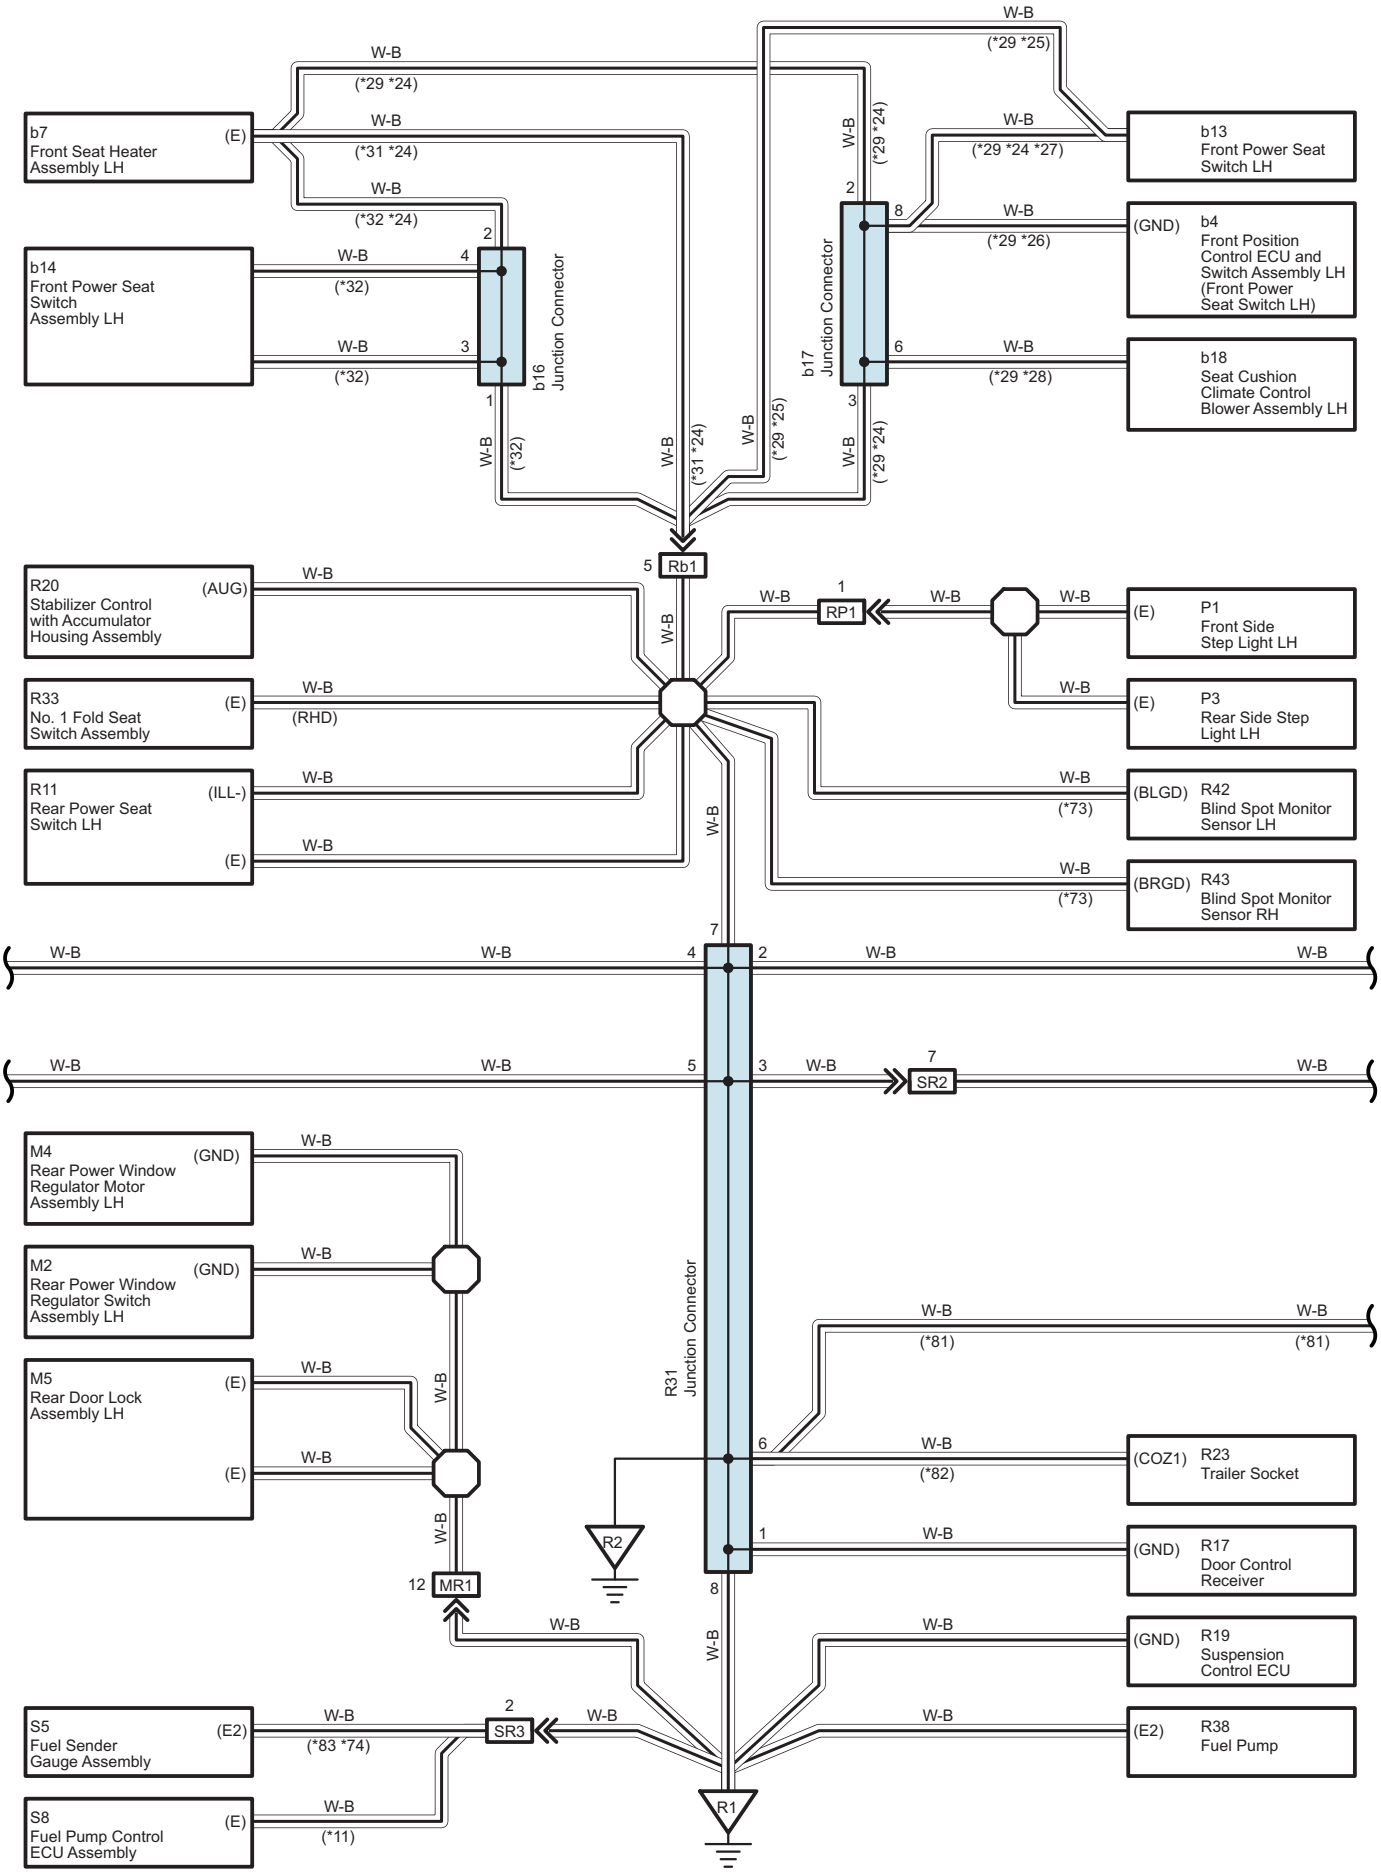
b7
Front Seat Heater Assembly LH
(E)
b14
Front Power Seat Switch Assembly LH
b16
Junction Connector
b17
Junction Connector
b13
Front Power Seat Switch LH
(GND)
b4
Front Position Control ECU and Switch Assembly LH (Front Power Seat Switch LH)
b18
Seat Cushion Climate Control Blower Assembly LH
Rb1
RP1
R20
Stabilizer Control with Accumulator Housing Assembly
(AUG)
R33
No. 1 Fold Seat Switch Assembly
(RHD)
R11
Rear Power Seat Switch LH
(ILL-)
P1
Front Side Step Light LH
P3
Rear Side Step Light LH
R42
Blind Spot Monitor Sensor LH
(BLGD)
R43
Blind Spot Monitor Sensor RH
(BRGD)
SR2
M4
Rear Power Window Regulator Motor Assembly LH
M2
Rear Power Window Regulator Switch Assembly LH
M5
Rear Door Lock Assembly LH
MR1
R31
Junction Connector
R2
R1
R23
Trailer Socket
(COZ1)
R17
Door Control Receiver
R19
Suspension Control ECU
R38
Fuel Pump
SR3
S5
Fuel Sender Gauge Assembly
(E2)
S8
Fuel Pump Control ECU Assembly
W-B
(*29 *24)
(*29 *25)
(*29 *24 *27)
(*29 *26)
(*29 *28)
(*31 *24)
(*32 *24)
(*32)
(*31)
(*73)
(*81)
(*82)
(*83 *74)
(*11)

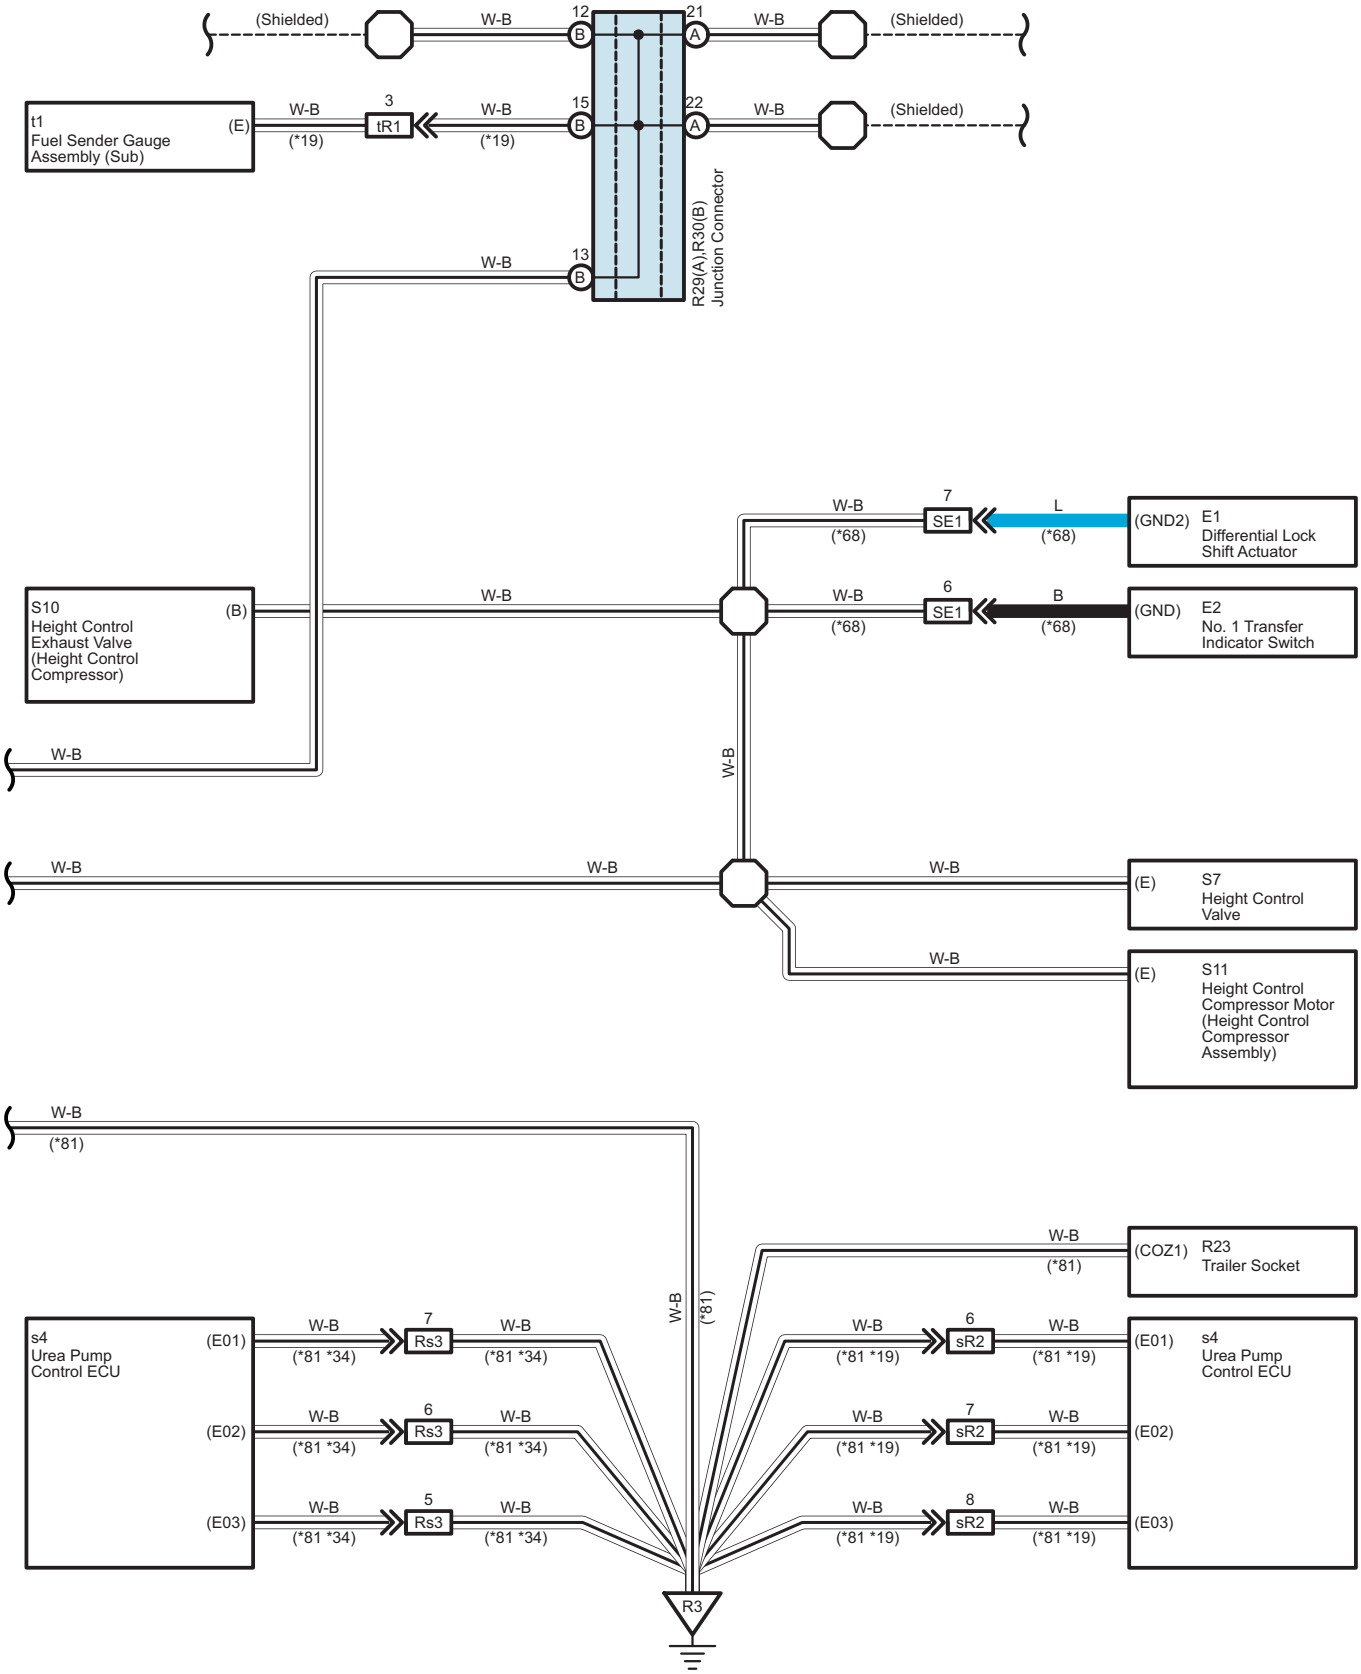
(Shielded)
W-B
12
B
21
A
W-B
(Shielded)
t1
Fuel Sender Gauge Assembly (Sub)
(E)
W-B
(*19)
3
tR1
W-B
(*19)
15
B
22
A
W-B
(Shielded)
R29(A),R30(B) Junction Connector
W-B
13
B
S10
Height Control Exhaust Valve (Height Control Compressor)
(B)
W-B
W-B
W-B
(*68)
7
SE1
L
(*68)
(GND2)
E1
Differential Lock Shift Actuator
W-B
(*68)
6
SE1
B
(*68)
(GND)
E2
No. 1 Transfer Indicator Switch
W-B
W-B
W-B
W-B
W-B
(E)
S7
Height Control Valve
W-B
(E)
S11
Height Control Compressor Motor (Height Control Compressor Assembly)
W-B
(*81)
W-B
(*81)
W-B
(*81)
(COZ1)
R23
Trailer Socket
s4
Urea Pump Control ECU
(E01)
(E02)
(E03)
W-B
(*81 *34)
7
Rs3
6
Rs3
5
Rs3
W-B
(*81 *34)
W-B
(*81 *19)
6
sR2
7
sR2
8
sR2
W-B
(*81 *19)
(E01)
(E02)
(E03)
s4
Urea Pump Control ECU
R3

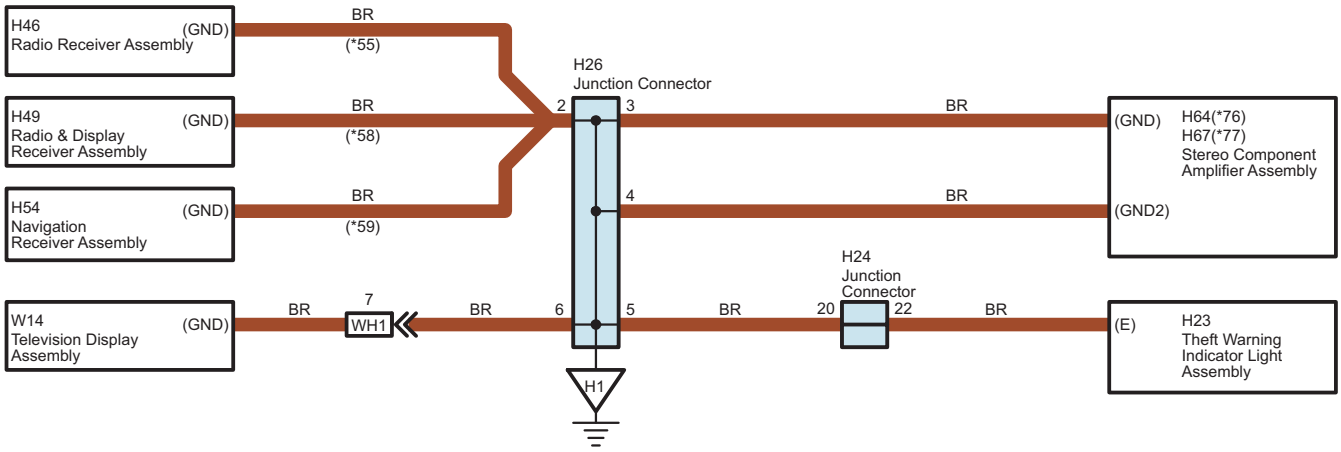

*19 :5-Door
*34 :3-Door
*55 :Radio Receiver Assembly Type
*58 :Radio & Display Receiver Assembly Type
*59 :Navigation Receiver Assembly Type
*68 :w/ Rear Differential Lock 5-Door
*76 :JBL Type
*77 :PIONEER Type
*81 :1GD-FTV w/ Urea SCR

A47
Gray




90980-10945

A48
Gray




90980-10946

A68
Dark Gray

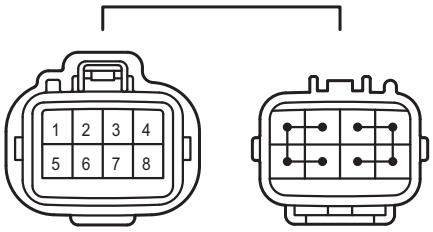


90980-10891

A70
White

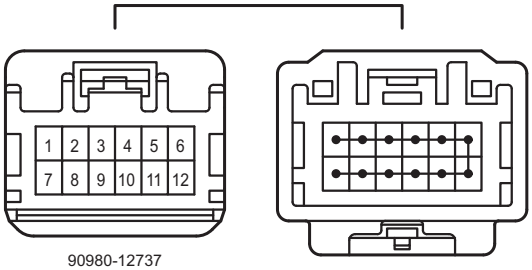


90980-12737

C48
White

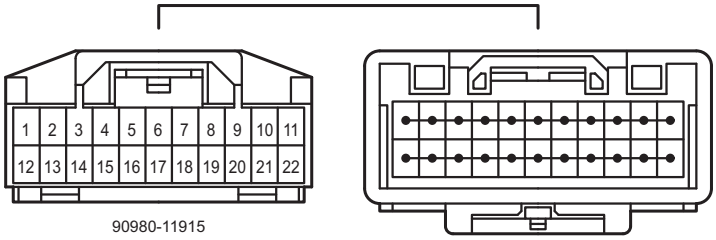


90980-11915

C136
White

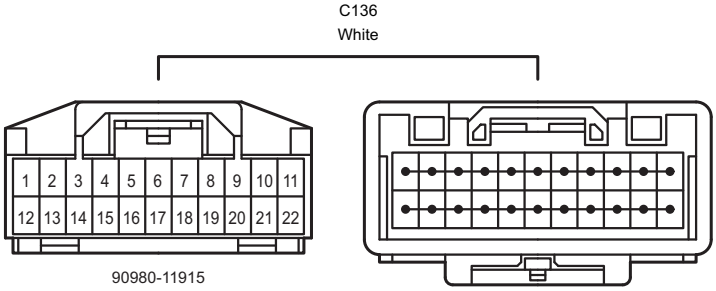


90980-11915

G104
White

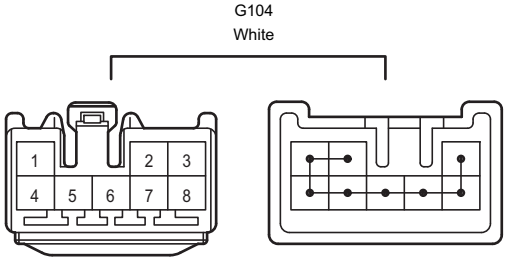


90980-11686

G105
White

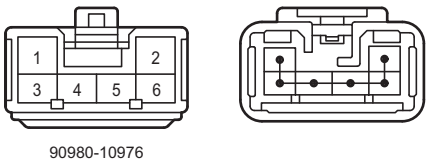


90980-10976

G106
White

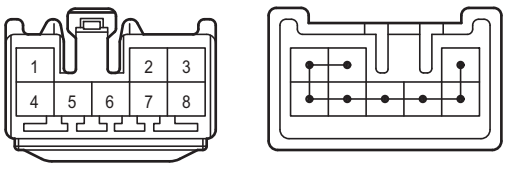


90980-11686

G126
Black

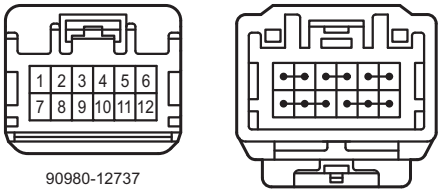


90980-12737

G127
Black

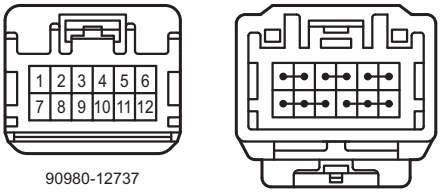


90980-12737

G128
Black

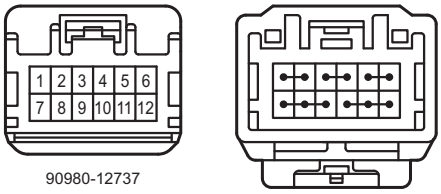


90980-12737

G129
Black

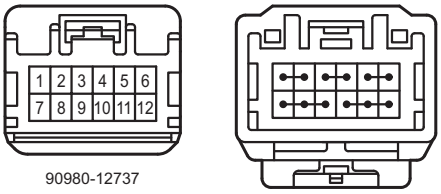


90980-12737

G140
Black

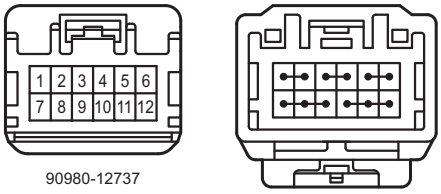


90980-12737

G141
Black

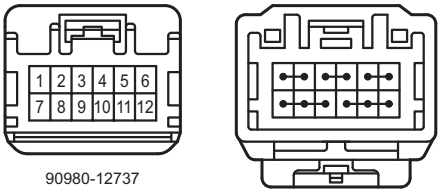


90980-12737

G143
Black

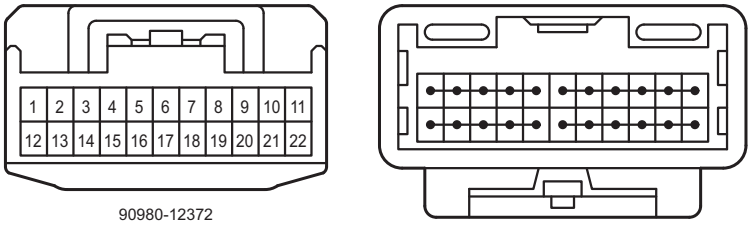


90980-12372

G164
Black

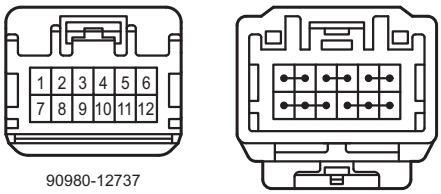


90980-12737

G165
Black

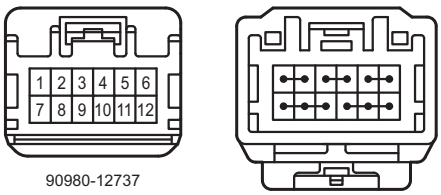


90980-12737

H24
White

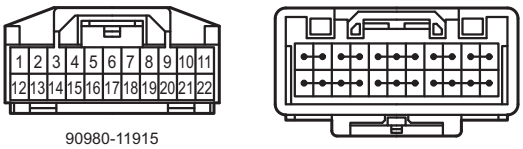


90980-11915

H26
White

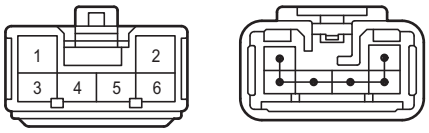


90980-10976

Q23
White

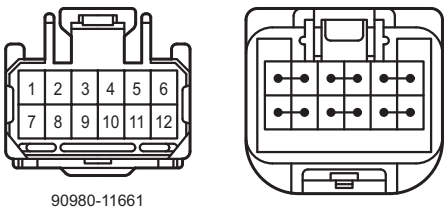


90980-11661

Q24
White

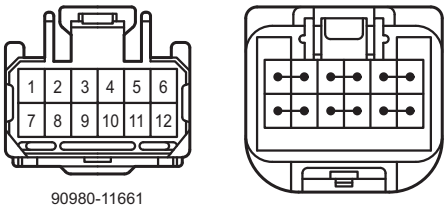


90980-11661

R27
Dark Gray

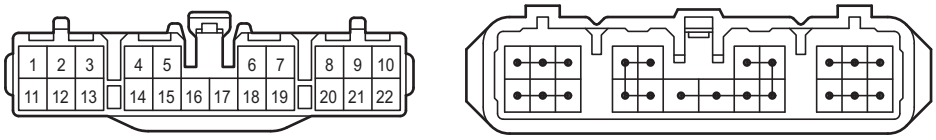


90980-11238

R28
White

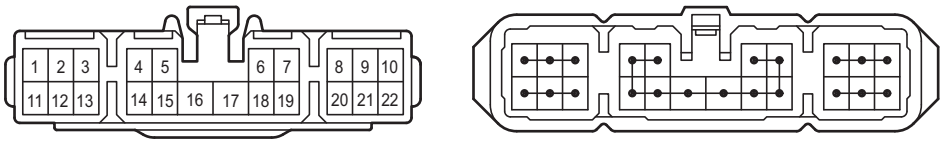


90980-10875

R29
Blue

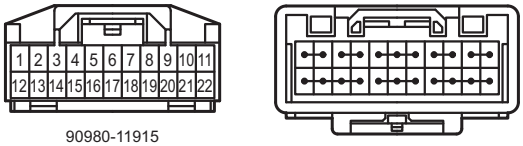


90980-11915

R30
Blue

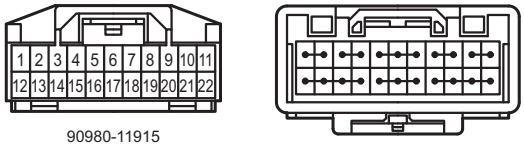

90980-11915

R31
White

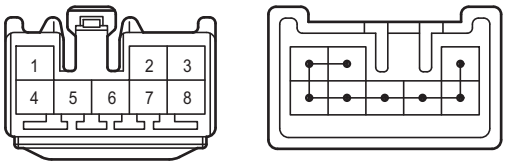


90980-11686

a16
Black



90980-11398

a17
White

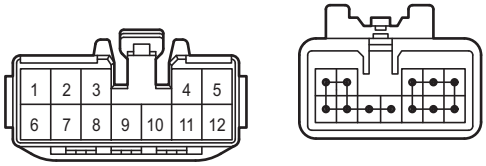


90980-12346

b16
Black



90980-11398

b17
White

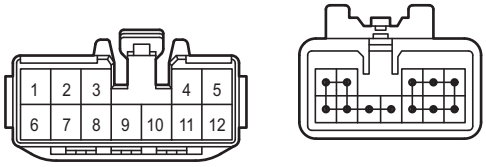


90980-12346

d7
Black




90980-11398

1 A
White

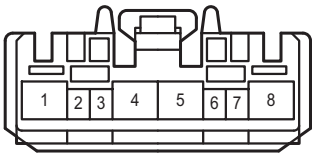


90980-12485

1 B
White

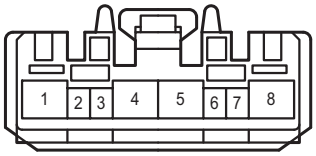


90980-12486

1 J
White




90980-10803

2 D
White

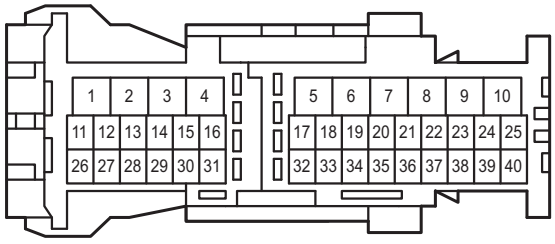


90980-12818

3 A
White

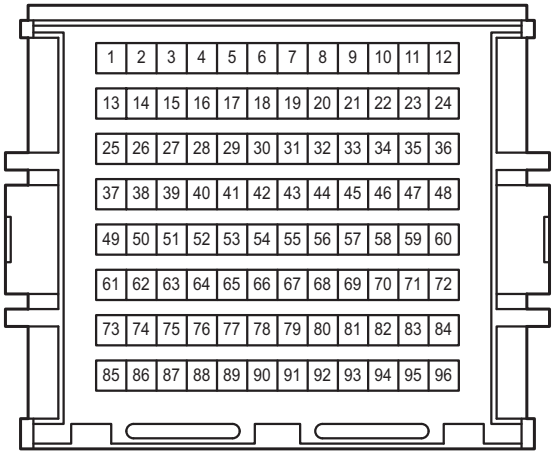


82890-12030

3 B
White

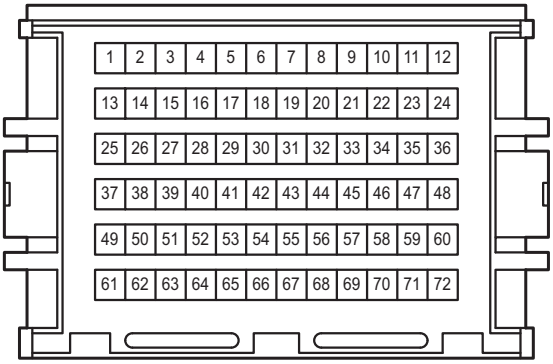


82890-42010

3 C
White

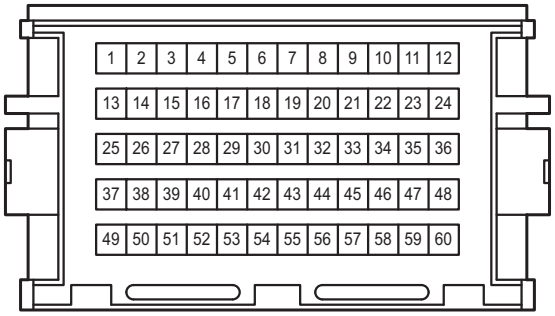


82890-12020

4 A
White

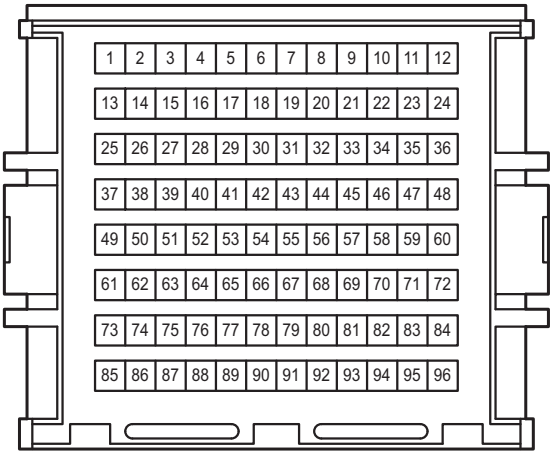


82890-12030

4 B
White

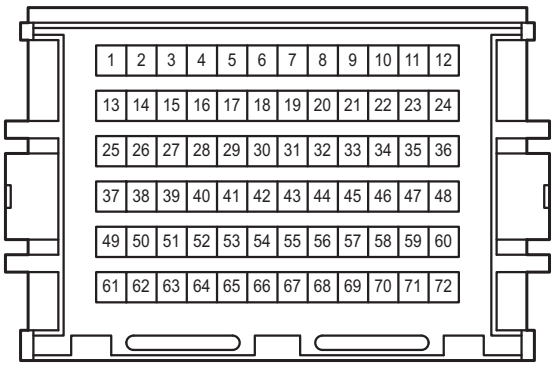

82890-42010


4 C
White

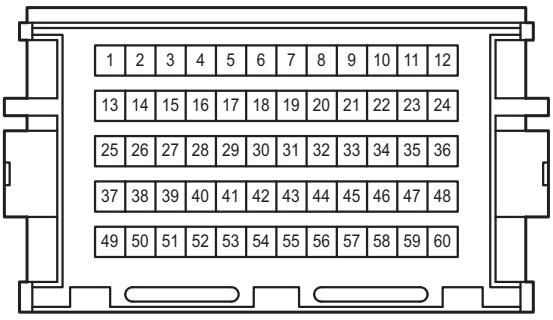


82890-12020

AC1

Black

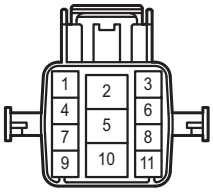

90980-11612

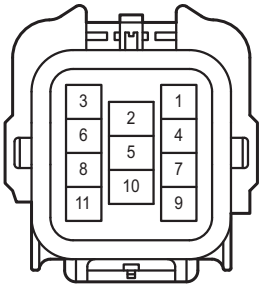

90980-11609

AC2

Dark Gray




90980-11242




90980-11241

BA2

Gray

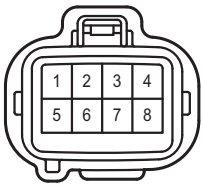


90980-10897

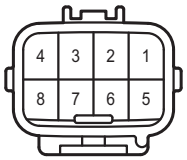


90980-10896

CA1

Black

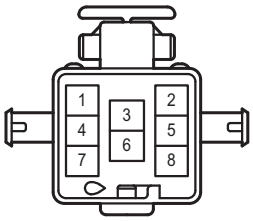


90980-11461

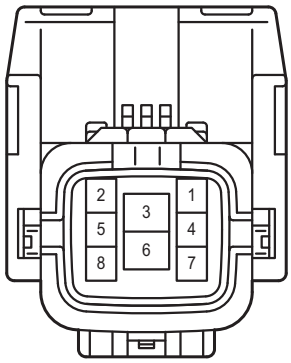


90980-11460

CA2

Black

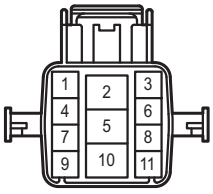


90980-11612

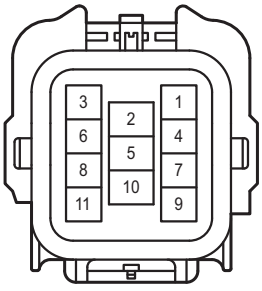


90980-11609

CG1

White

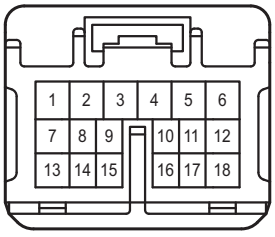


90980-12745

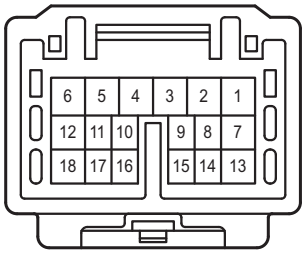

90980-12744

CG2

White

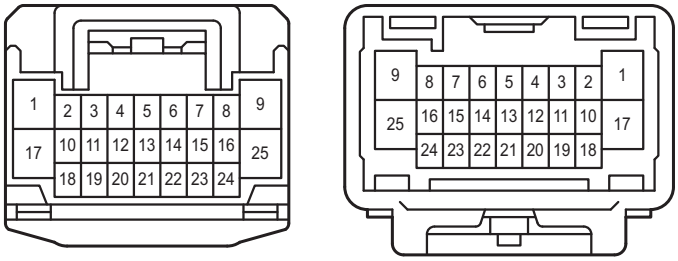


90980-12414

90980-12413

CG3

White

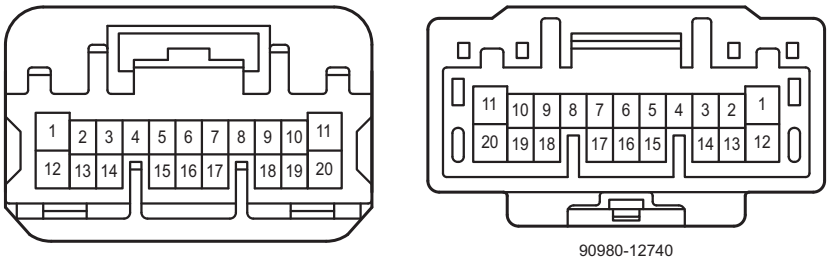


90980-12741

90980-12740

GA1

White

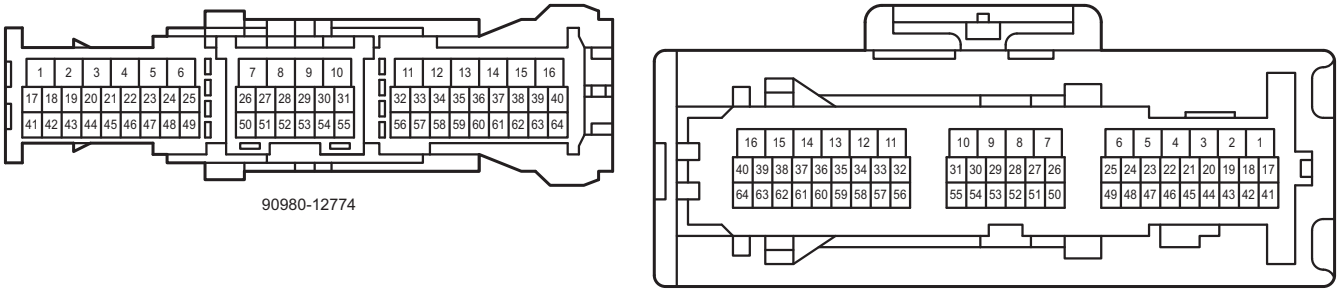


90980-12774


90980-12798

GA2

White

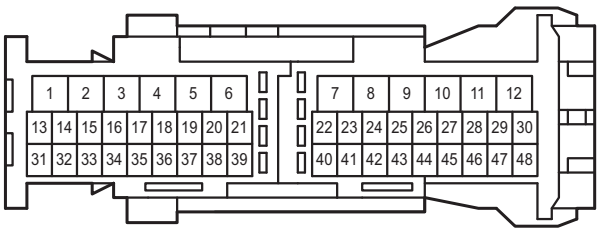


90980-12779

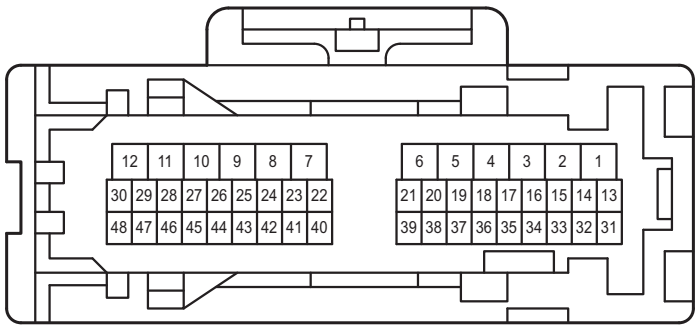


90980-12799

GA6

White

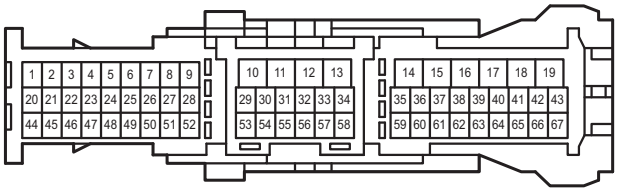


90980-12783

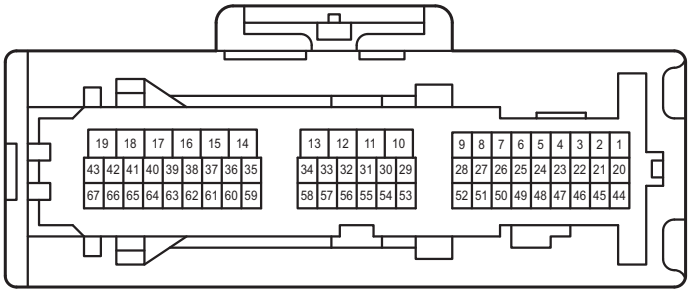


90980-12800

GA7

Black

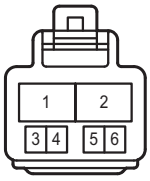


90980-10910

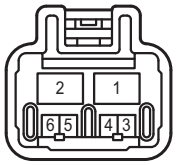


90980-10909

GH1

White

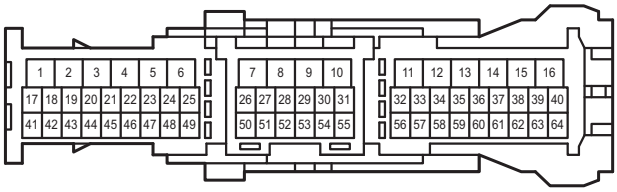


90980-12774

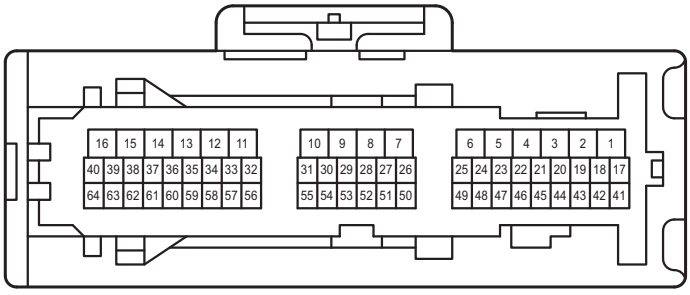


90980-12798

GQ1

White

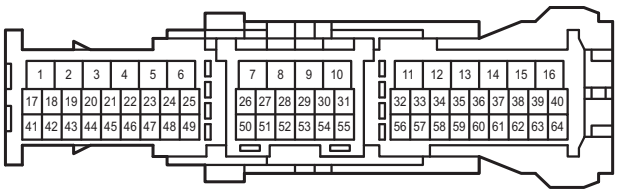


90980-12774

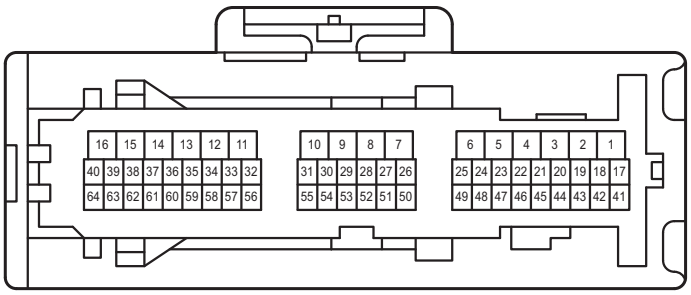


90980-12798

GR1

White

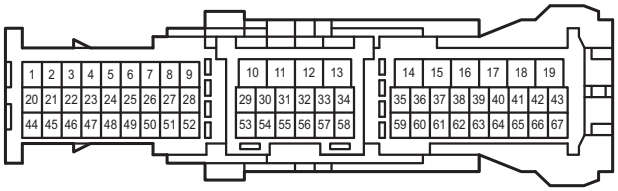


90980-12783

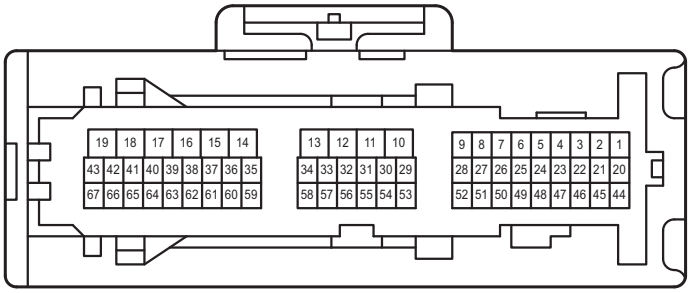


90980-12800

GR3

Blue

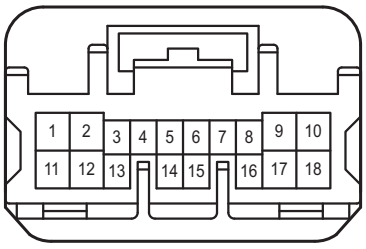


90980-12739

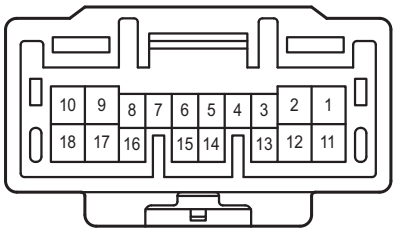


90980-12738

Gi1

White

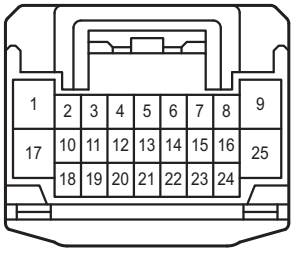


90980-12414

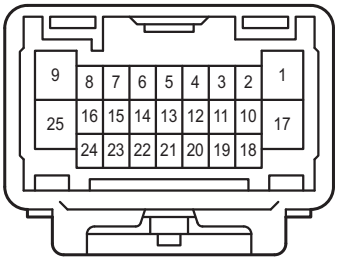


90980-12413

Hy1

White

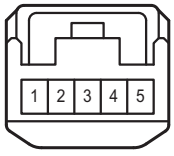


90980-12366

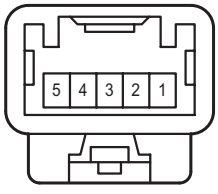


90980-12365

IG1

White

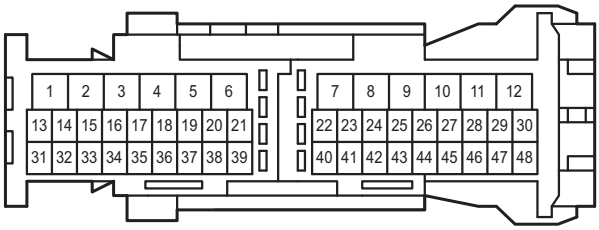


90980-12779

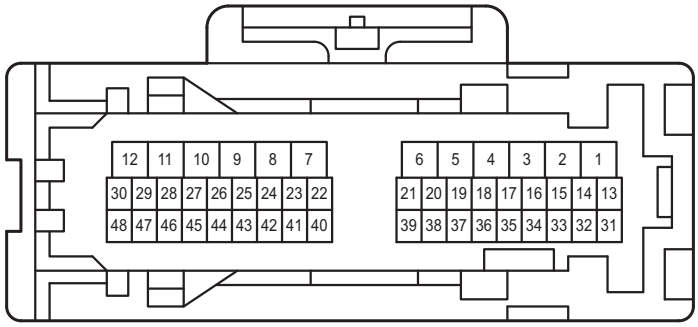


90980-12799

JG3

Black

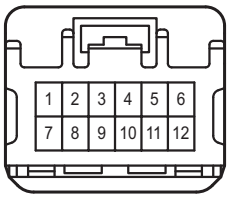


90980-12737

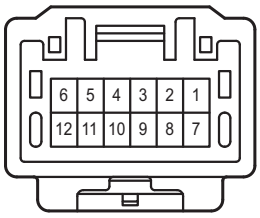


90980-12736

KG3

Black

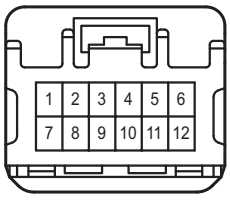


90980-12737

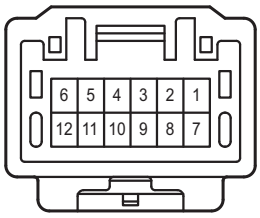


90980-12736

LQ1

White

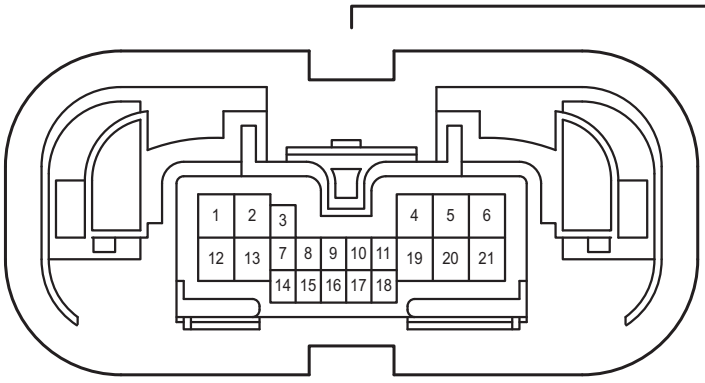


90980-12671

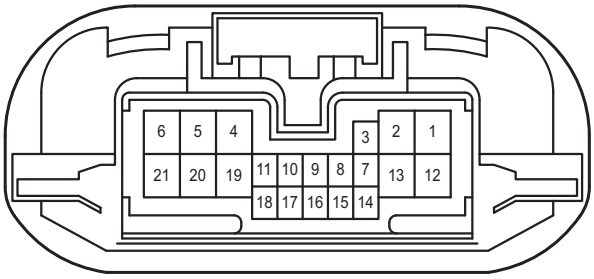


90980-12670

MR1

White

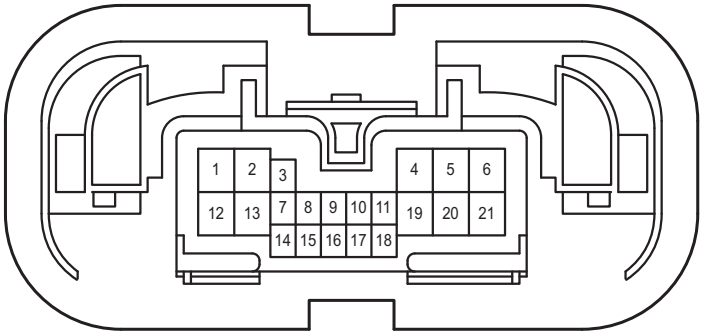


90980-12671

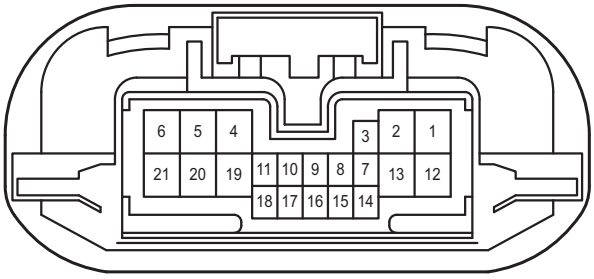


90980-12670

NJ1

White

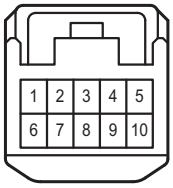


90980-12368

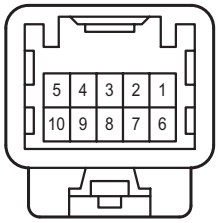


90980-12367

OK1

White

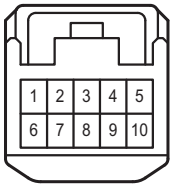

90980-12368

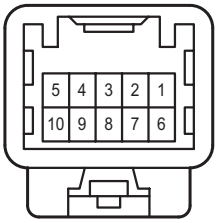

90980-12367

QP1

Gray




90980-11075




90980-11073

Qa1

White

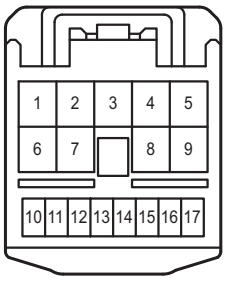


90980-12374

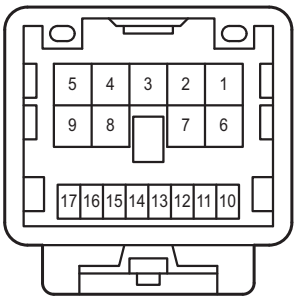


90980-12373

Qa2

Black

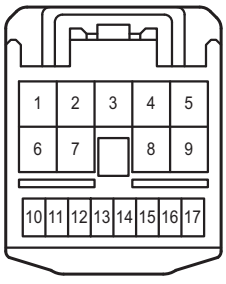


90980-12374

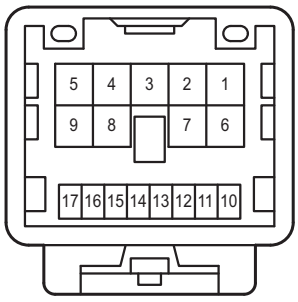


90980-12373

Qc1

White

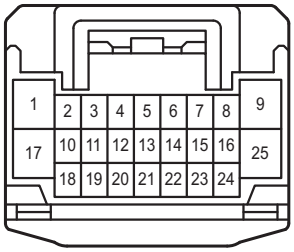


90980-12414

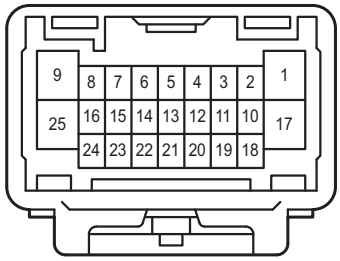


90980-12413

Qs1

Black

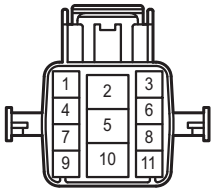


90980-11612

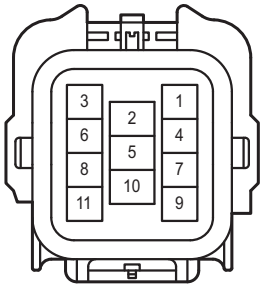


90980-11609

Qw1

White

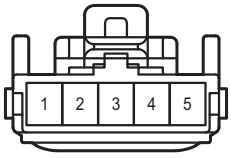

90980-10789

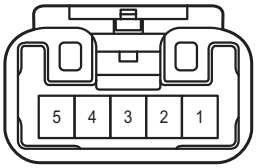

90980-11085

RP1

Gray




90980-11075




90980-11073

RQ1

White

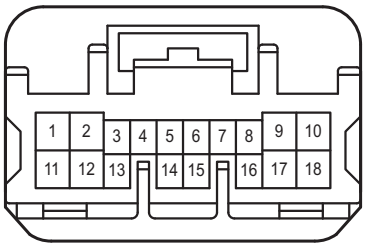


90980-12739

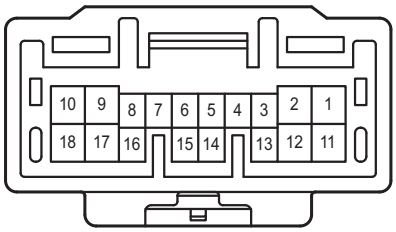


90980-12738

RS1

Black

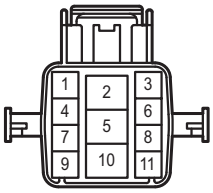

90980-11612

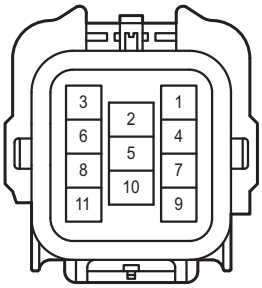

90980-11609

RV1

White




90980-10869




90980-10868

Rb1

White

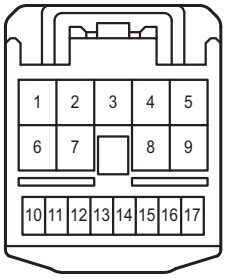


90980-12374

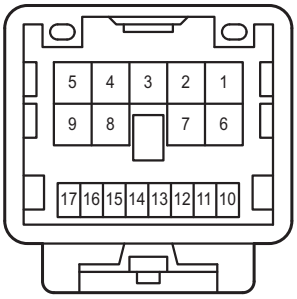


90980-12373

Rd1

White

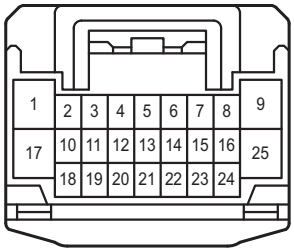


90980-12414

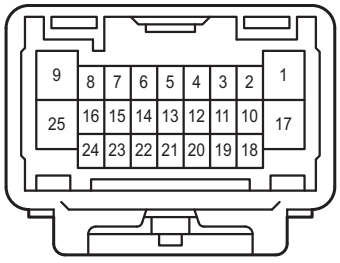


90980-12413

Rs3

Gray

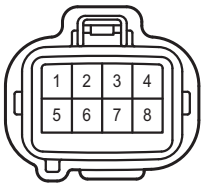


90980-10897

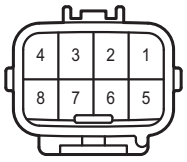


90980-10896

Rx1

White

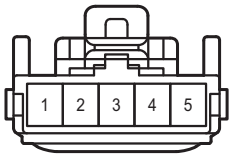


90980-10789

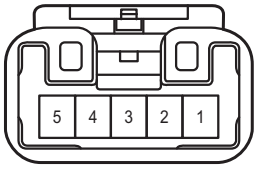


90980-11085

SE1

Gray

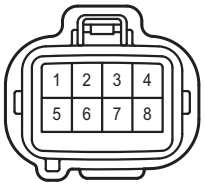


90980-10897

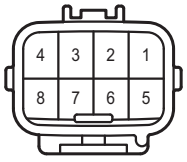


90980-10896

SR2

White

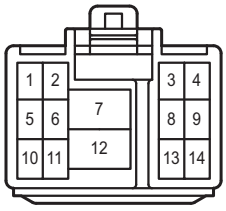

90980-10813

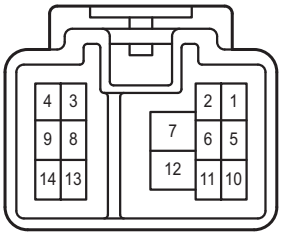

90980-10812

SR3

White




90980-10942




90980-10941

TG2

White

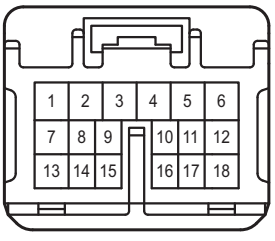

90980-12745

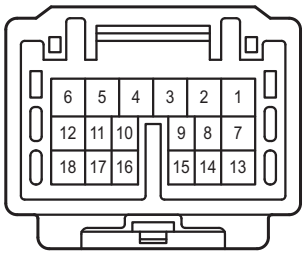


90980-12744

UQ1

Gray



90980-11194

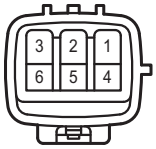

90980-11193

UR1

Gray




90980-11194




90980-11193

WG1

White

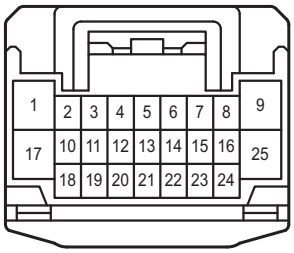


90980-12414

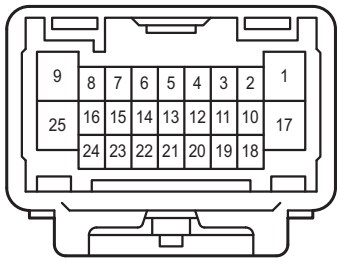


90980-12413

WH1

Gray

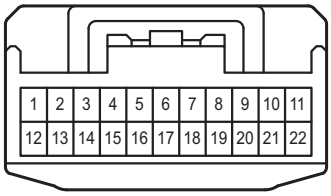


90980-12372

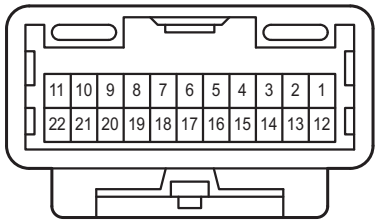


90980-12371

XQ2

White

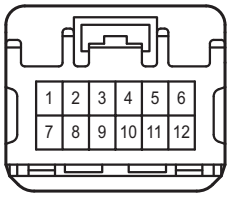


90980-12737

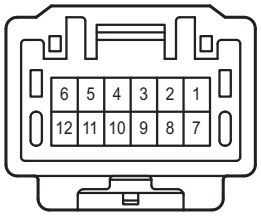


90980-12736

YX1

White

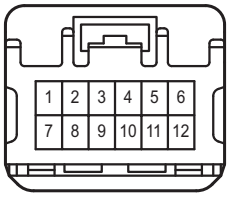


90980-12737

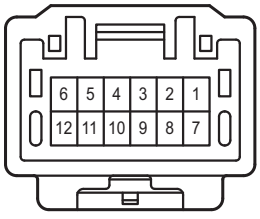

90980-12736

YX2

White

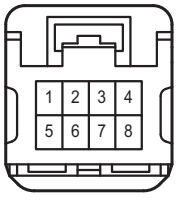

90980-12735




90980-12734

YZ1

White



90980-11003

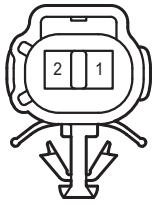


90980-11002

sR2

Gray



90980-10897

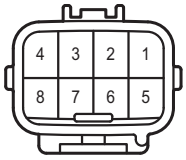

90980-10896

tR1

Gray



90980-11599




90980-11598

zX1

Dark Gray



90980-11194

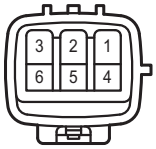

90980-11193